



Body Repairs

Audi A6 2011 ➤
Audi A6 Avant 2011 ➤
Audi A6 China 2012 ➤
Edition 12.2018



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

Repair Group overview for Body Repairs

Repair Group

- 00 - Technical data
- 50 - Body - front
- 51 - Body - centre
- 53 - Body - rear



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

Technical information should always be available to the foremen and mechanics, because their careful and constant adherence to the instructions is essential to ensure vehicle road-worthiness and safety. In addition, the normal basic safety precautions for working on motor vehicles must, as a matter of course, be observed.

All rights reserved.
No reproduction without prior agreement from publisher.


Contents

00 - Technical data	1
1 Vehicle identification data	1
1.1 Vehicle identification number	1
1.2 Type plate	2
1.3 Vehicle data sticker	2
2 Important notes	3
3 Safety precautions	4
4 Notes for vehicles with hybrid drive	5
5 Straightening and re-alignment of body parts	8
6 Corrosion protection	9
7 Galvanised body panels, high-strength and extra-high strength steel	13
7.1 Aluminium panels	17
8 Extraction systems for steel/aluminium body repair station ("multi-material-mix" workplace)	21
9 Renewing studs	23
10 Overview of riveting attachments (pairs of tools)	24
11 Overview of rivets and tools	25
12 Overview of rivets used for repair measures	31
13 Moulded foam inserts	32
14 Laser welding	35
15 Bonded joints	36
16 Body dimensions	37
16.1 Body - front	37
16.2 Body - centre	39
16.3 Floor group	45
16.4 Body - rear	48
16.5 Body - rear (Avant)	50
17 Thread repair for M6 pop rivet nut	52
18 Repairing thread for seat belt anchorage	53
19 Tools	54
20 Matching the surface contour	58
21 Straightening jig	59
21.1 Procedure for repairing structural body damage on Audi vehicles	59
50 - Body - front	61
1 Intermediate piece - Renewal	61
1.1 Notes for vehicles with hybrid drive	61
1.2 Tools	61
1.3 Procedure	62
2 Front bumper bracket - Renewal	67
2.1 Notes for vehicles with hybrid drive	67
2.2 Tools	67
2.3 Procedure	68
3 Wing mounting flange - Renewal	70
3.1 Notes for vehicles with hybrid drive	70
3.2 Tools	70
3.3 Procedure	71
4 Suspension turret - Renewal	80
4.1 Notes for vehicles with hybrid drive	80

4.2	Tools	80
4.3	Procedure	81
5	Front longitudinal member - Renewal	92
5.1	Notes for vehicles with hybrid drive	93
5.2	Tools	93
5.3	Procedure	94
6	Front longitudinal member - Partial renewal (part sections 1 + 2)	109
6.1	Notes for vehicles with hybrid drive	109
6.2	Tools	109
6.3	Procedure	110
7	Repairing threads for attachment of subframe	121
7.1	Notes for vehicles with hybrid drive	121
7.2	Tools	121
51 - Body - centre	128
1	Permitted separating cuts on complete side panel	128
2	Roof - Renewal (Saloon)	130
2.1	Notes for vehicles with hybrid drive	130
2.2	Tools	130
2.3	Procedure	136
3	Roof - Renewal (Saloon with tilting sunroof)	151
3.1	Notes for vehicles with hybrid drive	151
3.2	Tools	151
3.3	Procedure	153
4	Roof - Renewal (Saloon with large sunroof, long version)	166
4.1	Notes for vehicles with hybrid drive	166
4.2	Tools	166
4.3	Procedure	167
5	Roof - Renewal (Avant)	179
5.1	Notes for vehicles with hybrid drive	179
5.2	Tools	179
5.3	Procedure	185
6	Roof - Renewal (Avant with large sunroof)	200
6.1	Notes for vehicles with hybrid drive	200
6.2	Tools	200
6.3	Procedure	201
7	Roof side member - Renewal (Saloon)	215
7.1	Notes for vehicles with hybrid drive	215
7.2	Tools	215
7.3	Procedure	216
8	Roof side member - Renewal (Avant)	222
8.1	Notes for vehicles with hybrid drive	222
8.2	Tools	222
8.3	Procedure	223
9	Front roof cross member - Renewal	229
9.1	Notes for vehicles with hybrid drive	229
9.2	Tools	229
9.3	Procedure	230
10	Rear roof cross member - Renewal	233
10.1	Notes for vehicles with hybrid drive	233
10.2	Tools	233
10.3	Procedure	234
11	Rear roof cross member - Renewal (Avant)	237

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability.

11.1	Notes for vehicles with hybrid drive	237
11.2	Tools	237
11.3	Procedure	238
12	Inner rear roof frame - Renewal (Avant)	241
12.1	Notes for vehicles with hybrid drive	241
12.2	Tools	241
12.3	Procedure	242
13	Hinge mounting - Renewal	248
13.1	Notes for vehicles with hybrid drive	248
13.2	Tools	248
13.3	Procedure	249
14	Outer A-pillar - Renewal	253
14.1	Notes for vehicles with hybrid drive	253
14.2	Tools	253
14.3	Procedure	254
15	Upper inner A-pillar - Partial renewal	260
15.1	Notes for vehicles with hybrid drive	260
15.2	Tools	260
15.3	Procedure	261
16	Lower inner A-pillar - Partial renewal	272
16.1	Notes for vehicles with hybrid drive	272
16.2	Tools	272
16.3	Procedure	273
17	Outer B-pillar - Renewal	277
17.1	Notes for vehicles with hybrid drive	277
17.2	Tools	277
17.3	Procedure	278
18	Inner B-pillar - Renewal	283
18.1	Notes for vehicles with hybrid drive	284
18.2	Tools	284
18.3	Procedure	284
19	Outer side member - Renewal	294
19.1	Notes for vehicles with hybrid drive	294
19.2	Tools	294
19.3	Procedure	295
20	Inner side member - Renewal	300
20.1	Notes for vehicles with hybrid drive	300
20.2	Tools	300
20.3	Procedure	300
21	Inner side member - Renewal (Avant)	306
21.1	Notes for vehicles with hybrid drive	306
21.2	Tools	306
21.3	Procedure	306
22	Inner side member reinforcement - Renewal	312
22.1	Notes for vehicles with hybrid drive	312
22.2	Tools	312
22.3	Procedure	313
23	Centre seat cross member - Renewal	318
23.1	Notes for vehicles with hybrid drive	318
23.2	Tools	318
23.3	Procedure	319
24	Seat cross member - Renewal	325
24.1	Notes for vehicles with hybrid drive	325

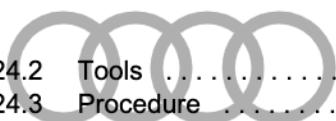

24.2 Tools	325
24.3 Procedure	326
53 - Body - rear	330
1 Permitted separating cuts on complete side panel	330
2 Rear upper cross panel - Renewal	332
2.1 Notes for vehicles with hybrid drive	332
2.2 Tools	332
2.3 Procedure	333
3 Rear cross panel - Renewal	336
3.1 Notes for vehicles with hybrid drive	336
3.2 Tools	336
3.3 Procedure	336
4 Rear cross panel - Renewal (Avant)	340
4.1 Notes for vehicles with hybrid drive	340
4.2 Tools	340
4.3 Procedure	340
5 Cross panel - Renewal (Avant)	344
5.1 Notes for vehicles with hybrid drive	344
5.2 Tools	344
5.3 Procedure	344
6 Rear longitudinal member - Partial renewal (Avant)	348
6.1 Notes for vehicles with hybrid drive	348
6.2 Tools	348
6.3 Procedure	349
7 Rear longitudinal member - Partial renewal	355
7.1 Notes for vehicles with hybrid drive	355
7.2 Tools	355
7.3 Procedure	356
8 Side panel - Renewal	362
8.1 Notes for vehicles with hybrid drive	362
8.2 Tools	362
8.3 Procedure	363
9 Side panel - Renewal (Avant)	370
9.1 Notes for vehicles with hybrid drive	370
9.2 Tools	370
9.3 Procedure	371
10 C-pillar reinforcement - Renewal (Saloon and Avant identical)	378
10.1 Notes for vehicles with hybrid drive	378
10.2 Tools	378
10.3 Procedure	379
11 Rear wheel housing - Partial renewal	385
11.1 Notes for vehicles with hybrid drive	385
11.2 Tools	385
11.3 Procedure	386
12 Rear wheel housing - Partial renewal (Avant)	390
12.1 Notes for vehicles with hybrid drive	390
12.2 Tools	390
12.3 Procedure	391
13 Luggage compartment floor - Renewal	395
13.1 Notes for vehicles with hybrid drive	395
13.2 Tools	395
13.3 Procedure	396

14	Luggage compartment floor - Renewal (only for PHEV vehicles, China)	400
14.1	Tools	400
14.2	Procedure	401



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

00 – Technical data

1 Vehicle identification data

(AKI000261; Edition 12.2018)

1.1 Vehicle identification number

The vehicle identification number can be found via the MMI; it also appears in the windscreen on the driver's side, on the vehicle data sticker and is stamped on the suspension turret (right-side).


NOTICE

If a component with the vehicle identification number is renewed due to damage, the repairs must be documented according to purpose permitted unless authorised by AUDI AG. AUDI AG does not guarantee the market-specific legislation.

Please make sure to comply with the market-specific legislation when renewing a component with the vehicle identification number.


Before installing the new component, stamp the vehicle identification number on using stamped numbers - VAS 6939- and punched letters - VAS 6940- .

Alternative position of vehicle identification number for workshop repairs

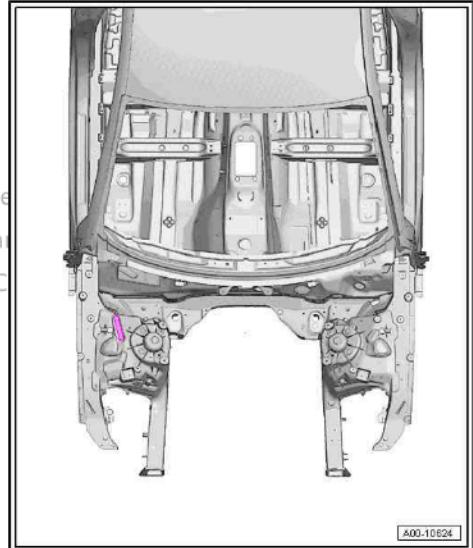

Note

- ◆ To avoid damaging the suspension turret (cast aluminium profile), stamp the vehicle identification number on the upper longitudinal member -1- using stamped numbers - VAS 6939- and punched letters - VAS 6940- .
- ◆ Standard position -2-

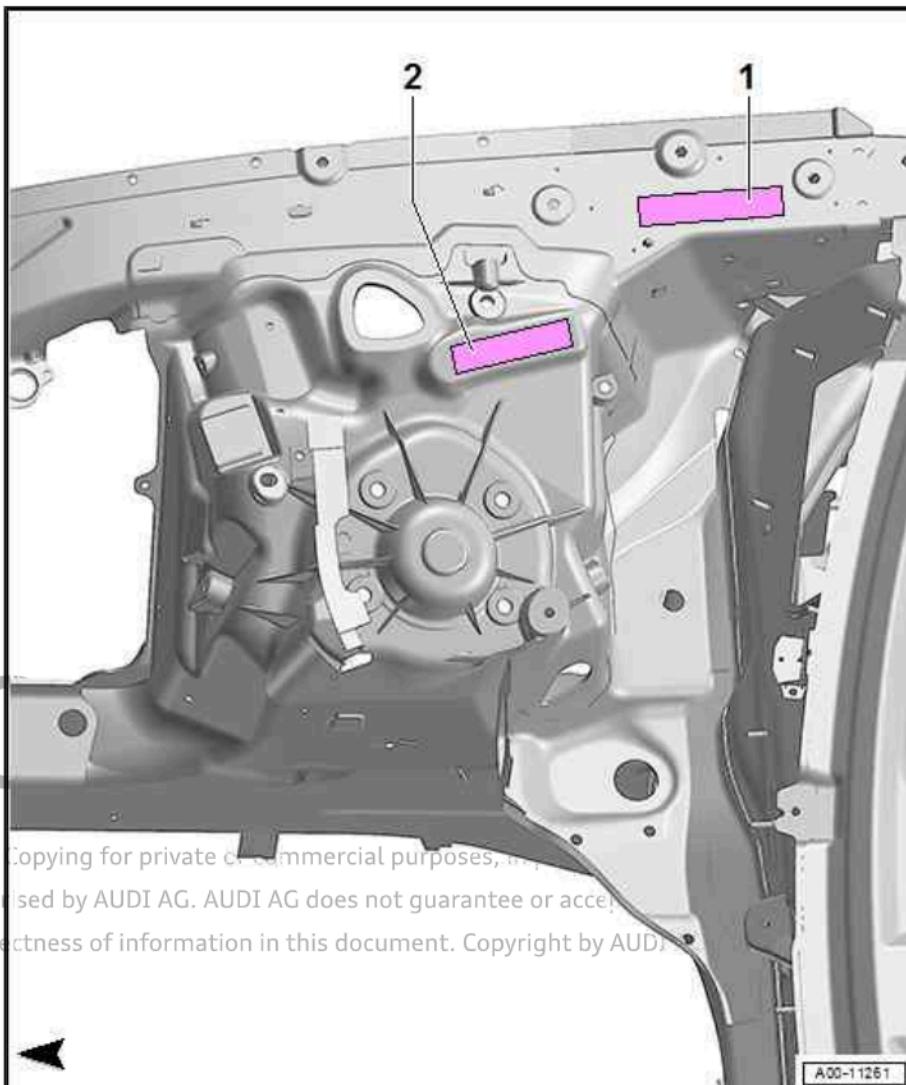


Protected by copyright. Copying for private or commercial purposes, in part or in full, is only permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any responsibility with respect to the correctness of information in this document. Copyright by AUDI AG.

1.2 Type plate

The type plate is located on the passenger-side door pillar. Vehicles for certain export countries have no type plate.

1.3 Vehicle data sticker

The vehicle data sticker is located in the spare wheel well under the luggage compartment floor (left-side in direction of travel).

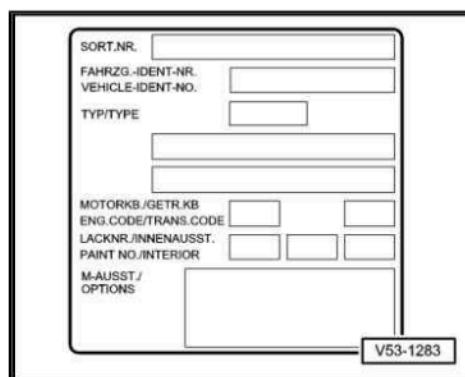

2 Important notes

This Manual describes only selected repair operations. Where repair operations are not described: separate original joint and repair with replacement panel. Repairs requiring a method different from that used in production are described specifically.

Where sub-parts are available for a repair, they should be matched up and butt-welded in place (SG continuous seam), unless otherwise described.

Please refer to the information in the Workshop Manual, General information, Body repairs.



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

3 Safety precautions

Always use an extraction system when performing welding and grinding operations.

Welding and grinding must never be performed simultaneously in the same working area.

Working area must be cleaned at regular intervals as necessary to remove dust.

Compressed air must NOT be used to blow out dust deposits.

The extraction system must be cleaned at regular intervals. This poses, in part or in whole, is not

In addition, the relevant country-specific accident prevention and industrial safety regulations must be observed.

with respect to the correctness of information in this document. Copyright by AUDI AG.

4 Notes for vehicles with hybrid drive

CAUTION

Safety hazard: the engine can start unexpectedly.

Before carrying out general work on a vehicle with high-voltage electrical system, switch off the ignition and remove the ignition key from the vehicle.

CAUTION

When working on a vehicle with the ignition switched on or while the drive system is active, the engine can start unexpectedly and exhaust fumes can cause a health hazard in closed rooms. Moving parts can trap or draw in parts of the body and/or clothing (safety hazard).

Before switching on the ignition, perform the following steps:

- ◆ Move selector lever to position P
 - ◆ Activate parking brake
 - ◆ Switch off ignition
 - ◆ Open bonnet
 - ◆ Connect battery charger (e.g. battery charger - VAS 5095A-) to jump-start connections of 12 V electrical system
 - ◆ Switch on ignition
- Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

CAUTION

Working on vehicles with high-voltage wiring:

- Do not support yourself or tools on high-voltage wiring or associated components --> this can damage the insulation.
- High-voltage wiring must not be excessively bent or kinked --> this can damage the insulation.
- The round high-voltage connectors are colour-coded with an external coloured ring and are provided with mechanical coding or guide lugs. It is important to observe this coding when joining up the round high-voltage connectors; otherwise the connectors can be damaged.

CAUTION

Risk of fatal injury if high-voltage components are damaged.

Observe the following when working in the vicinity of high-voltage components or wiring:

- ◆ It is not permitted to use cutting or forming tools, other sharp-edged tools or heat sources such as welding, brazing, soldering, hot air or thermal bonding equipment.
- ◆ Before starting work, visually inspect the high-voltage components in the areas involved.
- ◆ Before working in the engine compartment, visually inspect the power and control electronics for electric drive - JX1- , electric drive motor - V141- , air conditioner compressor - V470- and high-voltage wiring.
- ◆ Before working on the vehicle underbody, visually inspect the high-voltage wiring and covers.
- ◆ Before working on the rear section of the vehicle, visually inspect the high-voltage wiring and the electronics box with the maintenance connector for high-voltage system - TW- .
- ◆ Visually inspect all potential equalisation lines.

Check the following when making the visual inspection:

- ◆ There must be no external damage on any component.
- ◆ The insulation of the high-voltage wiring and potential equalisation lines must not be damaged.
- ◆ There must be no unusual deformation of the high-voltage wiring.
- ◆ All high-voltage components must be identified by a red warning sticker.

CAUTION

High voltage can cause fatal injury.

Danger of severe or fatal injuries from electric shock. Reproduction, distribution or communication for private or commercial purposes, in part or in whole, is not

- ◆ The high-voltage system may only be re-energised by a suitably qualified person (Audi high-voltage technician). with respect to the correctness of information in this document. Copyright by AUDI AG.
- ◆ The system may only be re-energised using the vehicle diagnostic tester via "Guided Fault Finding".
- ◆ The vehicle is then made ready for operation again by the qualified person (Audi high-voltage technician).
- ◆ The qualified person (Audi high-voltage technician) marks the vehicle by attaching the appropriate warning signs.

⚠ CAUTION

High voltage can cause fatal injury.

Danger of severe or fatal injuries from electric shock.

- ◆ The high-voltage system may only be de-energised by a suitably qualified person (Audi high-voltage technician).
- ◆ It must be definitely confirmed that the high-voltage system is de-energised. The system may only be de-energised using the vehicle diagnostic tester via "Guided Fault Finding".
- ◆ The qualified person (Audi high-voltage technician) confirms that the system is de-energised and uses the locking cap - T40262- to ensure that the system cannot be re-energised. As an additional precaution, the ignition key and the maintenance connector for high-voltage system - TW- are then stored in a safe place by the qualified person.
- ◆ The qualified person (Audi high-voltage technician) marks the vehicle by attaching the appropriate warning signs.

⚠ NOTICE

Please refer to the Electronic parts catalogue when ordering replacement parts.

⚠ CAUTION

Accidents can be caused if the driver is distracted by test equipment while road-testing, or if test equipment is not properly secured.

Injuries can be caused if the passenger's airbag is triggered in a collision.

- The use of test equipment while driving causes distraction.
- There is an increased risk of injury if test equipment is not secured.
- ◆ Set front passenger seat to rearmost position.
- ◆ Use only the vehicle diagnostic and service information system - VAS 5052- or the diagnostic system - VAS 5053-
- ◆ The test equipment -1- must rest flat on the passenger's thighs (as shown in illustration) and must be operated by the passenger.

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted without authorisation by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.



5 Straightening and re-alignment of body parts

© AUDI AG. All rights reserved. Copying for private or commercial purposes, in part or in whole, is not permitted.

Straightening and re-alignment work must not be carried out on the front section of the Audi A6 body, because this could cause cracking in the aluminium castings that may not be externally visible.

If the aluminium castings or adjoining sheet steel parts are damaged, they must be renewed.

6 Corrosion protection



Note

- ◆ *Cavity sealing must be applied after all body repairs.*
- ◆ *The bonnet and rear lid are not treated with cavity sealing at the factory. Cavity sealing only has to be applied after carrying out repairs.*

The surface to be treated must be clean, dry and free of grease.

Applying cavity sealing after painting:

The surfaces and threads which have to be left free of cavity sealing wax are shown for the individual models in the Paintwork manual in the section on vehicle-specific information, Masked sectors.

Replacement parts


Cavity sealing agent, light tone - D 330 KD1 A2-

Cavity sealing agent - D 330 KD2 A3-


Genuine wax - AKR 321 M 15 4-

Cavity sealing agent - AKR 320 KD6 04-


The body is manufactured from sheet metal panels galvanised on both sides. Certain areas are cavity-sealed and have to be resealed after completing repair work.

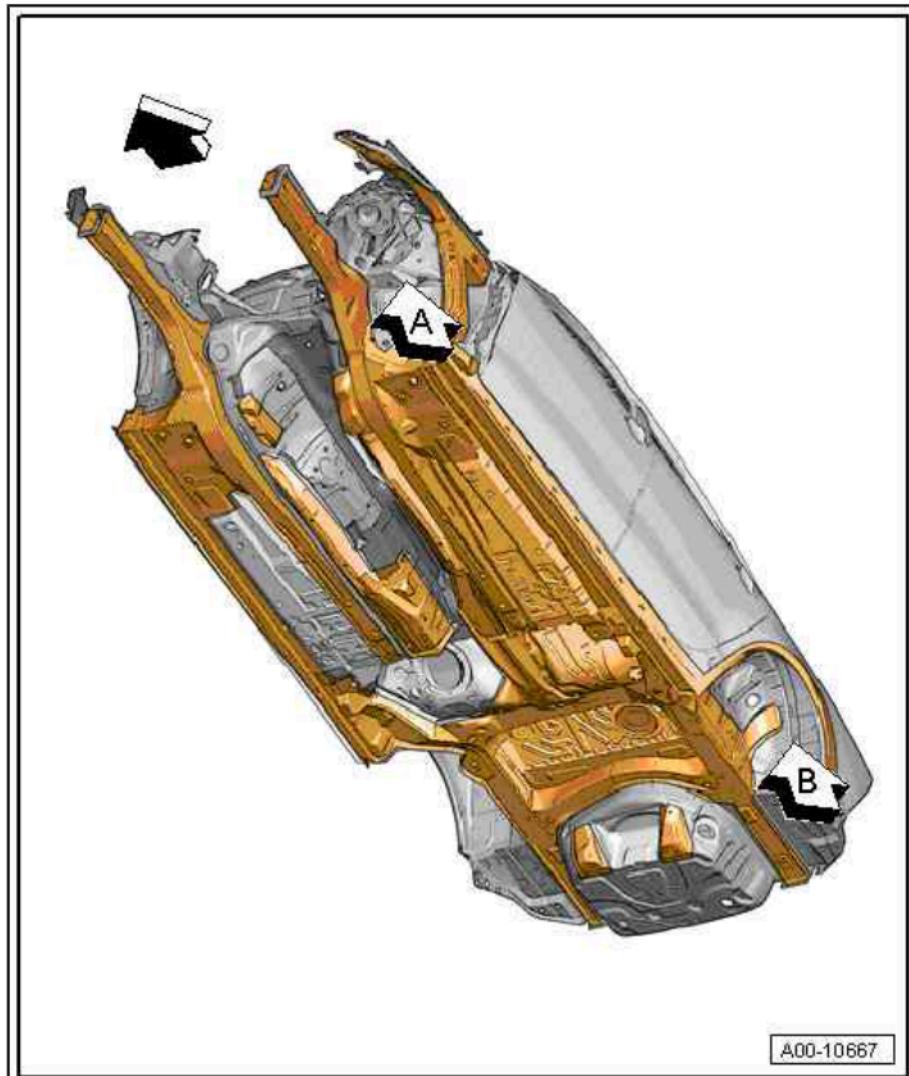

- Apply additional wax in area A - A (mixed construction).
- Apply additional wax in area B - B (mixed construction).

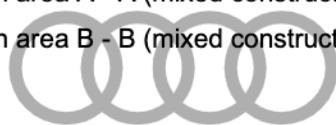


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

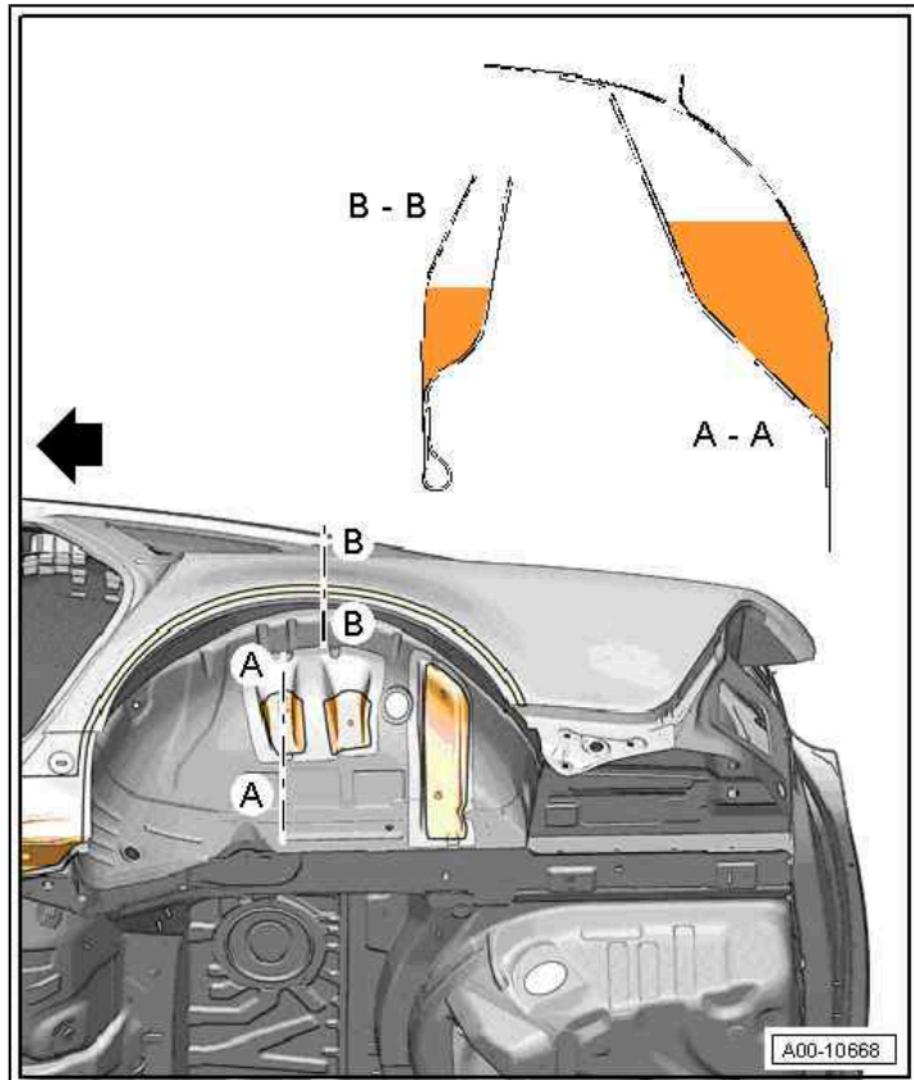

- Apply additional wax in area A - A (mixed construction).



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

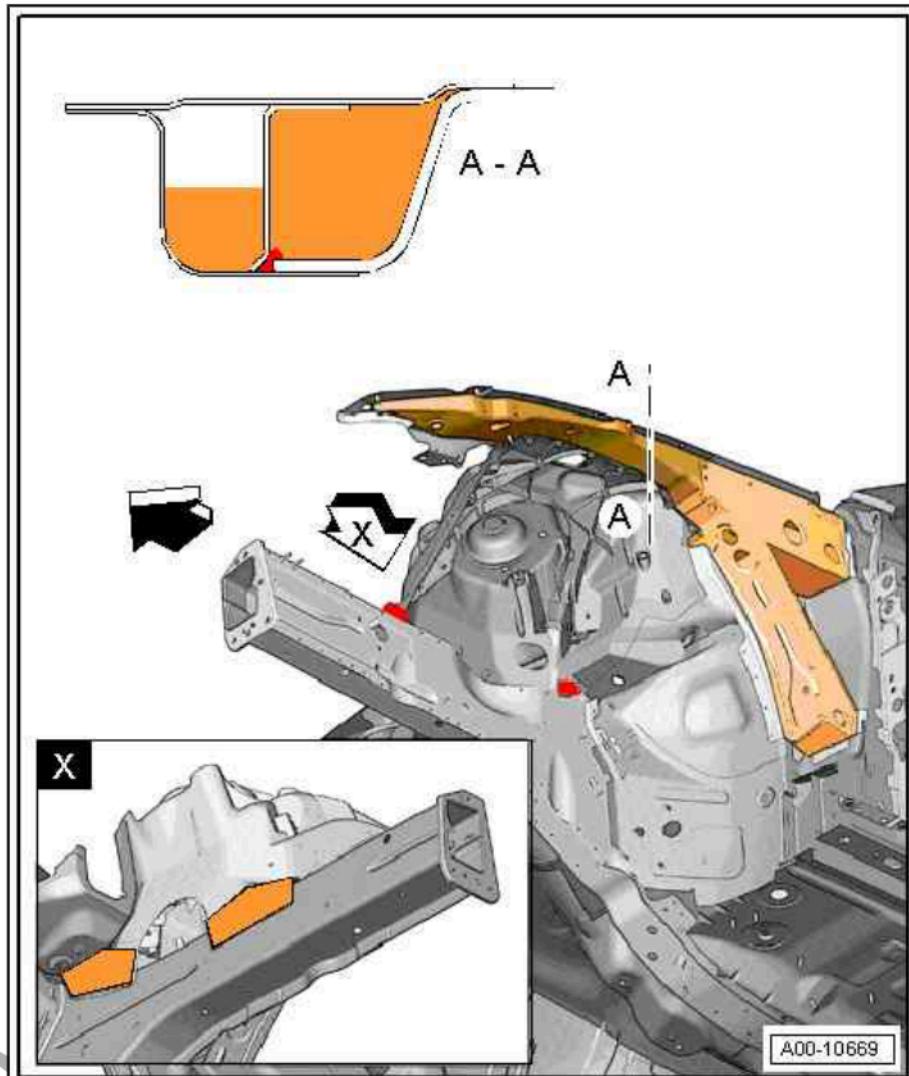

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

7 Galvanised body panels, high-strength and extra-high strength steel



Note

Repairs must always be made according to the manufacturer's instructions in the respective Workshop Manual. Ultra-high-strength and hot-formed body panels may only be repaired using modern inverter technology, otherwise the optimum passenger protection after repairs is not possible. Hot-stamped steel panels are used in areas under extreme loading. These panels offer significantly greater strength than conventional high-strength panels for less weight.




Note

- ◆ *For lightweight construction, Audi employs several different types of steel: soft steel, high-strength steel, modern high-strength steel, ultra-high strength steel and hot-formed ultra-high strength steel.* Protected by copyright. Copying for private commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability.
- ◆ *Cutting and joining of these components by butt welding is only permissible at the specified locations. There is a stipulated repair method for this repair work.* Protected by copyright. Copying for private commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability.
- ◆ *Spot welding is only permissible using resistance spot welders approved by AUDI AG.*

The body of the vehicle is predominantly manufactured from galvanised steel panels.

The following illustrations show the various types of steel in different colours, ranging from soft steel to hot-formed steel (see table below).

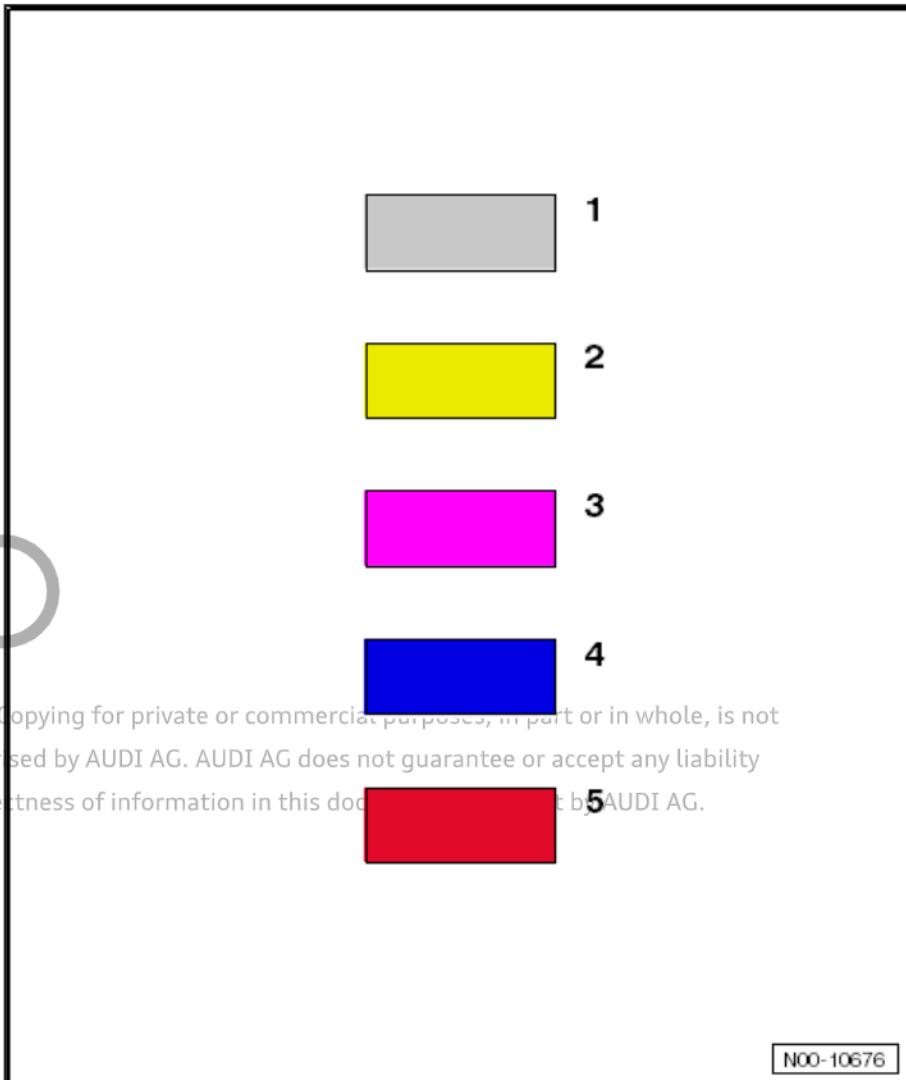

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. © AUDI AG.


N00-10676

	Colour	Type of steel	Tensile strength / minimum yield strength in MPa
1	Grey	Soft	< 350
2	Yellow	High-strength steel	300 - 590
3	Magenta	Modern high-strength steel	500 - 980
4	Blue	Ultra-high-strength steel	980 - 1150
5	Red	Ultra-high-strength steel (hot-formed)	> 1400


The outer side panel and roof are removed to give a clearer illustration. These panels consist of »normal« sheet metal.



Protected by copyright. Copying for private
use is permitted unless authorised by AUDI AG.
With respect to the correctness of information

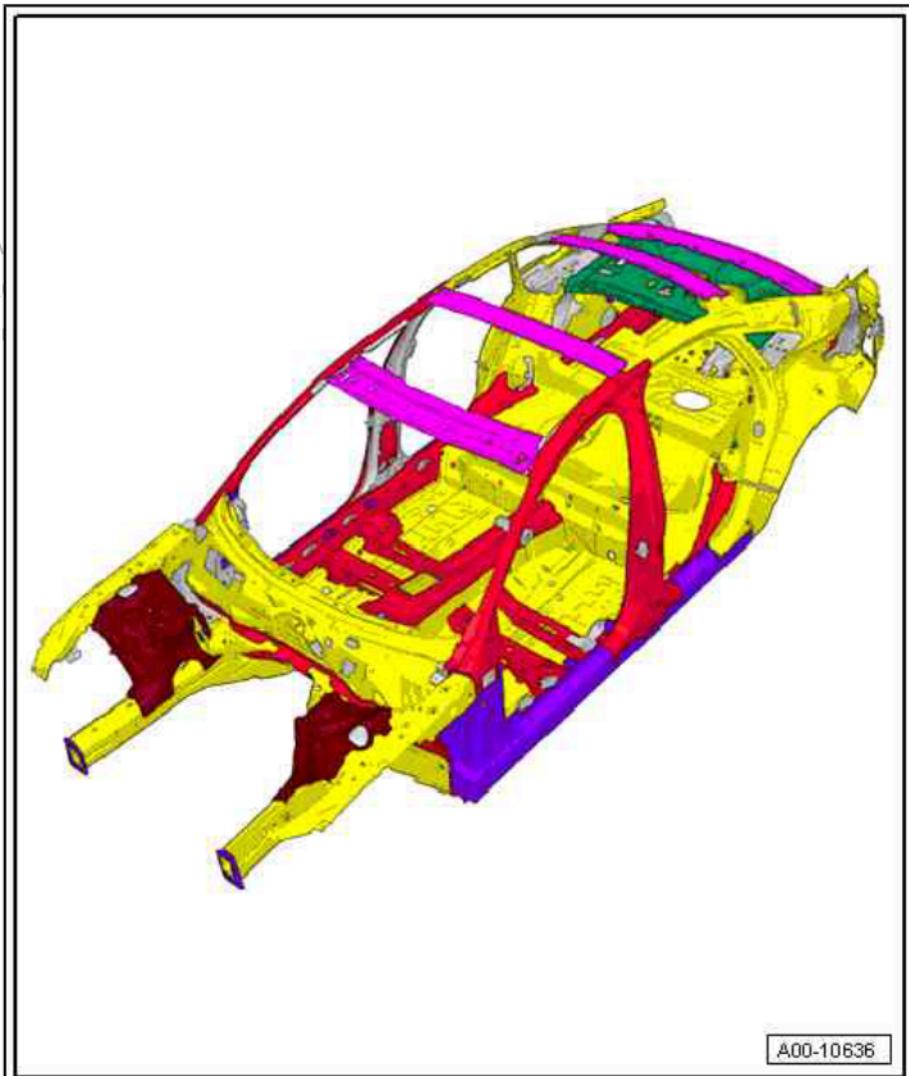

The outer side panel and roof are removed to give a clearer illustration. These panels consist of »normal« sheet metal.

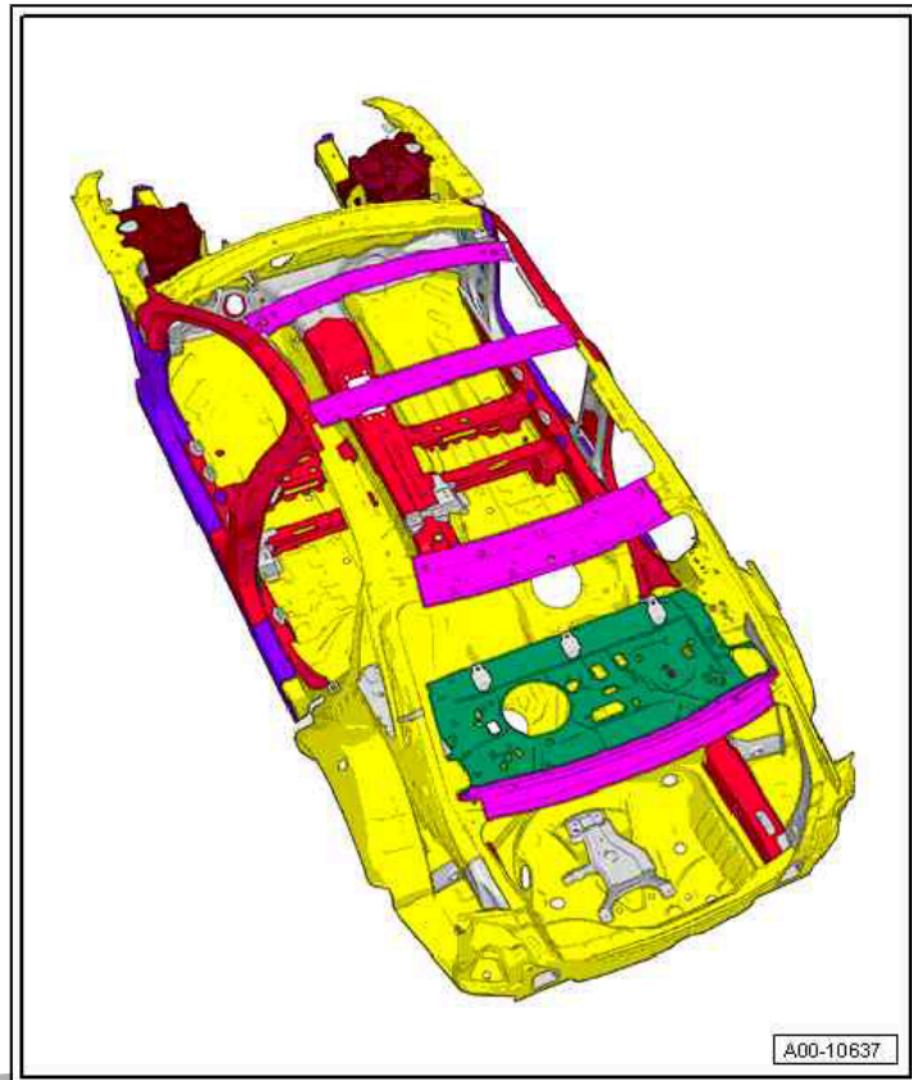


The outer side panel and roof are removed to give a clearer illustration. These panels consist of »normal« sheet metal.

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.



Protected by copyright
permitted unless aut
with respect to the co

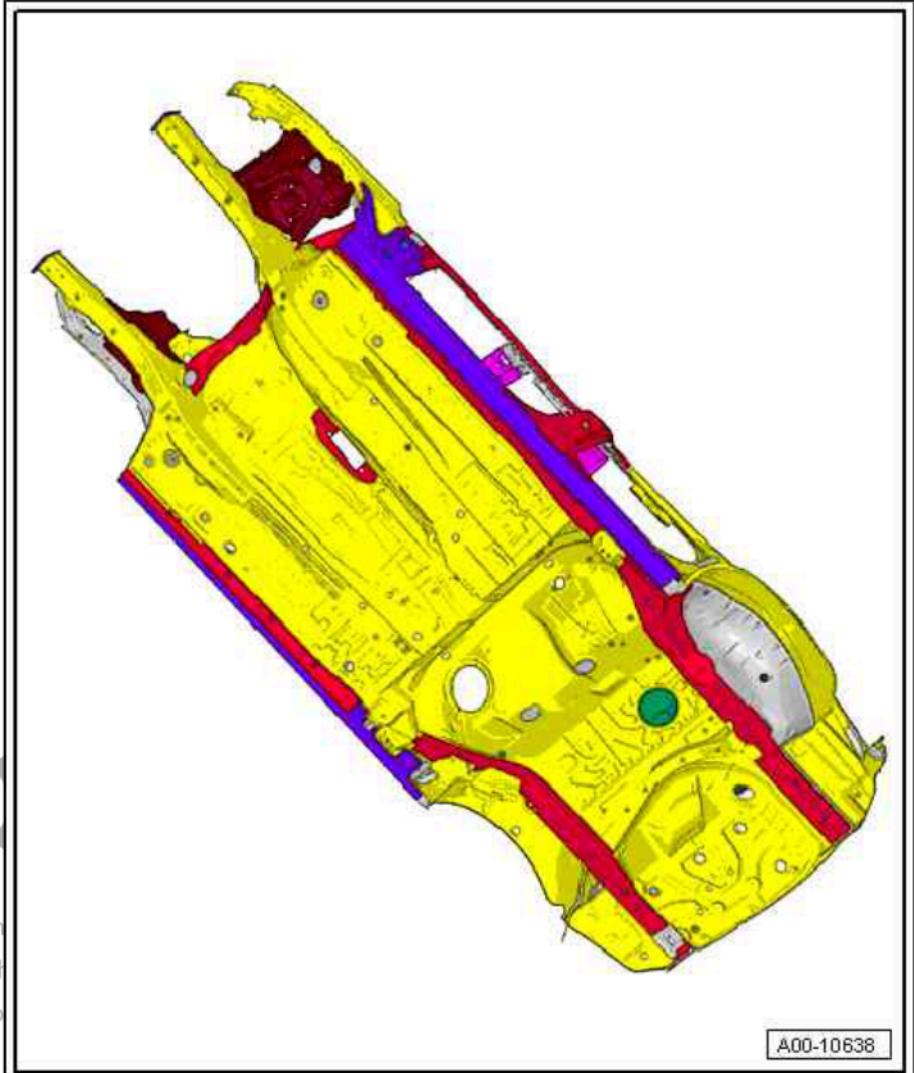

A00-10638


7.1 Aluminium panels

The hang-on parts of this vehicle are made of aluminium.


The following illustrations additionally show cast aluminium profiles.



Protected by copyright. Copying for private or commercial purposes is
permitted unless authorised by AUDI AG. AUDI AG does not guarantee
with respect to the correctness of information in this document.
in whole, is not
3
pt any liability
AUDI AG.

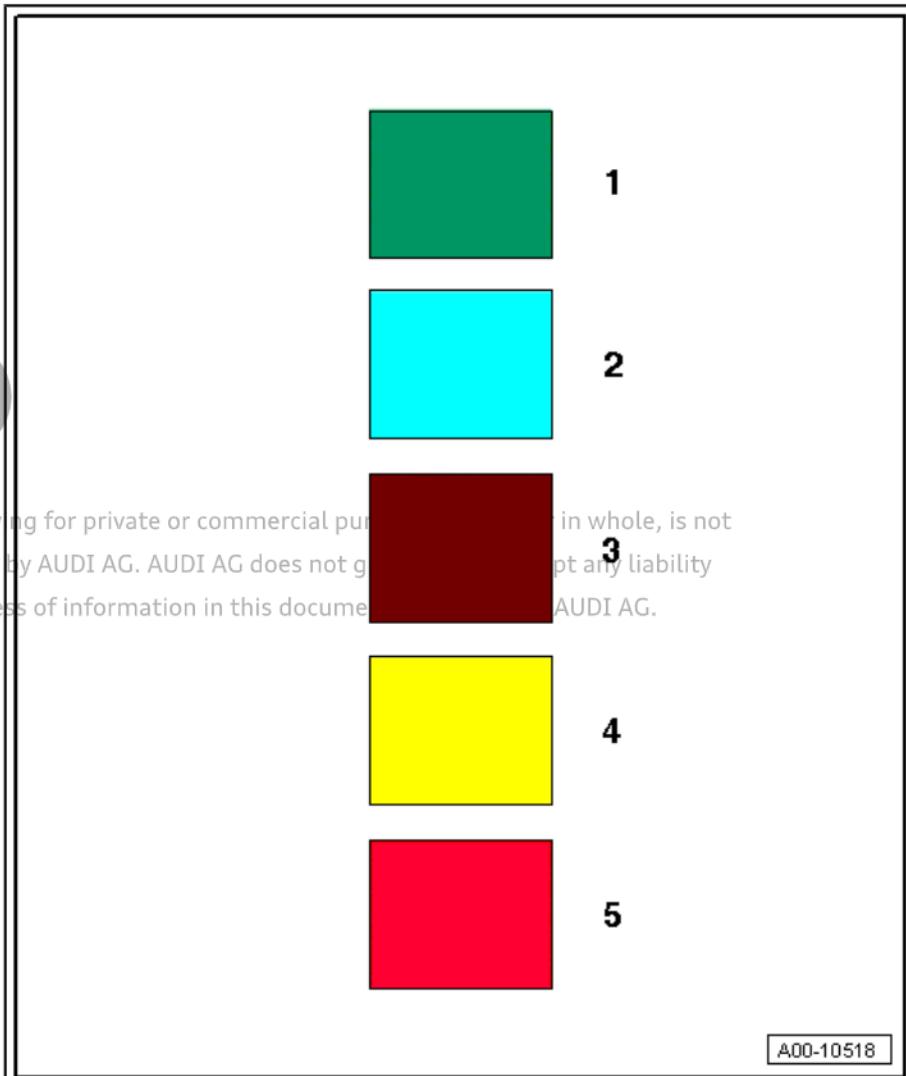



	Colour	Aluminium
1	Green	Aluminium sheet panels
2	Blue	Aluminium extrusions
3	Brown	Cast aluminium profiles



Protected by copyright. Copying
permitted unless authorised by
with respect to the correctness



A00-10631

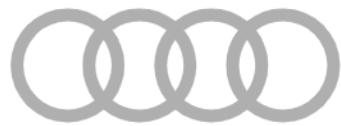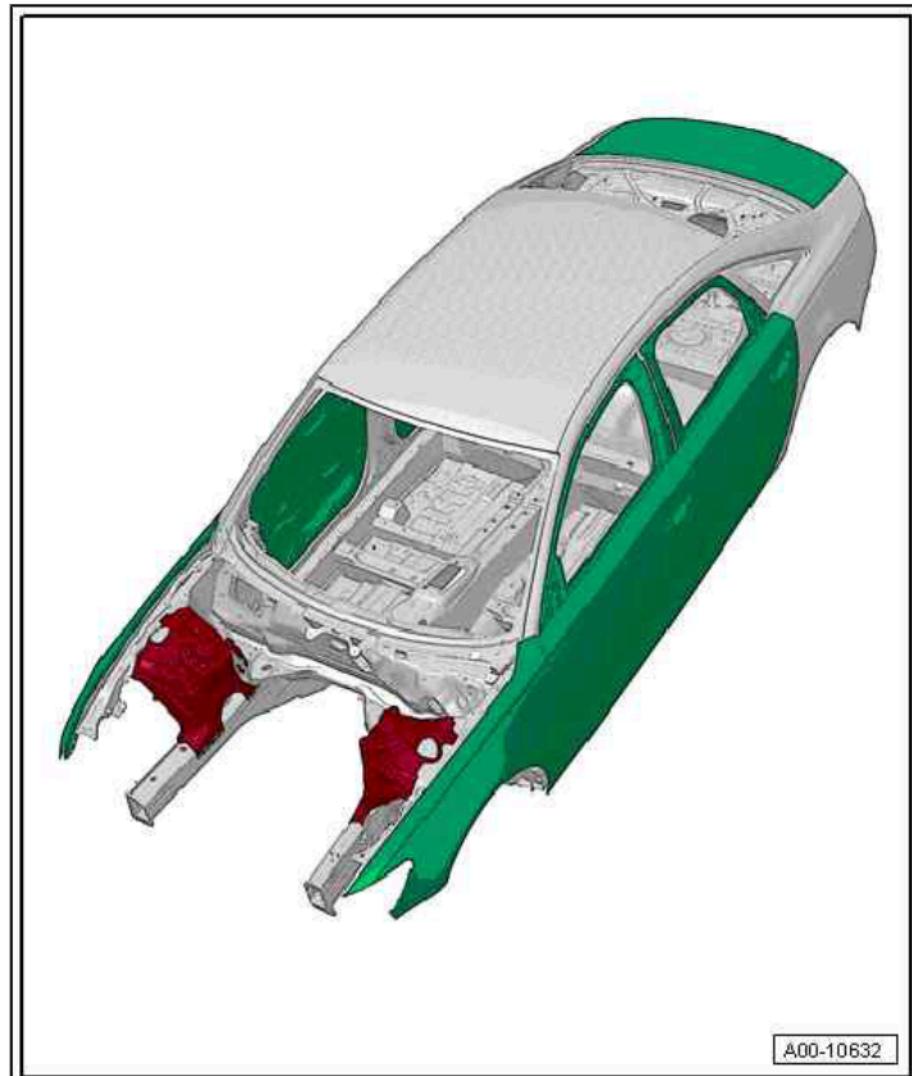

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

8 Extraction systems for steel/aluminium body repair station ("multi-material-mix" workplace)



Note

The extraction units VAS 6572/1 and VAS 6572/2 must be emptied every time before and after use.

Fine aluminium dust

Fine particles of aluminium dust are flammable and/or explosive. Extraction systems for aluminium dust must therefore be designed to prevent any external ignition sources from entering the filter or dust collector. The stationary extraction systems used up until 2009 (which are "pure" aluminium extractors, manufactured by Dansk Klimablock / Aeroweld or Nederman) do not have this protection and cannot be modified to include it. All these extraction systems and the systems available on the market for aluminium are of the type that require all ignition sources to be avoided. For this reason, since the possibility of sparks originating from steel parts cannot be entirely ruled out, vehicles with any steel body panels must NOT be repaired at these repair stations.

The mobile extractors VAS 6572/1 used since 2009 (meeting German dust filtration class M) and VAS 6572/2 (class H) have threefold protection against sparks being drawn in if steel is being worked on in the vicinity. This protection consists of a 5-metre long anti-static intake hose, a spark trap and a 5-metre long settling section. This ensures that, even if steel panels are inadvertently sanded or ground, the glowing sparks are cooled well below the temperature required to ignite aluminium dust. The system is TÜV-certified for steel sparks, which are much hotter and glow for longer than aluminium.

A second possible risk is the static charge which can build up in the metal particles due to friction in the intake hoses and pipes and which can be a source of ignition in the same way as a glowing spark. The connections on the extractor system and the intake hoses have Storz C-type fire hose couplings to ensure that only the anti-static "OHM"-type hoses can be connected and no other types of hose will fit.

The third risk is that the extractor itself can be an ignition source affecting the surroundings. However, since these extractors are based on industrial systems, they automatically possess all design features required for zone 22 and to avoid any effects as an ignition source affecting the surroundings. In any case, accident repair methods such as cutting, grinding and welding will generally produce far more ignition sources than are likely to originate from an extraction system.

Properly trained and experienced body repair technicians are responsible for the safety of themselves and others. AUDI AG does not accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

Fine steel dust

Steel sparks and steel dust present no risk in themselves. However, in a multi-material-mix workplace it is the flying steel sparks which constitute the greatest risk potential for the aluminium dust powder. For this reason, and in order to meet the requirement of keeping the processes separate, it is essential in all cases to have an extractor for steel that is allocated exclusively to that body workbay. If one were to always use the extractor for aluminium for all types of work (because it has a certified spark trap) this would in effect amount to an extreme test of its ability to prevent an explosion - right next to the person at the workplace! The extractor VAS 6571/1 is similar in design to the basic unit VAS 6572/2, but does not have the 3-stage spark trap. It is also suitable

for use in zone 22. The filter meets the requirements of class "M", which is sufficient for metal dust.




Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

RO: 50 80 55 00

9 Renewing studs

The procedure for renewing weld screws, studs and weld studs with cap nut is described as an example.

This procedure should be used appropriately for all types of studs, screws etc.

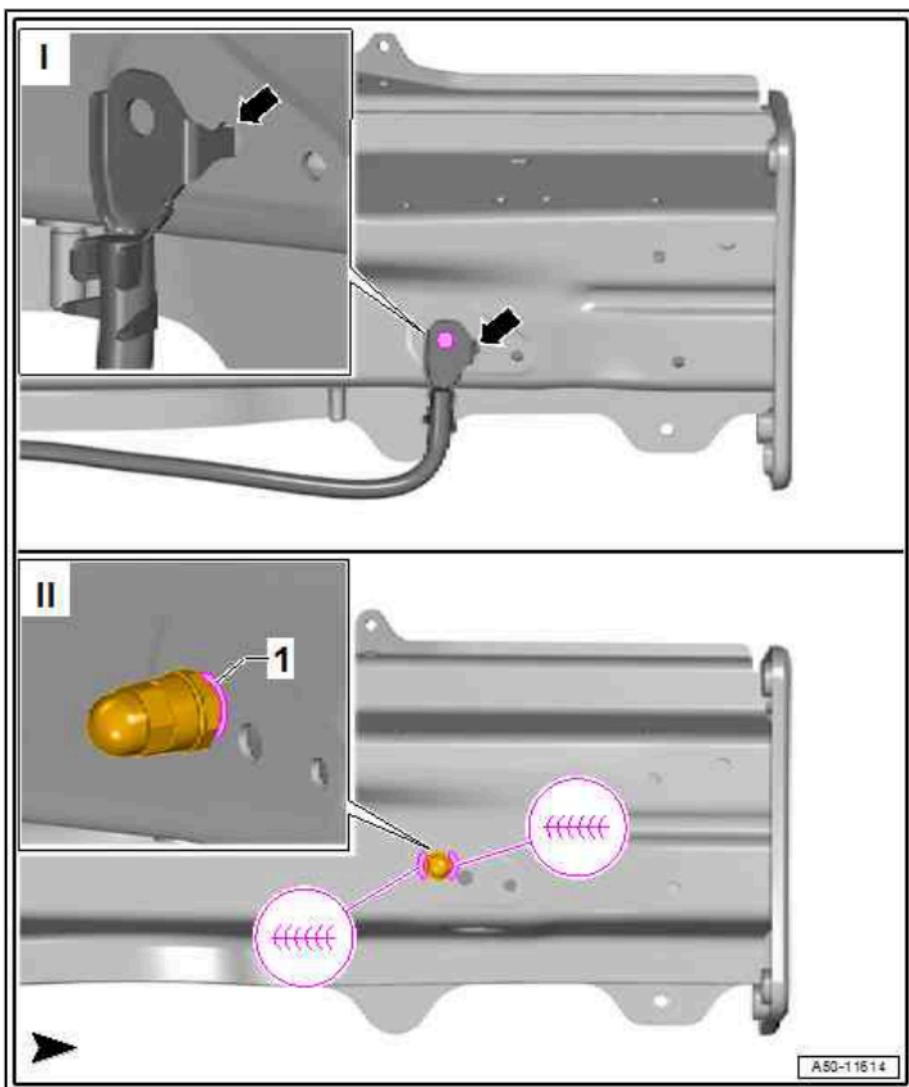

Protected by copyright. Copying, publishing, translating or otherwise disseminating all or part of this document, in whole or in part, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability

– Weld stud with 2 weld seams on either side -1- using shielded arc welding equipment : SG continuous seam.

- To ensure adequate electrical conductivity, the length of the weld seams must be at least 12 mm on each side of the stud.
- Clean contact surface of stud after welding work is complete.

10 Overview of riveting attachments (pairs of tools)



Note

- ◆ This list is intended for general information. Please refer to the operating instructions provided for a description of the procedure and areas of application.
- ◆ To increase the life of the riveting attachments, please use cutting oil (commercially available).

D 1 + D 2 - Pressing out Ø 3.2 mm punch rivet

D 2 + D 3 - Pressing out Ø 3.2 mm punch rivet

D 2 + D 5 - Pressing out Ø 5 mm punch rivet

D 3 + D 5 - Pressing out Ø 5 mm punch rivet

D 4 + D 5 - Pressing out Ø 5 mm punch rivet

D 5 + D 12 - Punching Ø 8 mm hole for weld joint

D 6 + D 7 - Punching and countersinking hole for Ø 4.8 mm pop rivet

D 8 + D 9 - Re-forming metal panel

D 8 + D 9 - Setting Ø 4 mm solid rivet

D 10 + D 11 - Punching and countersinking hole for Ø 4 mm solid rivet

D 13 + D 14 - Pressing out Ø 5.3 x 7.5 mm punch rivet

D 17 + D 17 - Re-forming metal panel

D 15 + D 16 - Punching and countersinking hole for Ø 6.0 mm solid rivet

D 17 + D 17 - Setting Ø 6.0 mm solid rivet

S 1 + D 2 - Pressing out Ø 3.2 mm punch rivet

S 2 + S 3 - Inserting and setting Ø 3.2 mm punch rivet


S 4 + D 5 - Pressing out Ø 5.3 x 5.5 mm punch rivet


S 5 + D 5 - Pressing out Ø 5.3 x 6.5 mm punch rivet

S 6 + S 7 - Inserting and setting Ø 5.3 x 5.5 mm punch rivet

S 6 + S 8 - Inserting and setting Ø 5.3 x 6.5 mm punch rivet

A00-10973

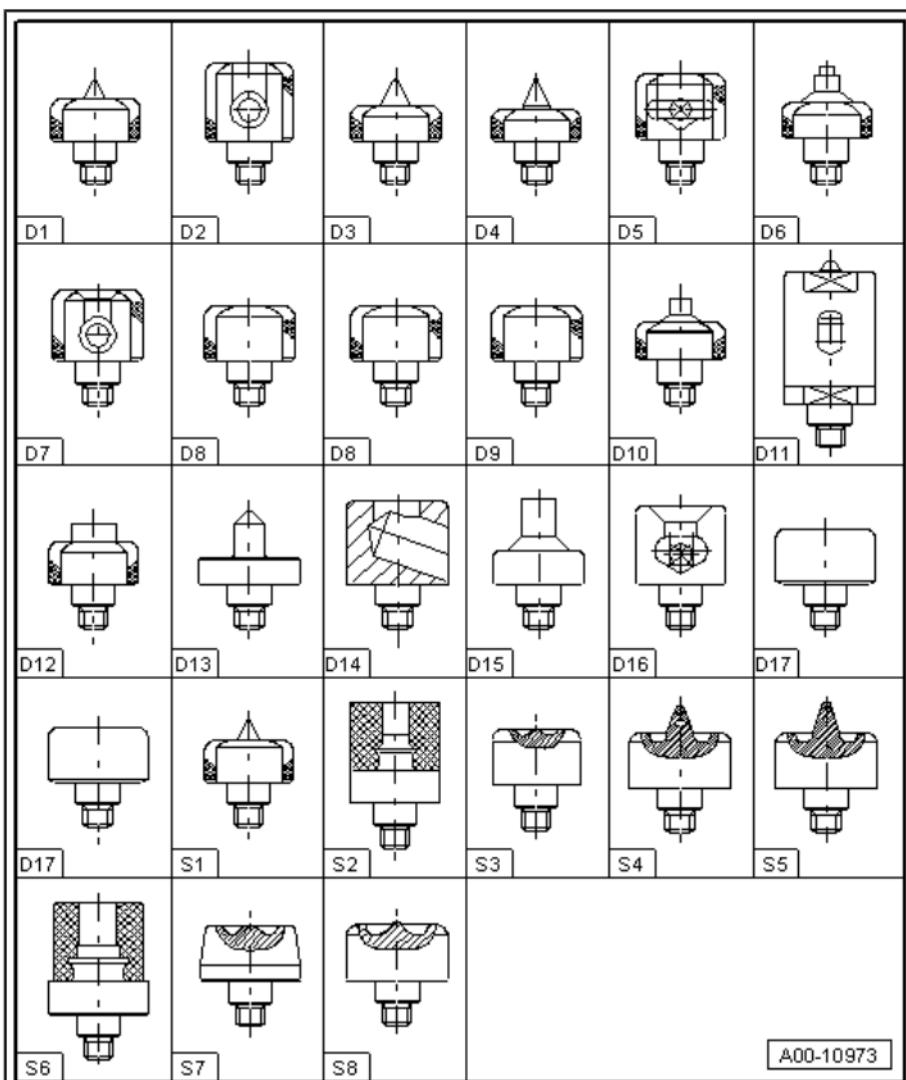

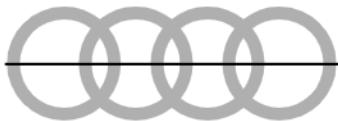

11 Overview of rivets and tools

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not

permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability

with respect to the correctness of information in this document. Copyright by AUDI AG.

VAG 1753 B



W00-11556

Pop rivet nut pliers - V.A.G 1765-


V.A.G 1765 B



W00-0043

Pop rivet pliers - VAS 5072 A-

VAS 5072 A

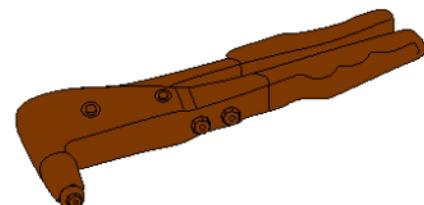

W00-11780

Pneumatic pop riveter - V.A.G 2003 A-


V.A.G 2003 A



W00-10626

Pneumatic/hydraulic pop rivet pliers - VAS 6759-

Rechargeable riveter - VAS 5279 A-
Rechargeable riveter - VAS 843 001-
Compact booster - VAS 6790-
Compact riveter - VAS 6792-
Compact riveter - VAS 6792/2-
Socket for flow-drill screws - VAS 852 007-
Dent remover - VAS 852 001-

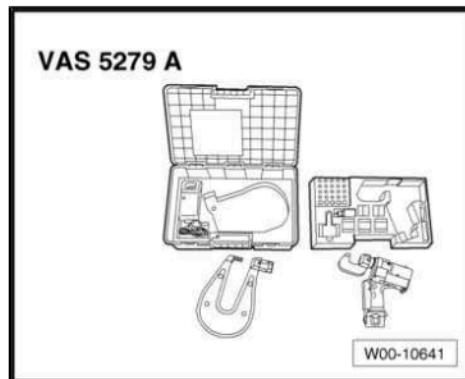

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

Rivet	Order number Size	V.A .G 176 5	V A S 52 79	V A S 50 72	VA G 17 B	VA G 20 A	V A S 67 90	V A S 6 7 9 2/ 2	VA S 84 3 00 1	V A S 6 7 5 9	V A S 8 5 2 9	V A S 8 5 2 0	V A S 8 0 0 1
Punch rivet	4D0 803 217 N 3.35 x 5 mm		x				x		x				
Punch rivet	4D0 803 217 Q 3.35 x 4 mm		x				x		x				
Punch rivet	N 912 295 02 4.3 x 5 mm		x				x		x				
Punch rivet	4D0 803 217 L 5.3 x 5 mm		x				x		x				
Punch rivet	4D0 803 217 M 5.3 x 6.5 mm		x				x		x				
Punch rivet	N 909 261 02 5.3 x 6 mm		x				x		x				
Punch rivet	N 911 365 01 5.3 x 7.5 mm		x				x		x				
Punch rivet	N 911 348 01 5 x 4.2mm		x				x		x				
Solid alumi- num rivet	N 103 239 01 4 x 8 mm		x				x		x				
Solid alumi- num rivet	N 103 240 01 4 x 12 mm		x				x		x				
Solid alumi- num rivet	N 107 440 01 6 x 10 mm		x				x		x				
Solid alumi- num rivet	N 107 441 01 6 x 12 mm		x										

Rivet	Order number Size	V.A .G 176 5	V A S 52 79	V A S 50 72	VA G 17 B	VA G 20 03	V A S 67 90	V A S 6 7 9 2/ 2	VA S 84 3 00 1	V A S 6 7 5 9	V A S 8 5 2 0	V A S 8 5 2 0	V A S 8 5 2 0
Alumi-nium pop rivet with counter-sunk head	4E0 809 864 A						x	x	x	x			
Alumi-nium pop rivet with round head	8Z0 809 864						x	x	x	x			
Flow-drill screws	WHT 003 873 M5 x 25										x		
Flow-drill screws	WHT 006 547 M5 x 20										x		
Flow-drill screws	WHT 007 052 M5 x 18										x		
Threa ded rivet	N 907 163 01 14 mm				x	x	x	x	x	x			
Threa ded rivet	N 907 162 01 10 mm				x	x	x	x	x	x			
Threa ded rivet	N 907 161 01 22 mm				x	x	x	x	x	x			
Threa ded rivet	N 907 160 01 6 mm				x	x	x	x	x	x			
Pop rivet	WHT 005 413 A 6.5 mm Panel thickness that can be rive-ted: 5 – 9 mm				x	x	x	x	x	x			



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

Rivet	Order number Size	V.A .G 176 5	V A S 52 79	V A S 50 72	VA G 17 B	VA G 20 A	V A S 67 90	V A S 6 7 9 2/ 2	VA S 84 3 00 1	V A S 6 7 5 5	V A S 8 5 2 2	V A S 8 5 0 0	V A S 8 5 0 1
Pop rivet	WHT 005 697 6.5 mm Panel thickness that can be riveted: 3 – 4.8 mm				x	x	x	x	x	x			
Pop rivet	WHT 911 527 01 6.5 mm Panel thickness that can be riveted: 4.5 – 7.0 mm				x	x	x	x	x	x			
Pop rivet	N 909 236 01 4.8 mm Panel thickness that can be riveted: 2.4 – 4.8 mm				x	x	x	x	x	x			
Pop rivet	N. 905.344 .03 4.8 mm Panel thickness that can be riveted: 1.5 – 3.5 mm				x	x	x	x	x	x			
Pop rivet	N. 906.924 .02 4.8 mm Panel thickness that can be riveted: 1.5 – 3.5 mm				x	x	x	x	x	x			

Rivet	Order number Size	V.A .G 176 5	V A S 52	V A S 50	VA G 17	VA G 20	V A S 67	V A S 6	VA S 84	V A S 00	V A S 7	V A S 6	V A S 8	V A S 8
Pop rivet	4S0 843 658				x	x	x	x	x	x	x			
Pop rivet bolt	WHT 005 180	V.A .G 176 5 C/ 2												
Pop rivet bolt	N 910 011 01	V.A .G 176 5 C/ 4												
Pop rivet nut	N 910 377 01 M10	V.A .G 176 5												
Pop rivet nut	N 908 568 02 M8	V.A .G 176 5												
Weld stud	VAS 852 001/1 5 mm						x				x			
Weld stud	VAS 852 001/2 4 mm						x				x			



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

12 Overview of rivets used for repair measures

In production	For repair measures	To be used
Punch rivet, Ø 3.3	Aluminium/aluminium	Solid aluminium rivet: Ø 4 mm N.103.239.01 N.103.240.01
Punch rivet, Ø 5.3	Aluminium/aluminium	Solid aluminium rivet: Ø 6 mm N.107.440.01 N.107.441.01
Punch rivet, Ø 3.3 and friction elements	Aluminium/steel	Pop rivet: Ø 4.8 mm N.905.344.03 Panel thickness that can be riveted: 1.5 - 3.5 mm N.906.924.02 Panel thickness that can be riveted: 2.4 - 5.0 mm
Punch rivet, Ø 5.3 and flow-drill screws (where applicable)	Aluminium/steel	Pop rivet: Ø 6.5 mm WHT.005.413.A Panel thickness that can be riveted: 3.35 - 5.35 mm WHT.005.697 Panel thickness that can be riveted: 2.8 - 4.8 mm N.911.527.01 Panel thickness that can be riveted: 4.5 - 7.0 mm N.904.692.02 Panel thickness that can be riveted: 2.4 - 5.0 mm




Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

13 Moulded foam inserts


On this vehicle, various body cavities are fitted with moulded foam inserts.

The foam inserts reduce the noise transmitted to the interior when driving.

These pre-moulded parts are fitted during body manufacture and subsequently increase their volume in the paint shop drying oven at approx. 180 °C after priming.

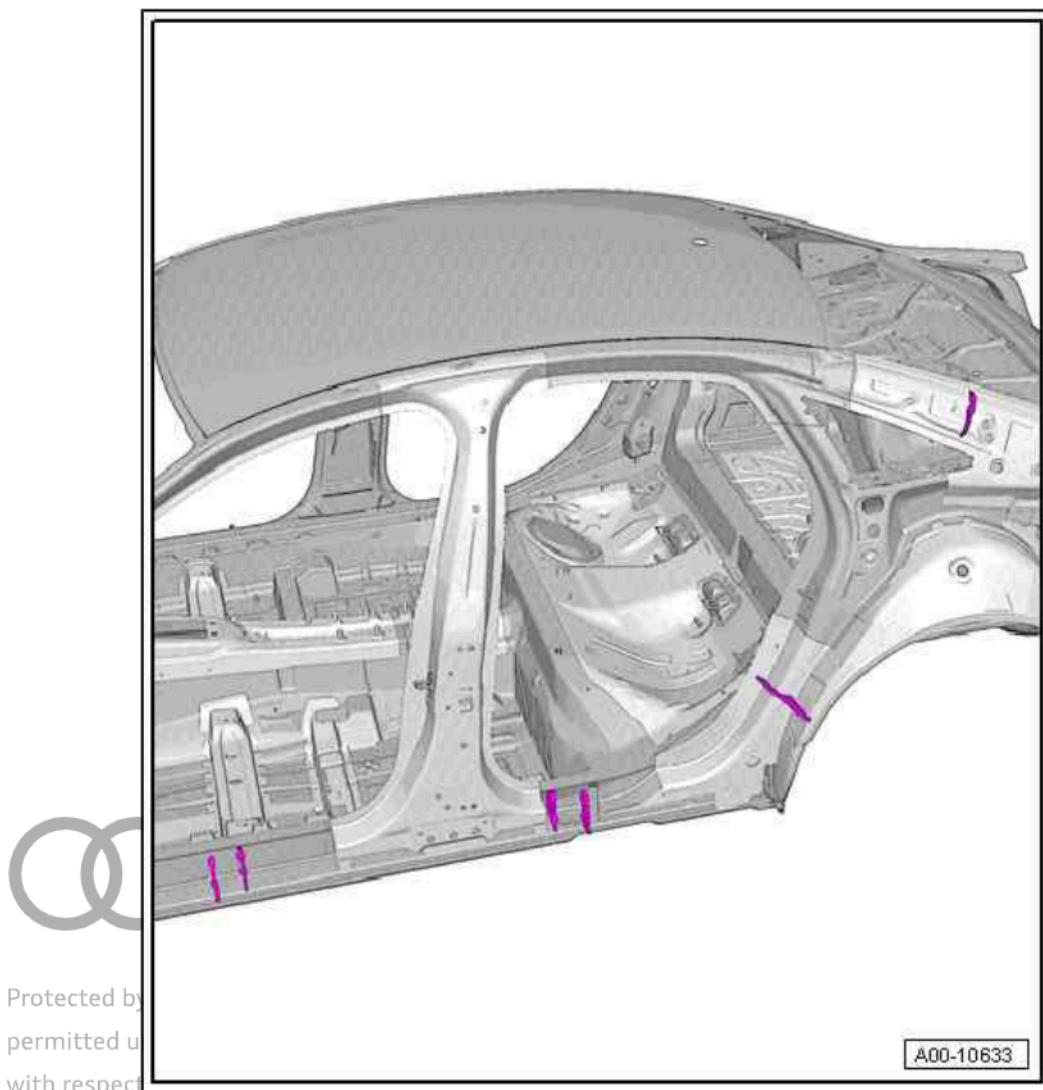

Moulded foam inserts (Avant)

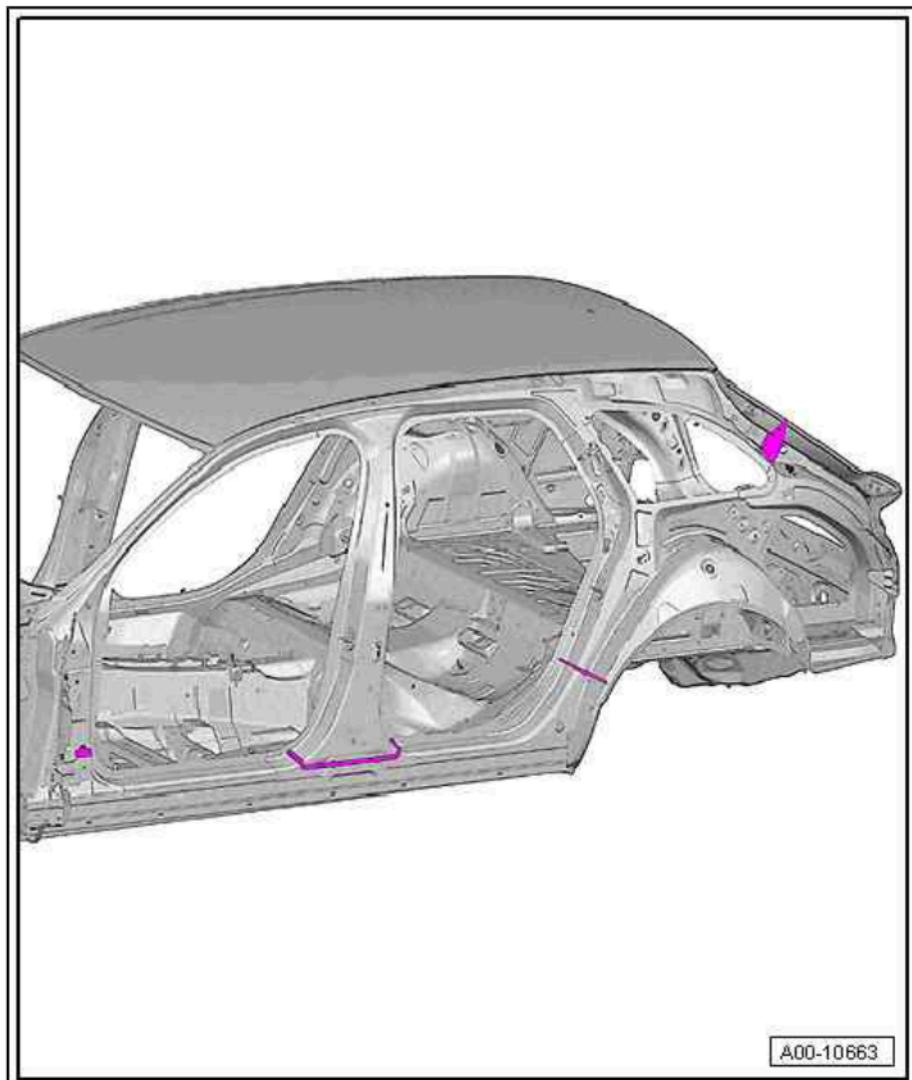

A00-10663

! NOTICE

The replacement foam inserts expand only after reaching about 180 °C. For this reason, an additional filler foam is used when performing repairs.

Filler foam required for repairs: D 506 KD1 A3 - - .

Since the temperature necessary for the foam inserts to expand cannot be achieved under normal workshop conditions, proceed as follows:

Remove residue of foam material on vehicle.

or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. Copying, reverse engineering, decompiling, and/or disassembling of this document, in whole or in part, is prohibited. AUDI AG expressly disclaims any guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

Requirement

Before continuing with this procedure, ensure that the replacement panel is ready for installation, i.e. cut to shape, matched up to the vehicle, corrosion protection applied.

Renewing moulded foam insert

Fix moulded foam insert to vehicle.

Apply filler foam -D 506 KD1 A3- to replacement part.

Secure new part in position. Gently press in new part in vicinity of moulded foam insert until it makes contact, and then weld into place.

The foam hardens within 25 minutes.

Do not weld (SG) within 15 mm of the foam insert (on either side).

After painting the vehicle the repaired area must be cavity-sealed.

14 Laser welding

The laser welding technique employs a high-energy light beam directed onto the weld by means of optical lenses or fibre optics.

During the welding process the upper panel is fused onto the partially molten lower panel, creating a weld joint with no additional material.

When performing repairs, the laser weld seams are replaced by SG plug weld seams or RP spot weld seams.



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

15 Bonded joints

The body of the Audi A6 features bonded joints and spot-welded/bonded joints for increased rigidity and strength.

Bonded joints

In the case of adhesive-bonded joints, the joint between the sheet metal parts is formed only by the adhesive.

Inspecting and repairing bonded joints

Particular attention should be given to these joints when diagnosing accident damage and performing body repairs.

Note the following points: Do not use a chisel to test the strength of a joint or relieve stresses by hammering as this will cause irreparable damage to the bonded joint.

These joints should be inspected particularly closely when diagnosing accident damage and after performing straightening work on the body.

If the joint is not accessible with pop rivets, it must be repaired with an arc-welded seam (SG). In this case the complete area must be repaired as the heat generated by welding destroys the adhesive joint. The SG seams should be welded working from the thin to the thick panel. Always use a fume extractor.

Repair methods for replacing body parts

When making repairs, welded joints can be used in place of all spot-welded bonded joints and certain bonded joints if no suitable body adhesive is available.

Do not make the repair with only the same spot welds or seams as originally used in production. These alone are not adequate for a proper joint.


The repair methods are shown in detail on the following pages.

Note

- ◆ *If the instructions call for additional spot welds, these should be applied in a single operation.*
- ◆ *Do not place new spot welds in-between the original spot welds.*
- ◆ *SG plug welding should only be performed after spot welding.*
- ◆ *This avoids any increased shunt current when spot welding.*

Ensure good root penetration at all joints.

Seal off repaired joint flanges and apply cavity sealing.

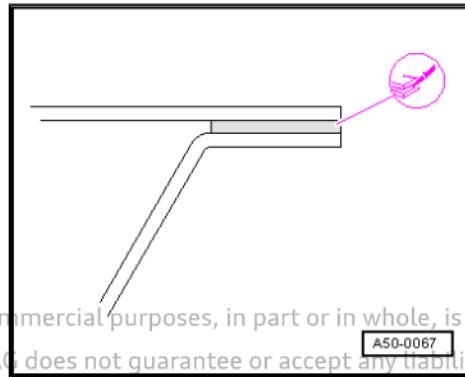


A50-0067

16 Body dimensions



Note

- ◆ Dimensions are only given for checking purposes. Correct dimensions are defined by the alignment bracket set.
- ◆ Bolts, screws, plugs, trim panels and attached components must be removed before starting the measuring process.
- ◆ The body dimensions should be measured using the telescopic gauge - VAS 5159- or the telescopic gauge - VAS 5160-.
- ◆ To avoid inaccurate measurements, make sure the measuring rods are always of equal length.

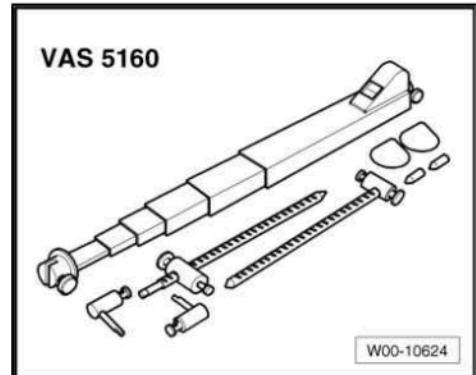

Body - front



NOTICE

These dimensions only serve as a check. Correct dimensions are defined by the alignment bracket set.

16.1 Body - front

(Saloon and Avant identical)



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

A - 1346 mm ± 2.0 mm

Distance between wing panel mountings

B - 821 mm ± 2.0 mm


Distance between suspension strut mountings

C - 1235 mm ± 2.0 mm

Diagonal distance between suspension strut mountings



Protected by copyright. Copying, distribution, or
permitted unless author
with respect to the corre

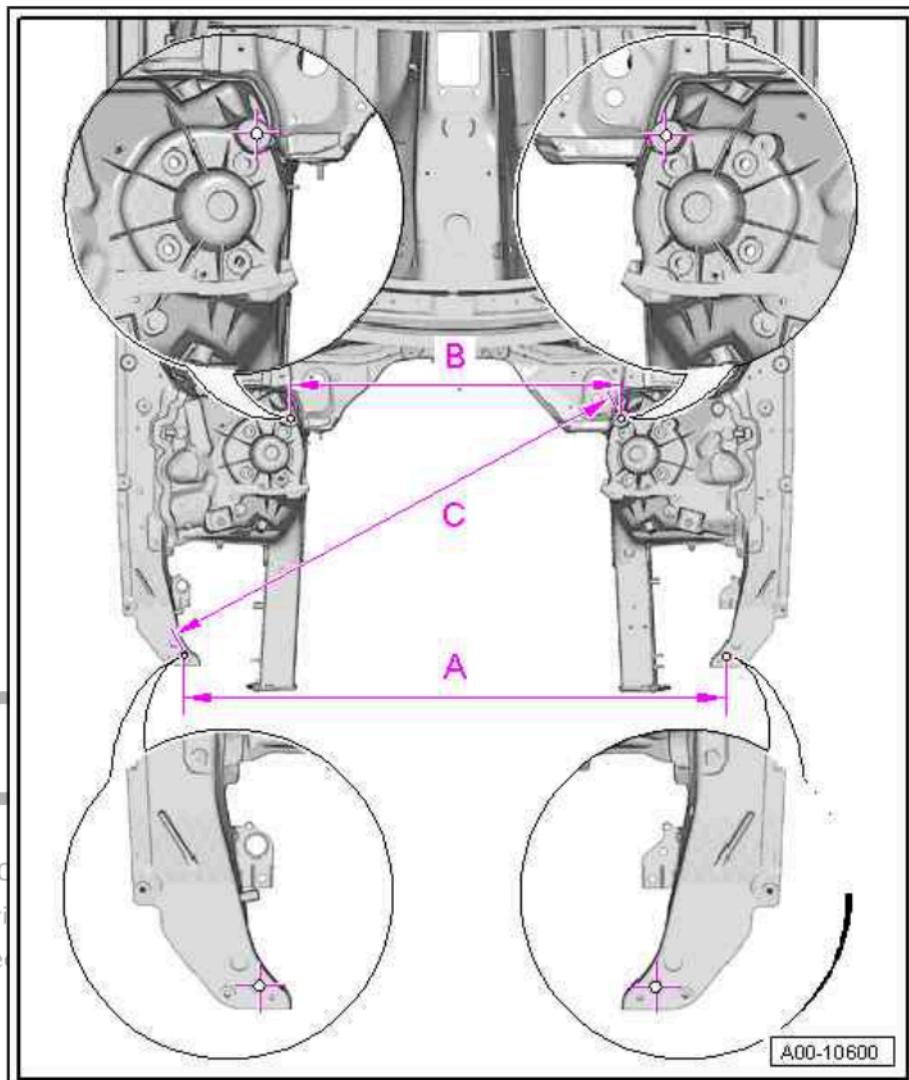


(Saloon and Avant identical)

A - 1008 mm ± 2.0 mm

Distance between impact
damper mountings

B - 930 mm ± 2.0 mm

Distance between impact
damper mountings

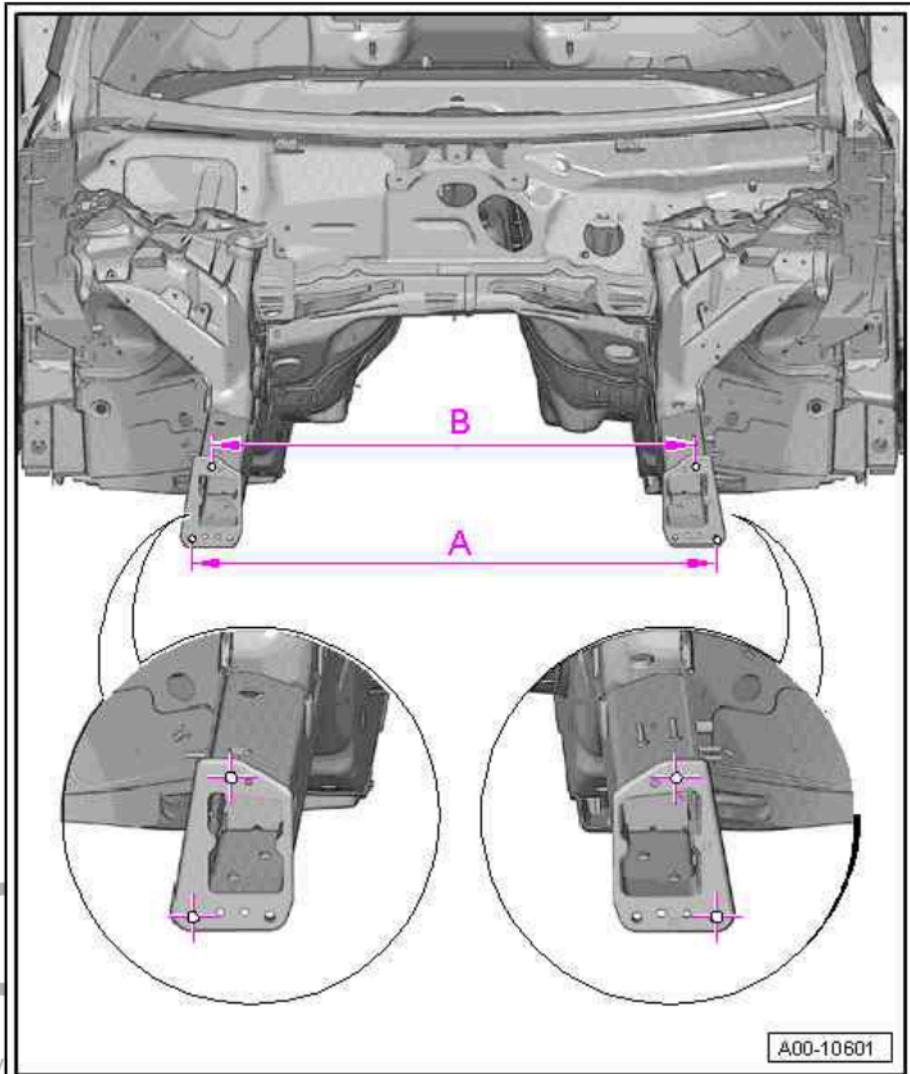

Protected by copy

permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability

with respect to the correctness of information in this document. Copyright by AUDI AG.

A00-10601

16.2 Body - centre

(Saloon and Avant identical)

A - 1188 mm ± 2.0 mm


Windscreen opening (top)

B - 1536 mm ± 2.0 mm

Windscreen opening (bottom)




Protected by copyright. Copy
permitted unless authorised
with respect to the correctn

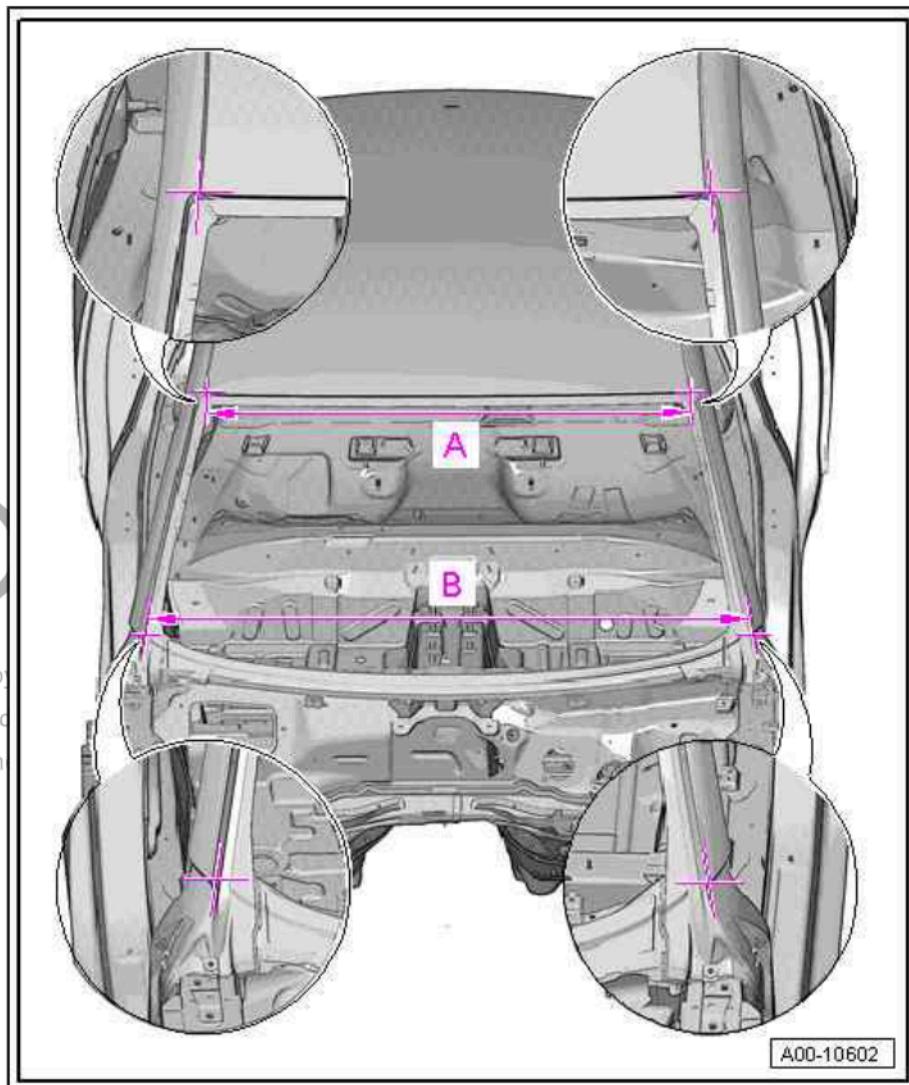

Distance between A-pillars (Saloon and Avant identical)

A - 1526 mm ± 2.0 mm
Distance between A-pillars

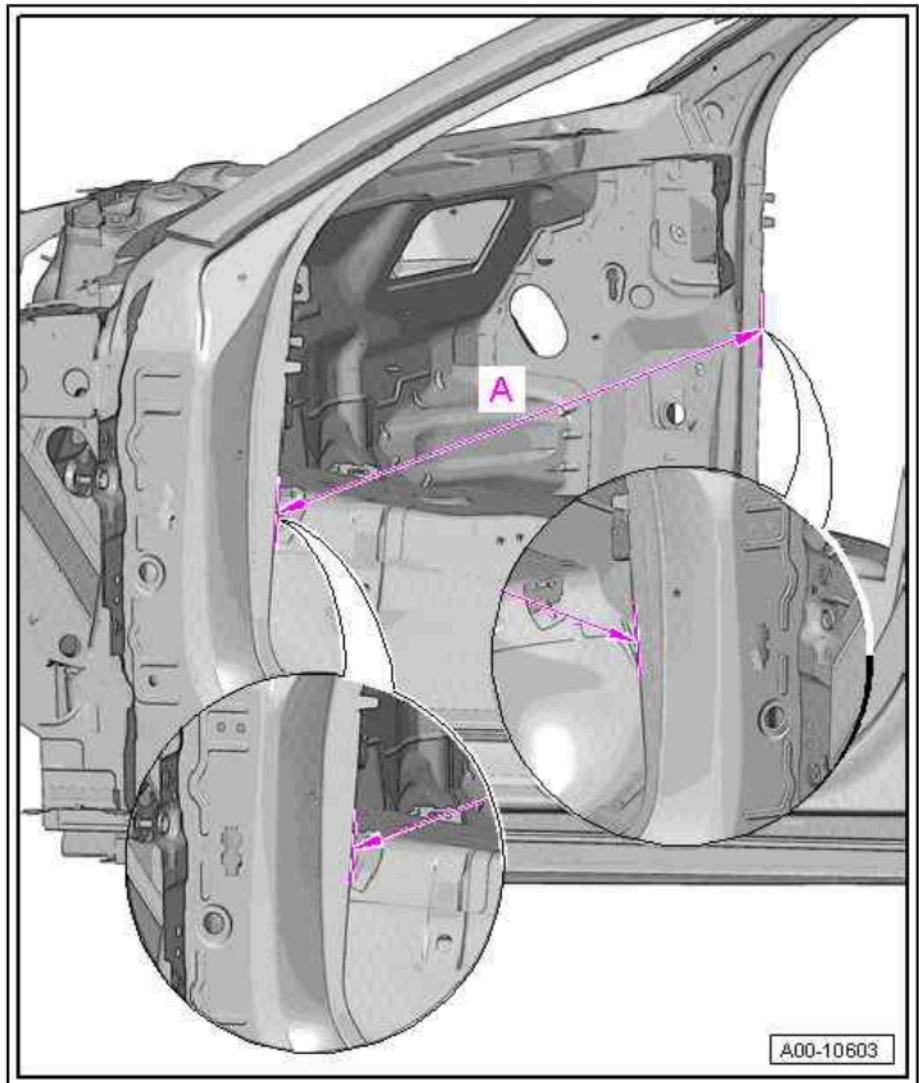


Distance between B-pillars (Saloon and Avant identical)



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

A - 1490 mm ± 2.0 mm

Distance between B-pillars

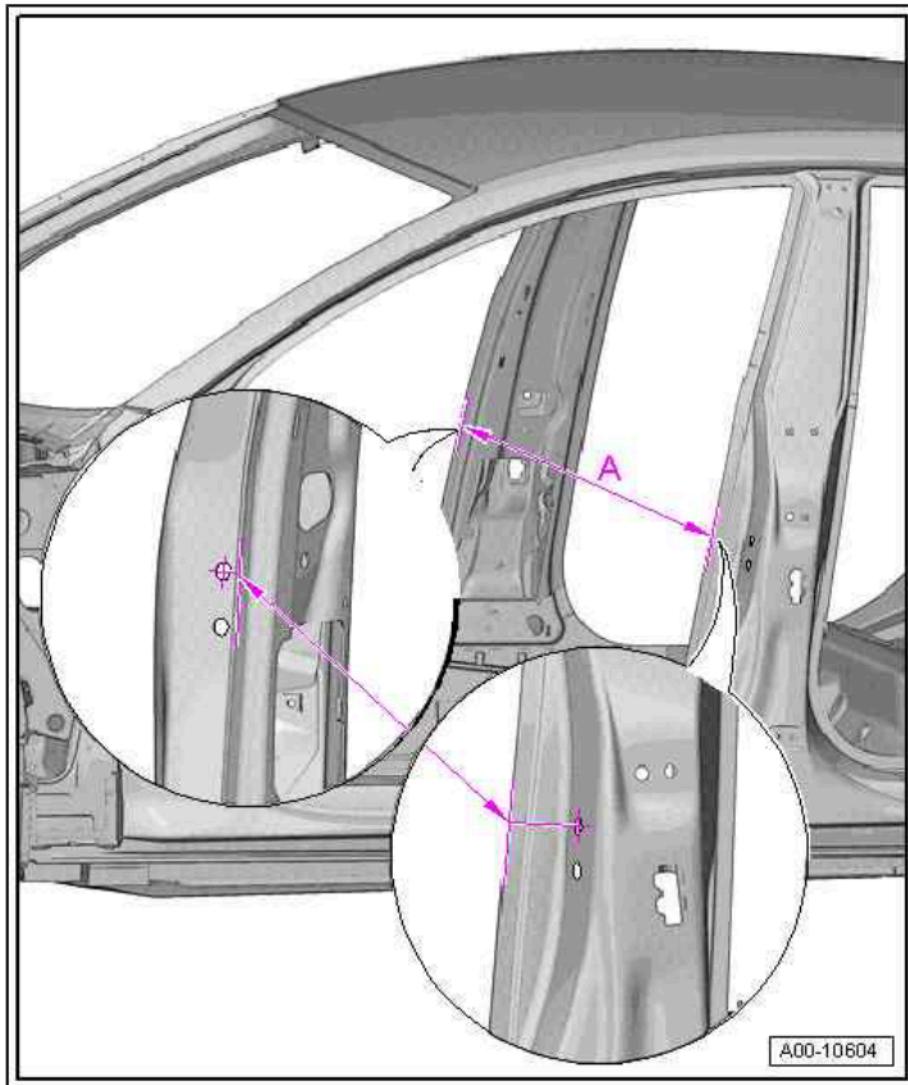

Distance between C-pillars (Saloon and Avant identical)




Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

A - 1438 mm ± 2.0 mm
Distance between C-pillars



Protected by copyright. Copying
permitted unless authorised
with respect to the correctness

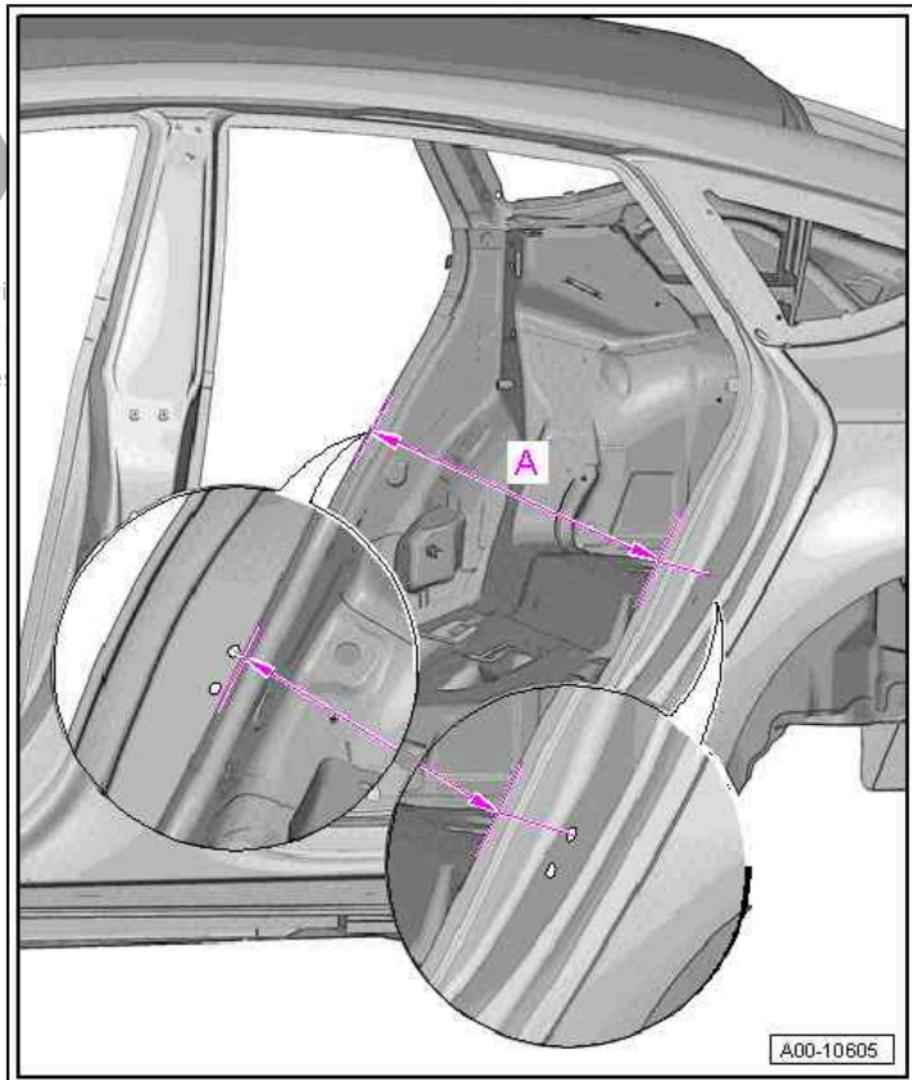

Door opening (Saloon and Avant identical)

A - 862 mm ± 2.0 mm


Distance between A-pillar and
B-pillar

B - 889 mm ± 2.0 mm

Height of door opening



Protected by co
permitted unle
with respect to

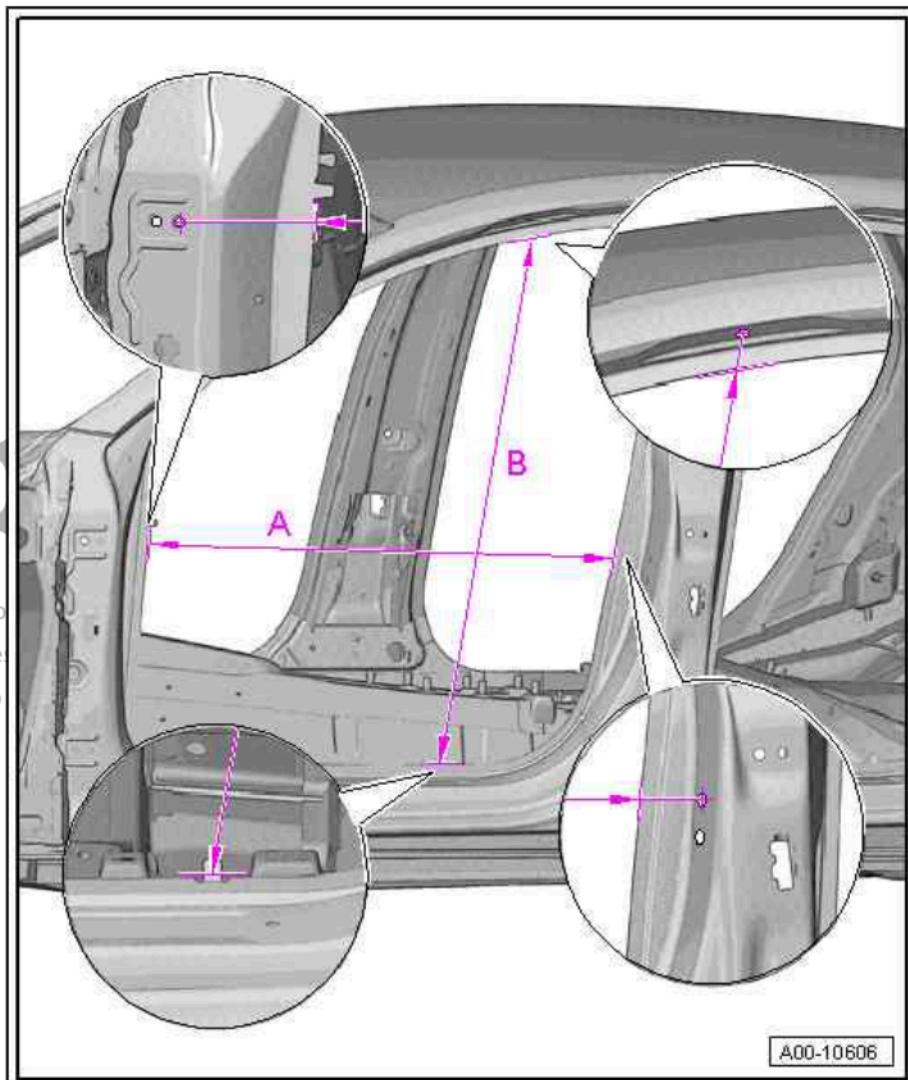


A - 762 mm ± 2.0 mm

Distance between B-pillar and
C-pillar

B - 967 mm ± 2.0 mm

Height of door opening

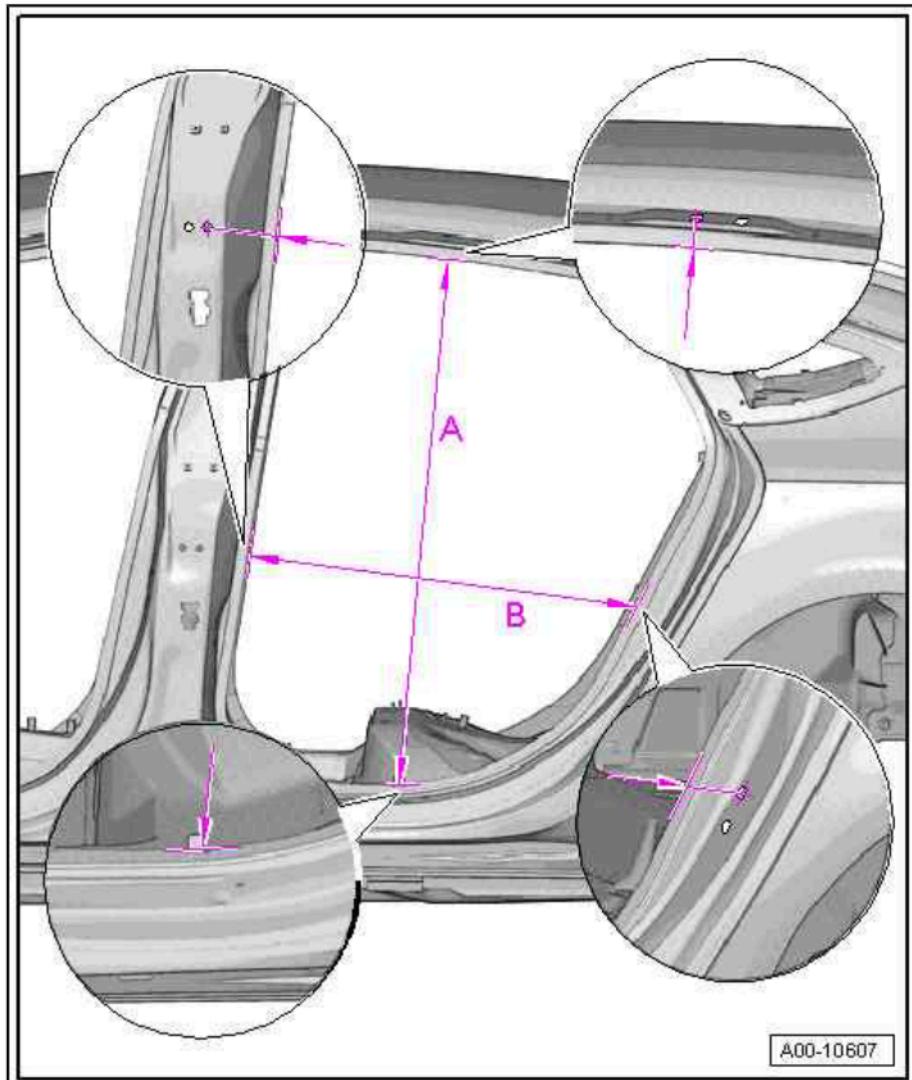

16.3 Floor group

(Saloon and Avant identical)



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

A - 826 mm ± 2.0 mm


Distance between suspension
strut mountings

B - 1129 mm ± 2.0 mm

Diagonal distance between
front longitudinal members

C - 892 mm ± 2.0 mm

Distance between front longi-
tudinal members

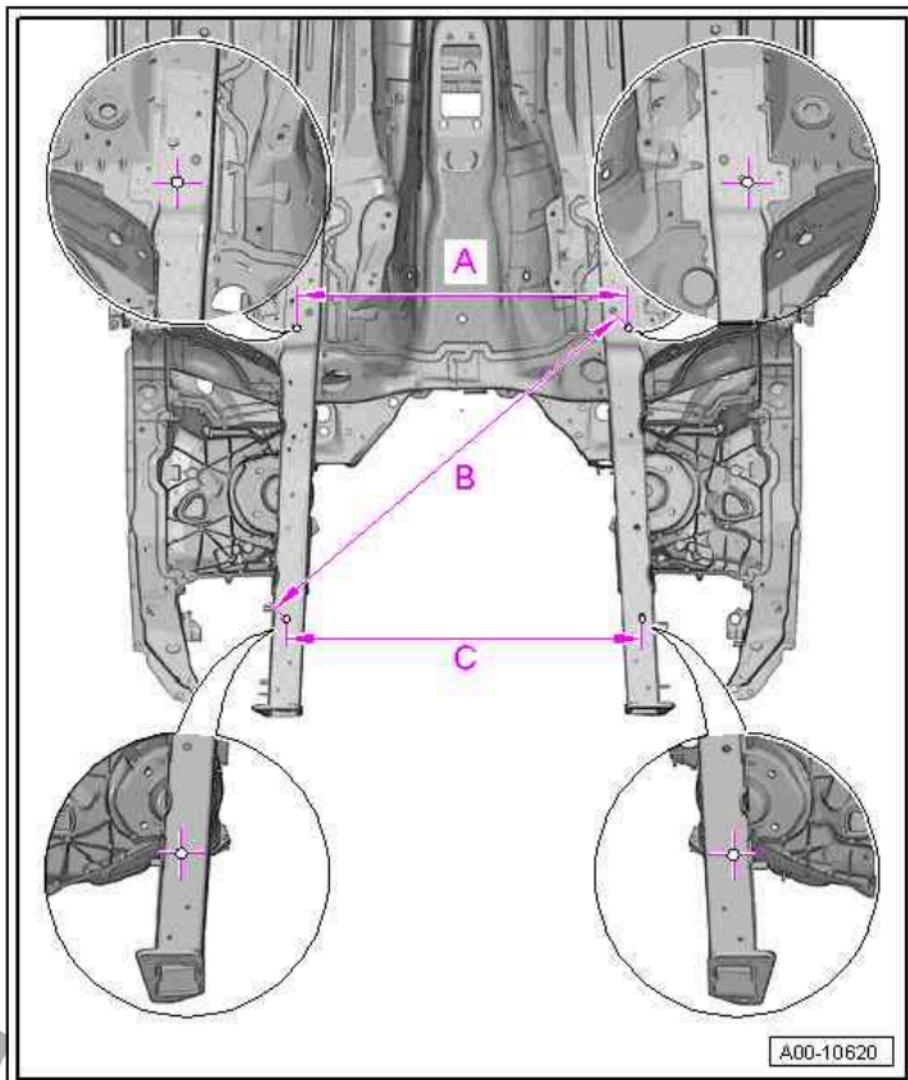

(Saloon and Avant identical)

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

A - 1102 mm ± 2.0 mm

Distance between rear axle
mountings

B - 1444 mm ± 2.0 mm


Diagonal distance between
longitudinal members and axle
mountings

C - 1300 mm ± 2.0 mm

Distance between rear longitudi-
nal members



Protected by copyright. Copying
permitted unless authorised by
with respect to the correctness

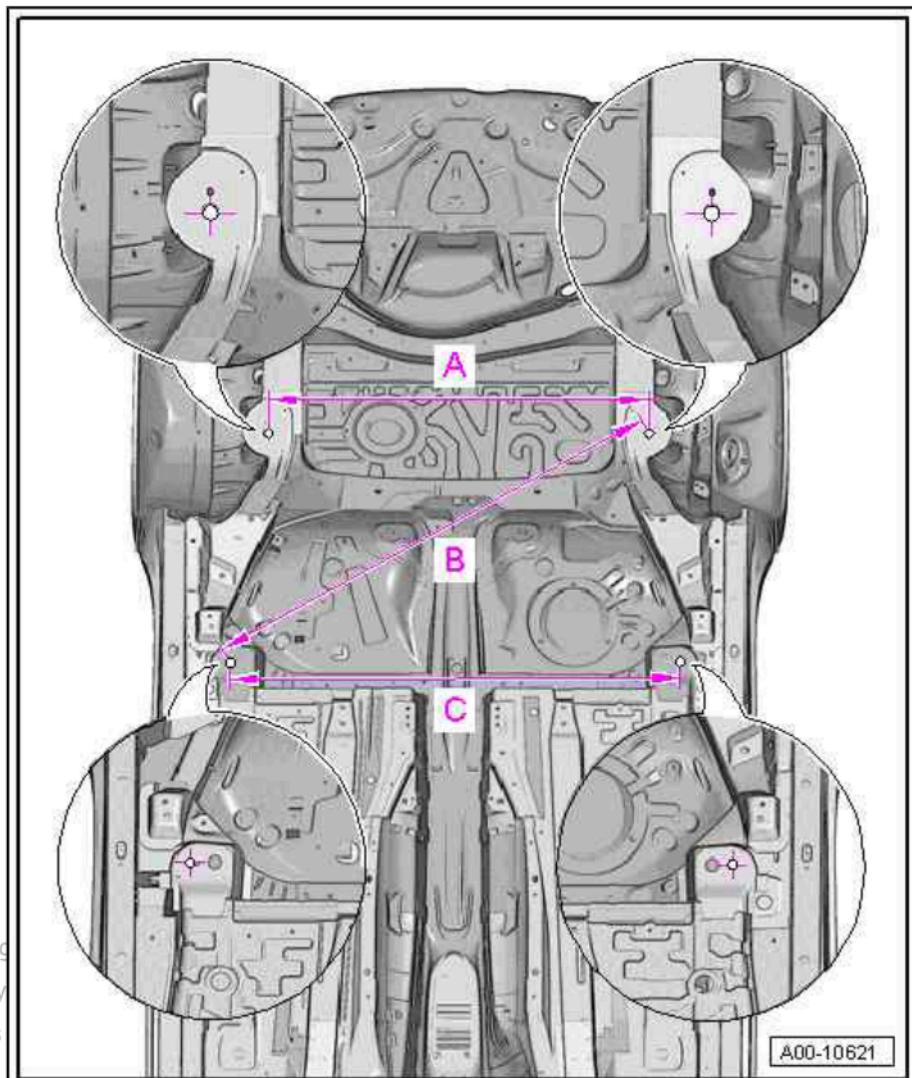


16.4 Body - rear

A - $556 \text{ mm} \pm 2.0 \text{ mm}$

Distance between window cross member and rear upper cross panel

B - $1221 \text{ mm} \pm 2.0 \text{ mm}$

Distance between side panels
permitted unless author
with respect to the corre

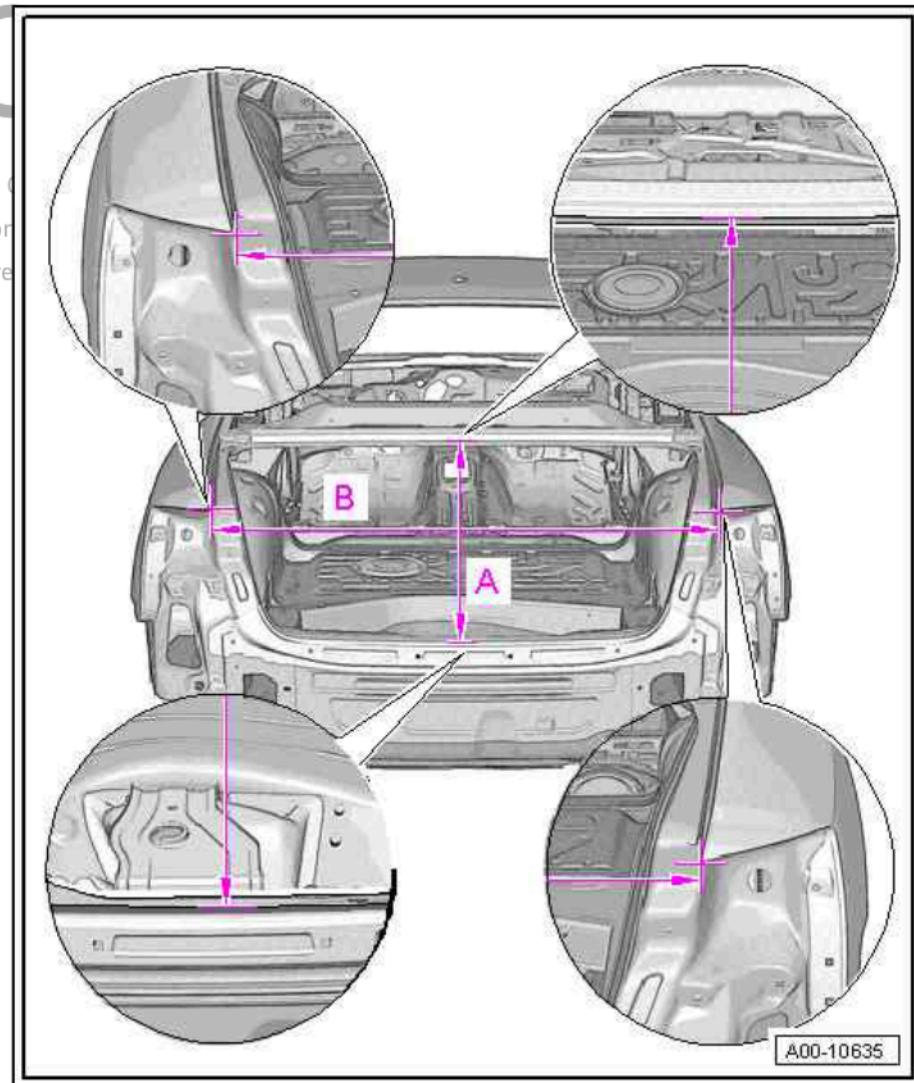


A - 1082 mm ± 2.0 mm

Distance between longitudinal
members

B - 1369 mm ± 2.0 mm

Distance between tail light
mountings

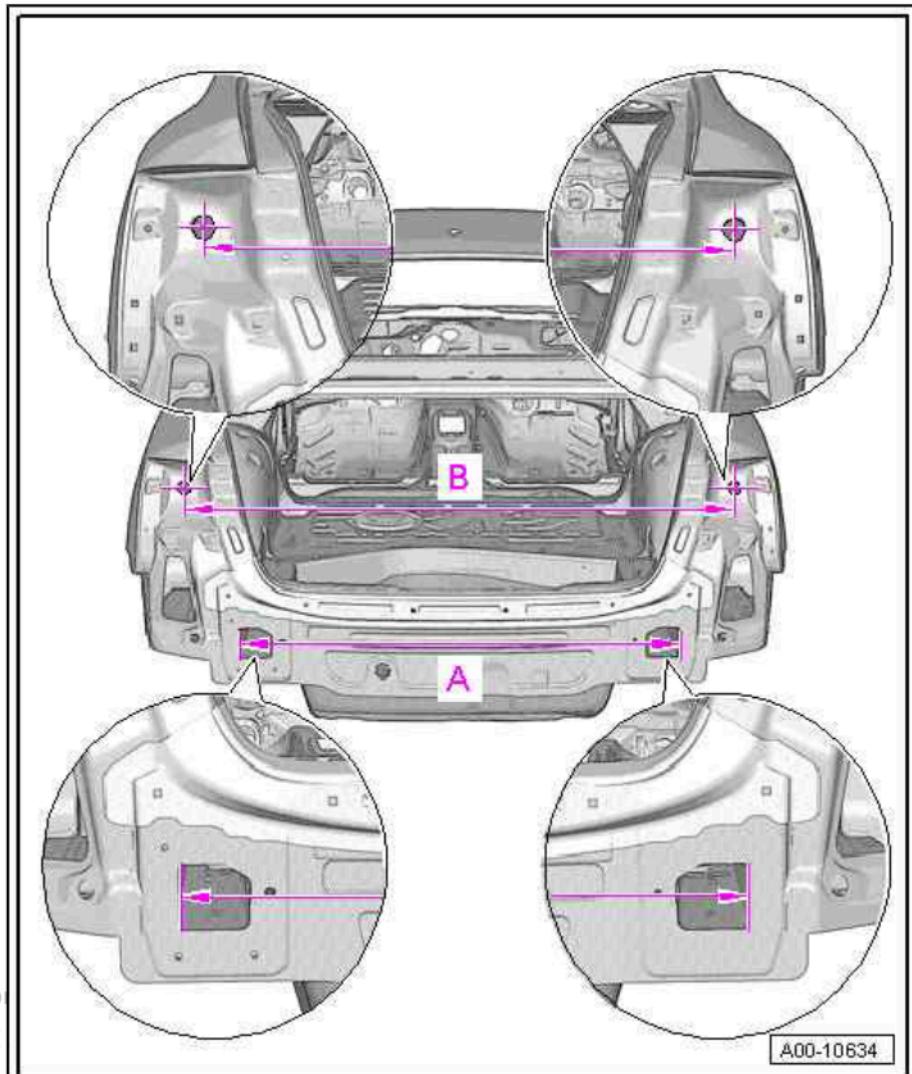

Protected by copyright. Copying for p
permitted unless authorised by AUDI
with respect to the correctness of inf

A00-10634

16.5 Body - rear (Avant)

A - $1010 \text{ mm} \pm 2.0 \text{ mm}$

Distance between window cross member and rear upper cross panel


B - $1252 \text{ mm} \pm 2.0 \text{ mm}$

Distance between side panels



Protected
permitted
with resp

not
cy

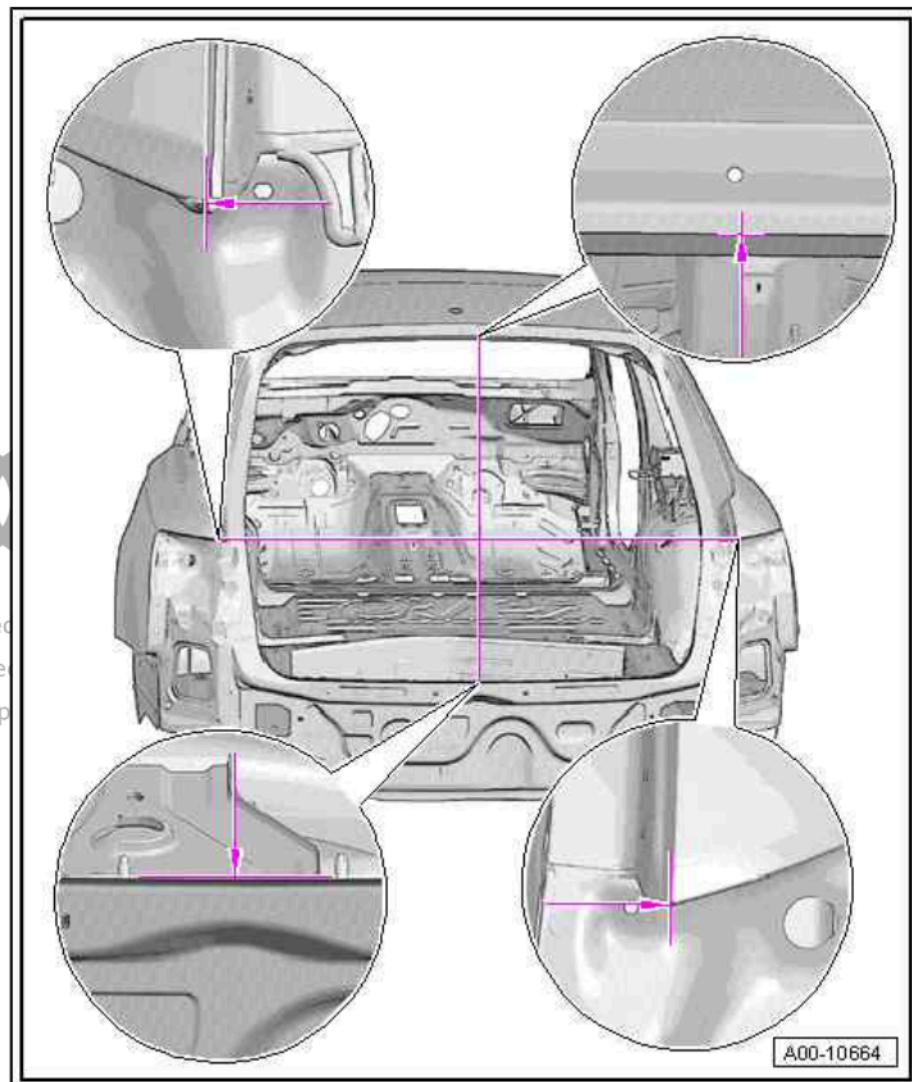


A - 1082 mm ± 2.0 mm

Distance between longitudinal
members

B - 1408 mm ± 2.0 mm

Distance between tail light
mountings

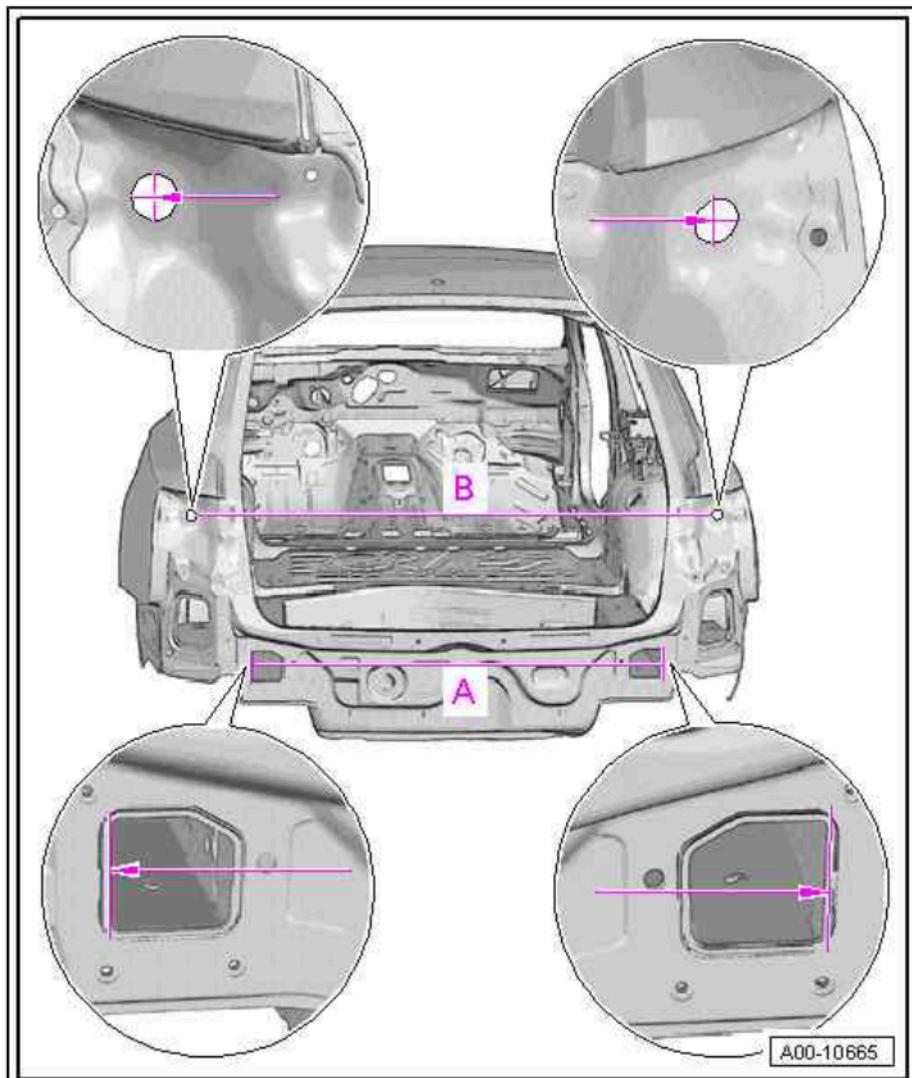

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

17 Thread repair for M6 pop rivet nut

If the thread-forming screws WHT 002 605 or WHT 002 612 should fail to hold or are otherwise damaged, the repair screws WHT 006 778 can be used as a substitute. It is then not necessary to drill holes and set the pop rivet nuts.



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.


18 Repairing thread for seat belt anchorage

The procedure for repairing the thread is described in the installation instructions supplied with the repair set for belt anchorage - VAS 6733- .

- The rear seat belt anchorage -A- and the front seat belt anchorage -B- can be repaired with the repair set for belt anchorage - VAS 6733- .



Protected by copyright. Copying,
permitted unless authorise
with respect to the correcti

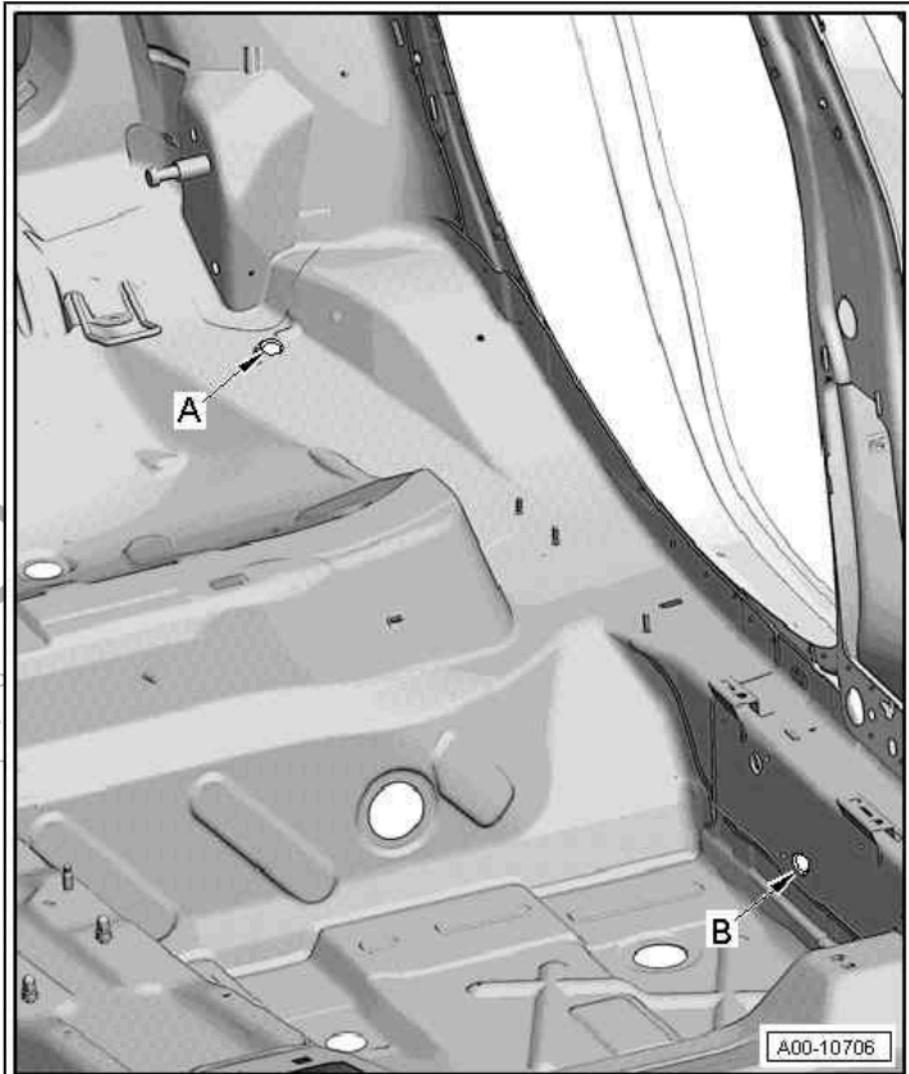


A00-10706


19 Tools

Special tools and workshop equipment required

- ◆ Resistance spot welder - VAS 6239 A-
- ◆ Resistance spot welder - VAS 6525-
- ◆ Resistance spot welder - VAS 6530-
- ◆ Resistance spot welder - VAS 6535-
- ◆ Resistance spot welder - VAS 6545-
- ◆ Shielded arc welding equipment - VAS 6044- or -VAS 6045-
- ◆ Drill - VAS 5144-
- ◆ Drill - VAS 6267 A-
- ◆ Compact angle grinder - VAS 5167-
- ◆ Crack testing set - VAG 2014 -
- ◆ Compact booster - VAS 6790-
- ◆ Double cartridge gun - VAS 6453-
- ◆ Double cartridge gun - VAS 5237-

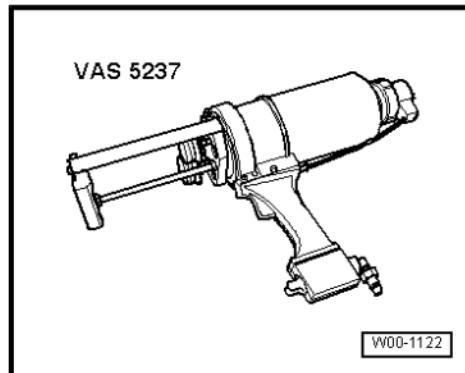


- ◆ Mechanical door tensioner - V.A.G 1438-

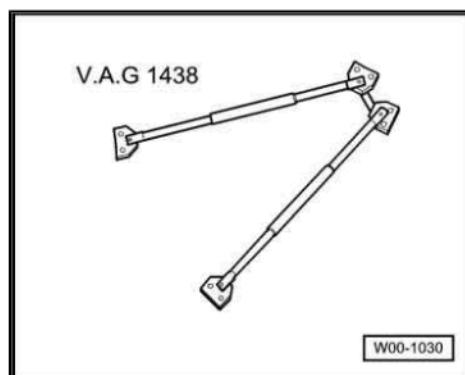


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

- ◆ Pneumatic pop riveter - V.A.G 2003 A-

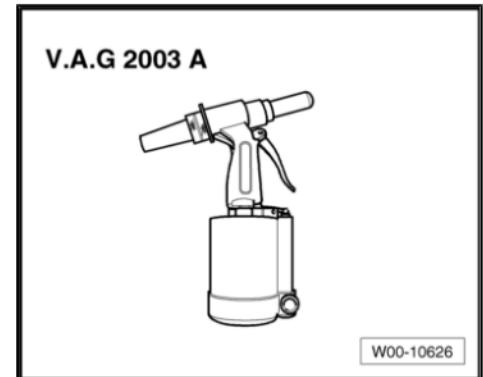


- ◆ Suction lifter - V.A.G 1344- or magnet - VAS 6739-

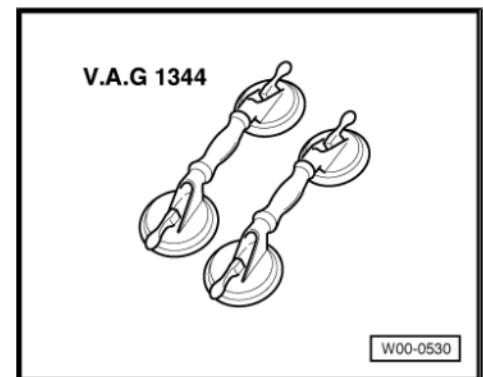


- ◆ Alternatively, you can use the rechargeable riveter - VAS 5279 B- . This is a complete set.




Protected by copyright. Copying for private or commercial purposes is only permitted unless authorised by AUDI AG. AUDI AG does not accept any liability with respect to the correctness of information in this document.

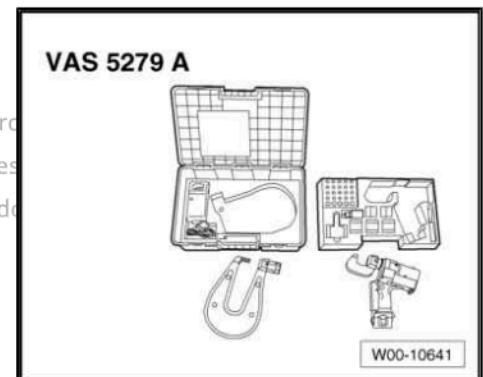


- ◆ Pneumatic glue gun - V.A.G 2005 B-

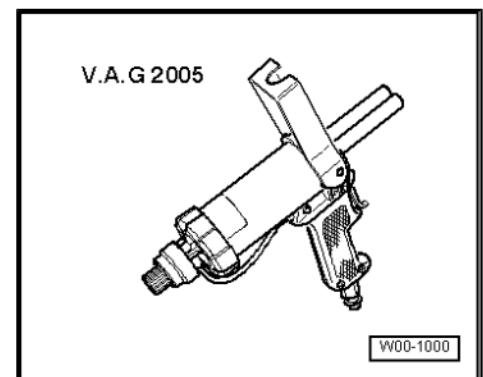


◆ Setting gauge - 3371-

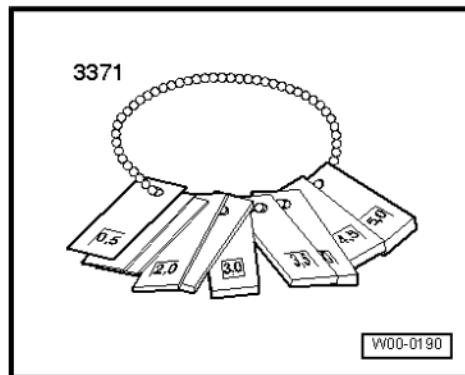


◆ Compressed-air gun - V.A.G 1761/1-

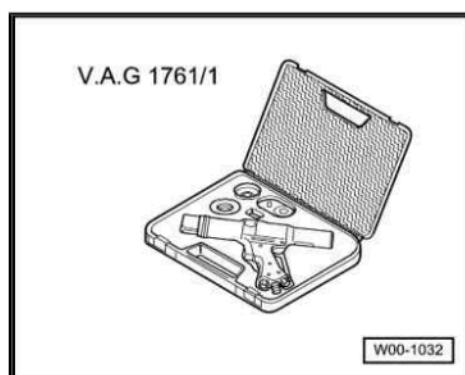

◆ Tensioning strap - T 10038-

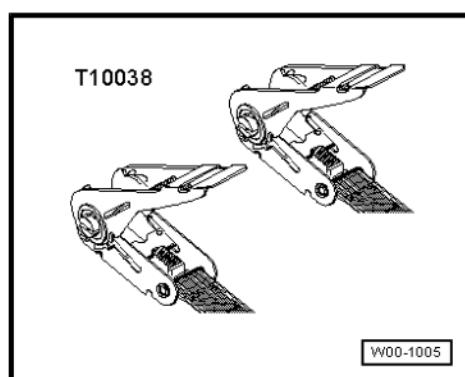


◆ Body saw - VAS 5108 - or - VAS 6598 - or -VAS 6780-

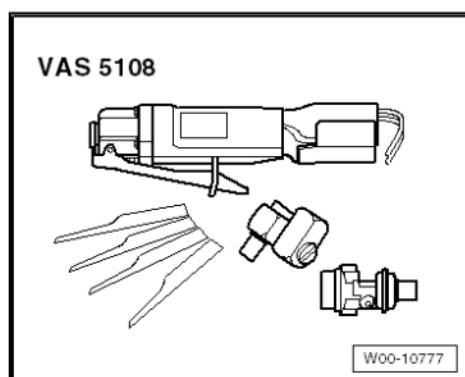


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

- ◆ Spot weld breaker - VAS 6322 A-

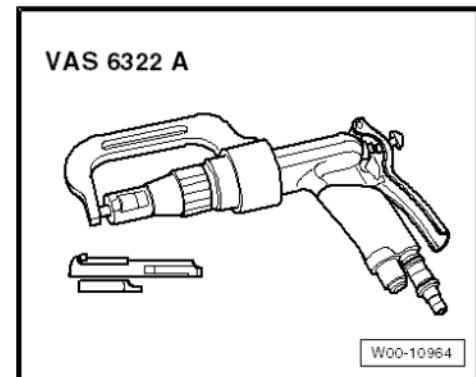

Pro~~te~~ Cartridge heater ~~ed~~ V.A.G 1939 A
Copyright © AUDI AG 1998. All rights reserved. Any use or commercial purposes, in part or in whole, is not
permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability
with respect to the correctness of information in this document. Copyright by AUDI AG.

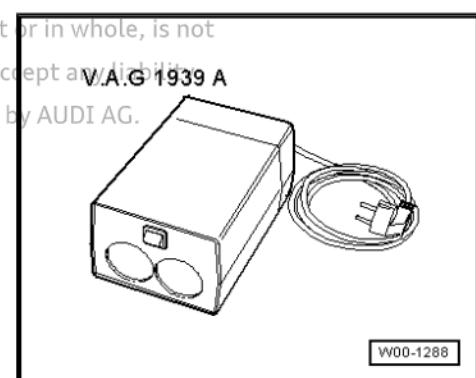

20 Matching the surface contour

Repaired areas must be prepared so that all surfaces, swage lines and panel edges are accurately aligned with the surrounding body contour.

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability

- The following requirements must be met:**
- ◆ After body repair work such as dent removal, welding and filling, etc., the repaired areas and parts must be dry-sanded with a grit size of at least P 80.
 - ◆ The repaired surfaces must be prepared so that the required paint finish can be achieved in no more than two stages.

For the required surface contour use the following body fillers:

For vehicles with steel body

2-component steel filler set - DA 787 300 A2 -

For vehicles with aluminium body

2-component "diamond" filler aluminium powder - DA 004 200 A2
- and hardener - DA 004 201 A1-

NOTICE

The use of body solder containing lead is prohibited as of 1st January 2003.

Note

Lead-free body solder is not approved by AUDI AG.

21 Straightening jig

CAUTION

Straightening and re-alignment work must not be carried out on the front section of the Audi A6 or Audi A6 Avant body because this could cause cracking in the aluminium castings that may not be externally visible.



Note

- ◆ *The item numbers in the illustrations are identical with the end numbers on the alignment bracket mountings.*
- ◆ *The item numbers of the alignment bracket mountings marked with a circle are for checking the body with mechanical units installed.*
- ◆ *The required basic set size is given for the alignment bracket mountings.*

Is used in conjunction with MZ Plus straightening bracket system - VAS 6630- .

Alignment bracket set supplement - VAS 6667-

- Detailed information on setting up the alignment bracket set can be found in the setup plan enclosed with the equipment.

21.1 Procedure for repairing structural body damage on Audi vehicles

- If there is reason to believe that a vehicle has suffered structural body damage, if the body dimensions do not conform to the specifications in the Workshop Manual and/or if there is visible damage to structural components, the vehicle must be mounted on an Audi-approved straightening jig system in order to check the body dimensions.

Definition of structural body damage:

Damage (denting, buckling, rupture, etc.) to and/or displacement of a structural component of the vehicle body.

All body components with the exception of outer skin panels or bolt-on parts must be regarded as structural components.

Notwithstanding the above, the bolt-on longitudinal members of an aluminium vehicle are also structural components.

If the body dimensions differ from the specifications, the vehicle must be repaired according to the instructions in the Workshop Manual.



Note

 *Detailed information on setting up the alignment bracket set can be found with the equipment.*

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

 Note

- ◆ *The item numbers in the illustrations are identical with the end numbers on the alignment bracket mountings.*
- ◆ *The item numbers of the alignment bracket mountings marked with a circle are for checking the body with mechanical units installed.*
- ◆ *The required basic size is given for the alignment bracket mountings.*



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.


50 – Body - front

RO: 50 53 55 00

1 Intermediate piece - Renewal

(Saloon and Avant identical)

- 1 - Intermediate piece
- 2 - A-pillar
- 3 - Wheel housing
- 4 - Wing mounting flange for upper wheel housing

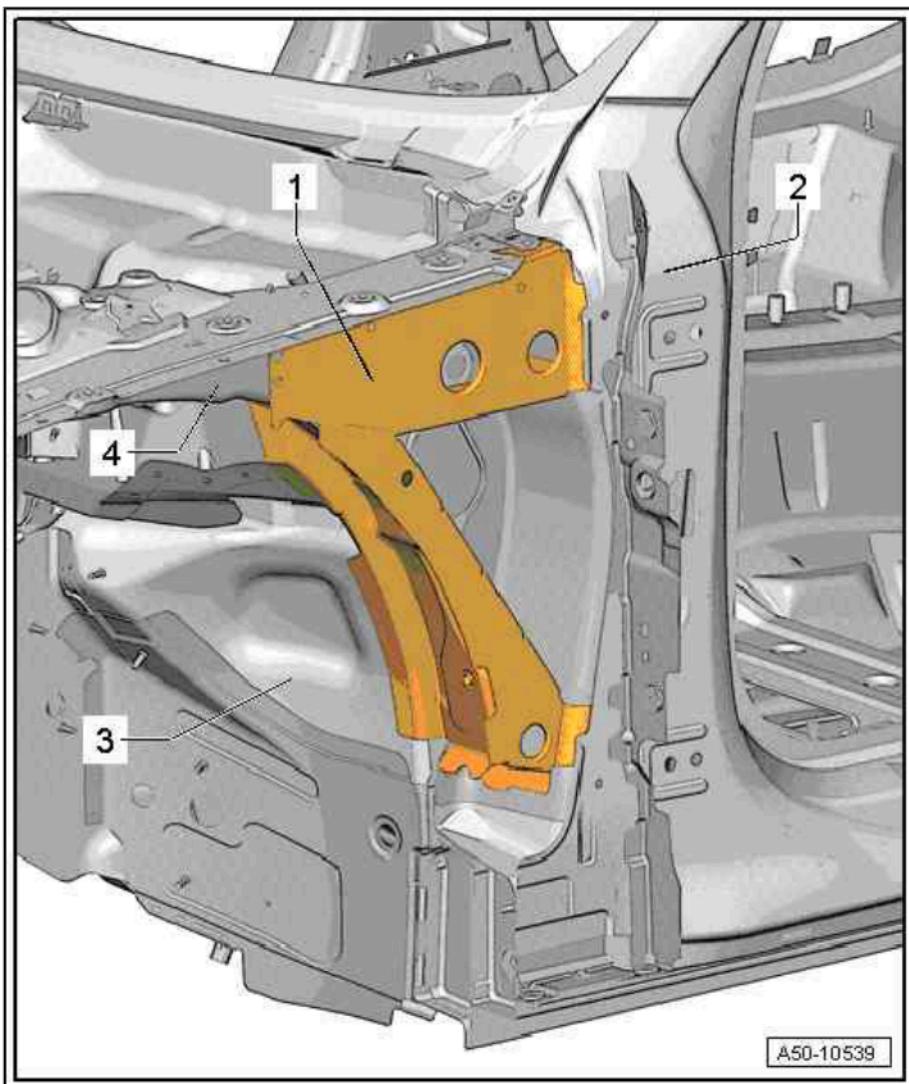

A50-10539

1.1

⇒ page 5

1.2

Notes for vehicles with hybrid drive

Tools

Special tools and workshop equipment required

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability

with respect to the correctness of information in this document. Copyright by AUDI AG.

- ◆ Resistance spot welder
- ◆ Shielded arc welding equipment
- ◆ Brush grinder
- ◆ Compact angle grinder
- ◆ Drill


- ◆ Spot weld breaker
- ◆ Body saw

Tools approved by AUDI AG must be used to ensure correct results when carrying out repair work [⇒ page 54](#).

1.3 Procedure

Cutting locations

- Drill out original joint using spot weld breaker .
- Cut through joint with A-pillar using body saw .

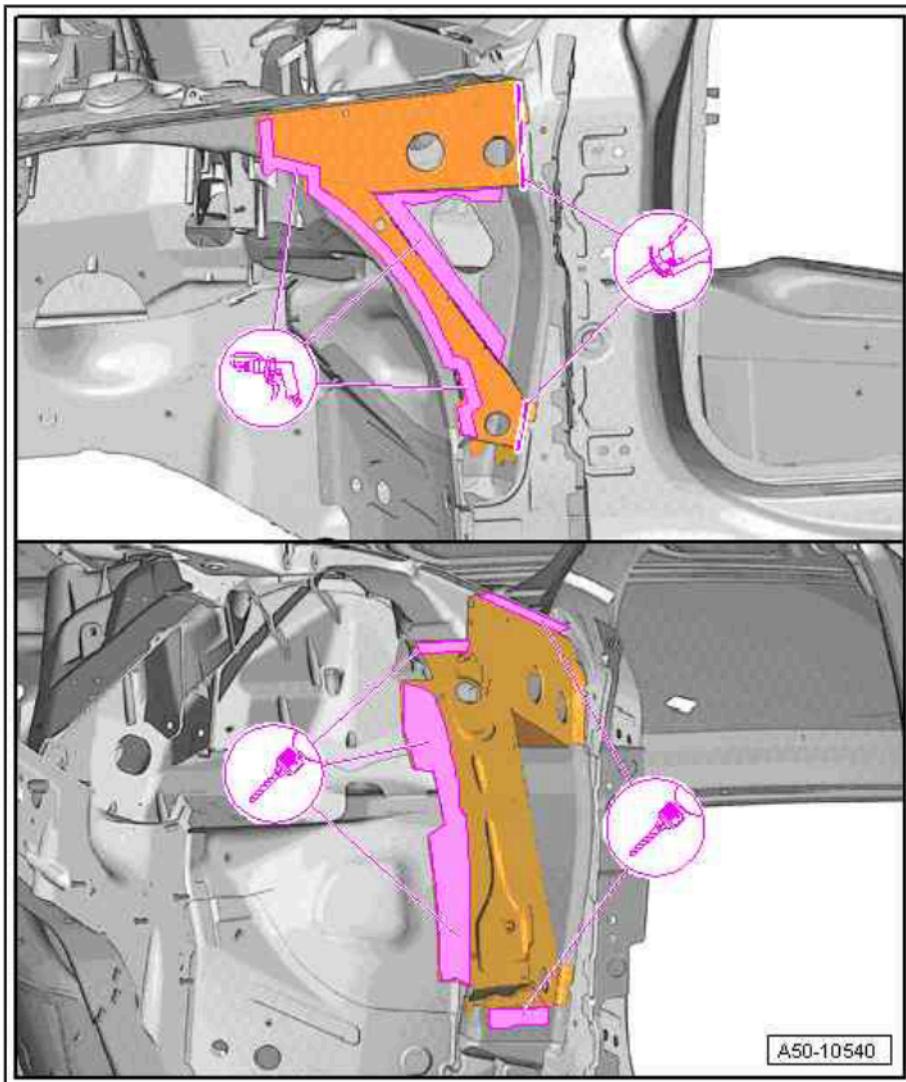


- Remove remaining material using compact angle grinder .



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability



Protected by copyright
permitted unless au
with respect to the d

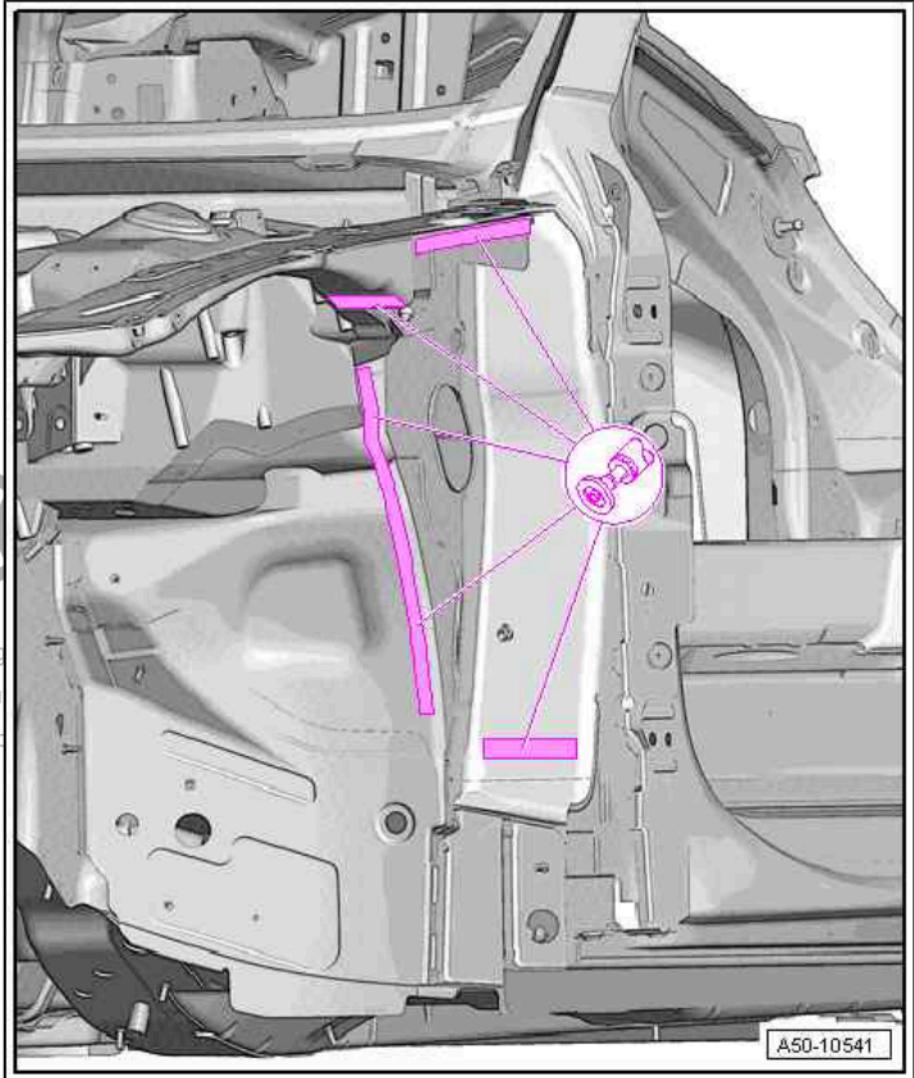


Replacement parts

- ◆ Intermediate piece

Preparing new part

- Transfer separating cuts to new parts -1- and -2- and cut to size using body saw .
- Drill holes for SG plug weld seam, 8 mm Ø using drill .

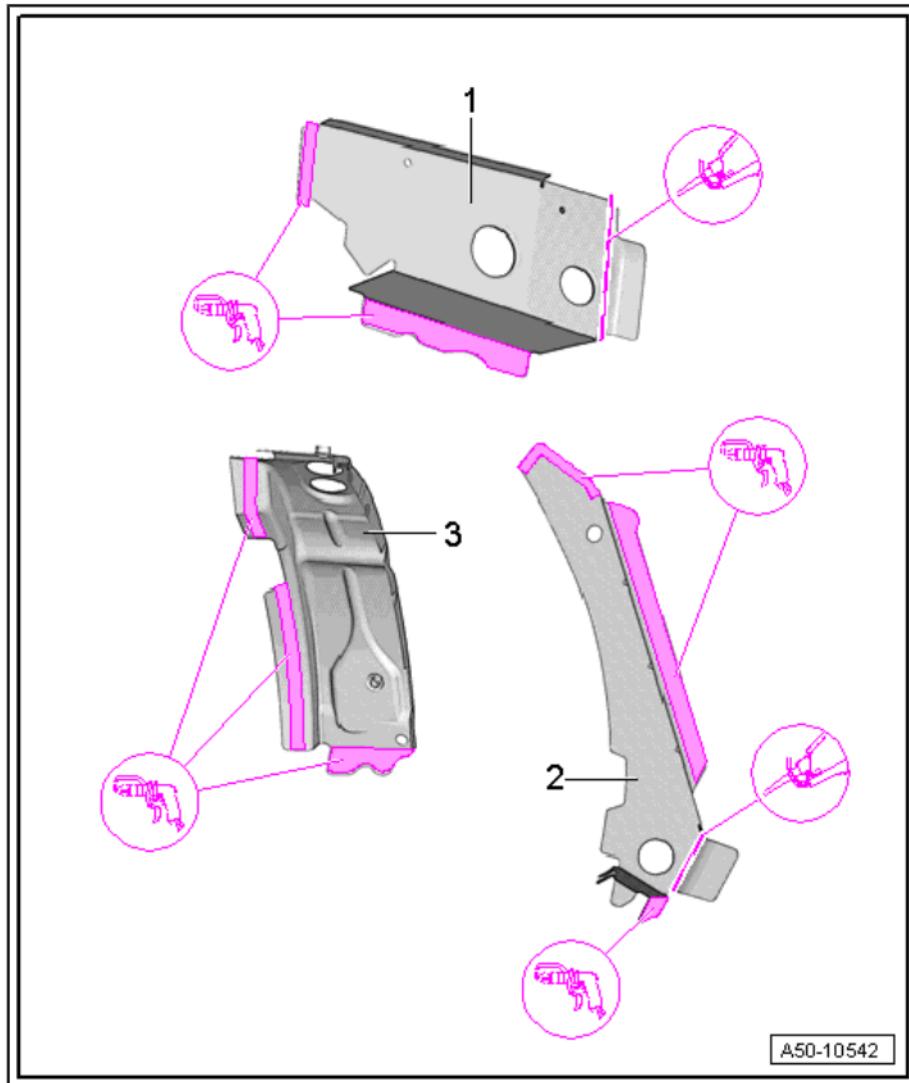


A50-10542

i Note

Due to the different types of steel and panel thicknesses employed, one of the resistance spot welding units listed in this manual and approved by Audi must be used to ensure correct results when spot welding.

Welding in

- Match up new parts and fix in position.
- Check fit relative to adjacent parts.
Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability
- Weld in intermediate piece using **shielded arc welding equipment**: SG plug weld seam.

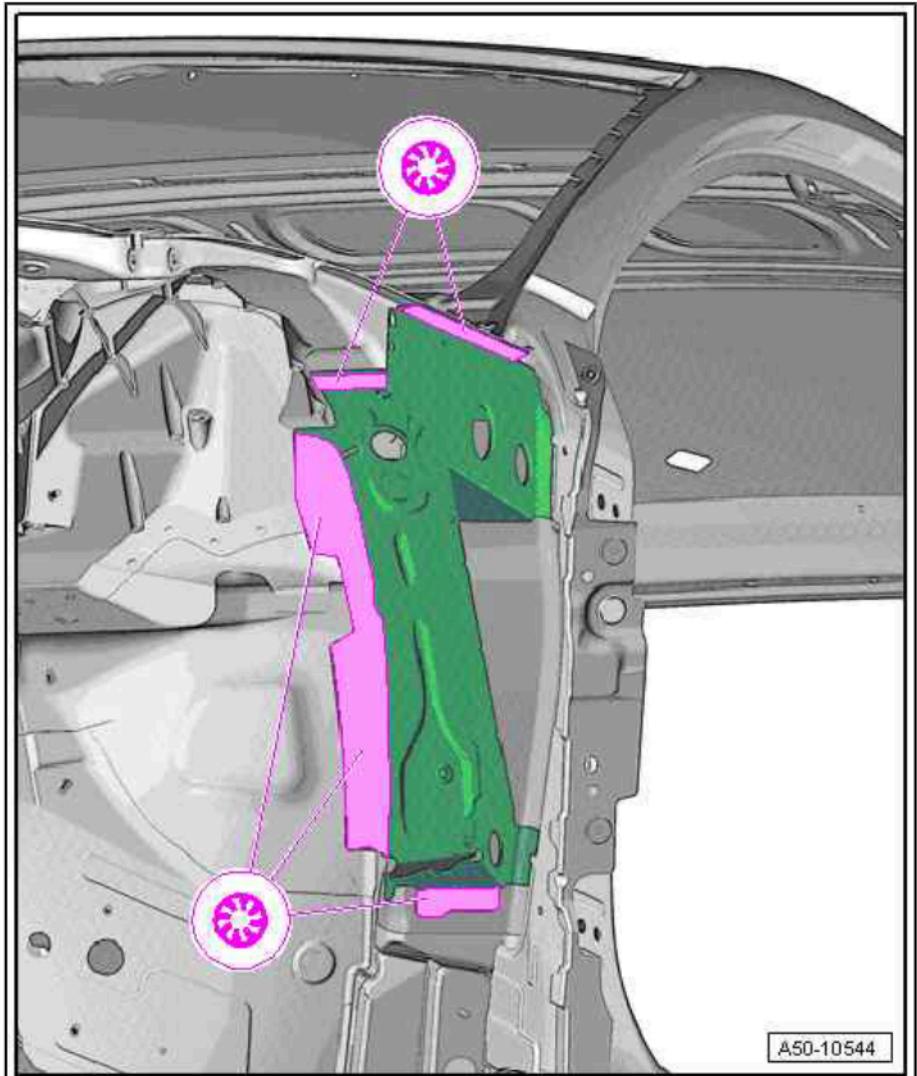


- Remake original joint using resistance spot welder : RP spot weld seam.
- Weld in intermediate piece using shielded arc welding equipment : SG plug weld seam and SG stepped seam (stitch weld).

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.



Protected by copyright
permitted unless auth-
with respect to the co-

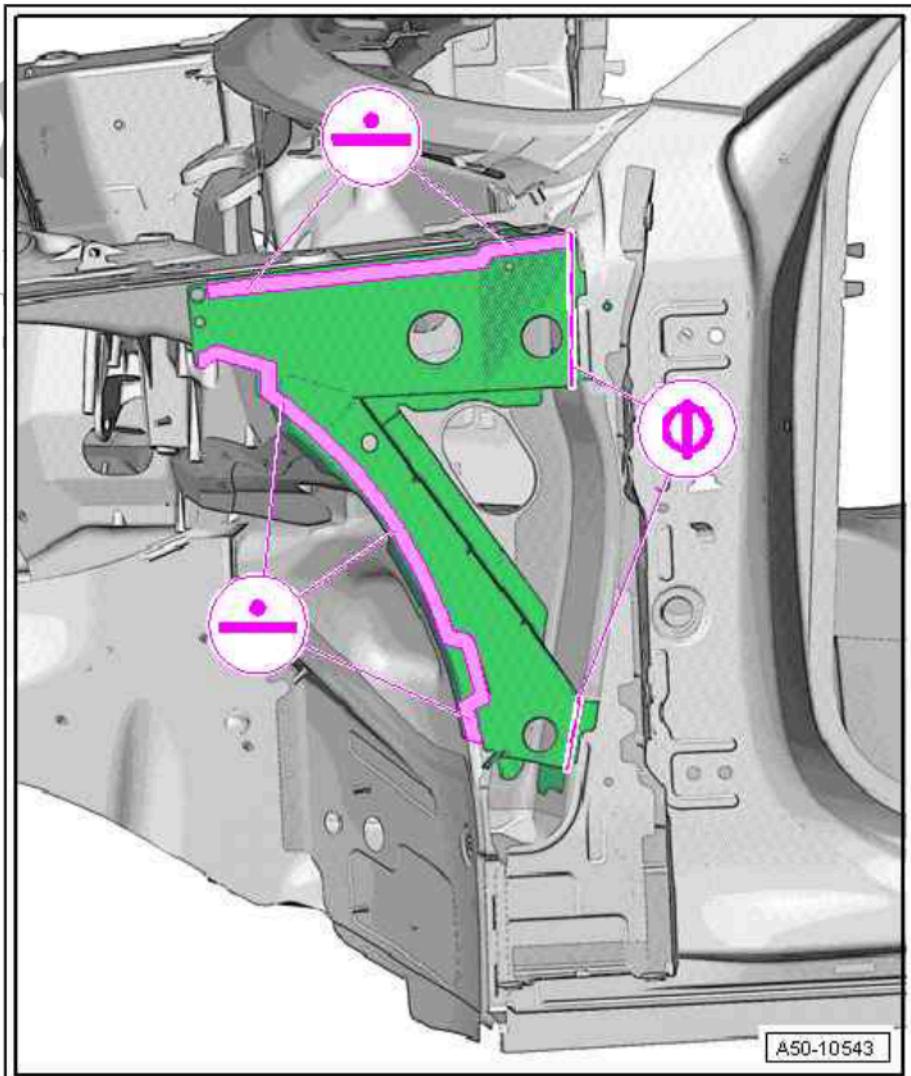

RO: 50 65 55 00

2 Front bumper bracket - Renewal


(Saloon and Avant identical)

1 - Longitudinal member

2 - Bumper bracket



Protected by copyright. Copying, distribution, or
permitted unless authoris
with respect to the corre

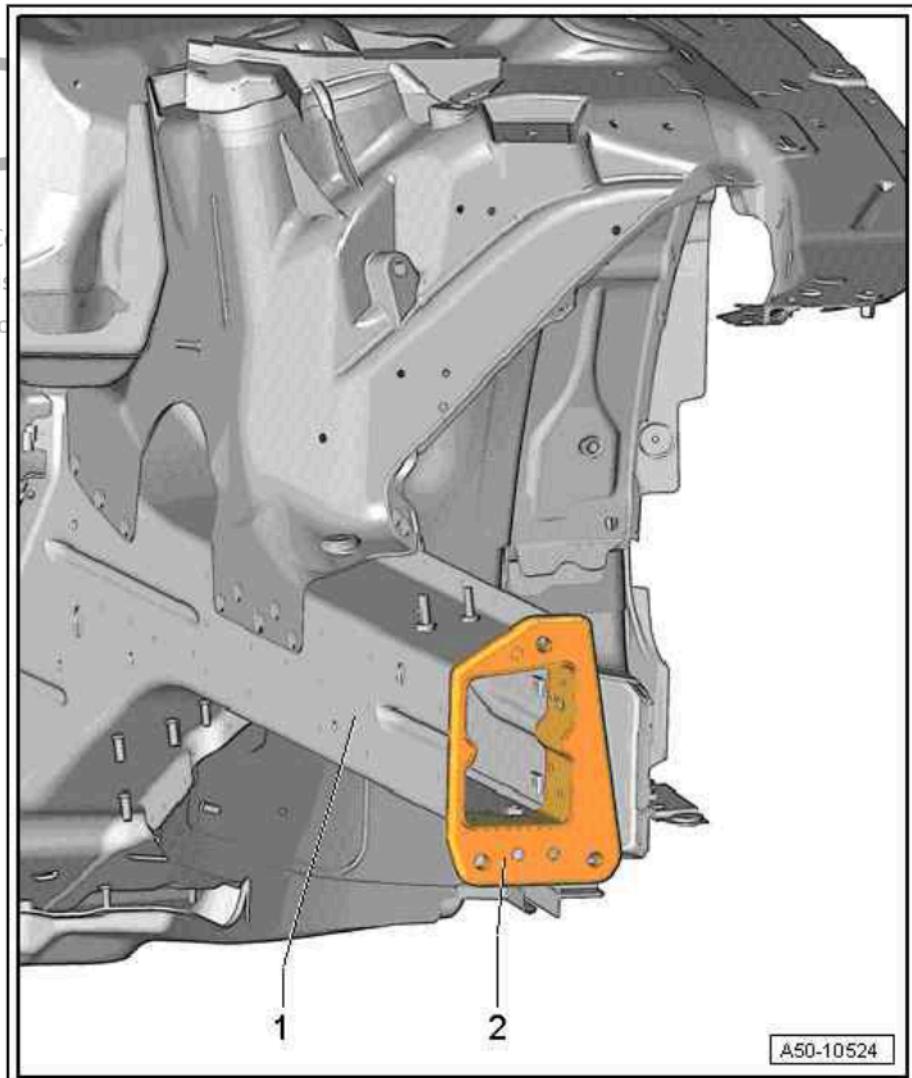

2.1 Notes for vehicles with hybrid drive

[⇒ page 5](#)

2.2 Tools

Special tools and workshop equipment required

- ◆ Resistance spot welder
- ◆ Shielded arc welding equipment
- ◆ Brush grinder
- ◆ Compact angle grinder
- ◆ Drill
- ◆ Spot weld breaker
- ◆ Body saw

Tools approved by AUDI AG must be used to ensure correct results when carrying out repair work [⇒ page 54](#).


2.3 Procedure

Cutting locations

- Separate original joint using spot weld breaker.



Protected by copyright.
Any use beyond that allowed by the copyright
law is illegal and liable to criminal prosecution.
© Audi AG 2018

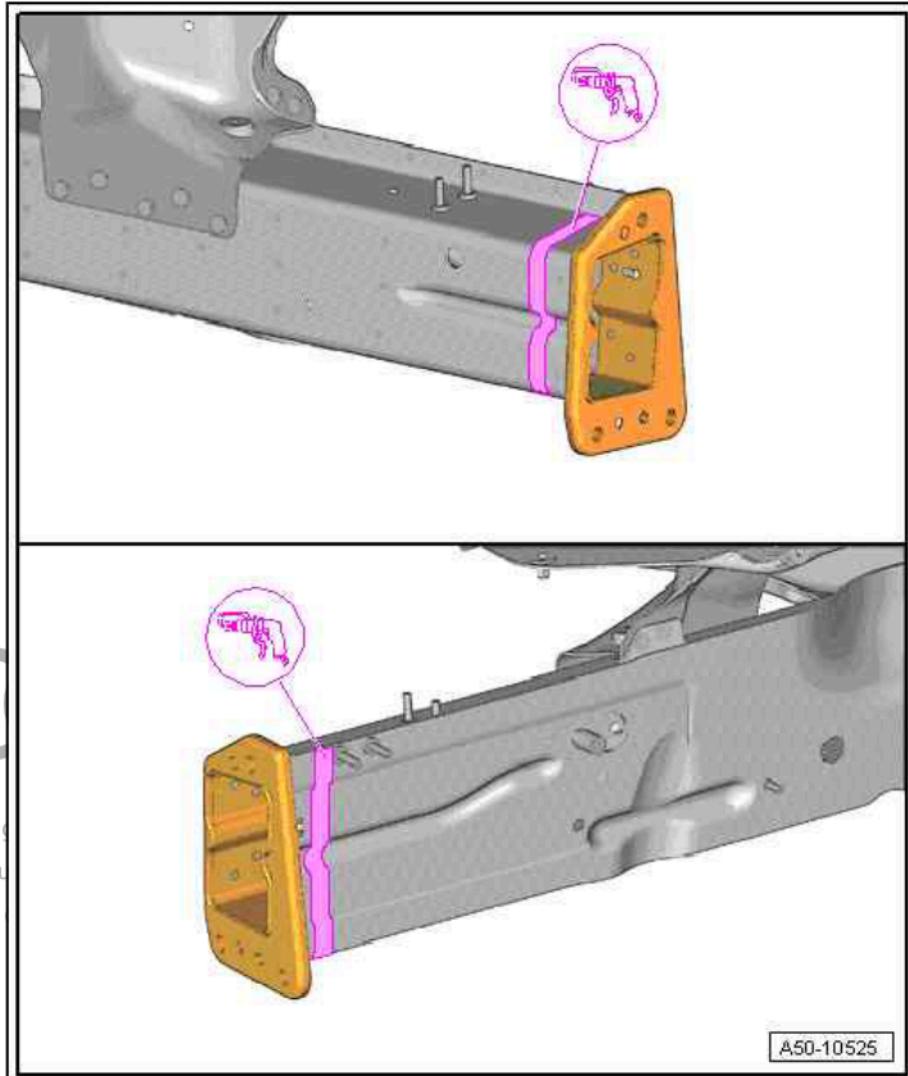

Replacement part

- ◆ Front bumper bracket

Preparing new part

- Match up new part with vehicle positioned on alignment bracket set supplement - VAS 6667- and fix in place.





Note

Due to the different types of steel and panel thicknesses employed, one of the resistance spot welding units listed in this manual and approved by Audi must be used to ensure correct results when spot welding.

Welding in

- Weld in bumper bracket using shielded arc welding equipment : SG plug weld seam.

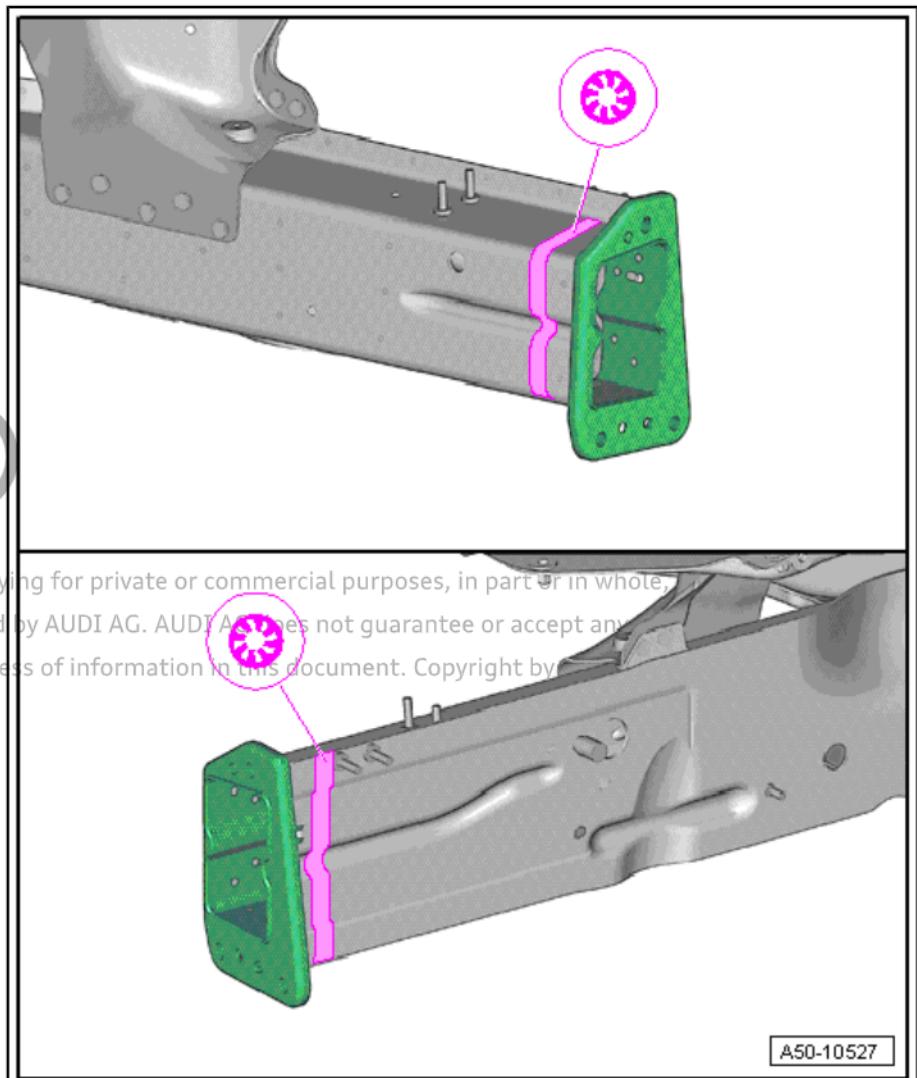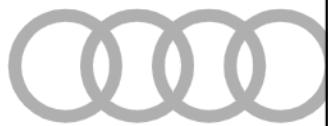

RO: 50 72 55 50

3 Wing mounting flange - Renewal

(Saloon and Avant identical)

CAUTION

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not
Straightening and re-alignment work must not be carried out on
the front section of the Audi A6 body because this could cause
cracking in the aluminium castings that may not be externally
visible.

1 - Suspension turret


2 - Separating cut for wing
mounting flange



*Part section repair is po
separating cut -2-.*

3 - Wing mounting flange for
upper wheel housing

4 - A-pillar

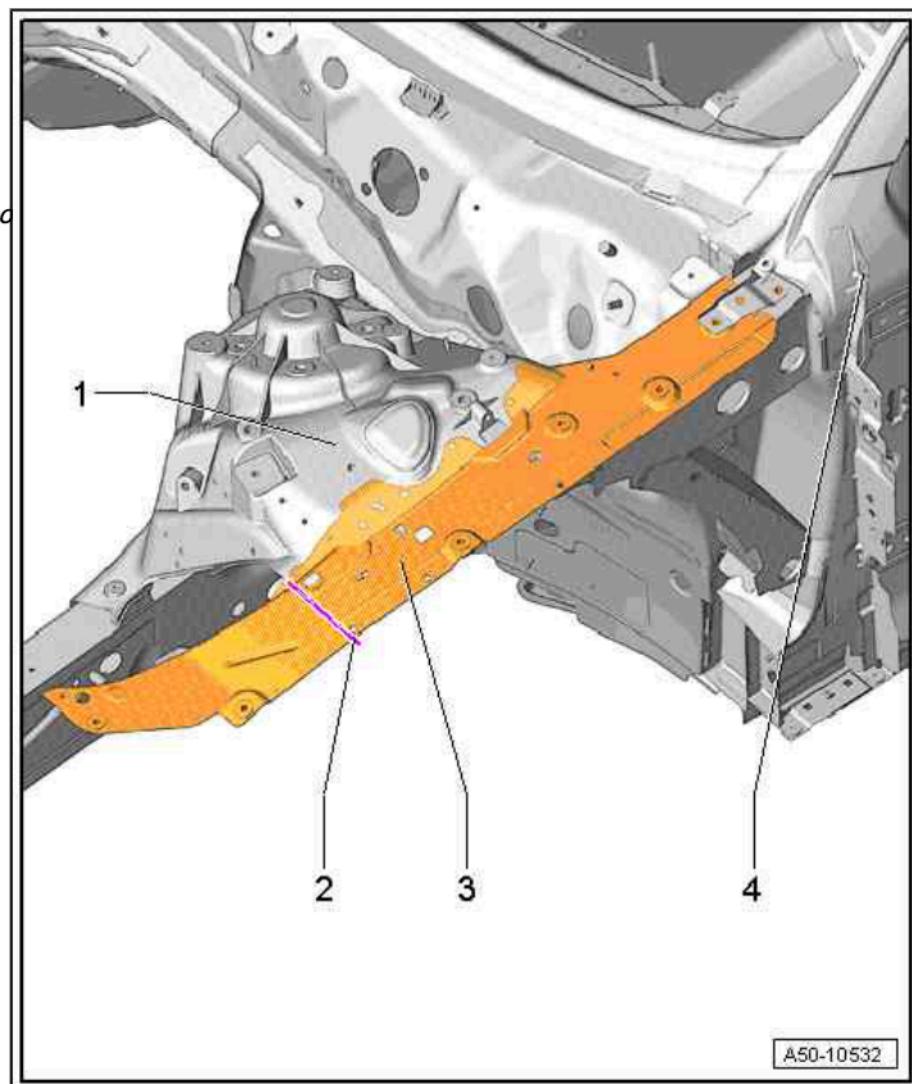

3.1 Notes for vehicles with hybrid drive

[⇒ page 5](#)

3.2 Tools

Special tools and workshop equipment required

- ◆ Resistance spot welder
- ◆ Shielded arc welding equipment

- ◆ Compact angle grinder
- ◆ Drill
- ◆ Scraper
- ◆ Body saw
- ◆ Spot weld breaker
- ◆ Pneumatic glue gun
- ◆ Compact booster
- ◆ Alternatively, you can use the rechargeable riveter - VAS 5279 B- . This is a complete set.



Tools approved by AUDI AG must be used to ensure correct results when carrying out repair work [⇒ page 54](#).

3.3 Procedure



CAUTION

Take care not to damage the bonnet lock cable when making the separating cut in the longitudinal member.

Cutting locations



Cover over suspension turret while cutting and welding.



Note

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability

- ◆ *Part section repair is possible using separating cut-2-*. Copyright by AUDI AG.
- ◆ *Offset separating cuts between upper and lower wing mounting flanges.*


- Separate original joint between upper and lower wing mounting flanges using spot weld breaker .

Removing punch rivets [⇒ page 24](#)

- Separate original joint at upper wing mounting flange and suspension turret using rechargeable riveter - VAS 5279 A- or compact booster - VAS 6790- .




Protected by copyright.
Reproduction or disclosure
without written permission is
strictly prohibited.

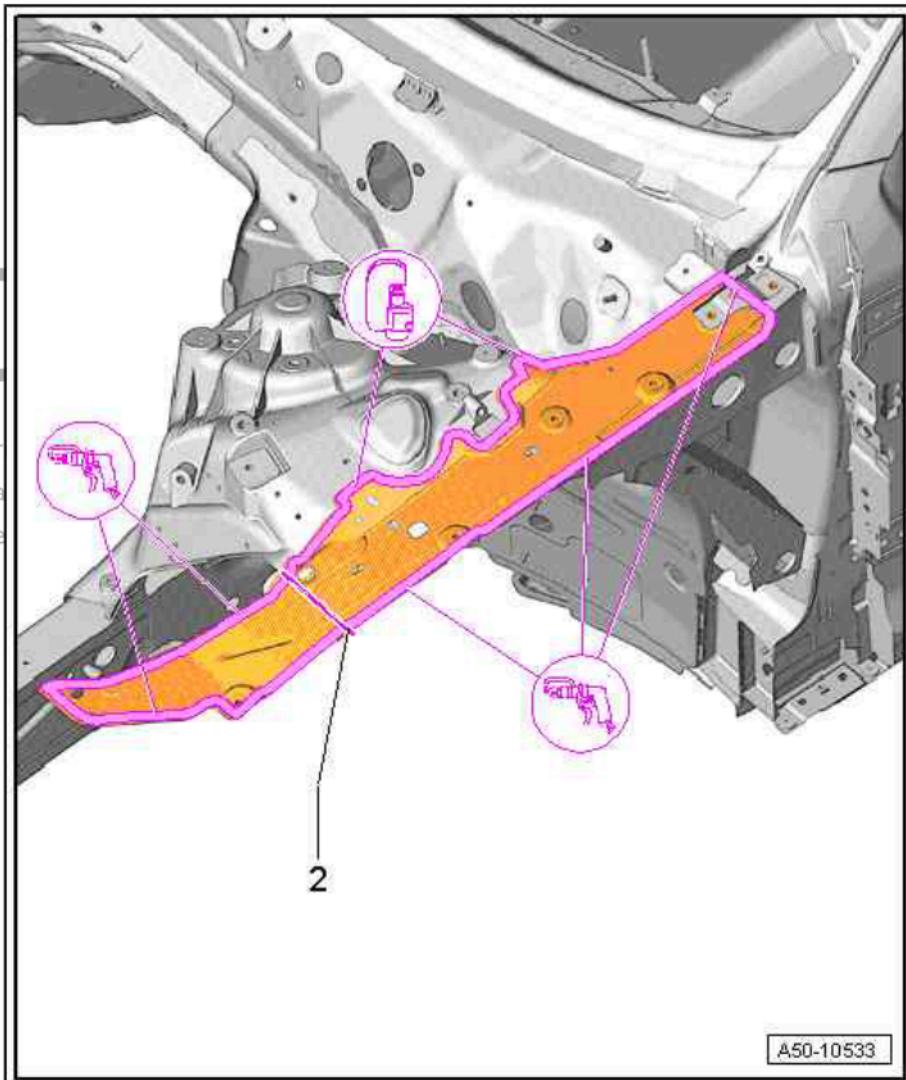

A50-10533

Removing punch rivets [⇒ page 24](#)


- Separate original joint at upper wing mounting flange and suspension turret using rechargeable riveter - VAS 5279 A- or compact booster - VAS 6790- .
- Separate original joint between upper and lower wing mounting flanges using spot weld breaker .

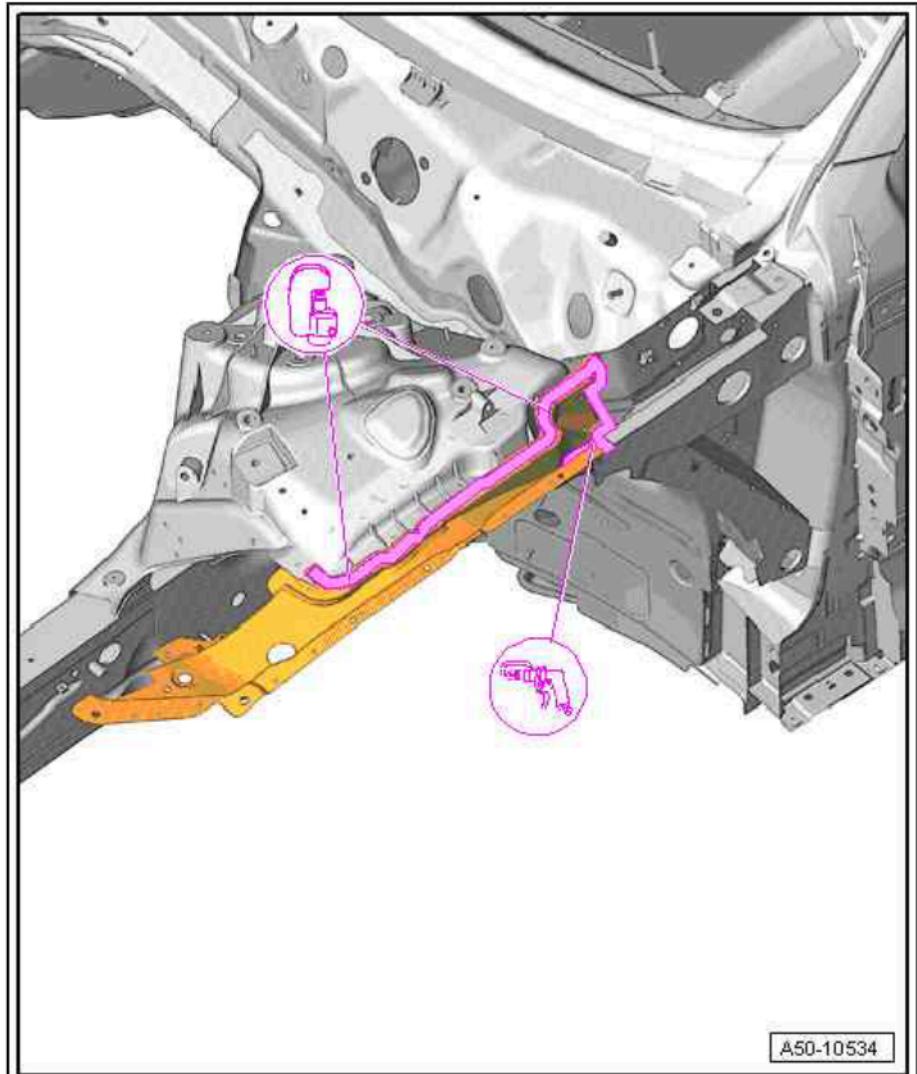


- Remove remaining material using compact angle grinder .
- Remove remaining adhesive using scraper - VAS 5448- .



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

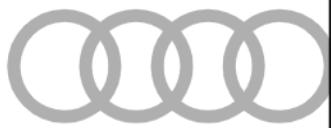

Protected by copyright. Copy
permitted unless authorised
with respect to the correctness

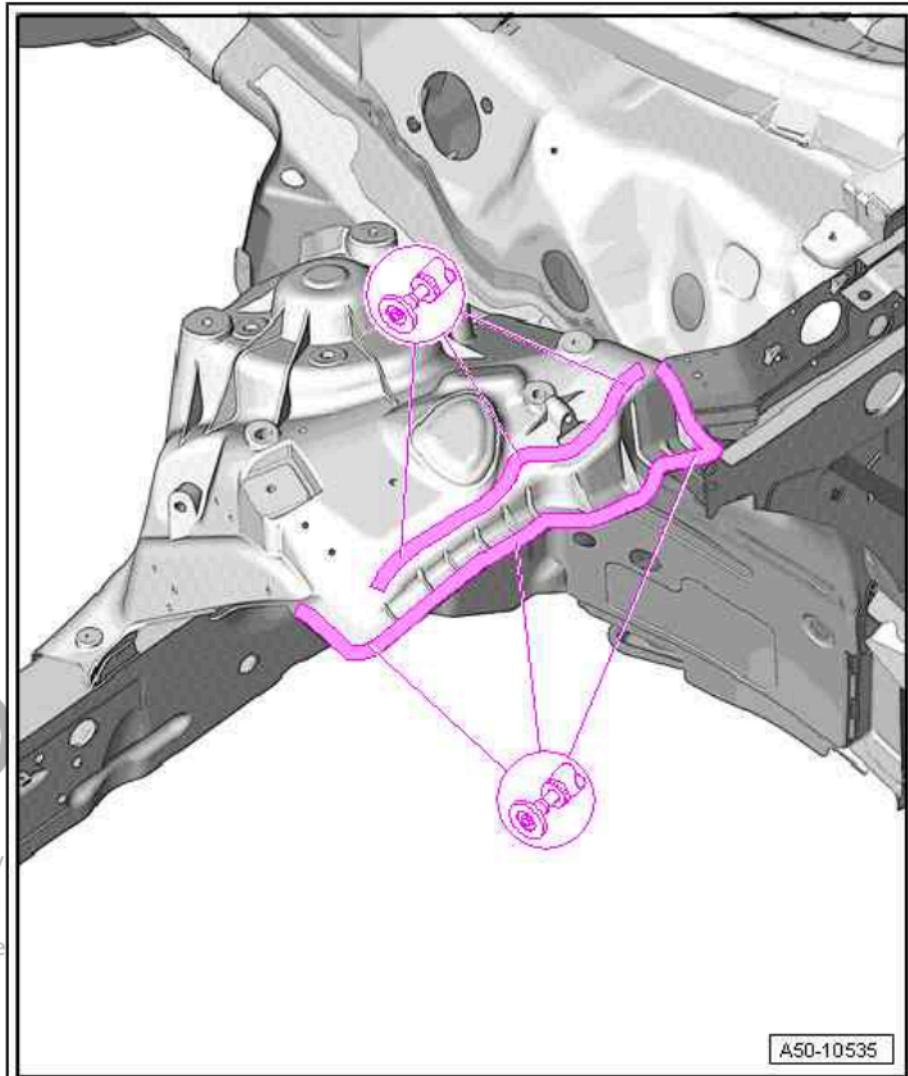


A50-10535

Replacement part

- ◆ Pop rivet - WHT 005 413-
- ◆ Wing mounting flange (upper)
- ◆ Wing mounting flange (lower)
- ◆ Cleaning solution - D 009 401 04-
- ◆ Silicate stone - DA 009 800 -
- ◆ Aluminium primer - DA 009 801 -
- ◆ Applicator - D 009 500 25 -
- ◆ 2-component epoxy adhesive - DA 001 730 A2-

Preparing new part

- Transfer separating cut to new part and cut to size using body saw .
- Drill holes (6.7 mm) for pop rivets using drill .
- Transfer holes for pop rivets from suspension turret.

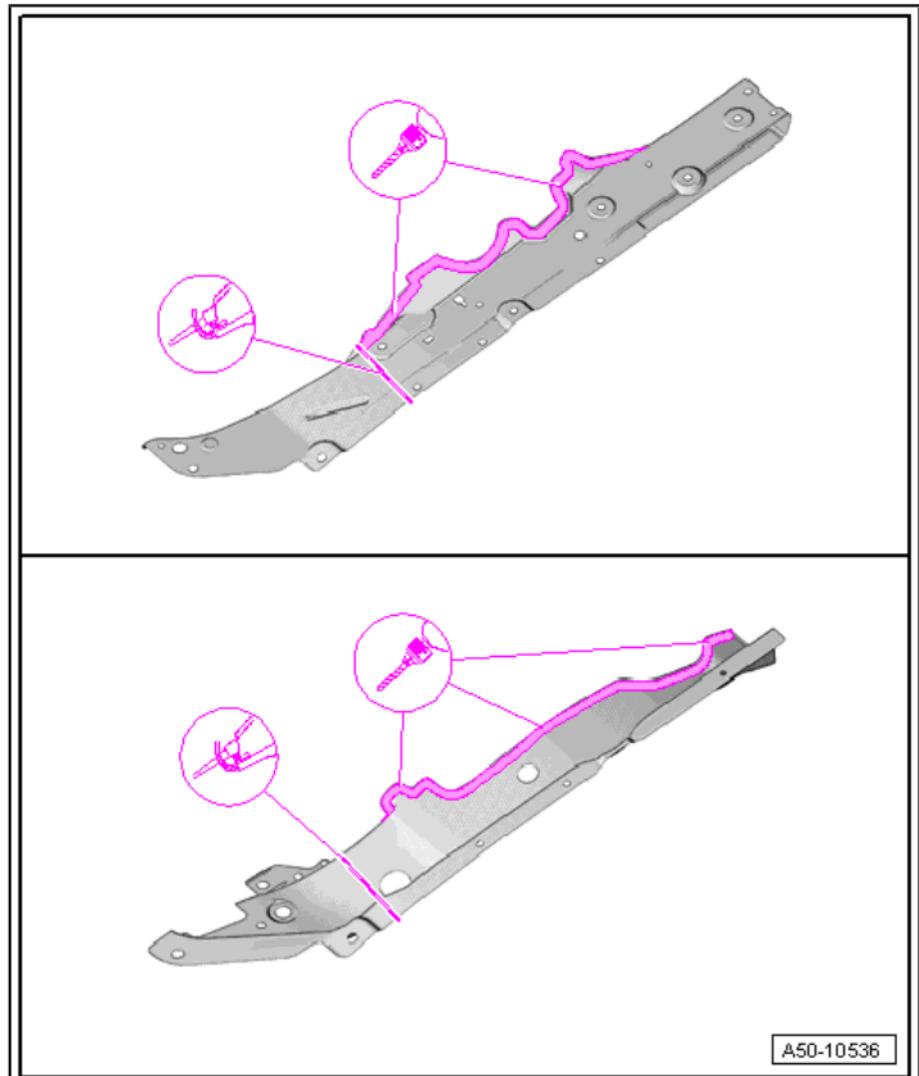


Alternative position of vehicle identification number

- It is not possible to stamp the vehicle identification number into the aluminium suspension turret casting in the workshop.
- Stamp vehicle identification number into wing mounting flange before installation.



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG

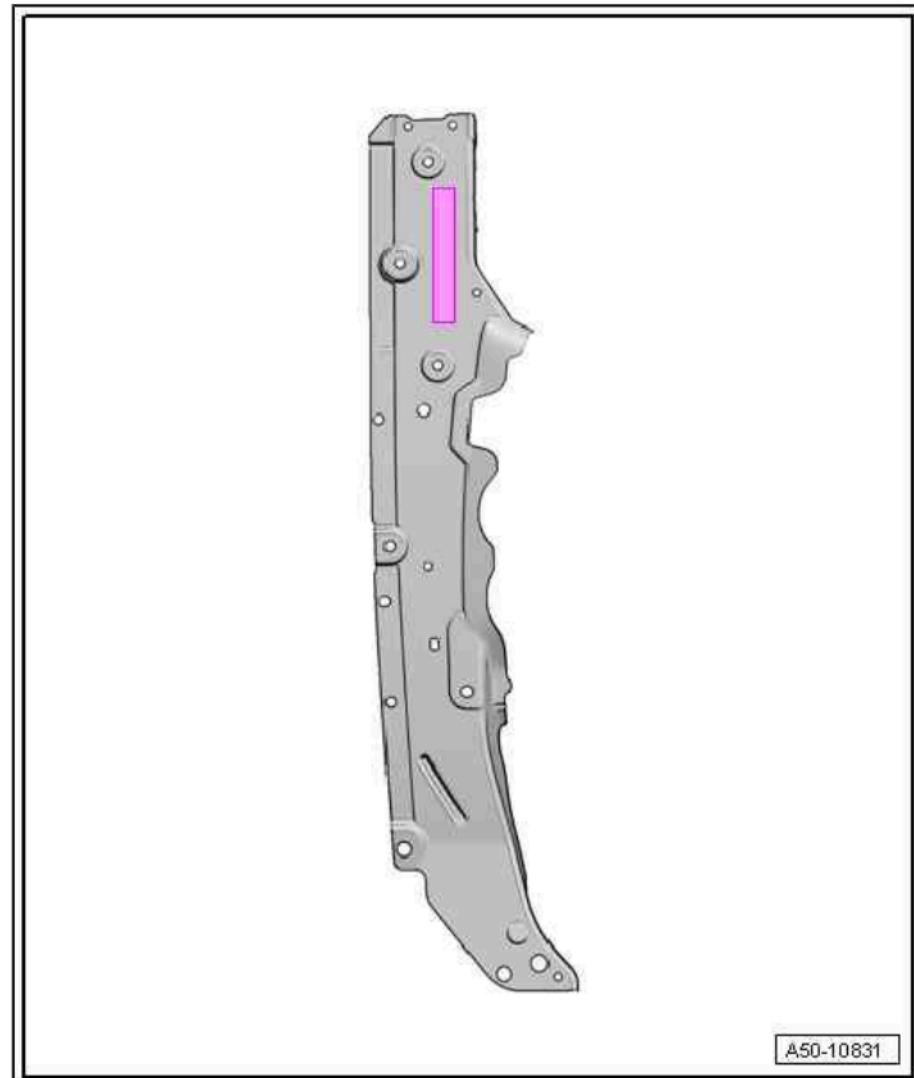

Preparing joints for adhesive application

- Prepare new part for riveting.
- Clean bonding surfaces with cleaning solution - D 009 401 04- .
- Prepare bonding area with silicate stone - DA 009 800 - and clean.
- Apply aluminium primer - DA 009 801 - to bonding surfaces using applicator - D 009 500 25 - .
- Apply 2-component epoxy adhesive - DA 001 730 A2- to entire riveting area using pneumatic glue gun - V.A.G 2005 B- .
- Prepare flanges on body and new parts for welding.



Note



Due to the different types of steel and panel thicknesses employed, one of the resistance spot welding units listed in this manual and approved by Audi must be used to ensure correct results when spot welding.


with respect to the correctness of information in this document. Copyright by AUDI AG.

Welding in

- Match up lower wing mounting flange using alignment bracket set supplement - VAS 6667- and fix in place.
- Rivet in lower wing mounting flange using compact booster - VAS 6790/20- and pop rivets - WHT 005 413 A- .
- Weld in lower wing mounting flange using resistance spot welder : RP spot weld seam.
- Weld at separating cut using shielded arc welding equipment : SG continuous seam.



Protected by
copyright.
Use
permitted
under
the
terms
with respect to
the
original
material
in
its
entirety
and
in
modified
form
by
means
of
copying
or
downloading
from
the
internet.

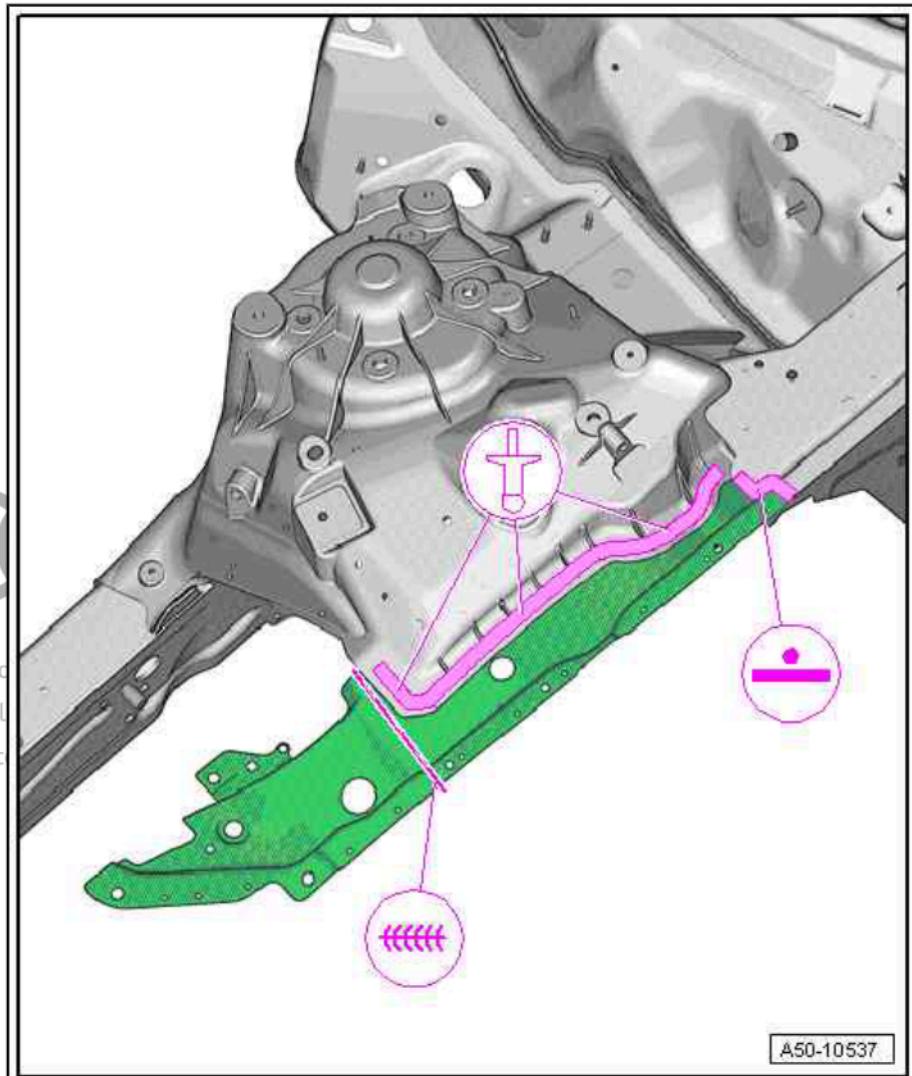


A50-10537

- Apply 2-component epoxy adhesive - DA 001 730 A2- to wing mounting flange in entire riveting area using pneumatic glue gun - V.A.G 2005 B- .




Protected by copy
permitted unless
with respect to th

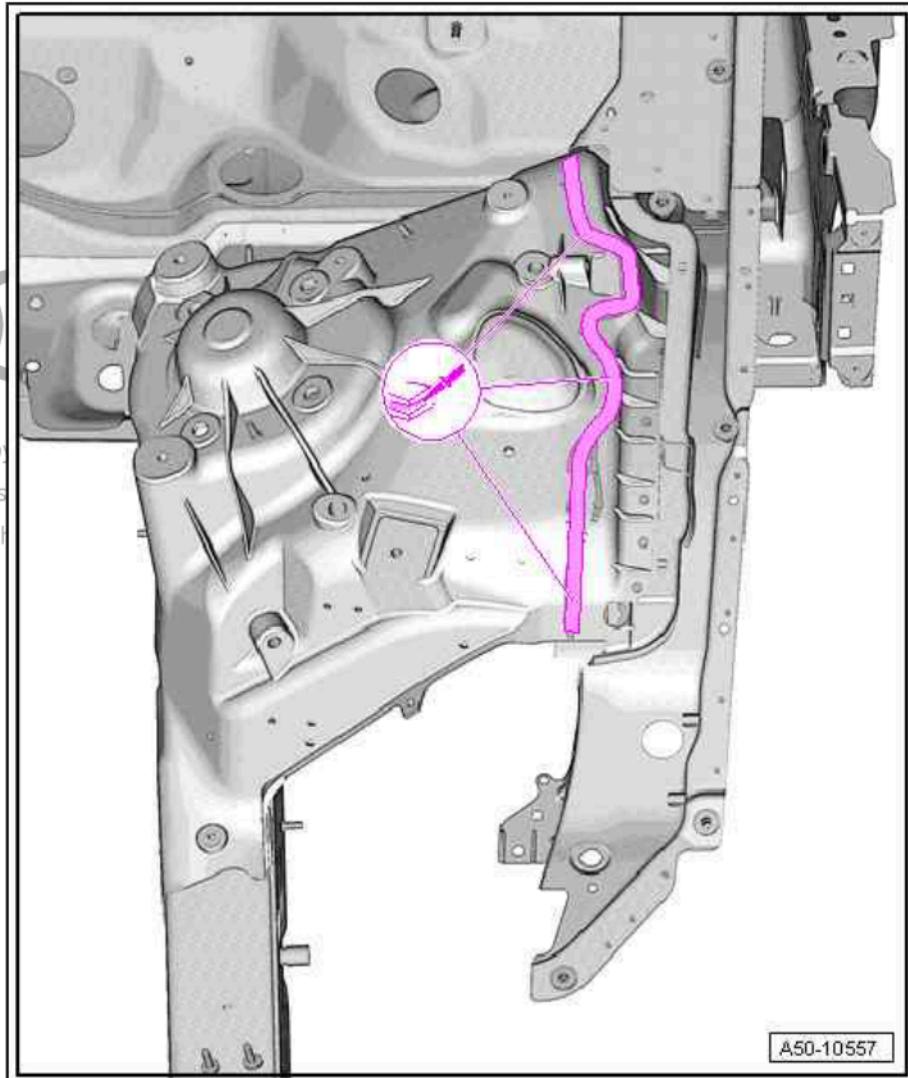

- Rivet in upper wing mounting flange using compact booster - VAS 6790/20- and pop rivets - WHT 005 413 A- .
- Weld in upper wing mounting flange using resistance spot welder : RP spot weld seam.
- Weld at separating cut using shielded arc welding equipment : SG continuous seam.



Protected by copy
permitted unless a
with respect to the

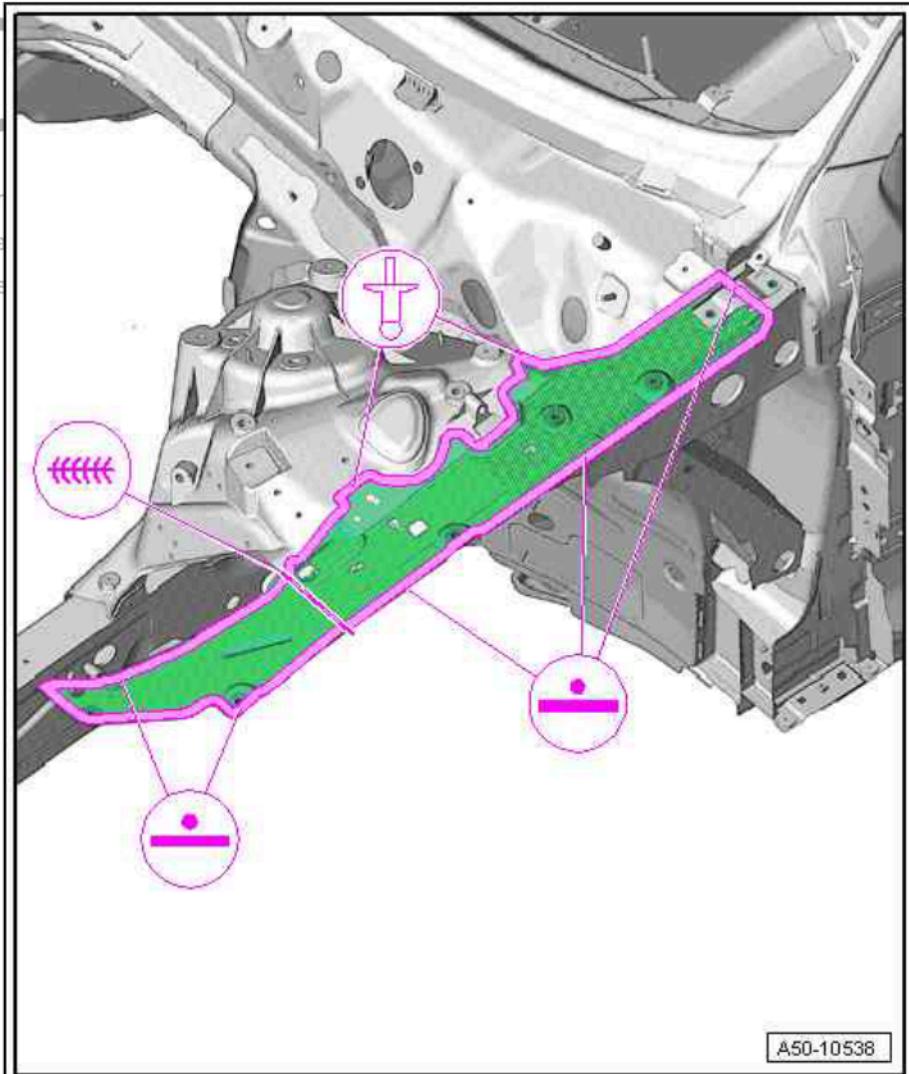

A50-10538

RO: 50 74 55 00

4 Suspension turret - Renewal

(Saloon and Avant identical)

⚠ CAUTION

Straightening and re-alignment work must not be carried out on the front section of the Audi A6 body, because this could cause cracking in the aluminium castings that may not be externally visible.


1 - Plenum chamber closure plate

2 - A-pillar

3 - Wing mounting flange

4 - Suspension turret

5 - Front longitudinal member

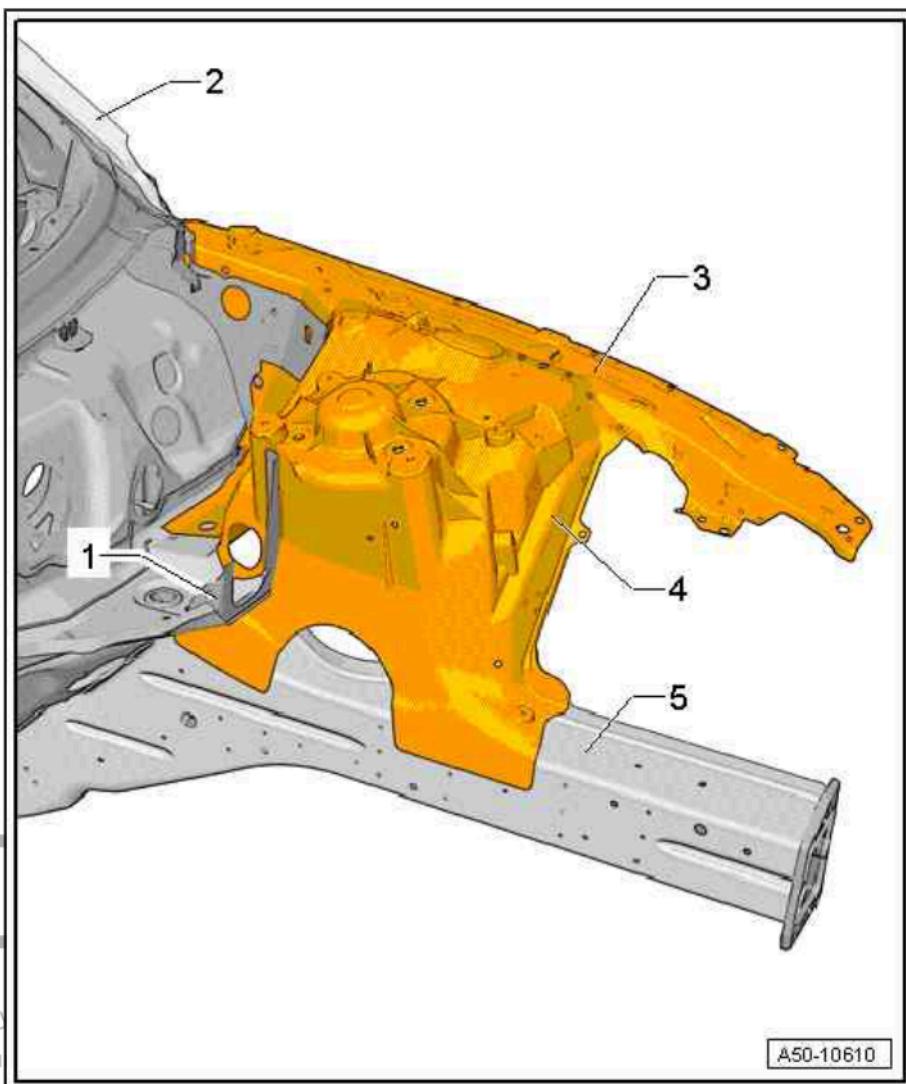

Protected by
permitted u

A50-10610

with respect to the correctness of information in this document. Copyright by AUDI AG.

4.1 Notes for vehicles with hybrid drive


[⇒ page 5](#)

4.2 Tools

Special tools and workshop equipment required

- ◆ Resistance spot welder
- ◆ Shielded arc welding equipment

- ◆ Crack testing set
- ◆ Compact angle grinder
- ◆ Drill
- ◆ Body saw
- ◆ Spot weld breaker
- ◆ Pneumatic glue gun
- ◆ Compact booster
- ◆ Alternatively, you can use the rechargeable riveter - VAS 5279 B- . This is a complete set.

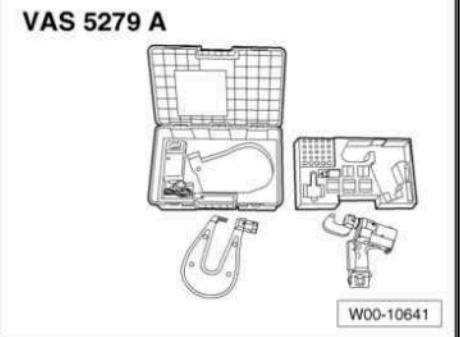

Tools approved by AUDI AG must be used to ensure correct results when carrying out repair work [⇒ page 54](#).

4.3 Procedure

NOTICE

When renewing the suspension turret on the right side of the vehicle, take care not to damage the suspension turret when stamping on the vehicle identification number.

- Upper wing mounting flange cut out [⇒ page 70](#)

Cutting locations


- Roughly cut out suspension turret using body saw .




Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.



Protected by
copyright.
Use
permitted
only
with respect
to the
rights
of the
owner.

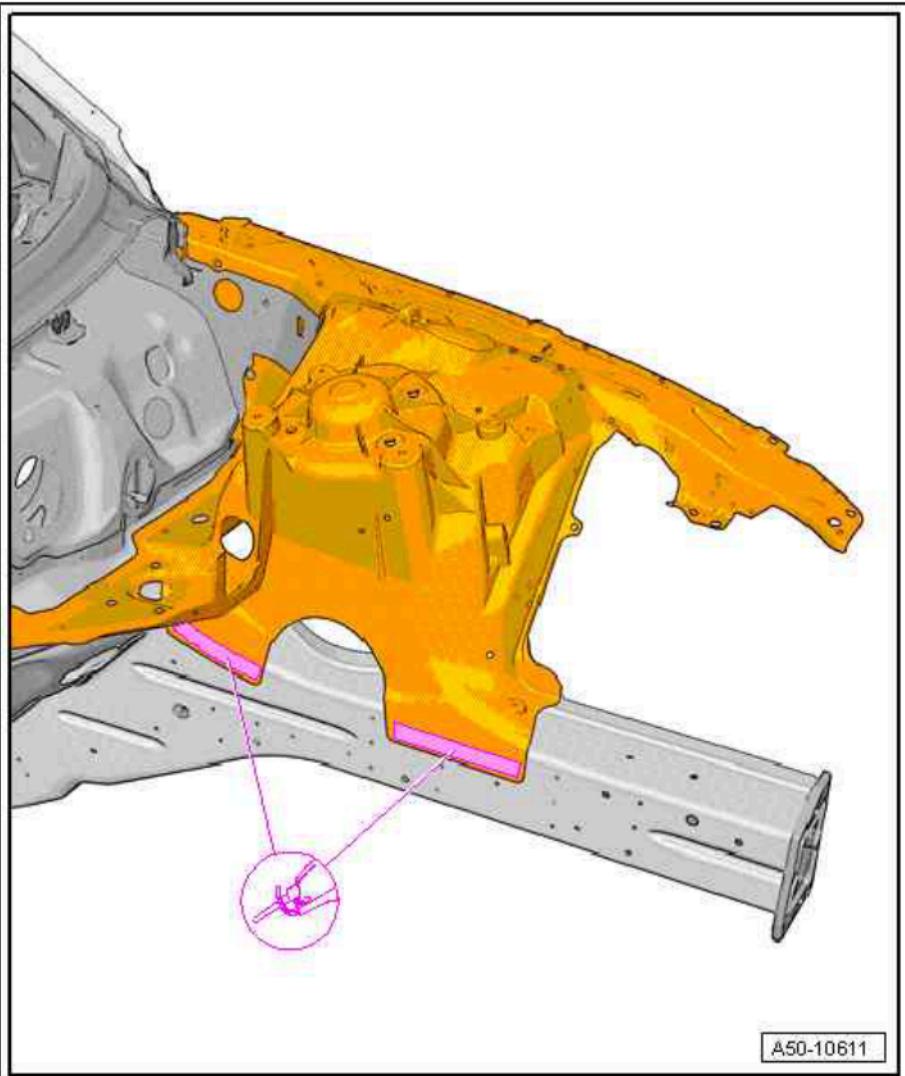


- Remove punch rivets using rechargeable riveter - VAS 5279 A- or compact booster - VAS 6790- [⇒ page 24](#) .
- Separate original joint using spot weld breaker .

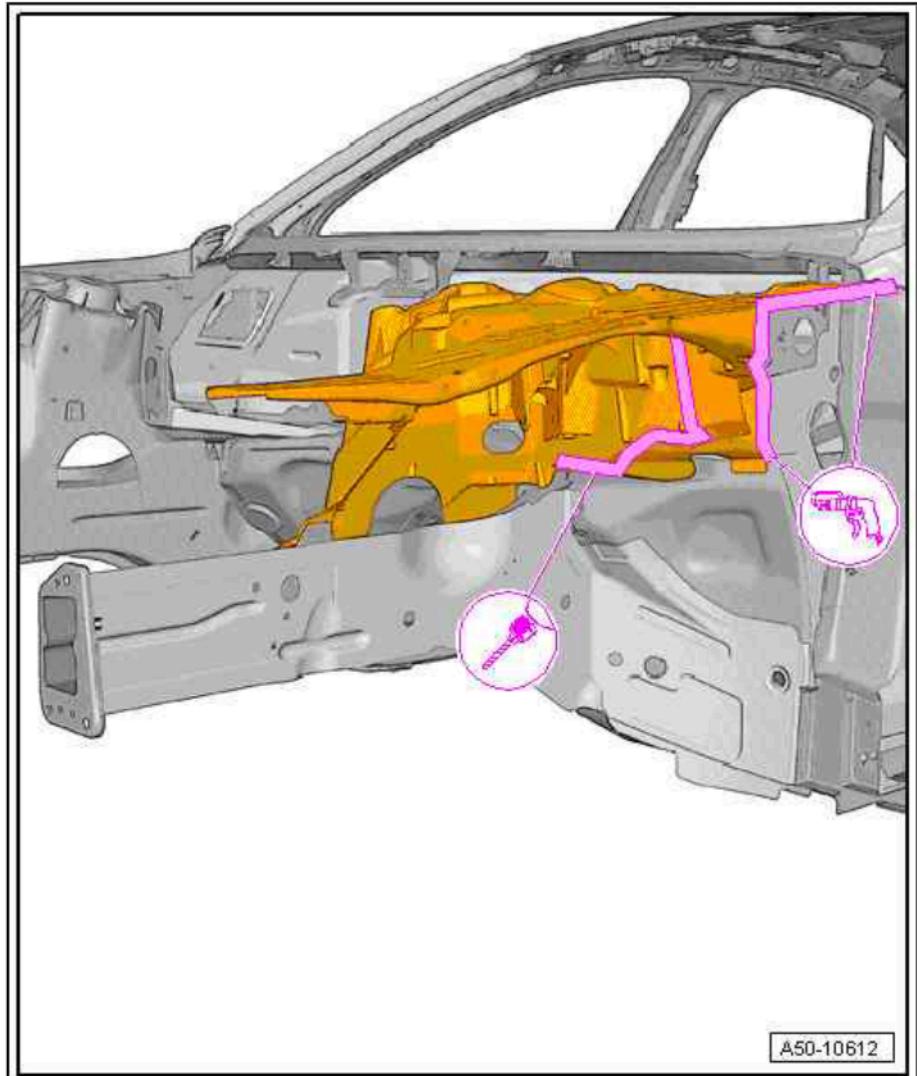

- Remove remaining material using compact angle grinder .



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

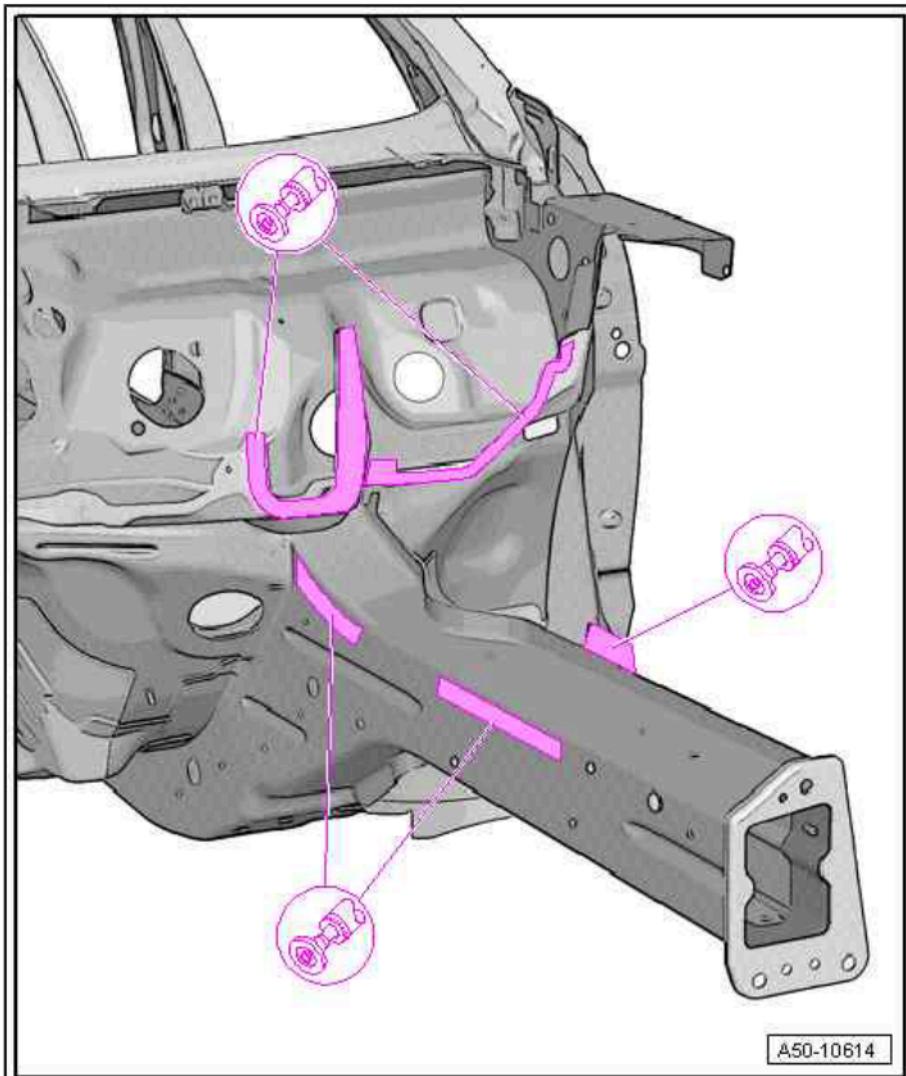


- Weld punch rivet holes using shielded arc welding equipment and mark accordingly to avoid drilling out the same holes again later.



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.



Protected by copyright. Copying for private use
is permitted unless authorised by AUDI AG.
With respect to the correctness of information

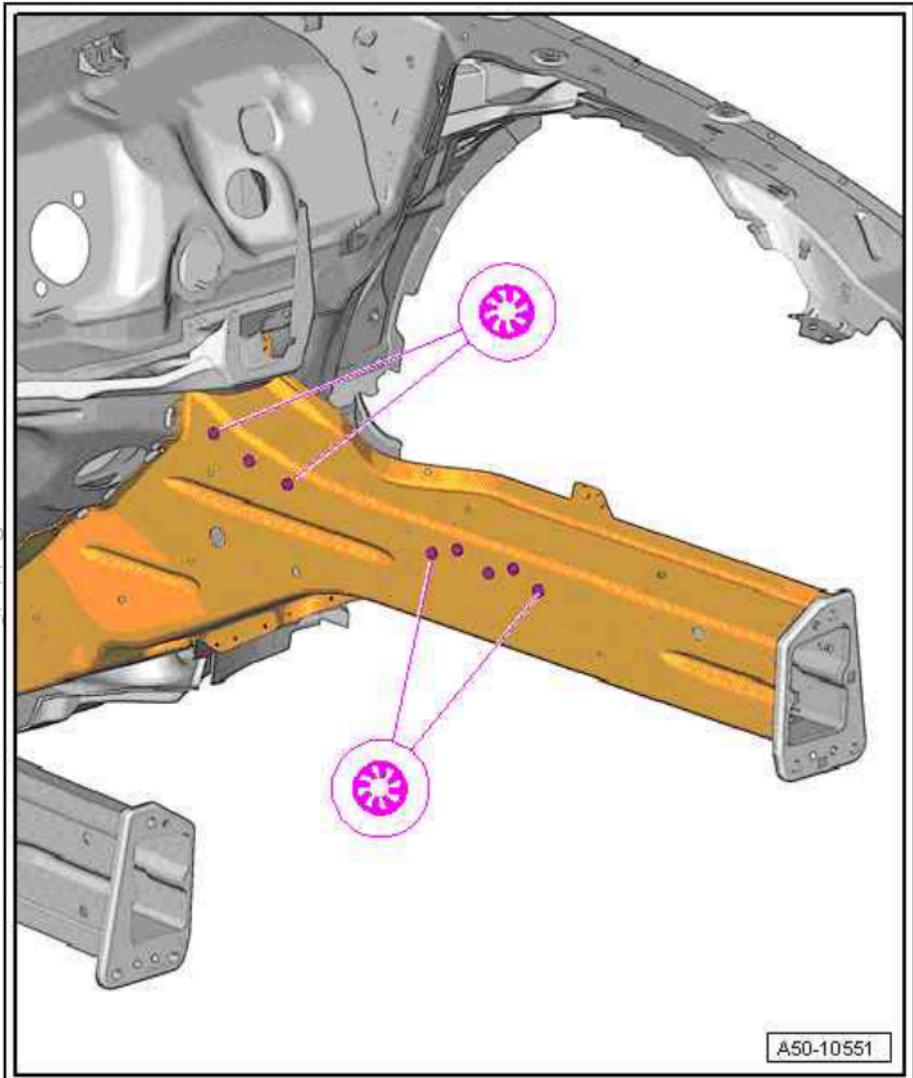

Replacement part


- ◆ Suspension turret
- ◆ 2x 2-component epoxy adhesive - DA 001 730 A2-
- ◆ Cleaning solution - D 009 401 04-
- ◆ Aluminium primer - DA 009 801 -
- ◆ Applicator - D 009 500 25 -
- ◆ Pop rivet - WHT 005 413-

Preparing new part

- Remove punch rivets from wheel housing connecting piece using rechargeable riveter - VAS 5279 A - or compact booster - VAS 6790- and detach part [⇒ page 24](#).



Protected by copyright.
Duplication or communication
not permitted unless authorisation
is granted by Audi AG.
With respect to the corre

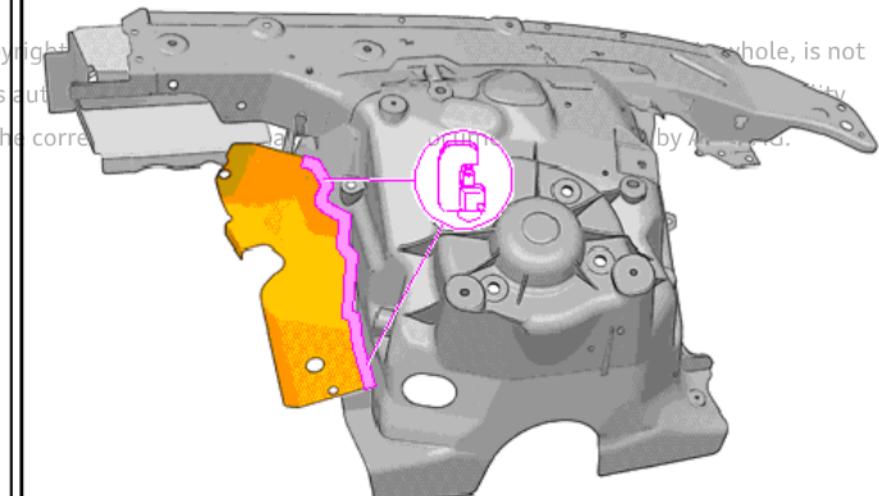


A50-10615

Note

The holes for the pop rivets must be made next to the original holes.

- Match up new part with vehicle positioned on alignment bracket set supplement - VAS 6667-, fix in place and drill holes to line up with adjoining parts using drill (6.7 mm Ø).

Then take off part and prepare new parts for adhesive application.

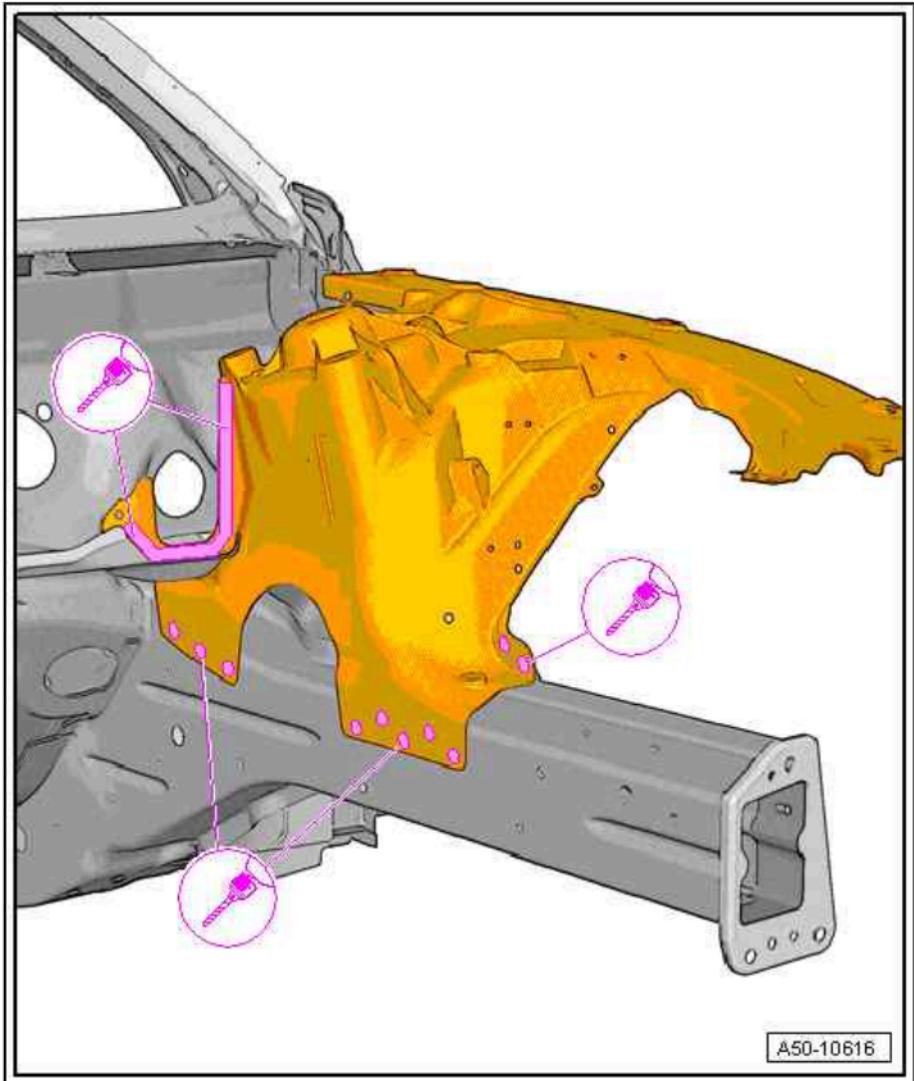


Preparing joints for adhesive application


- Prepare new part for riveting.
- Clean bonding surfaces with cleaning solution - D 009 401 04- .
- Prepare bonding area with silicate stone - DA 009 800 - and clean.
- Apply aluminium primer - DA 009 801 - to bonding surfaces using applicator - D 009 500 25 - .

Riveting in

- Apply 2-component epoxy adhesive - DA 001 730 A2- to entire riveting area using pneumatic glue gun V.A.G 2005 B.
- Commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

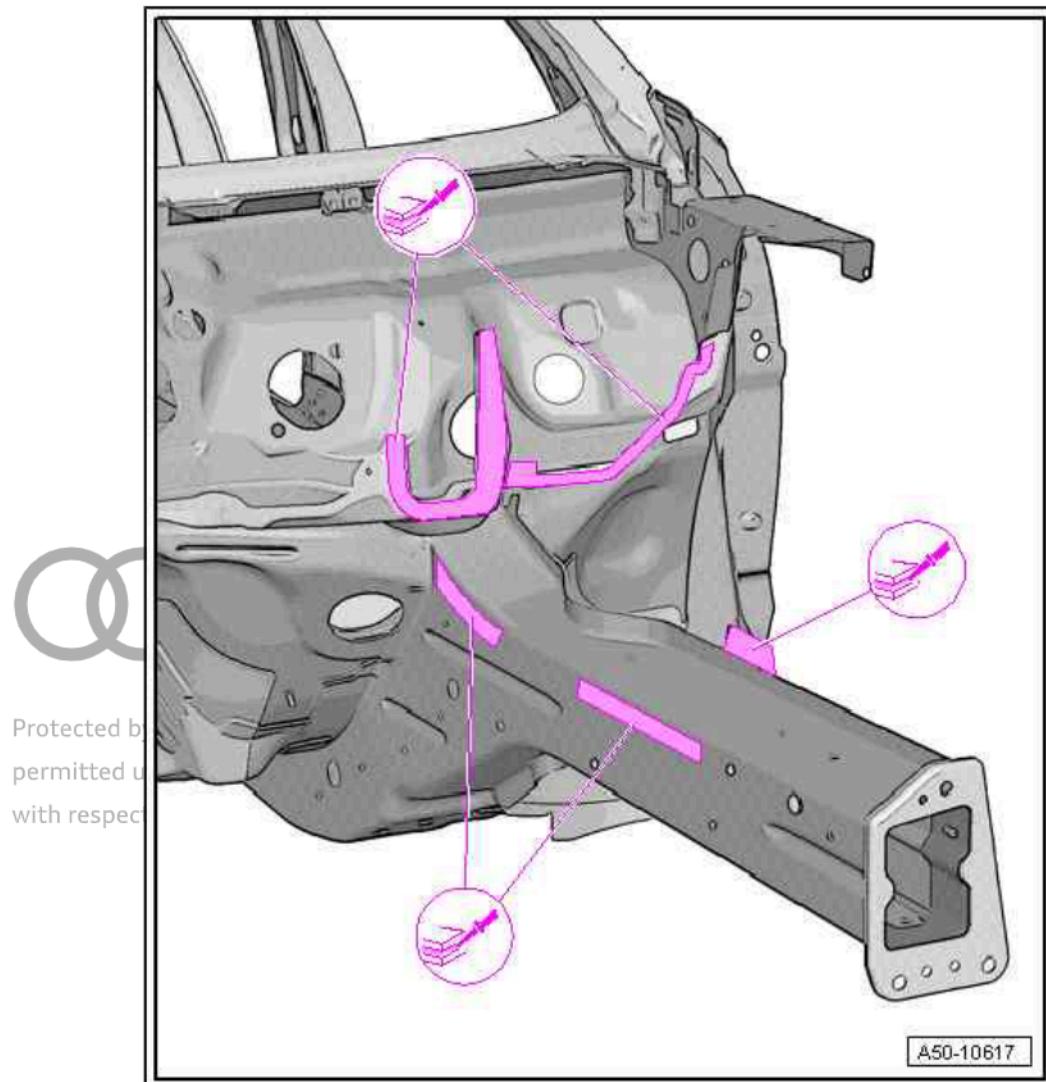


- Match up new part with vehicle positioned on alignment bracket set supplement - VAS 6667- and fix in place.
- Bolt body brace -1- to body and suspension turrets on both sides to maintain correct dimensions.

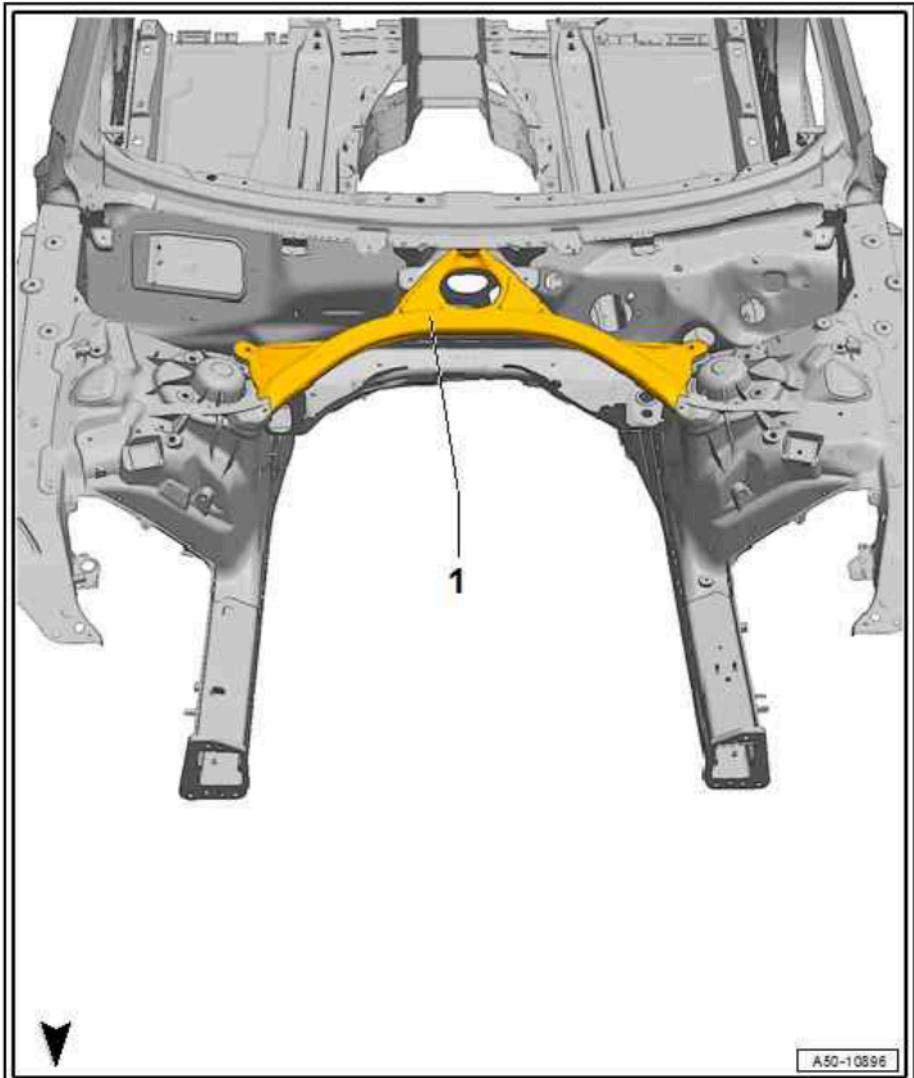

- Rivet in suspension turret using compact booster - VAS 6790/20- and pop rivets - WHT 005 413 A- .

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

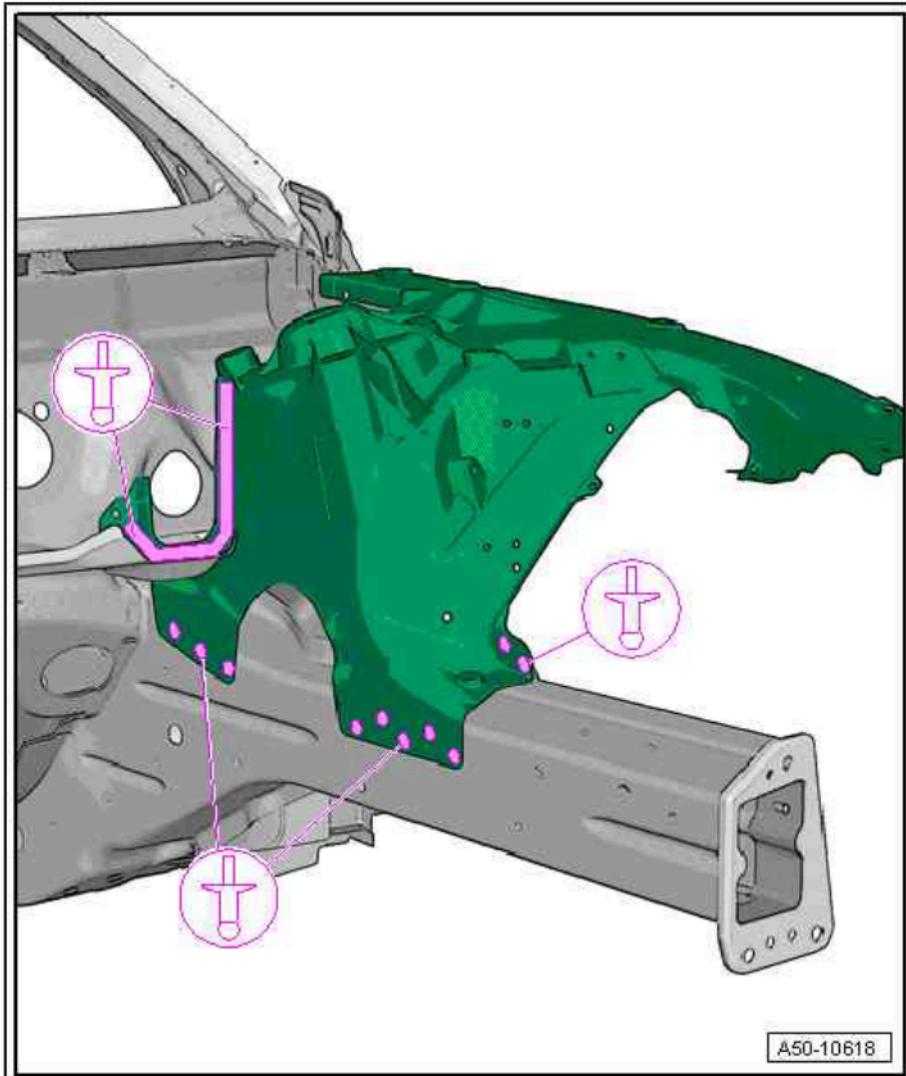

 Note

Due to the different types of steel and panel thicknesses employed, one of the resistance spot welding units listed in this manual and approved by Audi must be used to ensure correct results when spot welding.

 Welding in


- Rivet in suspension turret using compact booster - VAS 6790/20- and pop rivets - WHT 005 413 A-

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not

- Weld in new part using shielded arc welding equipment : SG

permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability
plug weld seam.


with respect to the correctness of information in this document. Copyright by AUDI AG.

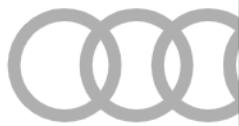

Protected by copyright

permitted unless aut

with respect to the co

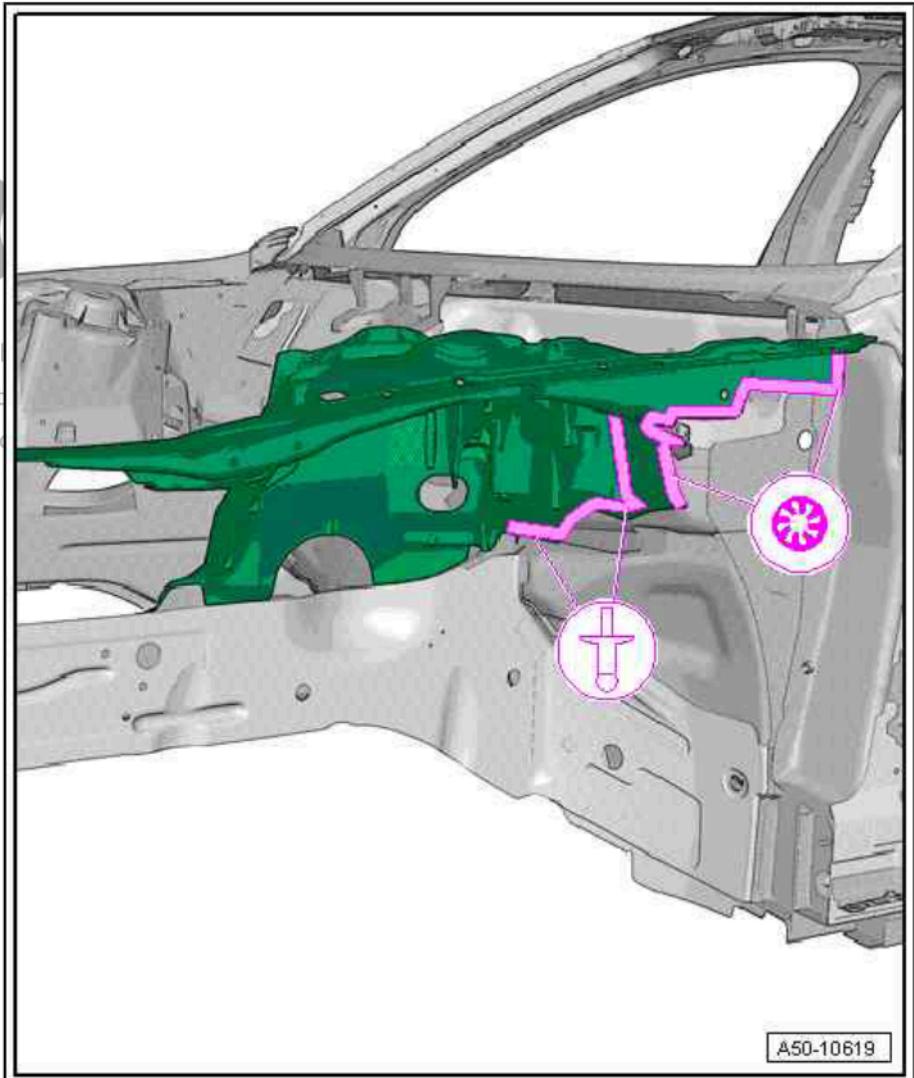

A50-10619

⚠ CAUTION

Allow bonded joint on suspension turret to harden for 60 minutes at approx. 65 °C using radiant heater. Check temperature constantly with temperature sensor.

- Welding in upper wing mounting flange [⇒ page 70](#)

RO: 50 79 55 03

5 Front longitudinal member - Renewal

(Saloon and Avant identical)

NOTICE

Straightening and re-alignment work must not be carried out on the front section of the Audi A6 body, because this could cause cracking in the aluminium castings that may not be externally visible.

1 - Suspension turret

2 - Wing mounting flange


3 - Longitudinal member

4 - Separating cut for partial renewal

Partial renewal

Partial renewal of the longitudinal member is possible using this separating cut.

5 - Separating cut for longitudinal member

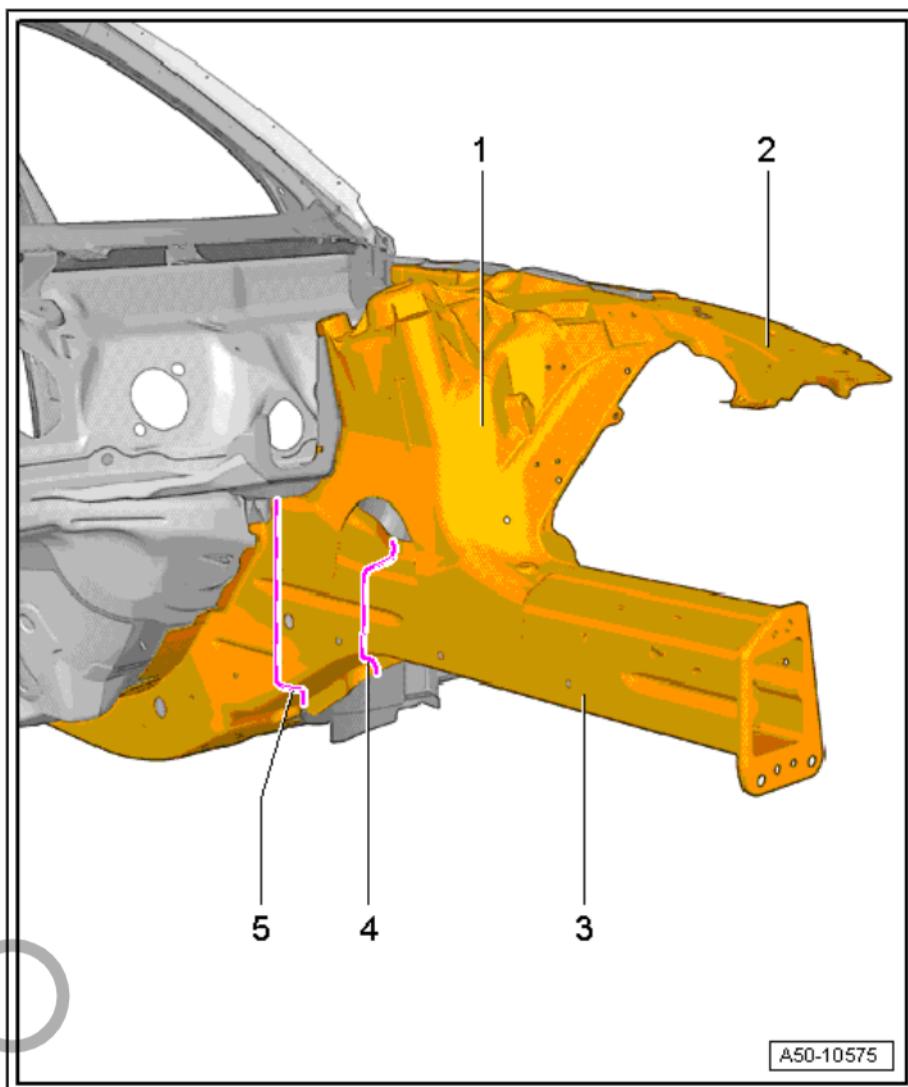


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

1 - Separating cut for partial renewal

Partial renewal

Partial renewal is possible with this separating cut.

2 - Separating cut for longitudinal member

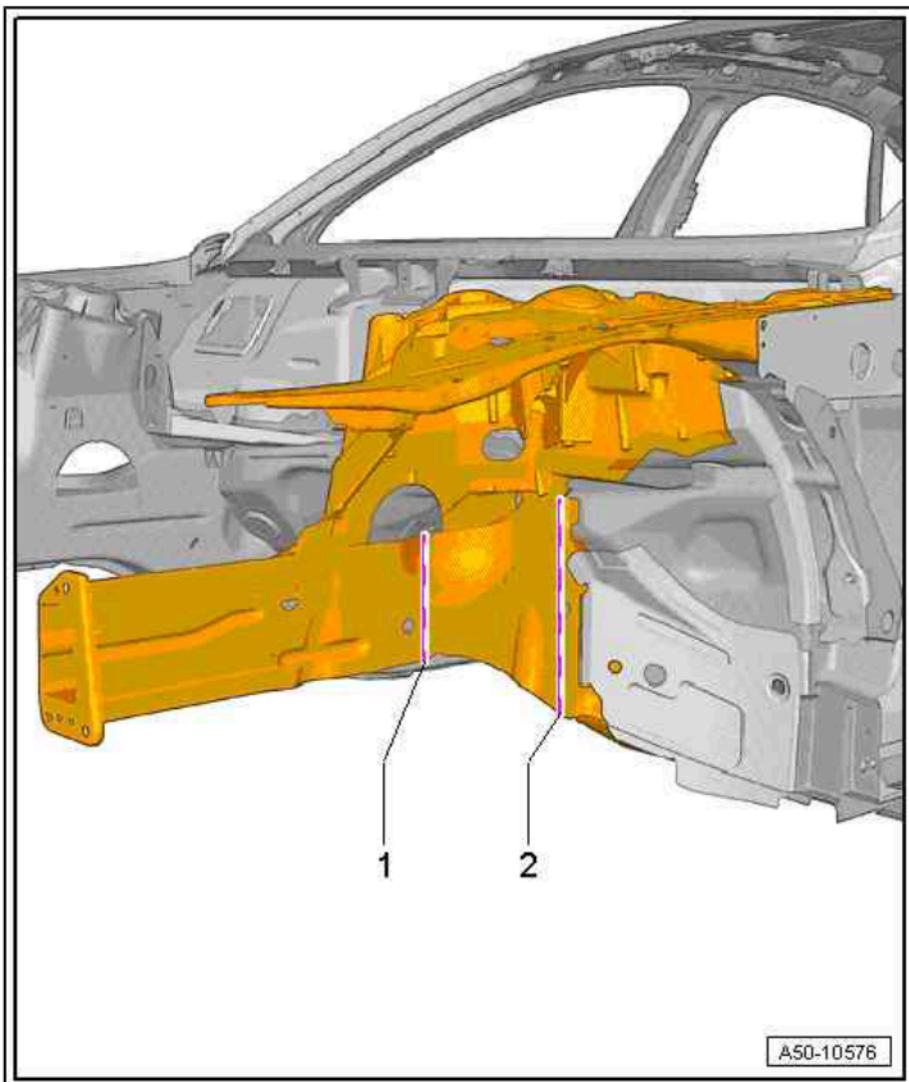

A50-10576

5.1 Notes for vehicles with hybrid drive

[⇒ page 5](#)

5.2 Tools

Special tools and workshop equipment required

- ◆ Resistance spot welder
- ◆ Shielded arc welding equipment
- ◆ Compact angle grinder
- ◆ Compact booster
- ◆ Drill
- ◆ Body saw
- ◆ Spot weld breaker
- ◆ Pneumatic glue gun



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability

with respect to the correctness of information in this document. Copyright by AUDI AG.

- ◆ Alternatively, you can use the rechargeable riveter - VAS 5279 B- . This is a complete set.



Tools approved by AUDI AG must be used to ensure correct results when carrying out repair work [⇒ page 54](#) .

5.3 Procedure

Cutting locations




Note

Cover over suspension turret while cutting and welding.

- First make separating cuts on outer closure plate (offset from inner separating cuts) using body saw .
- Separate original joint using spot weld breaker .




Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

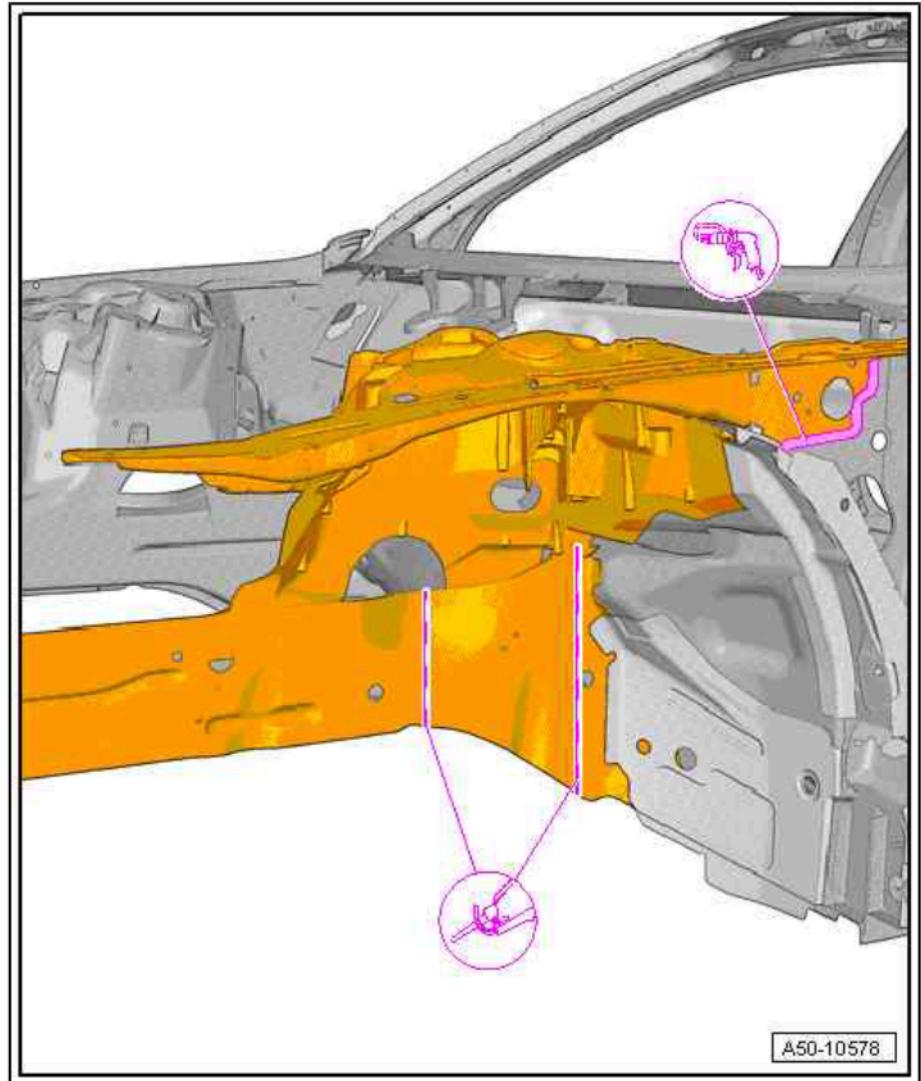

- Make separating cut as shown using body saw .
- Drill out punch rivet using drill (6.0 mm Ø).



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

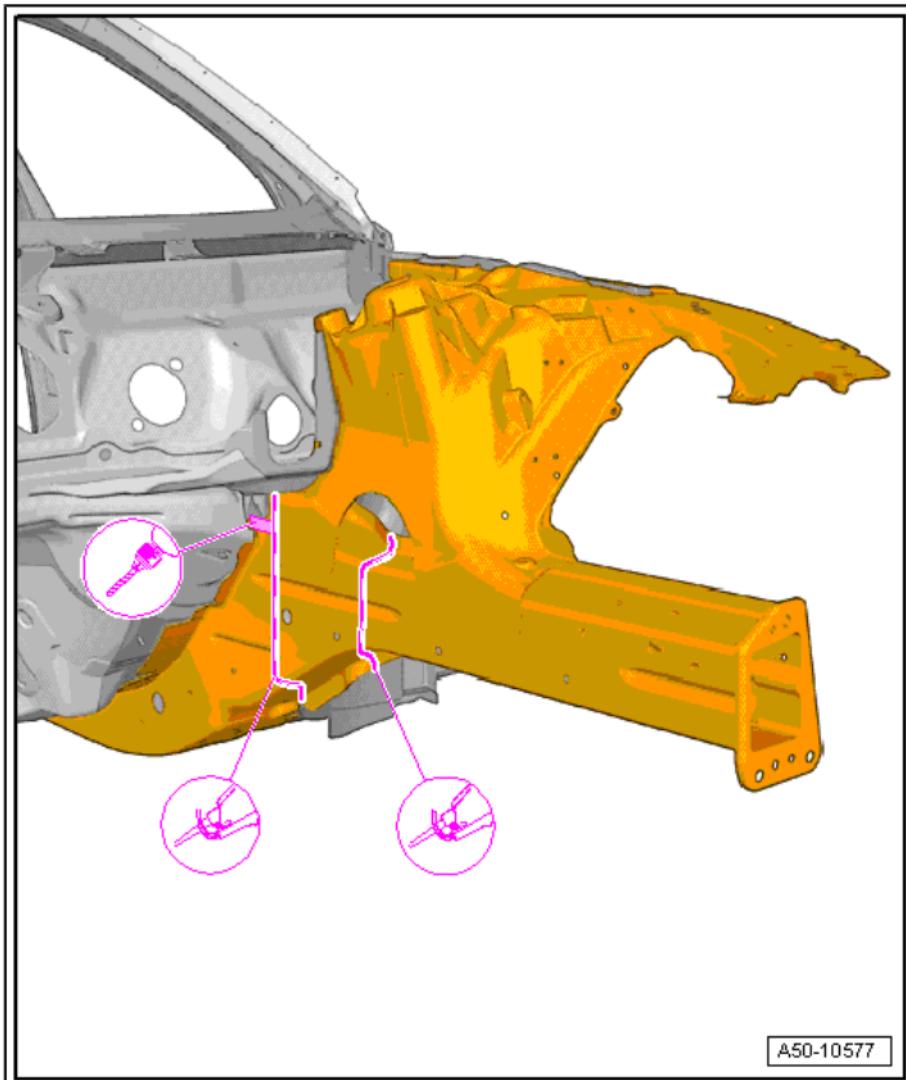


- Roughly cut out suspension turret using body saw .



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.




Protected by copyright. Copying
permitted unless authorised by A
with respect to the correctness of

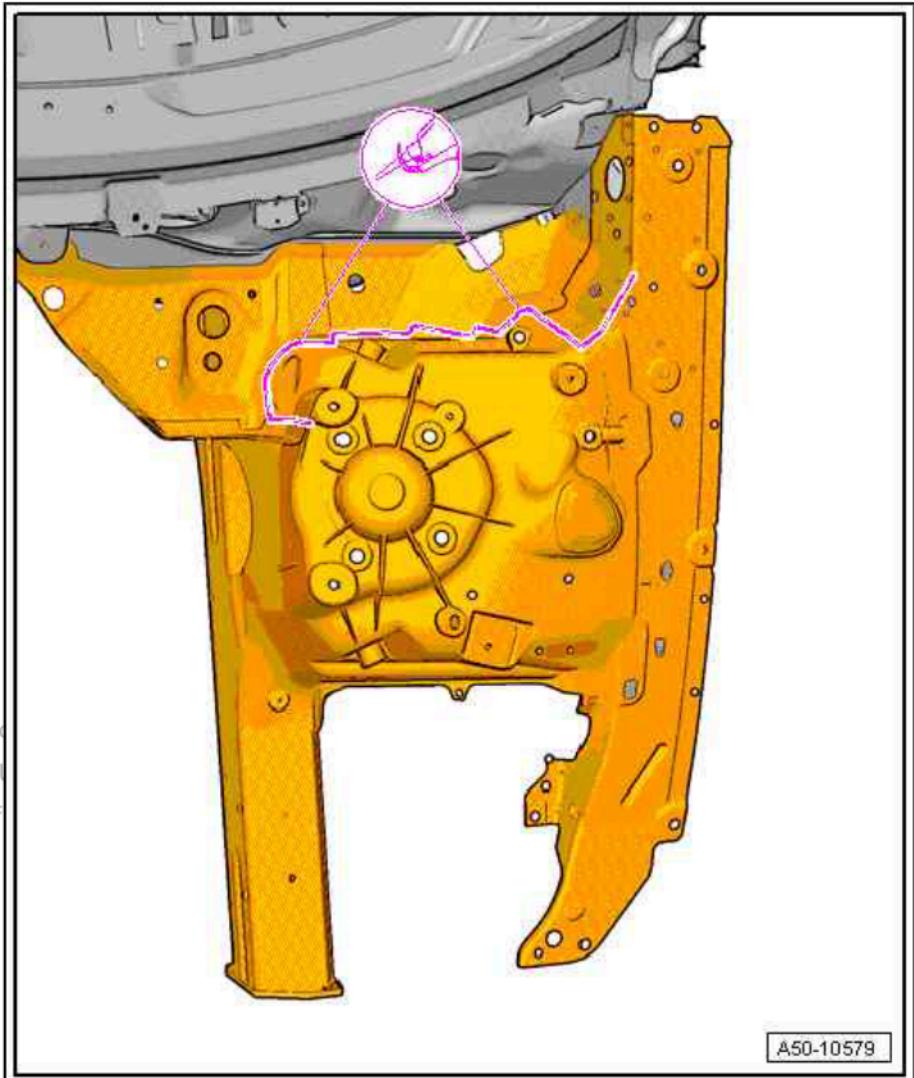

- Remove punch rivets using rechargeable riveter - VAS 5279 A- or compact booster - VAS 6790- [page 24](#).




Protected by copyright
permitted unless auth
with respect to the co

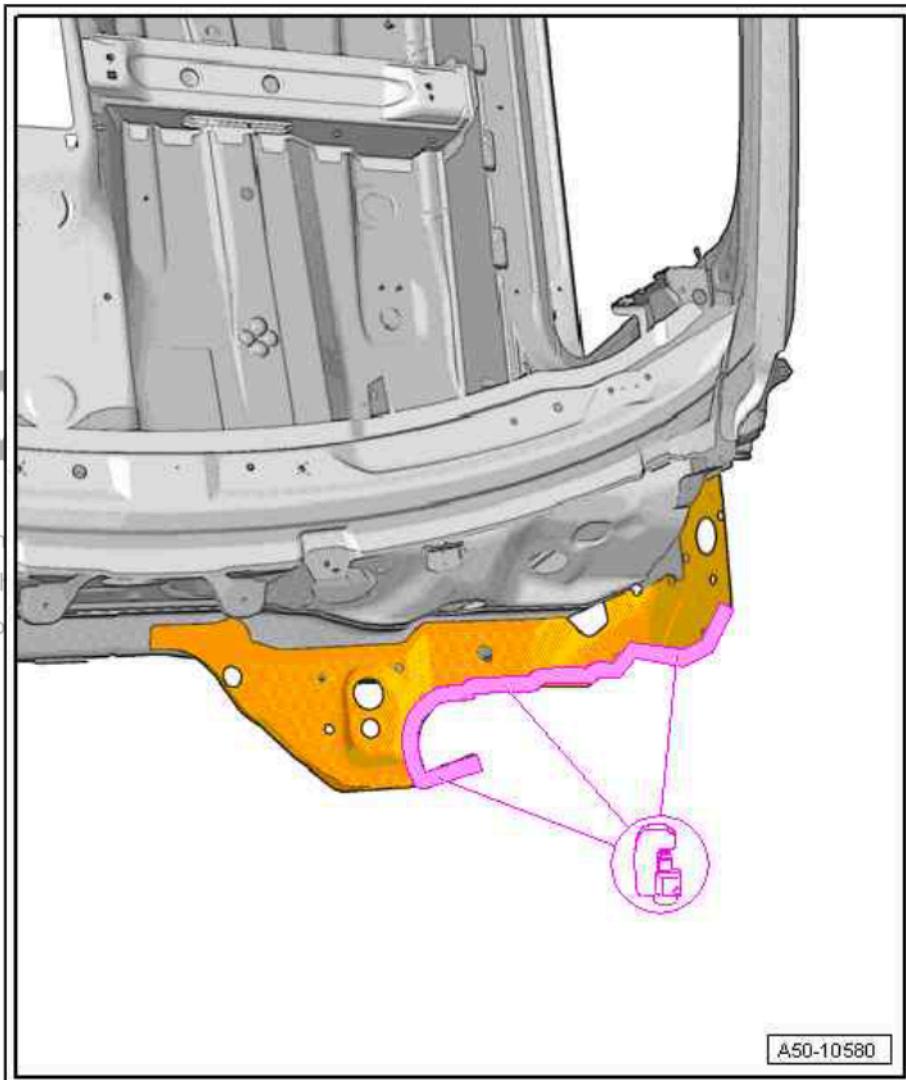

- Remove remaining material using compact angle grinder .



Protected by copyright. Copying
permitted unless authorised by
with respect to the correctness

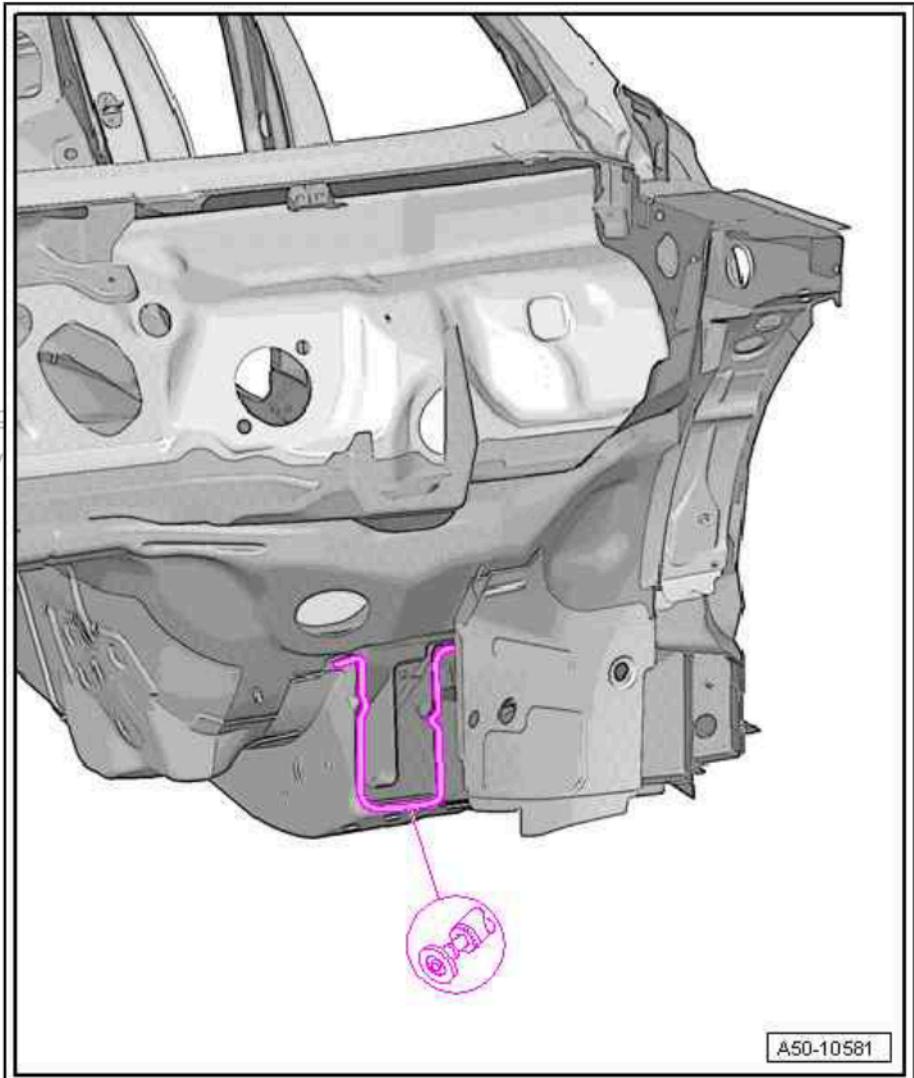


Replacement parts


- ◆ Bumper bracket
- ◆ Pop rivet - WHT 005 413-
- ◆ Longitudinal member
- ◆ Applicator - D 009 500 25 -
- ◆ Aluminium primer - DA 009 801 -
- ◆ Cleaning solution - D 009 401 04-
- ◆ 2-component epoxy adhesive - DA 001 730 A2-

Preparing new part

- Transfer separating cuts to new part and cut to size using body saw .

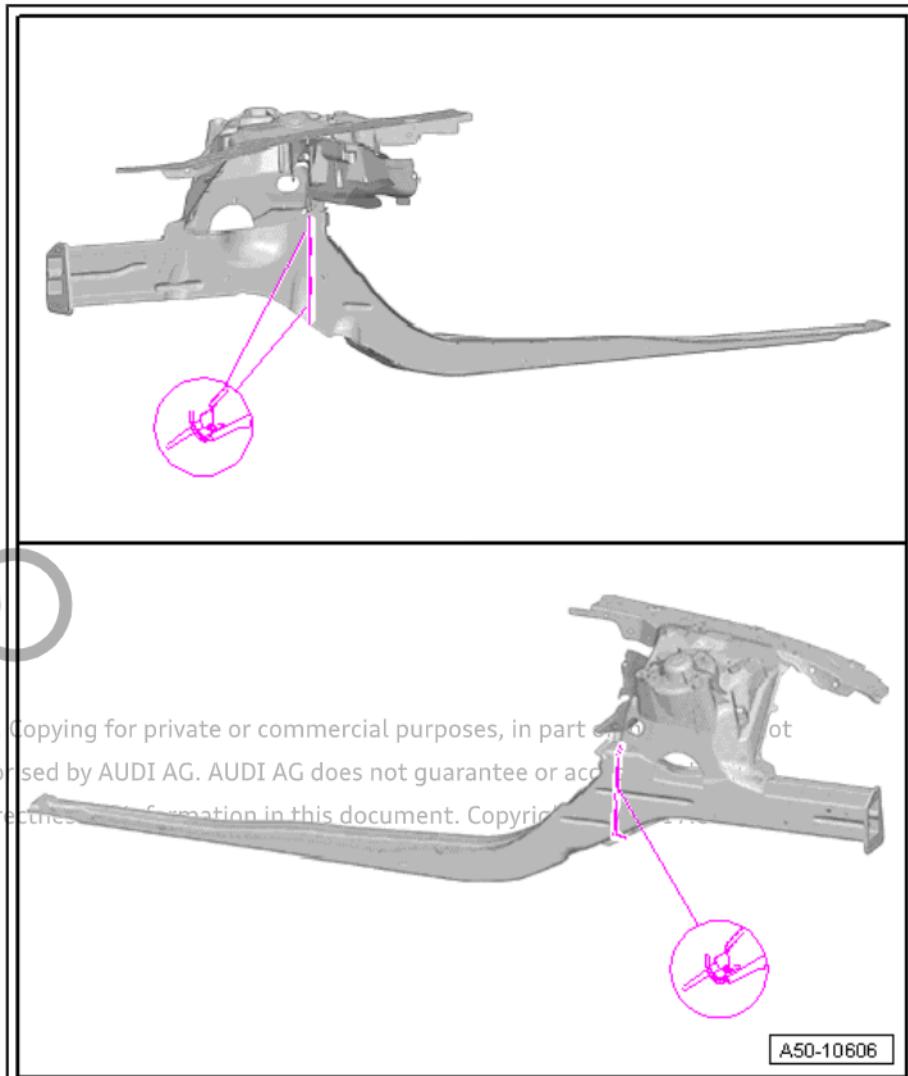

- Remove punch rivets using rechargeable riveter - VAS 5279
A- or compact booster - VAS 6790- [⇒ page 24](#) .

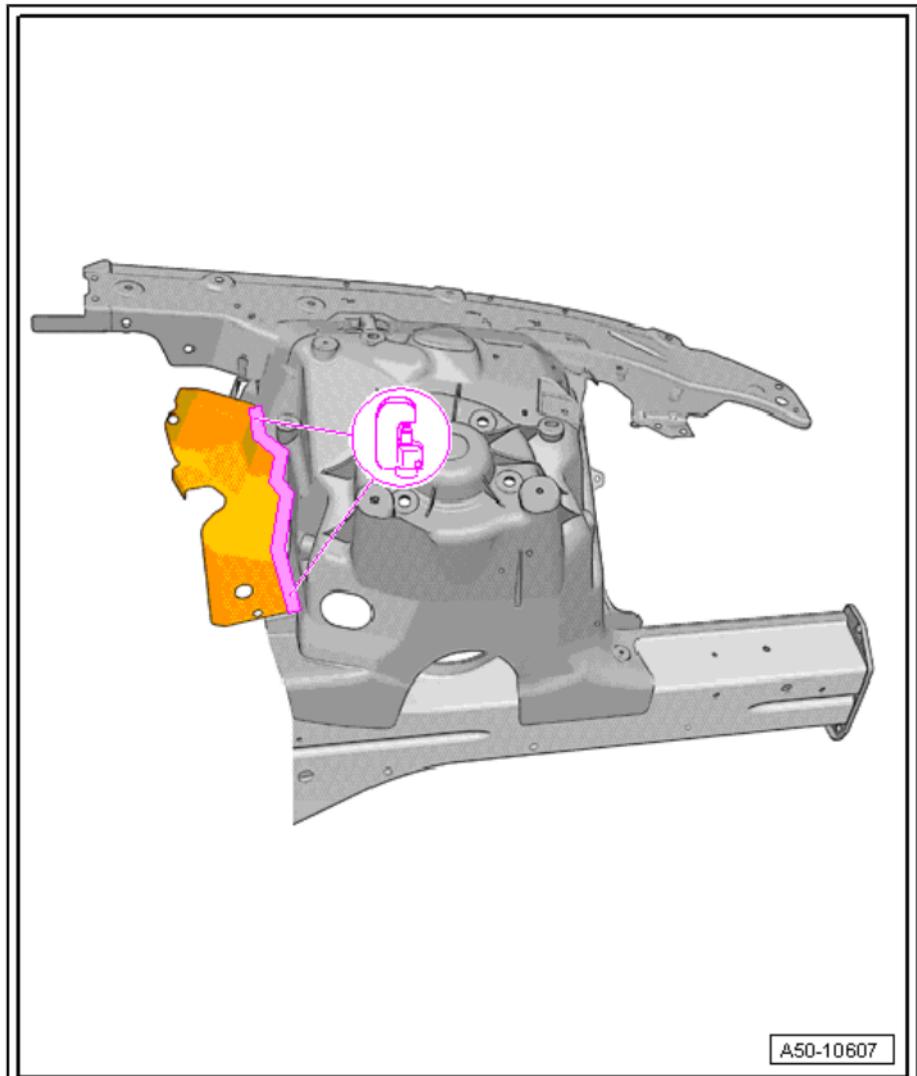

- Take off suspension turret and prepare for riveting.


Preparing joints for adhesive application

- Clean bonding surfaces with cleaning solution - D 009 401 04- .
- Prepare bonding area with silicate stone - DA 009 800 - and clean.
- Apply aluminium primer - DA 009 801 - to bonding surfaces using applicator - D 009 500 25 - .
- Apply 2-component epoxy adhesive - DA 001 730 A2- to entire riveting area using pneumatic glue gun - V.A.G 2005 B- .

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.



Protected by
permitted un
with respect t

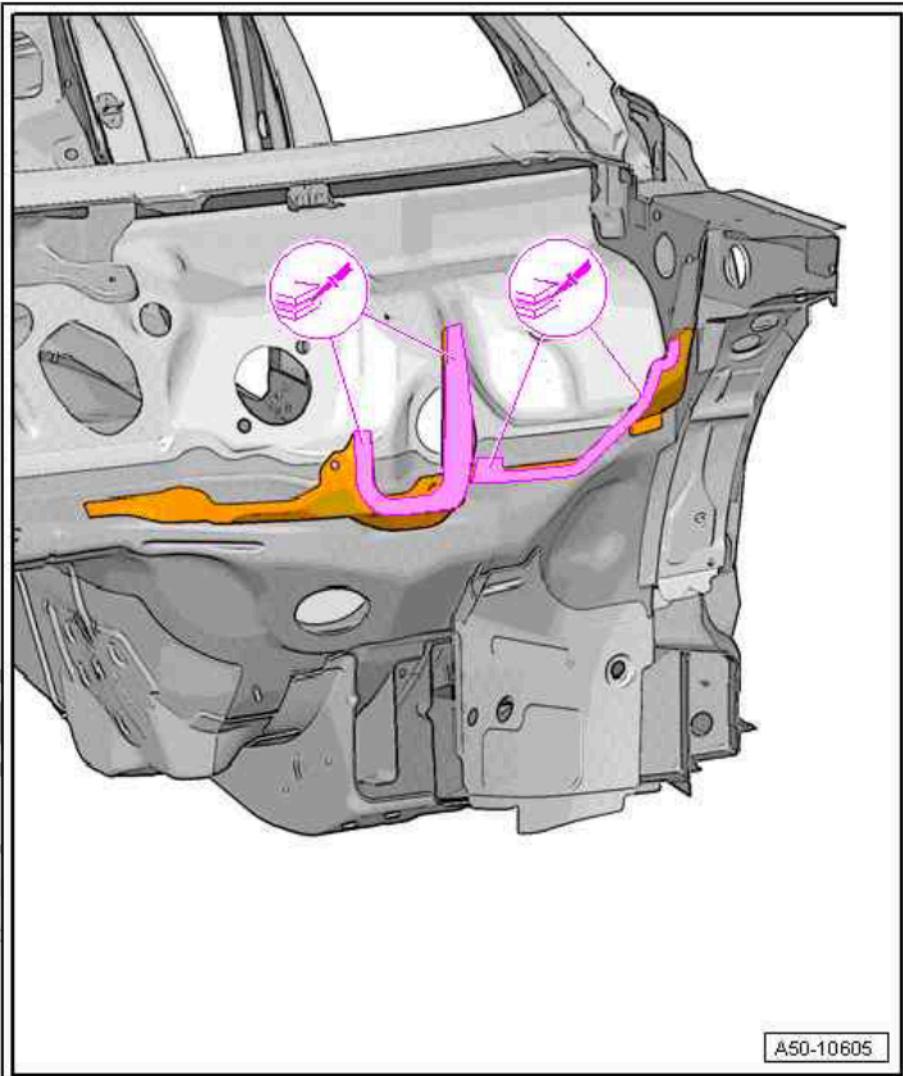


A50-10605

Welding in


- Match up new part with vehicle positioned on alignment bracket supplement - VAS 6667- and fix in place.
- Bolt body brace -1- to body and suspension turrets on both sides to maintain correct dimensions.



Protected by copyright. Copying, publishing, making available online, renting, lending or distributing in any format or medium, in whole or in part, is not permitted unless authorised by AUDI AG. The contents of this document do not guarantee or accept any legal liability for the correctness of the information contained therein. © AUDI AG

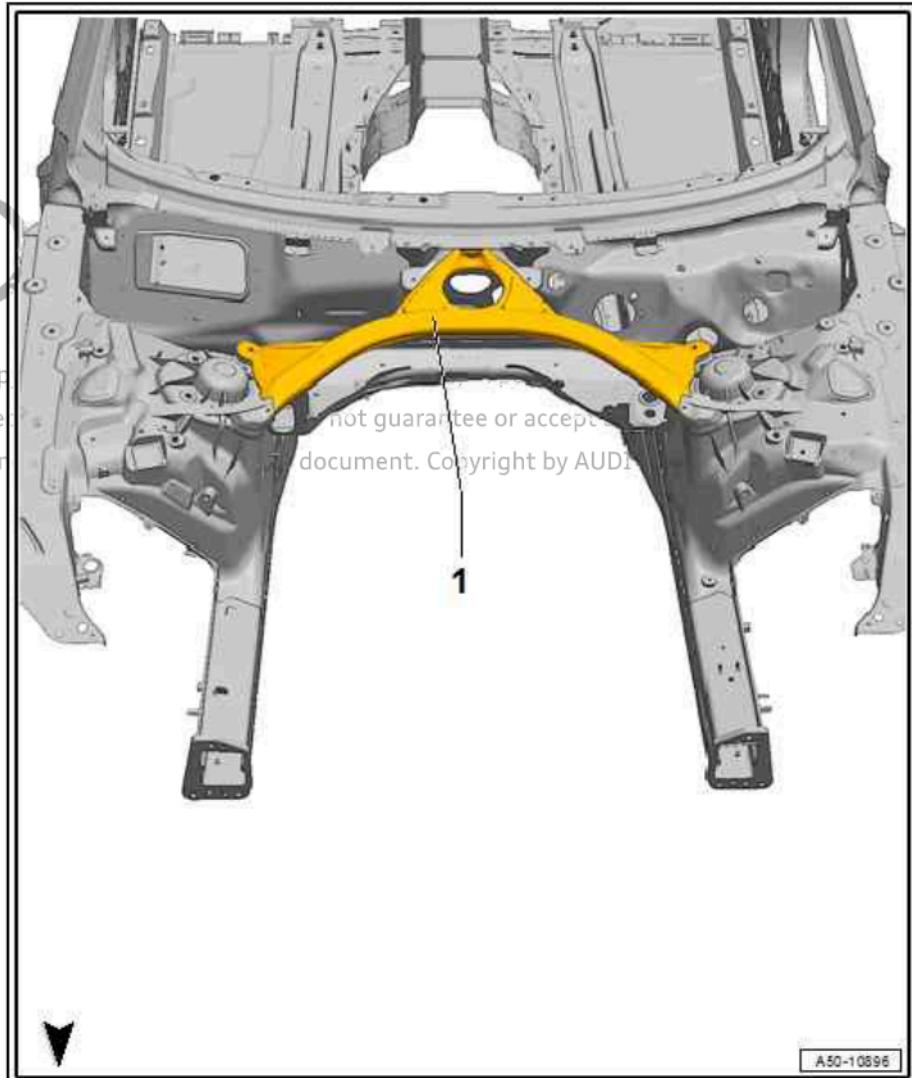


- Weld at separating cuts using shielded arc welding equipment : SG continuous seam.

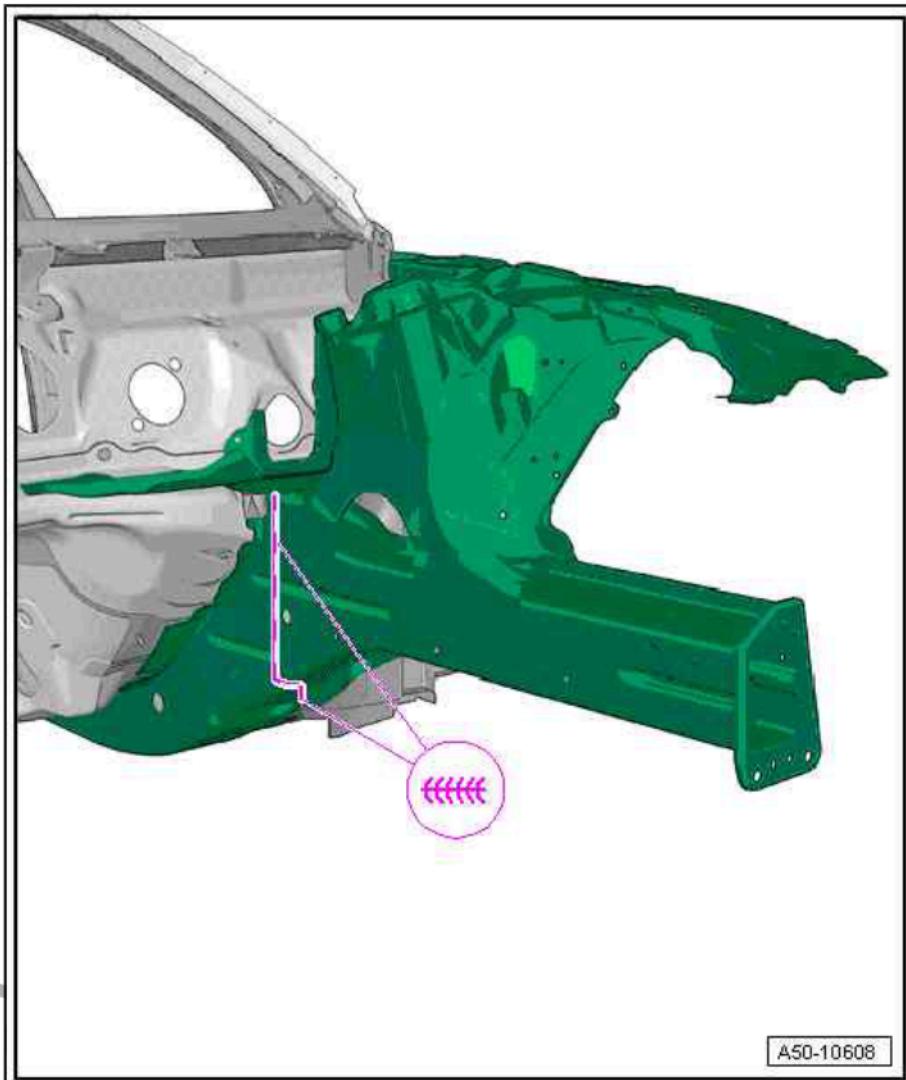

- Weld at separating cuts using shielded arc welding equipment : SG continuous seam.
Commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.




Protected by copyright. Copying fo
permitted unless authorised by AU
with respect to the correctness of i

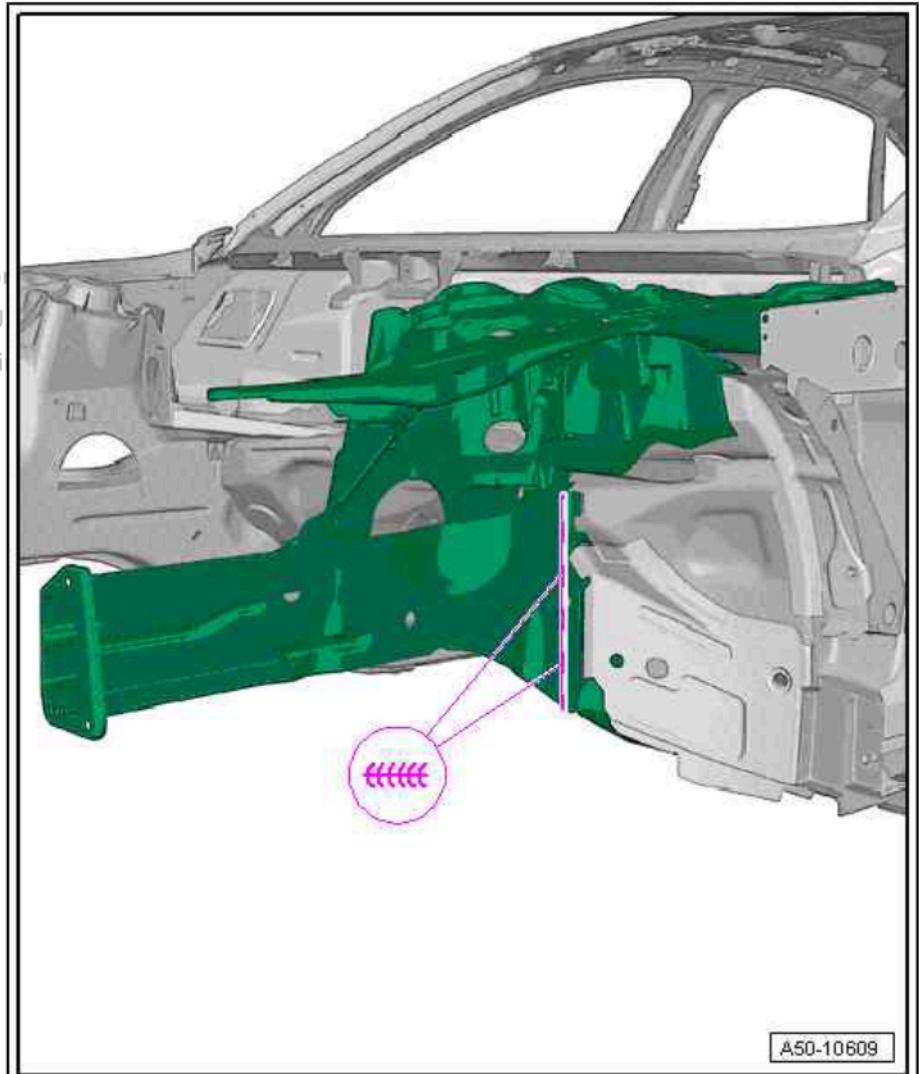

Riveting in


- Match up new part with vehicle positioned on alignment bracket set supplement - VAS 6667- and fix in place.
- Drill holes (6.7 mm Ø) for pop rivet - WHT 005 413- using drill .

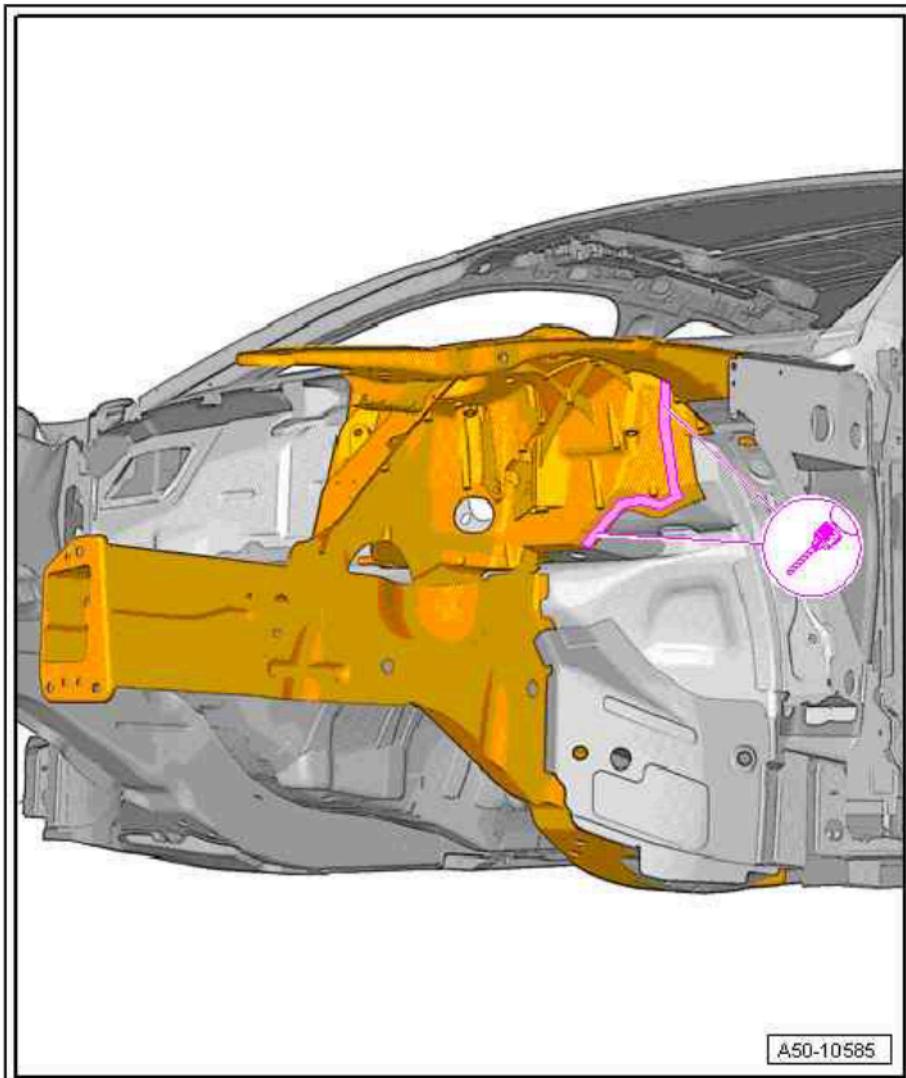

- Rivet in longitudinal member using compact booster - VAS 6790/20- and pop rivets - WHT 005 413 A- .




Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability

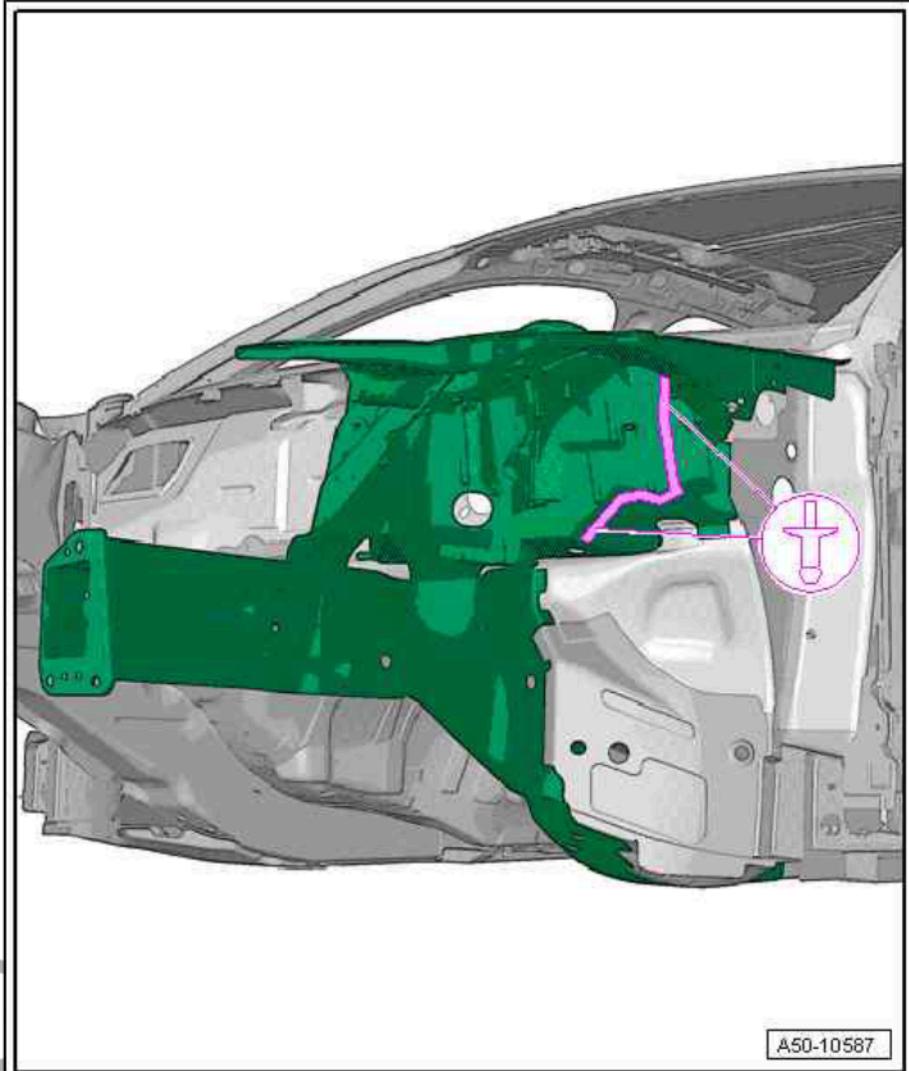

A50-10587

- Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.
- Weld in new part using shielded arc welding equipment : SG
plug weld seam.

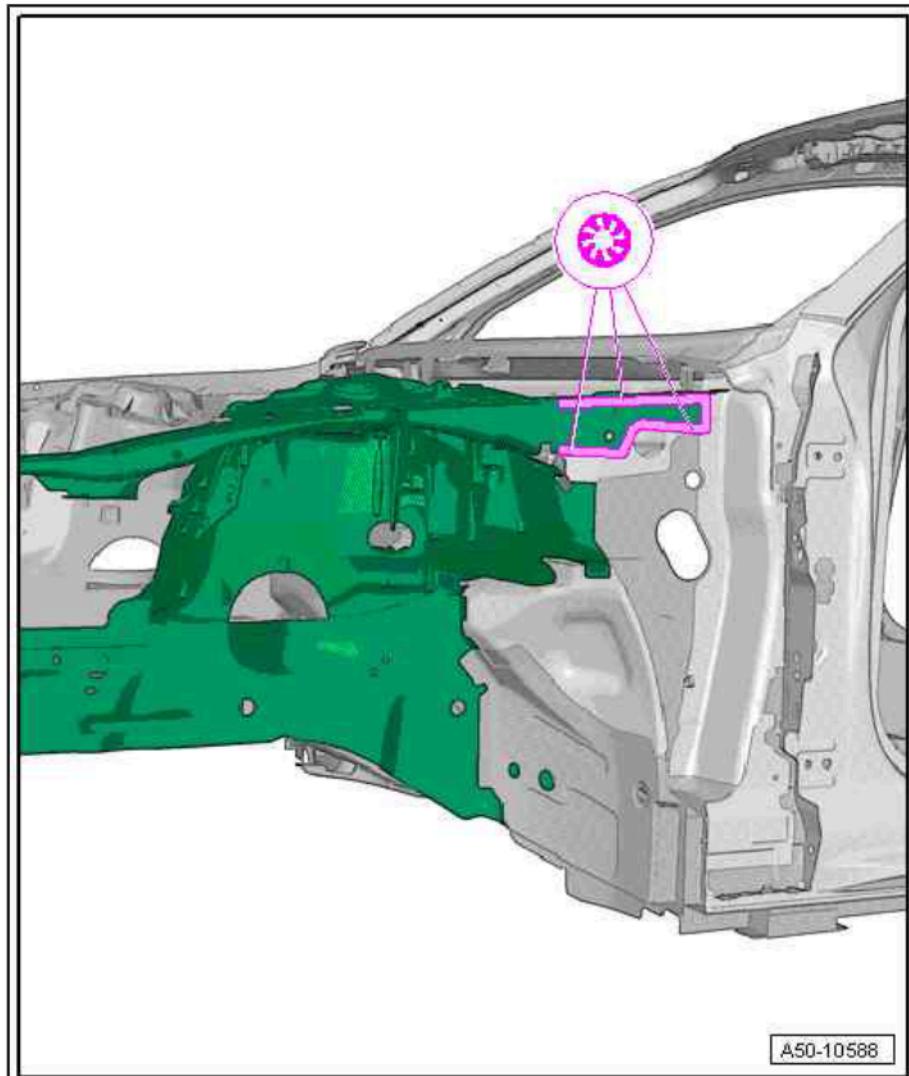

⚠ CAUTION

Allow bonded joint on suspension turret to harden for 60 minutes at approx. 65 °C using radiant heater or paint drying booth. Check temperature constantly with temperature sensor.



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

RO: 50 79 55 06

6 Front longitudinal member - Partial renewal (part sections 1 + 2)


(Saloon and Avant identical)

1 - Longitudinal member (part section)

2 - Separating cut for longitudinal member

Dimension -a- = 140 mm

3 - Suspension turret

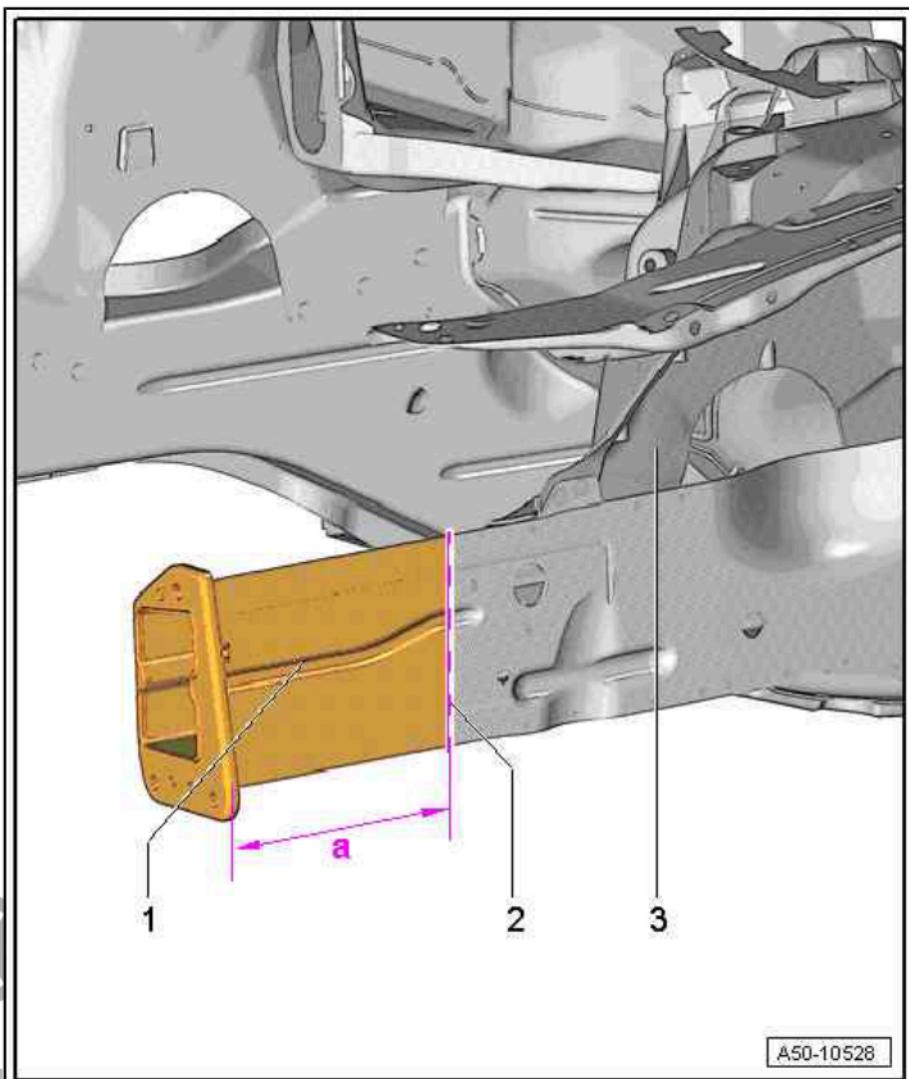

Protected by copyright

permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability

with respect to the correctness of information in this document. Copyright by AUDI AG.

[⇒ page 5](#)

6.2 Tools

Special tools and workshop equipment required

- ◆ Resistance spot welder
- ◆ Shielded arc welding equipment
- ◆ Compact angle grinder
- ◆ Body saw
- ◆ Spot weld breaker

Tools approved by AUDI AG must be used to ensure correct results when carrying out repair work [⇒ page 54](#).

6.3 Procedure


Cutting locations

- Cut out longitudinal member according to dimension -a- using body saw .

Dimension -a- = 140 mm




Separating cut must be a straight line.

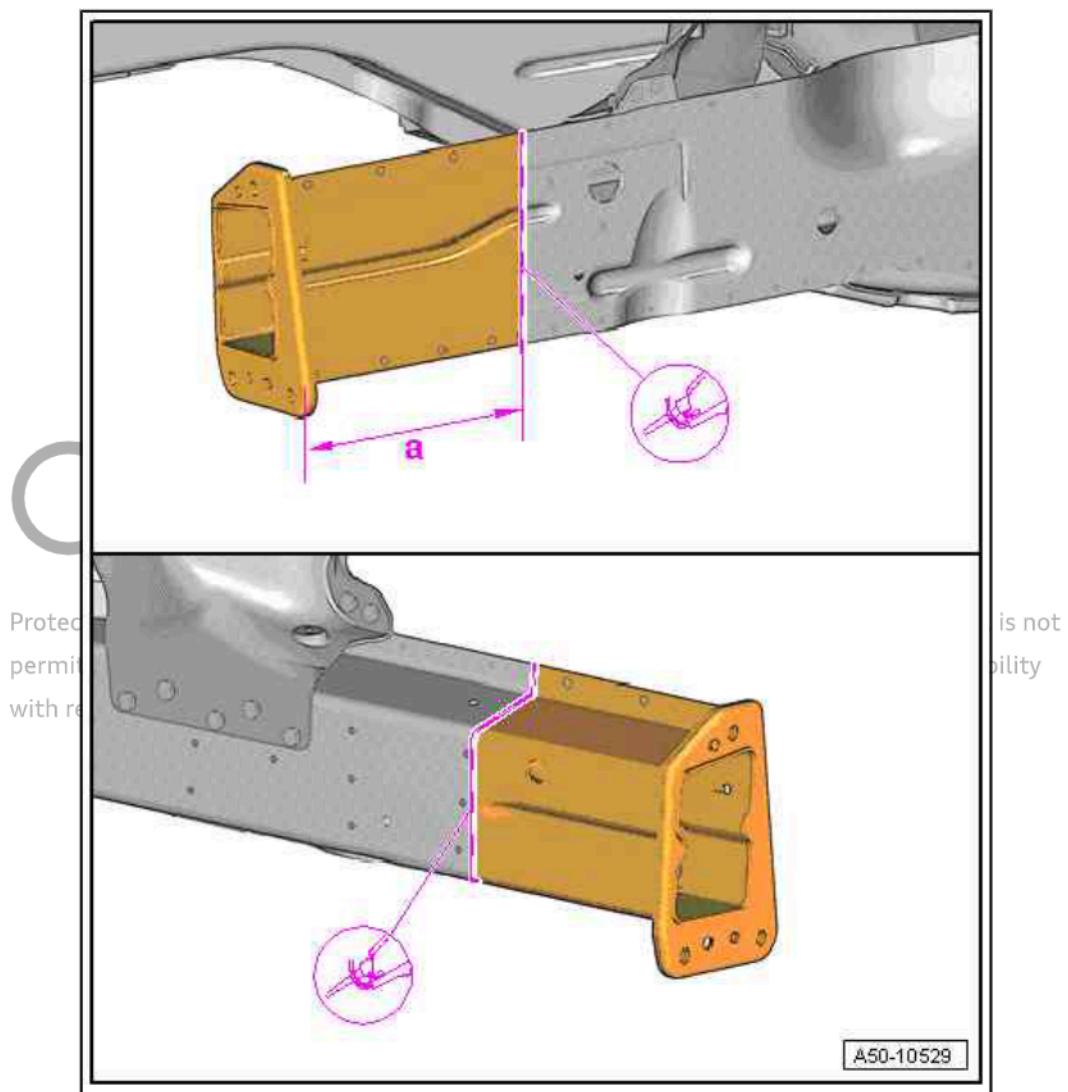

- Remove remaining material using compact angle grinder .



Protected by copy
permitted unless a
with respect to the

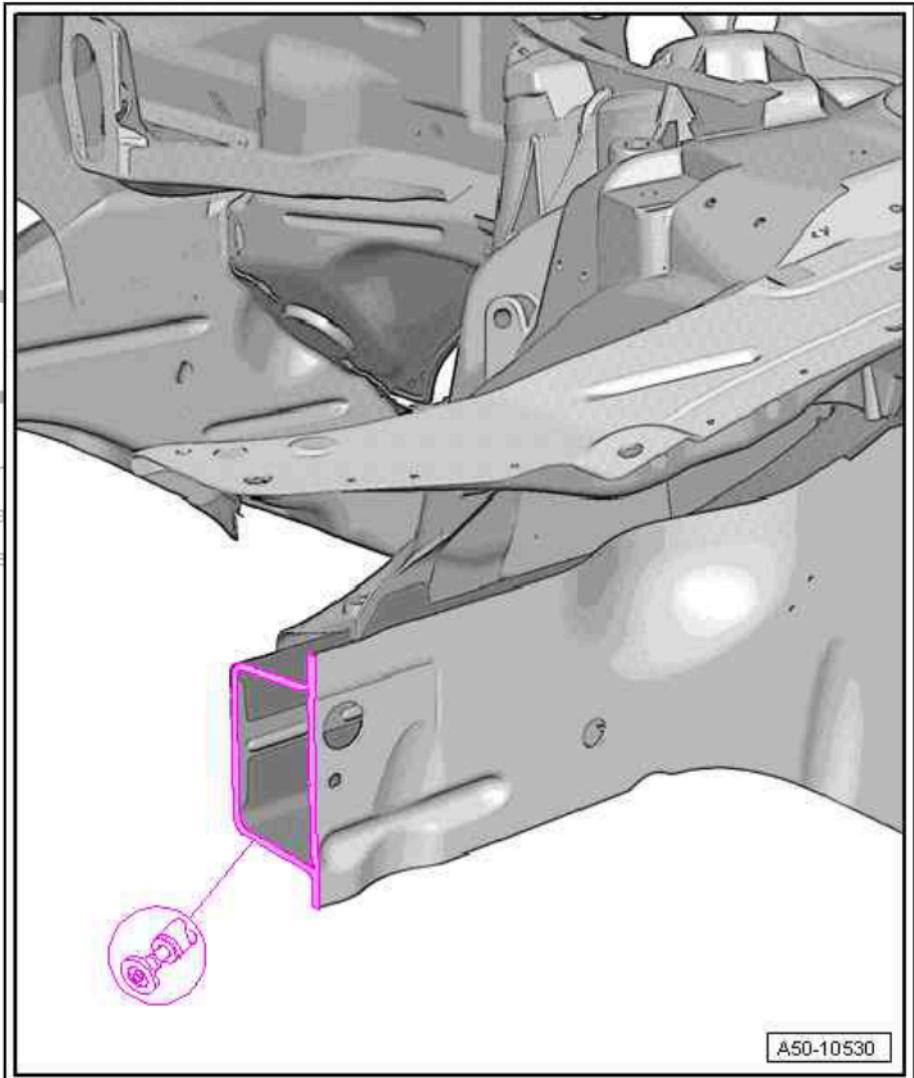

Replacement part

Longitudinal member (part section)

Preparing new part

- Match up new part with vehicle positioned on alignment bracket set supplement - VAS 6667- and fix in place.


Welding in

- Weld at separating cut using shielded arc welding equipment : SG continuous seam.




Protected by copyright. Copying
permitted unless authorised by
with respect to the correctness o


A50-10531

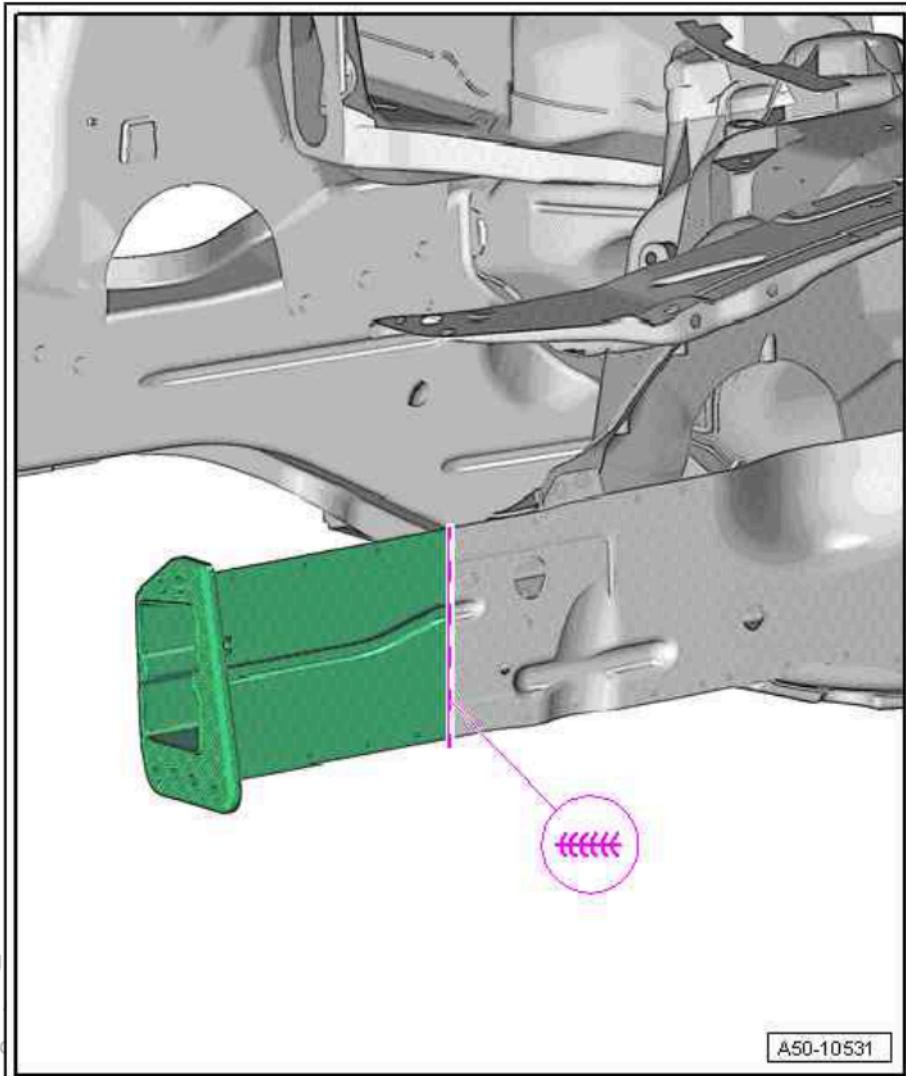

- Weld at separating cut using shielded arc welding equipment :
SG continuous seam.



Protected by
permitted un
with respect

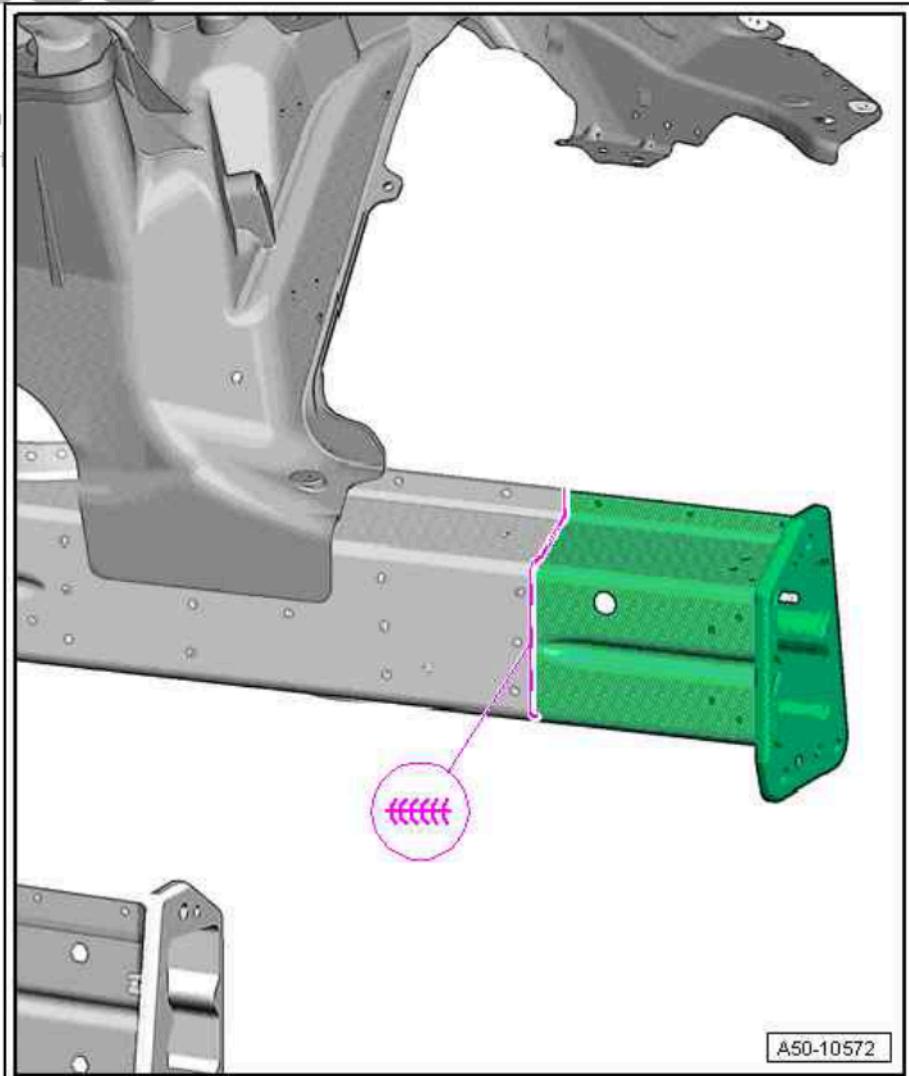

A50-10572

6.3.1 Longitudinal member (part section)

CAUTION

Straightening and re-alignment work must not be carried out on the front section of the Audi A6 body, because this could cause cracking in the aluminium castings that may not be externally visible.

1 - Longitudinal member

2 - Separating cut for partial renewal


Partial renewal

Partial renewal of the longitudinal member is possible using this separating cut.



Protected by copyright. Copying f
permitted unless authorised by A
with respect to the correctness of

A50-10589

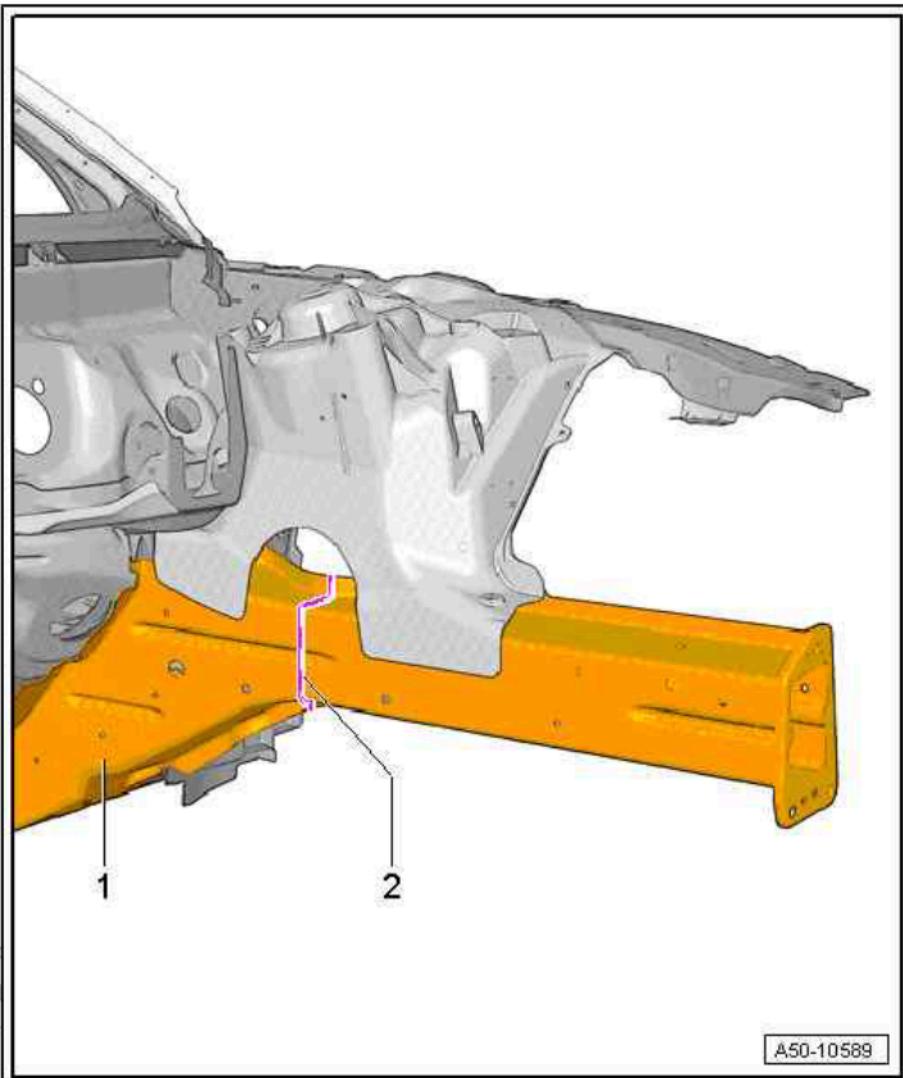

6.3.2 Notes for vehicles with hybrid drive

[⇒ page 5](#)

6.3.3 Tools

Special tools and workshop equipment required

- ◆ Resistance spot welder
- ◆ Compact angle grinder
- ◆ Shielded arc welding equipment
- ◆ Body saw
- ◆ Spot weld breaker

Tools approved by AUDI AG must be used to ensure correct results when carrying out repair work [⇒ page 54](#).

6.3.4 Procedure

Cutting locations




Note

This separating cut on the longitudinal member may only be made in the area shown. If damage to the longitudinal member extends further it must be renewed completely.

- Cut out longitudinal member using body saw .
- Make separating cut for longitudinal member using body saw (keep to dimension -a-).

Dimension -1- = 240 mm

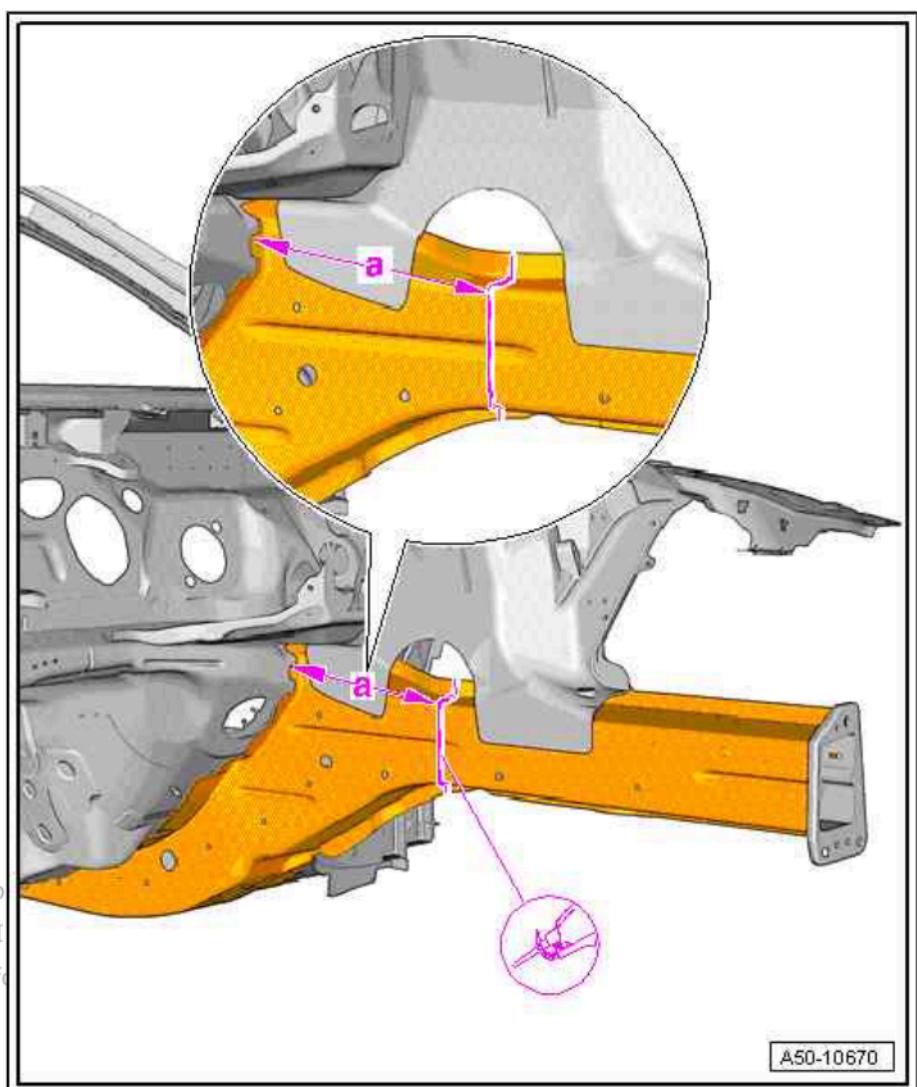


Protected by copyright. Copying for private use is
permitted unless authorised by AUDI AG.
With respect to the correctness of information

- Drill out riveted joint using drill .
- First make separating cuts on outer closure plate according to dimension -b- using body saw .

Dimension -b- = 190 mm



Protected by copyright. Copying
permitted unless authorised by
with respect to the correctness

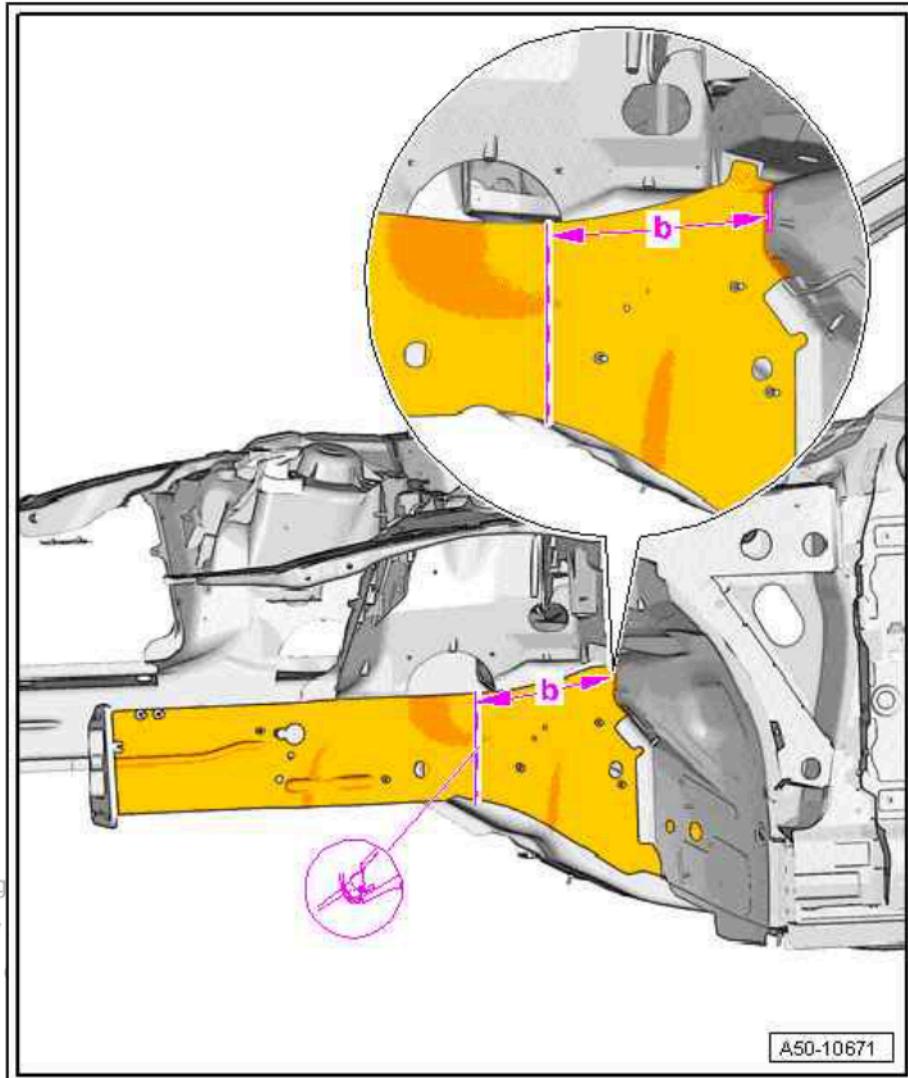

A50-10671

Replacement parts

- ◆ Longitudinal member
- ◆ 2-component epoxy adhesive - DA 180 A00 A2 - , 2 sets of cartridges
- ◆ Aluminium primer - DA 009 801 -
- ◆ Applicator - D 009 500 25 -
- ◆ Cleaning solution - D 009 401 04-
- ◆ Pop rivet - WHT 005 413-


CAUTION

Allow bonded joint on suspension turret to harden for 60 minutes at approx. 65 °C using radiant heater or paint drying booth. Check temperature constantly with temperature sensor.

Preparing new part

- Clean bonding surfaces with cleaning solution - D 009 401 04- .
- Prepare bonding area with silicate stone - DA 009 800 - and clean.

- Apply aluminium primer - DA 009 801 - to bonding surfaces using applicator - D 009 500 25 - .
- Apply 2-component epoxy adhesive - DA 001 730 A2- to entire riveting area using pneumatic glue gun - V.A.G 2005 B- .
- Transfer separating cuts to new part and cut to size using body saw .

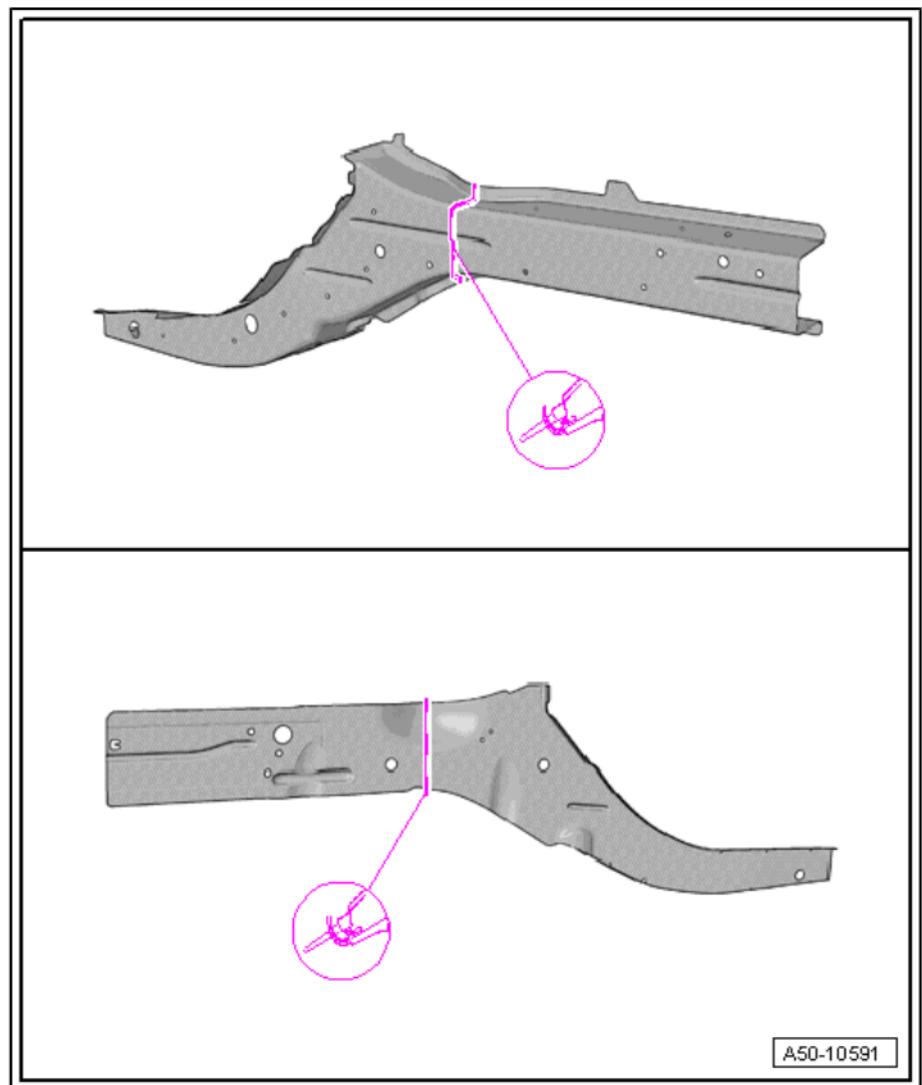


Welding in


- Weld longitudinal member using shielded arc welding equipment : SG continuous seam.




Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

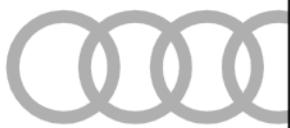

Protected by copyright. Copying, distribution, or
permitted unless authoris
with respect to the corre

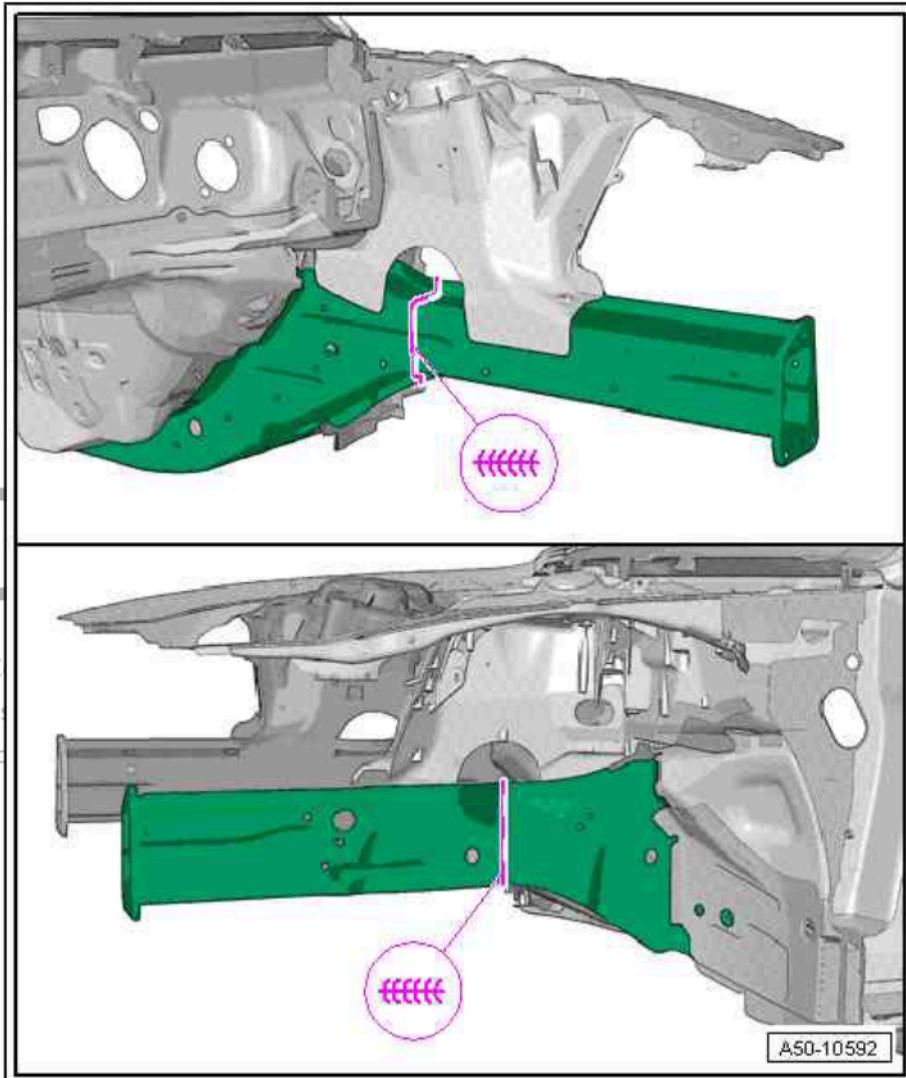

- Drill holes (6.7 mm Ø) for pop rivet - WHT 005 413- using drill .

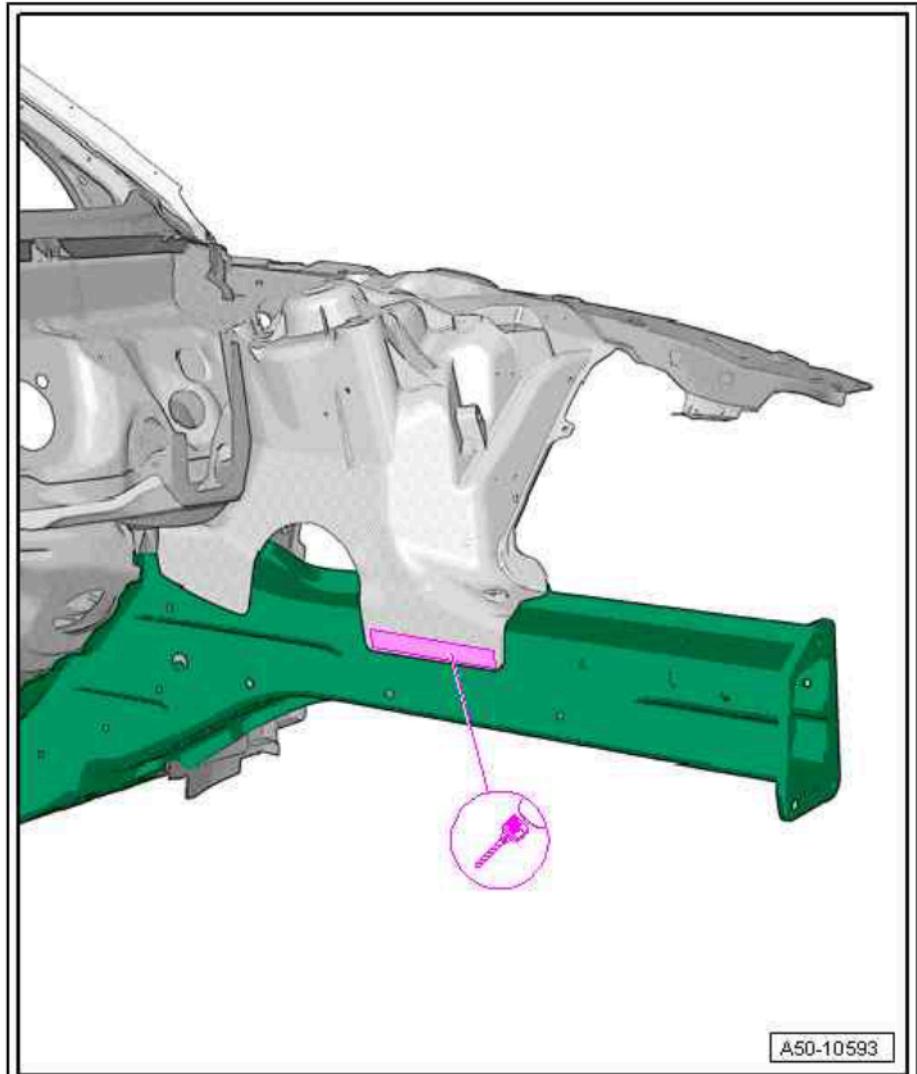

Riveting in


- Rivet in longitudinal member using compact booster - VAS 6790/20 - and pop rivet - WHT 005 413- .



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.



Protected by copyright
permitted unless au
with respect to the d

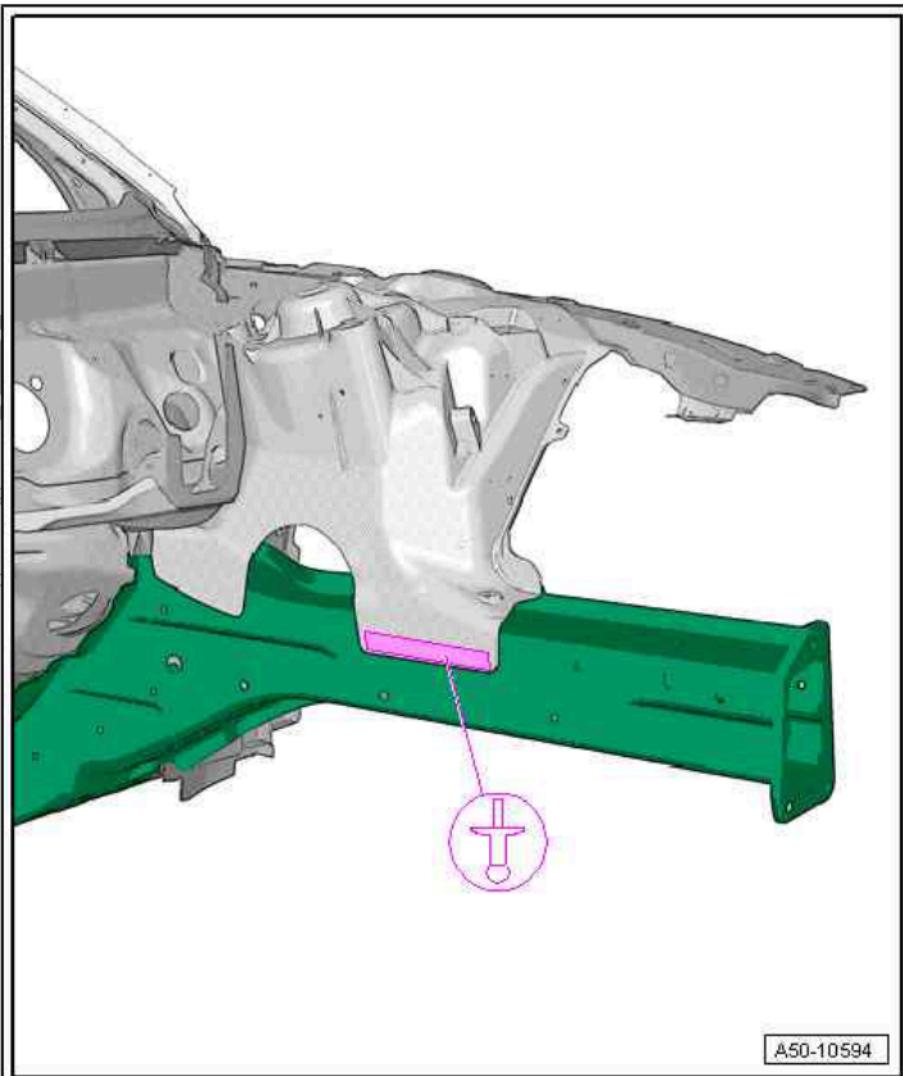

RO: 50 79 49 50

7 Repairing threads for attachment of subframe

(Saloon and Avant identical)

- Subframe removed ⇒ Running gear, axles, steering; Rep. gr. 40 ; Subframe, anti-roll bar, suspension links



Note

The following description shows the thread repair for the front subframe attachment; the procedure for the other attachments is basically the same.

7.1 Notes for vehicles with hybrid drive

[⇒ page 5](#)

7.2 Tools

Special tools and workshop equipment required

- ◆ Thread repair kit M12x1.5 - VAS 6058-
- ◆ Drill - VAS 6267-
- ◆ Compact angle grinder - VAS 5167-

Tools approved by AUDI AG must be used to ensure correct results when carrying out repair work [⇒ page 54](#).



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

1 - Threaded plate (welded into subframe)




Note

The threaded plate is not a replacement part and may only be repaired once if damaged.

2 - Helicoil thread insert


Protected by copyright.
permitted unless auth-
with respect to the correctness
information in this document. Copyright by A

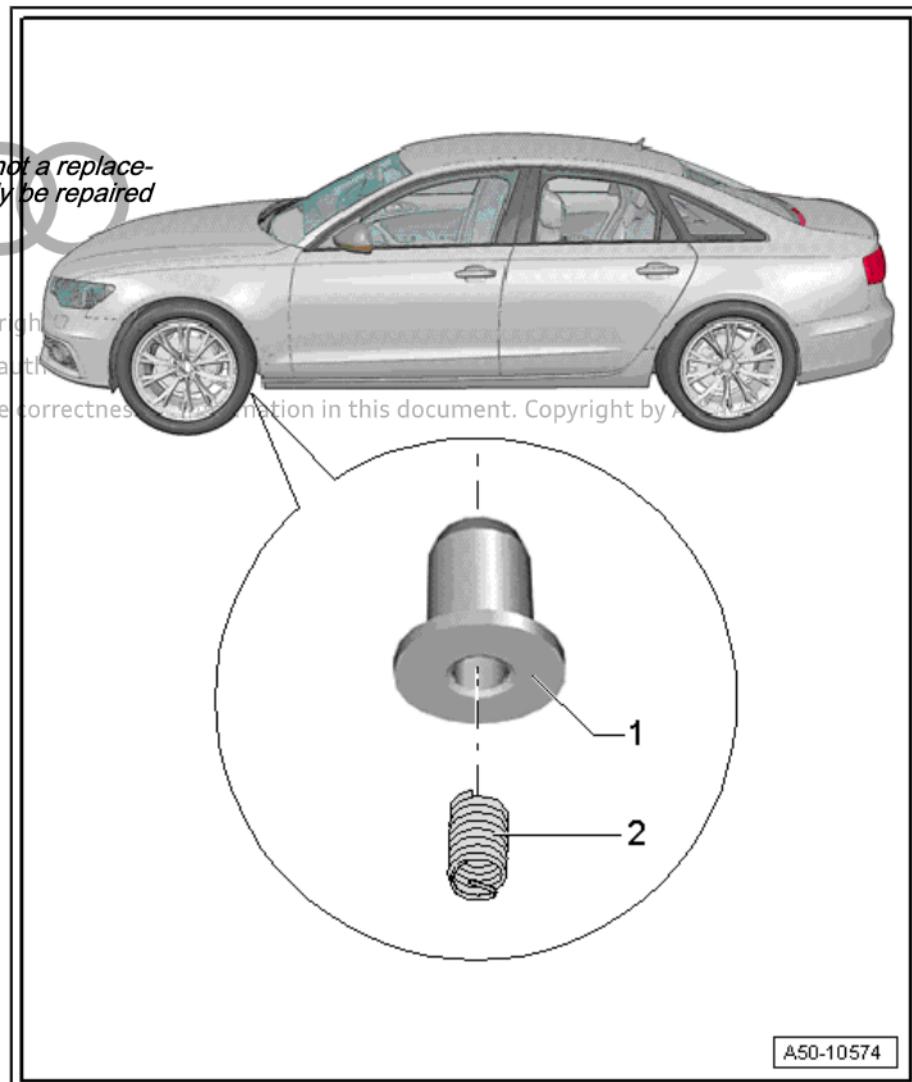

Contents of thread repair kit

- 1 - Drill bit Ø 12.5 mm
- 2 - Thread tap M 12 x 1.5
- 3 - Fitting spindle
- 4 - Thread insert M 12 x 1.5 x 24 (-VAS 6058/1-)
- 5 - Pin breaker with magnetic tip

Protected by copyright. Copying for private commercial purposes, in part or in whole, is
 permitted unless otherwise indicated. AUDI AG does not guarantee or accept any liability
 with respect to the correctness of information contained in this document. Copyright by AUDI AG.

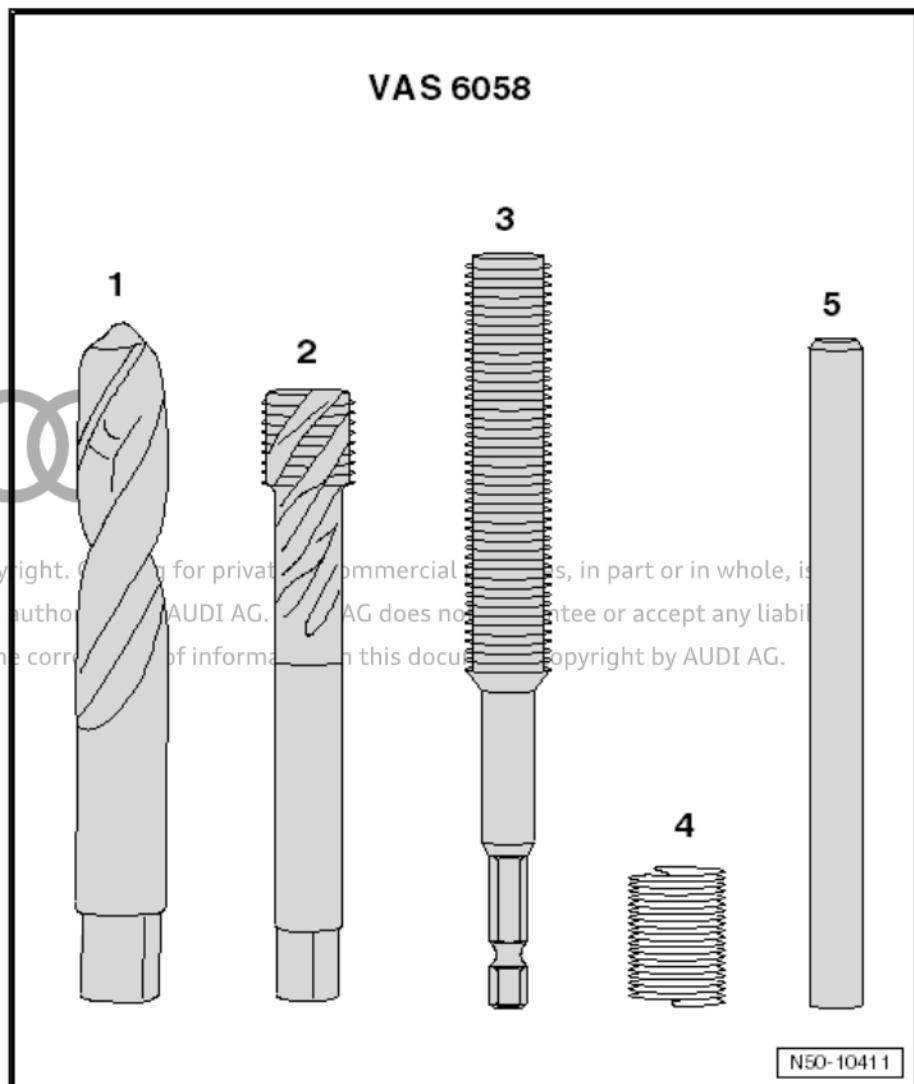


N50-10411

Repairing thread

Making drilling for thread


- Drill hole for thread using drill bit (twist drill).

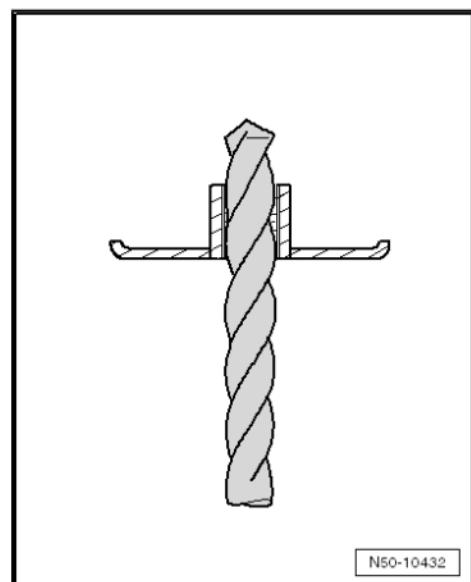

N50-10432

 Note

- ◆ Use drill - VAS 6267- for drilling and cutting.
- ◆ The drill must be supported by a second mechanic using the additional handle.
- ◆ Take care to keep the drill straight.

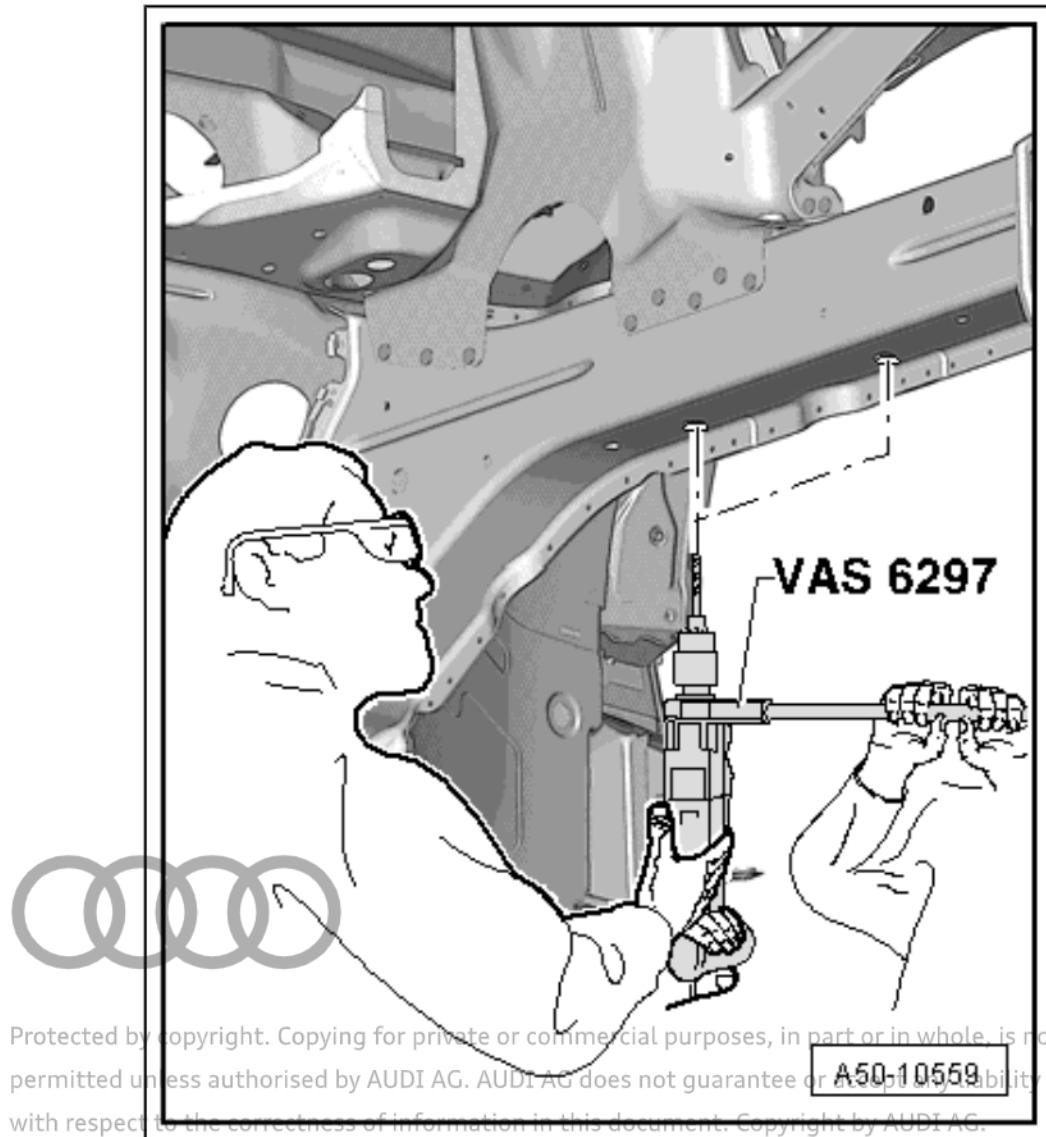


Cutting thread

 CAUTION

Always wear eye protection when cutting the thread and blowing out the threaded drilling.


- Cut thread using thread tap.

Fitting thread insert

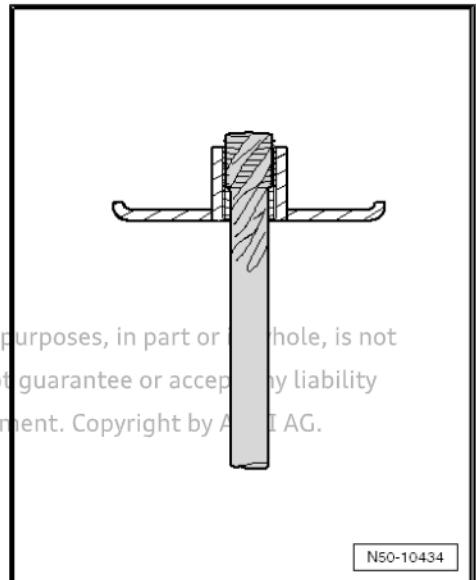

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

- Screw thread insert -3- onto fitting spindle until driving pin -2- on thread insert makes contact with driving lug -1- on fitting spindle.

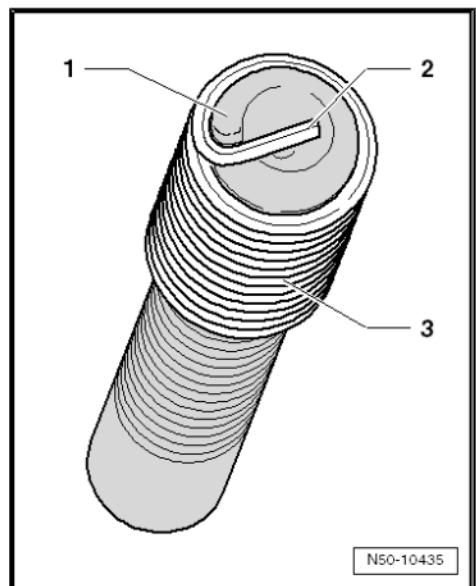

- Blow out threaded drilling with compressed air.



Note


The thread insert should screw in easily.

- Screw thread insert into threaded plate until it is flush with outside of threaded plate (visual check).


C
C

Protect
permitt
with res

s not
lity

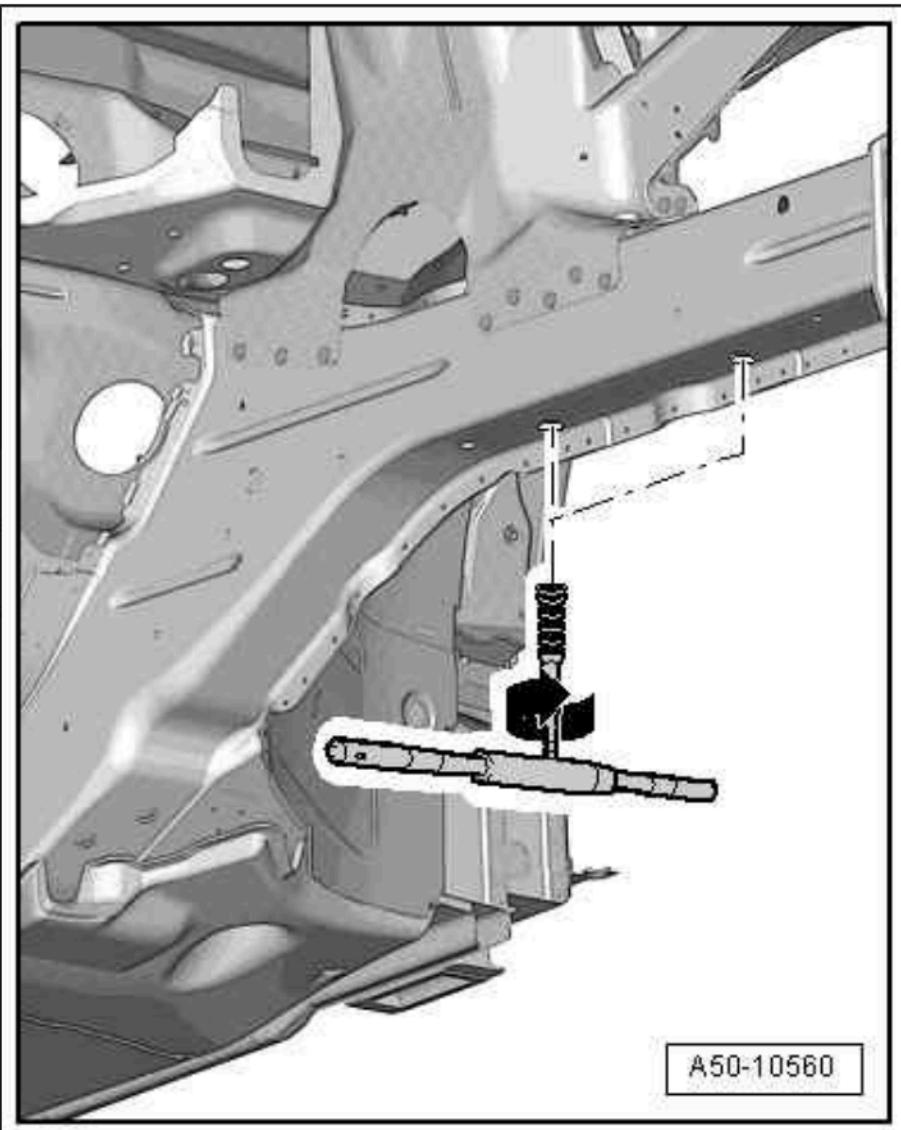

- Then screw in thread insert $\frac{1}{4}$ turn further.
- Unscrew fitting spindle.
- Break off drive pin of thread insert using pin breaker.

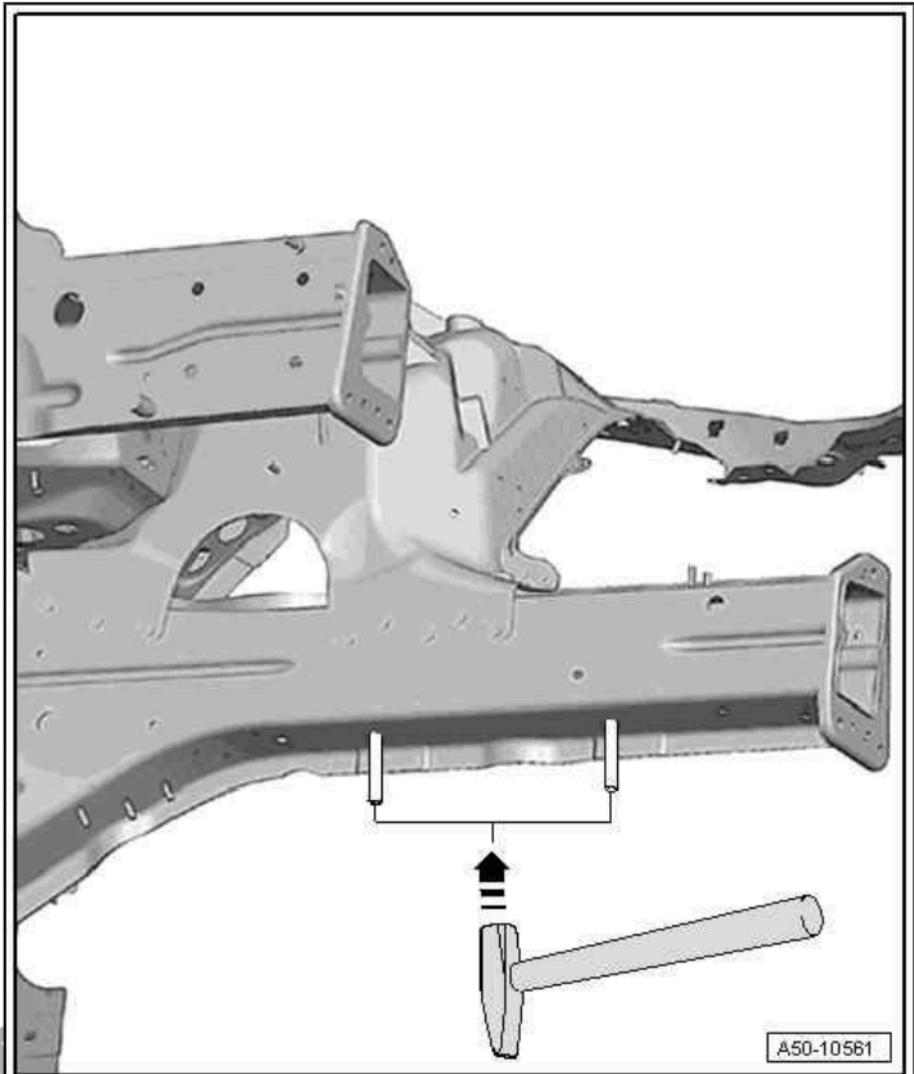

- Install subframe and tighten to specified torque ⇒ Running gear, axles, steering; Rep. gr. 40 ; Subframe, anti-roll bar, suspension links
- Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

51 – Body - centre


- 1 Permitted separating cuts on complete side panel



Note

- ◆ Use only welding equipment approved by AUDI AG.
- ◆ SG continuous weld seams are approved for the separating cuts shown in the illustration.


Separating cuts (Saloon)

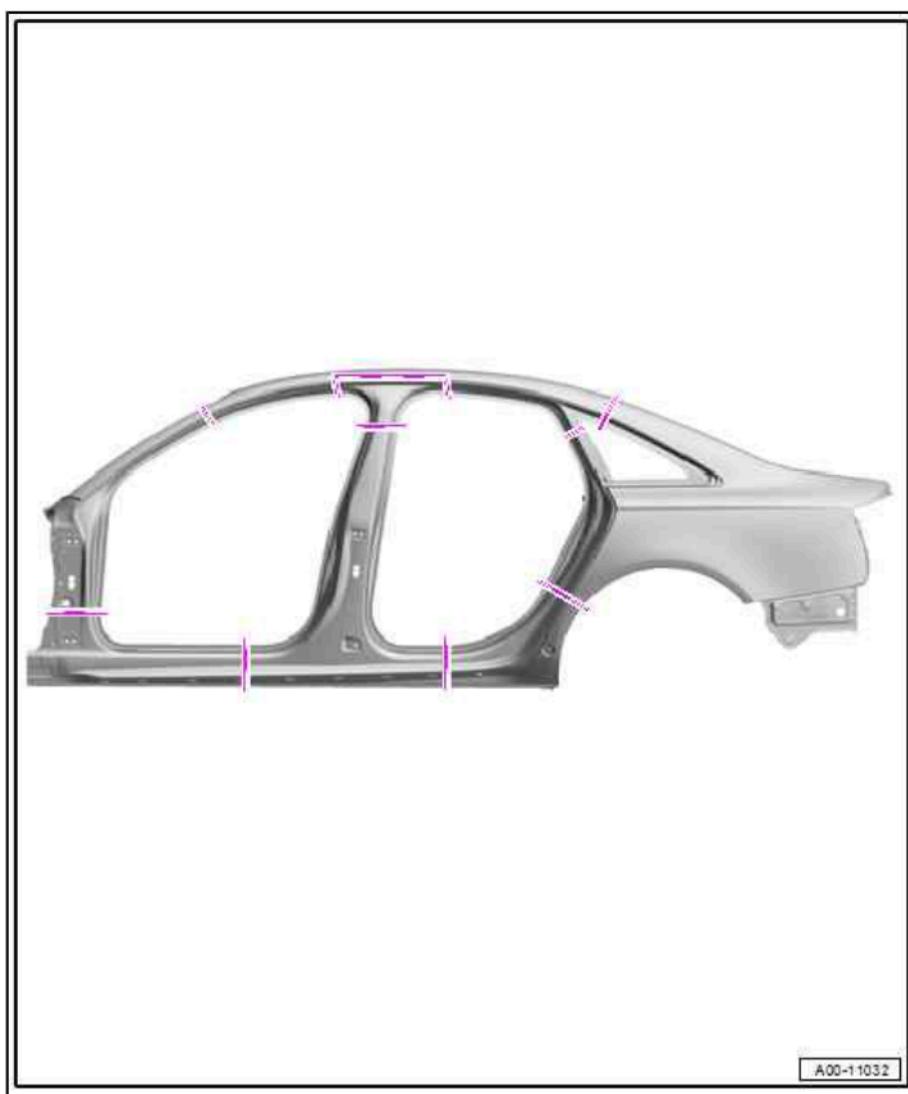

Separating cuts (Avant)



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

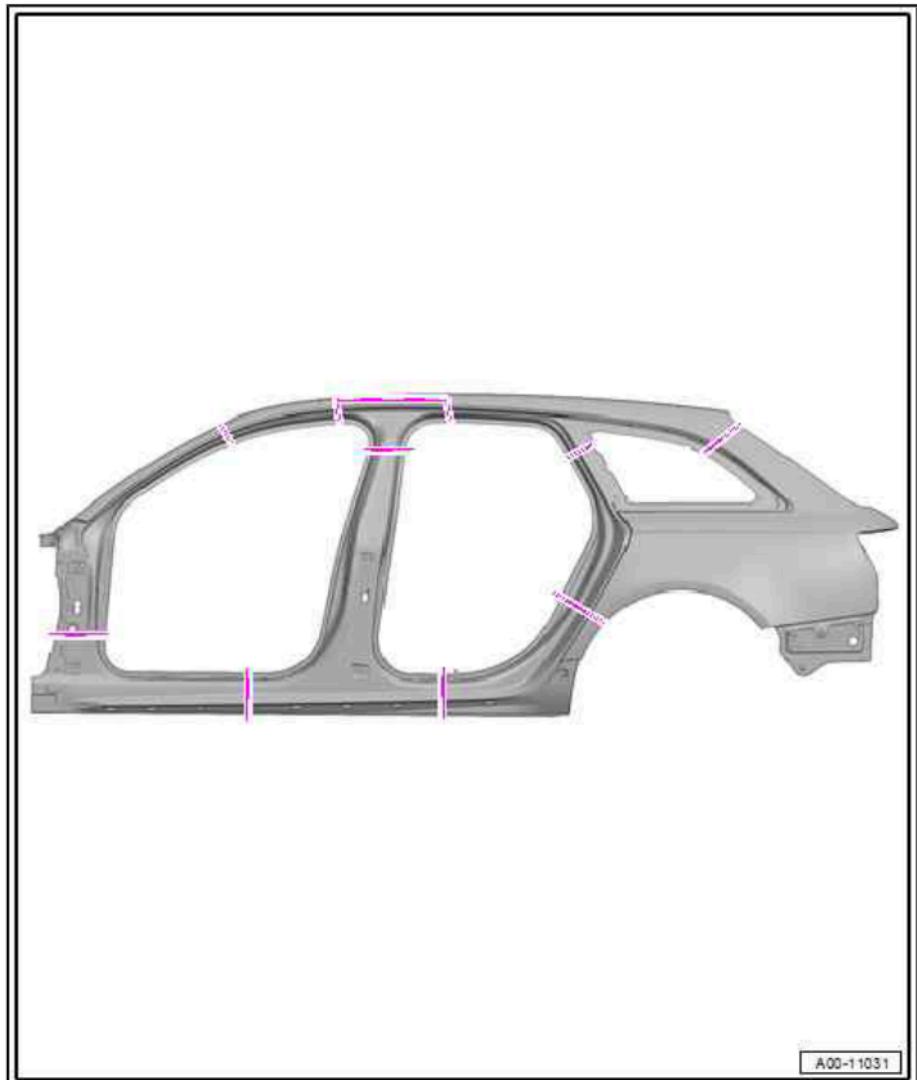

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.


RO: 51 03 55 00

2 Roof - Renewal (Saloon)


1 - Roof

2 - Plasmatron weld seam

3 - Bonded area

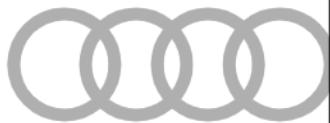

Protected by copyright. Copy
permitted unless authorised
with respect to the correctness

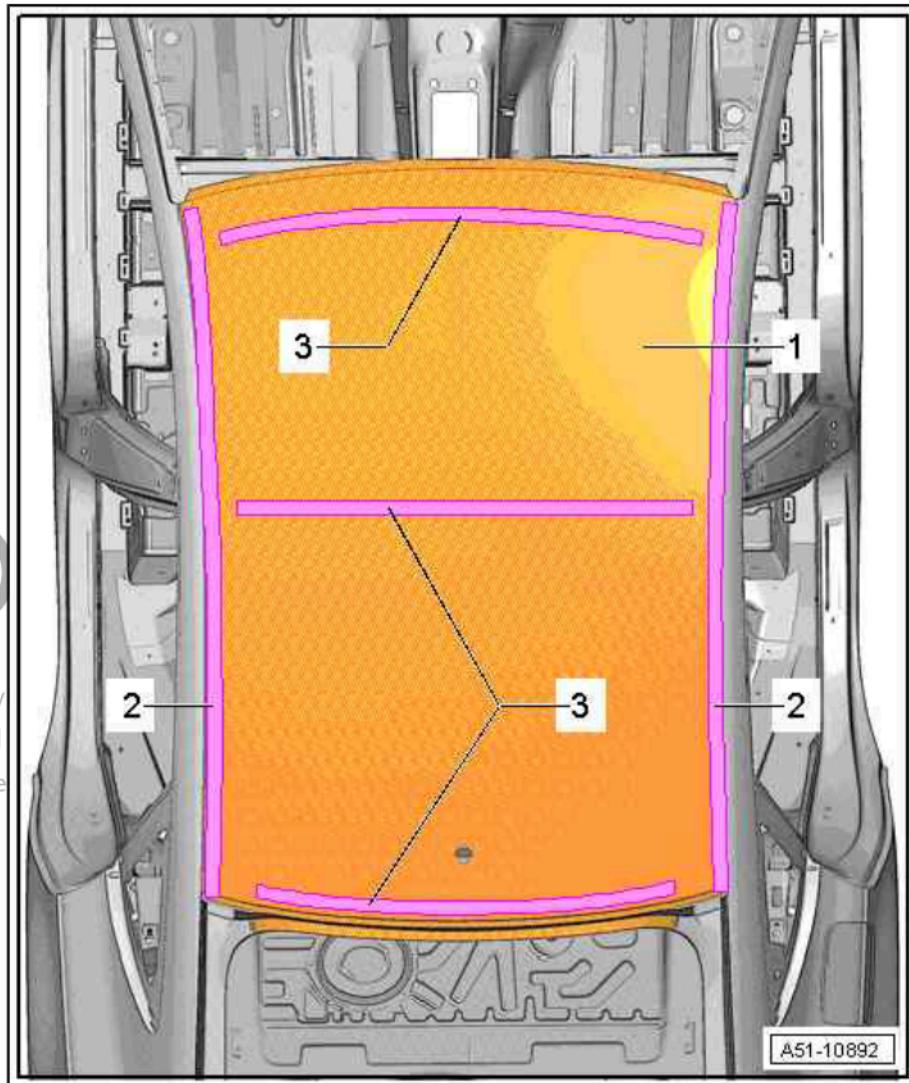

2.1 Notes for vehicles with hybrid drive

[⇒ page 5](#)

2.2 Tools

Special tools and workshop equipment required

◆ Resistance spot welder

◆ Shielded arc welding equipment

◆ Brush grinder

◆ Drill


◆ Spot weld breaker

◆ Body saw

◆ Electric cutter

◆ Mole grips, 18-18

- ◆ Suction lifter or magnet
- ◆ Setting gauge - 3371-
- ◆ Compressed-air gun - V.A.G 1761/1-
- ◆ Tensioning strap - T 10038-
- ◆ Double cartridge gun - VAS 6453-
- ◆ Double cartridge gun - VAS 5237-

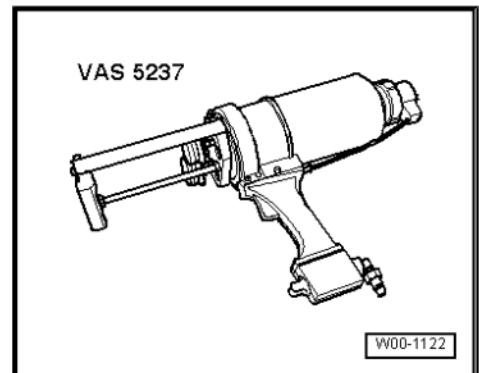

Tools approved by AUDI AG must be used to ensure correct results when carrying out repair work [⇒ page 54](#).

1 - 2-component window adhesive - DA 004 660 M2 -

- Open cap.

2 - Static mixer


3 - Extension hose

Part number 000 809 937

- Screw onto static mixer
-2- with adapter -4-.

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

The adapter is required for injecting the 2-component window adhesive!

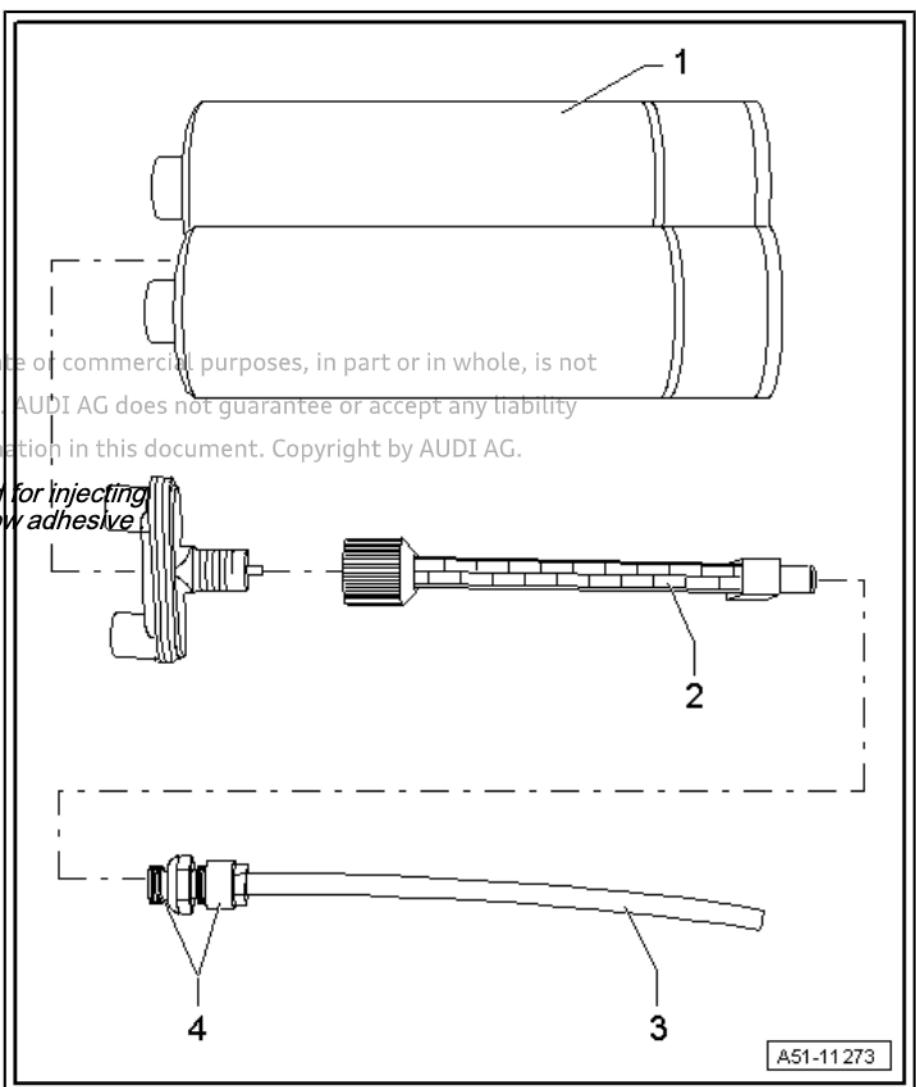


Instructions for using extension hose for window adhesive



- Take static mixer out of window adhesive kit.



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

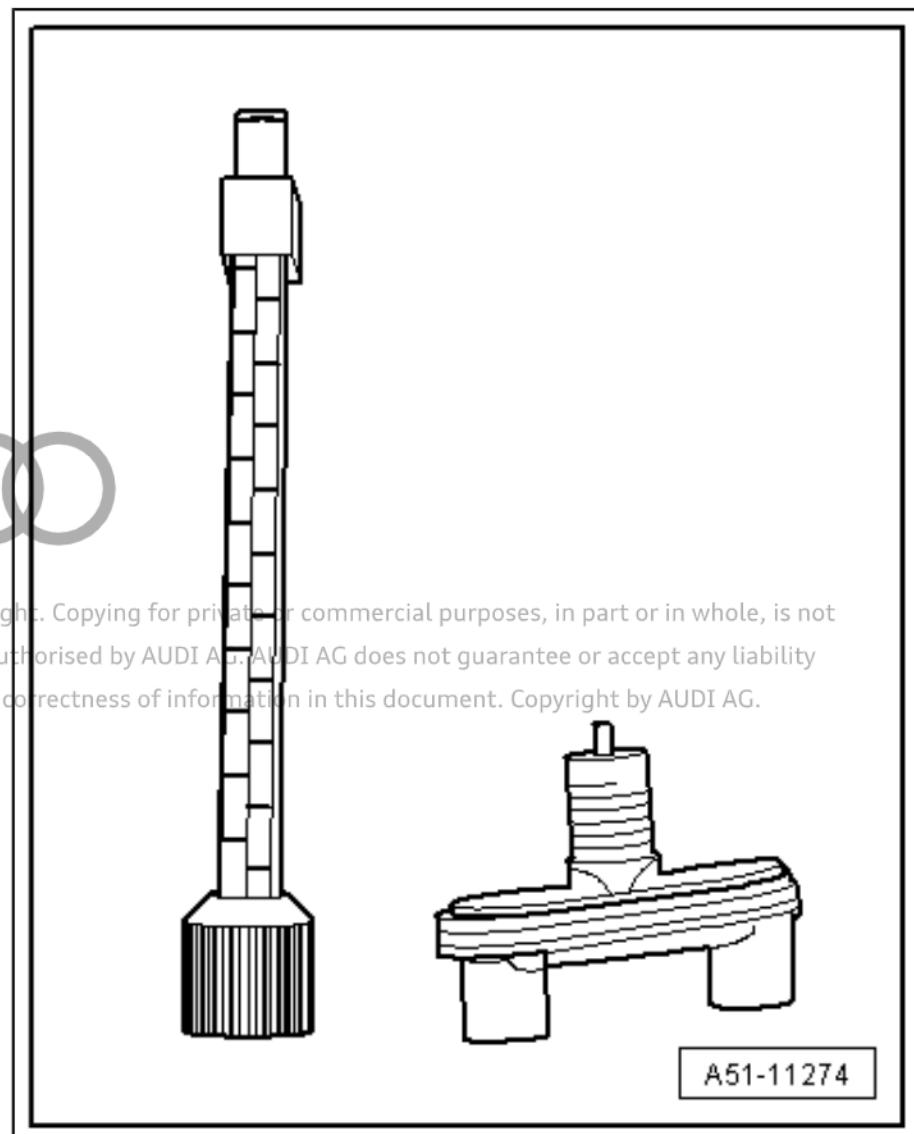

- Remove front cap from static mixer.

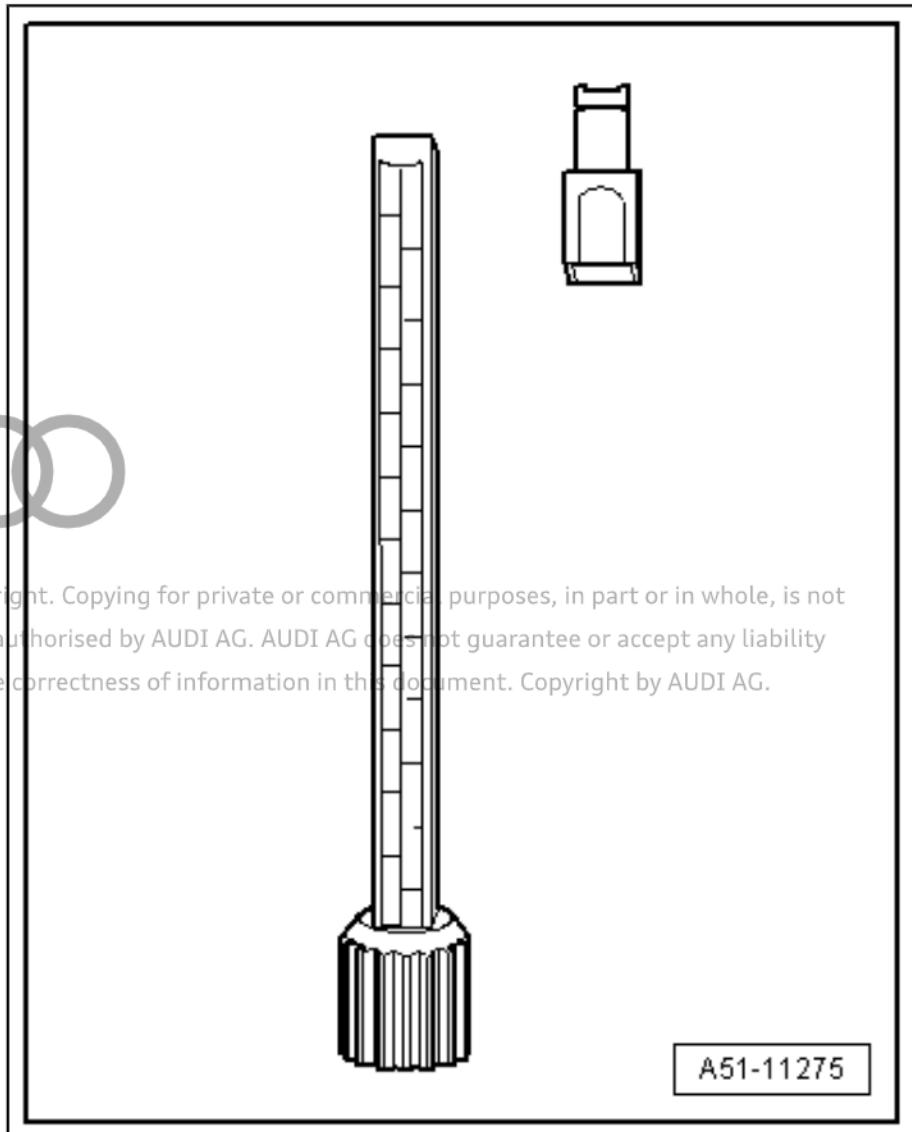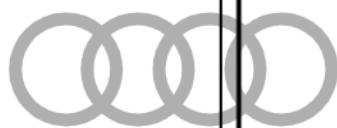


A51-11275

- Drill out opening in static mixer -a- to 9 mm Ø using drill .




Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

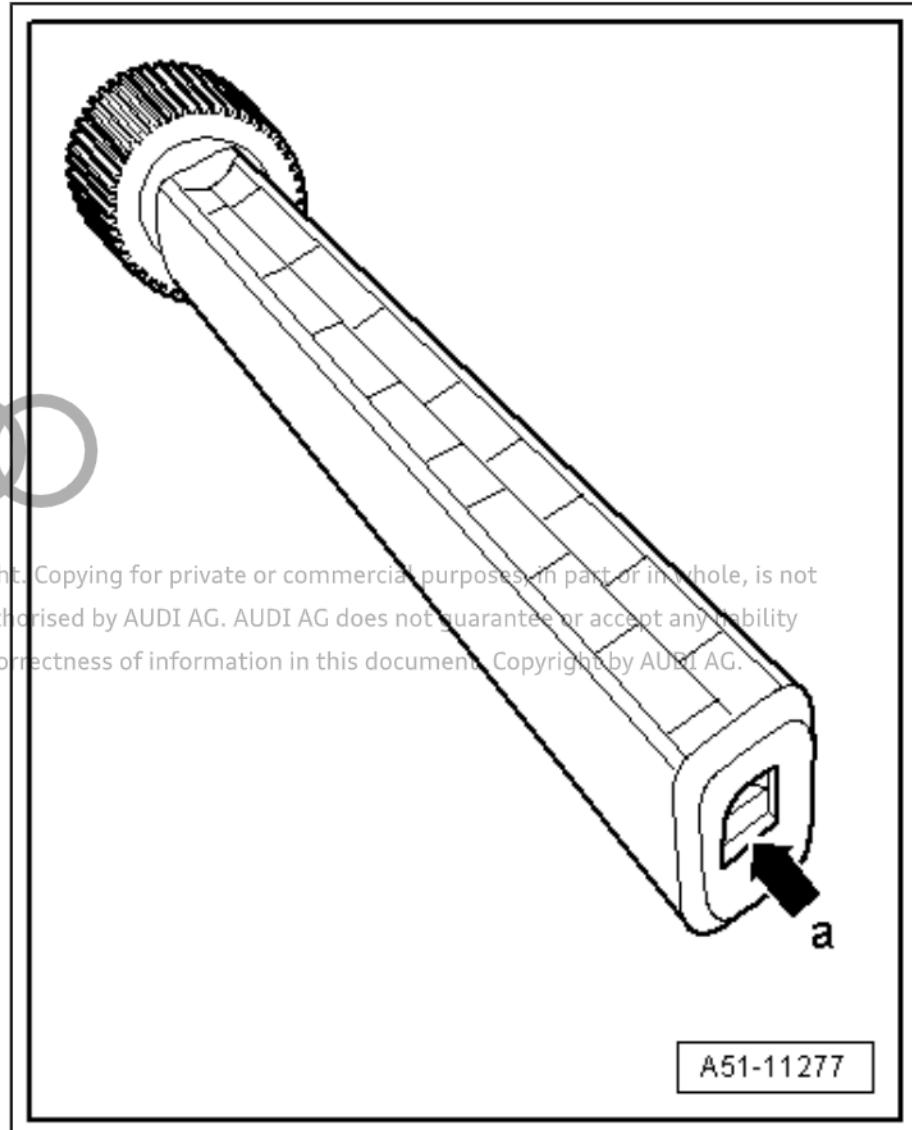

A51-11277


- Shorten inner section of mixer so that hose can be screwed in fully.

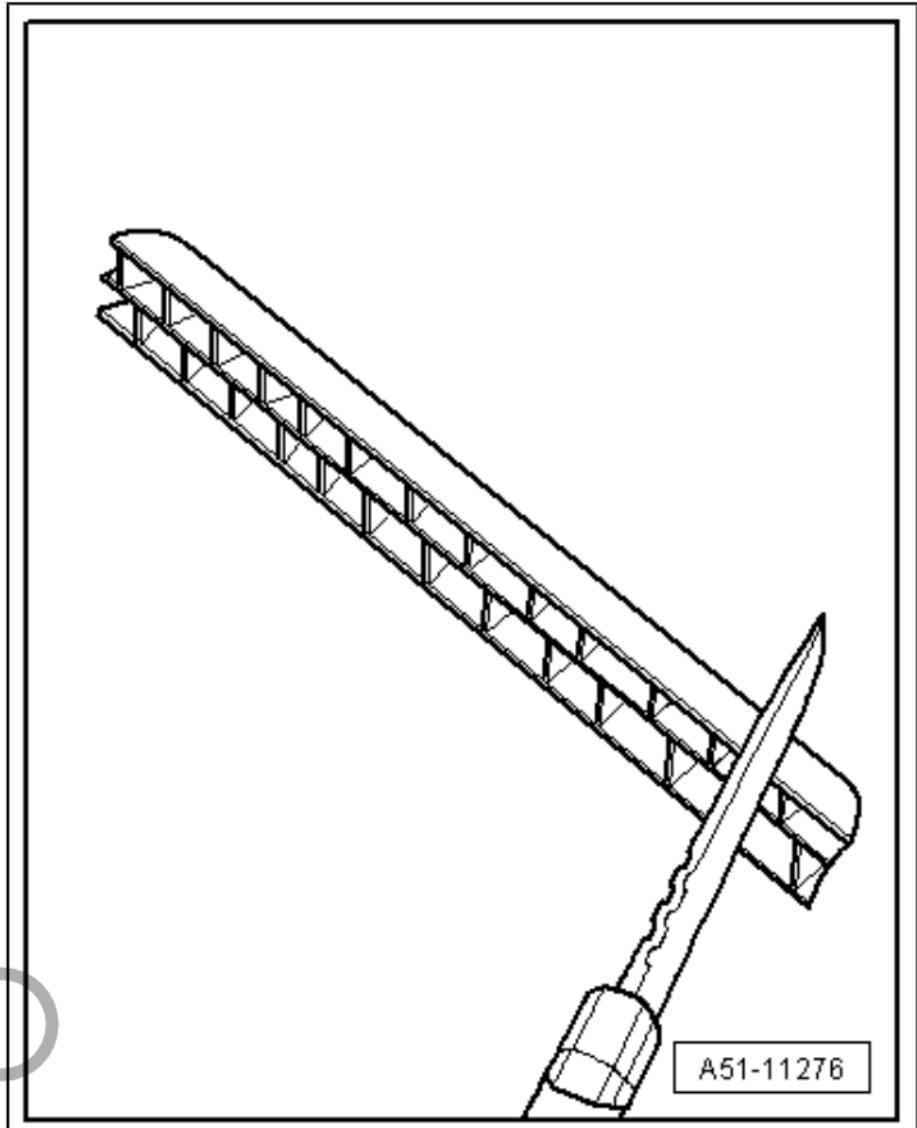

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not
permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability
– **Screw extension hose onto mixer.**
with respect to the correctness of information in this document. Copyright by AUDI AG.



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

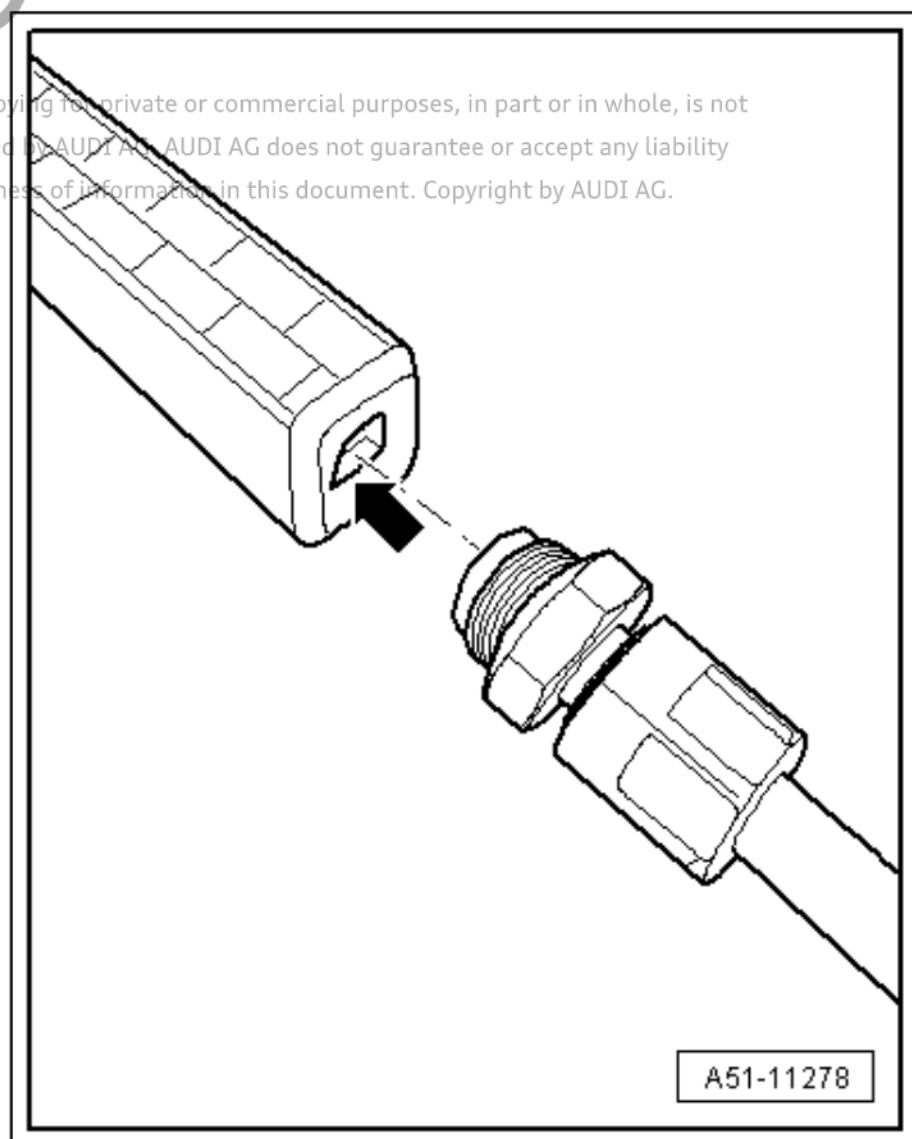


2.3 Procedure

Cutting locations

- Roughly cut out roof parallel with plasmatron weld seam -1- at a distance of approx. 30 mm using body saw .
- Separate original joint to windscreen opening and rear lid opening using spot weld breaker .
- Working from passenger compartment, separate bonded joints between roof and roof cross members using electric cutter - V.A.G 1561 A- .




Protected by copy
permitted unless a
with respect to the

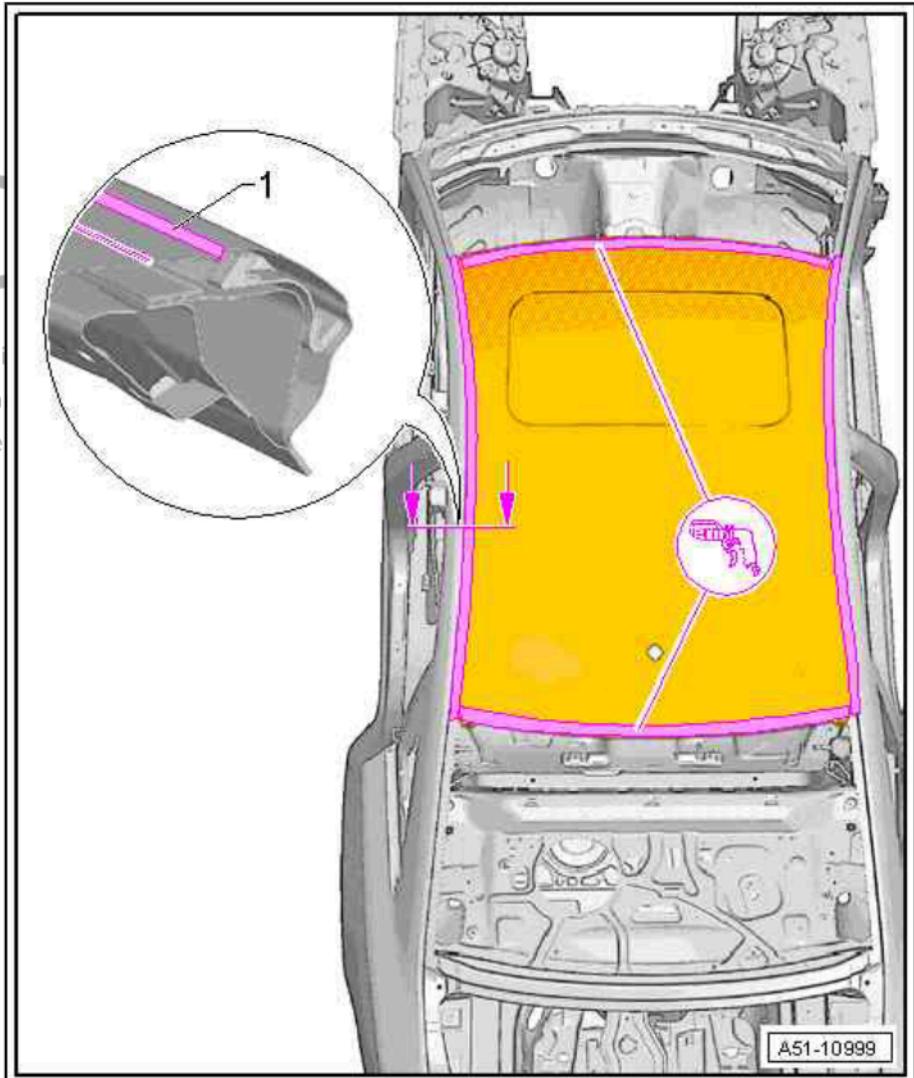

Note

Take care not to damage the roof side members when making cuts and when moving the remaining sections of the roof up and down.

- Make cuts in remaining sections of roof using tin snips - VAS 5357- .
- Take hold of remaining sections with pliers and break open plasmatron weld seam by pulling up and down.

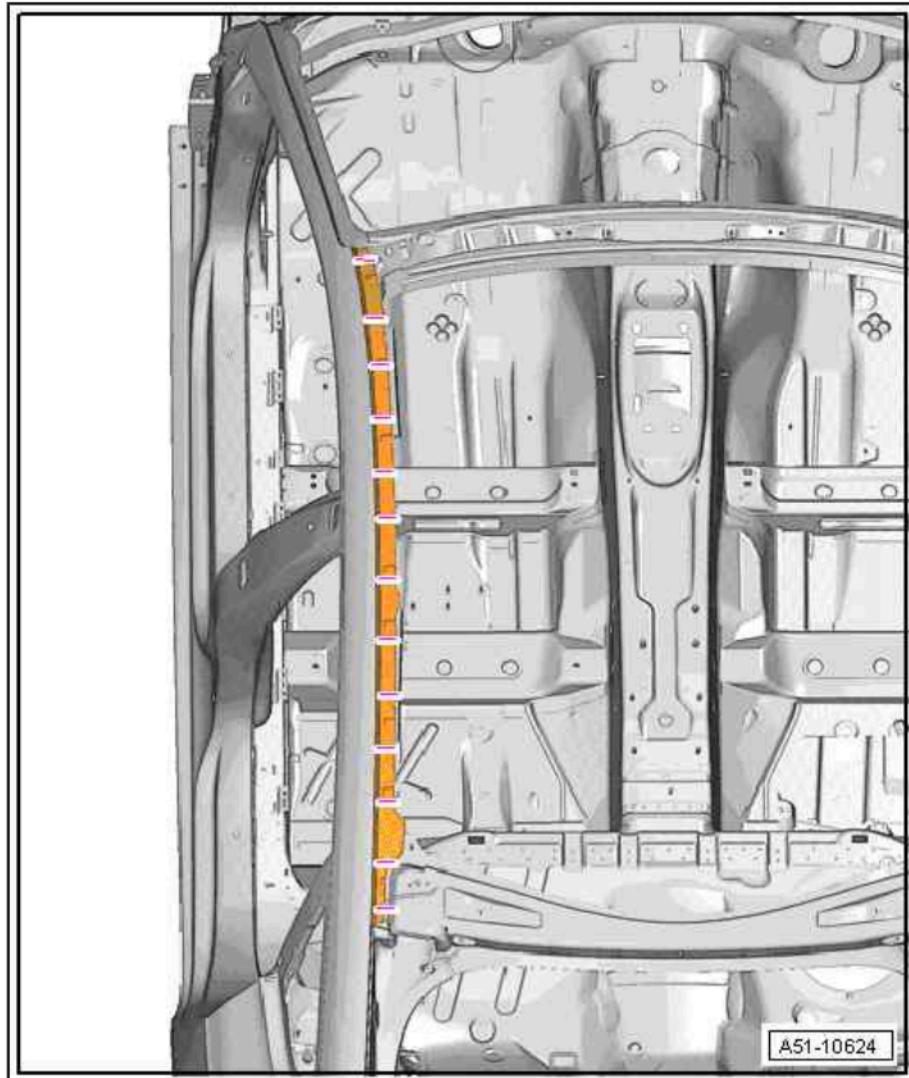

 Note

- ◆ Take care not to damage the roof side members -1- when removing the remaining sections of the roof -2-.
- ◆ Use a suitable flap disc; do not use a cutting disc or rough-filing disc.
- Remove remaining material using compact angle grinder .
- Remove all residual adhesive and sealing compound from roof cross members at front and rear using scraper - VAS 5448- .
- Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.




Protected by copyright.

permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability

Replacement parts with respect to the correctness of information in this document. Copyright by AUDI AG.

- ◆ Roof
- ◆ Single-component assembly adhesive - D 190 MKD A3 - , 1 cartridge
- ◆ Cleaning solution - D 009 401 04-
- ◆ 2-component epoxy adhesive - DA 180 A00 A2 - , 2 sets of cartridges
- ◆ Glass and paint primer - D 009 200 02-
- ◆ 2-component window adhesive - DA 004 660 M2 - , 3 sets of cartridges

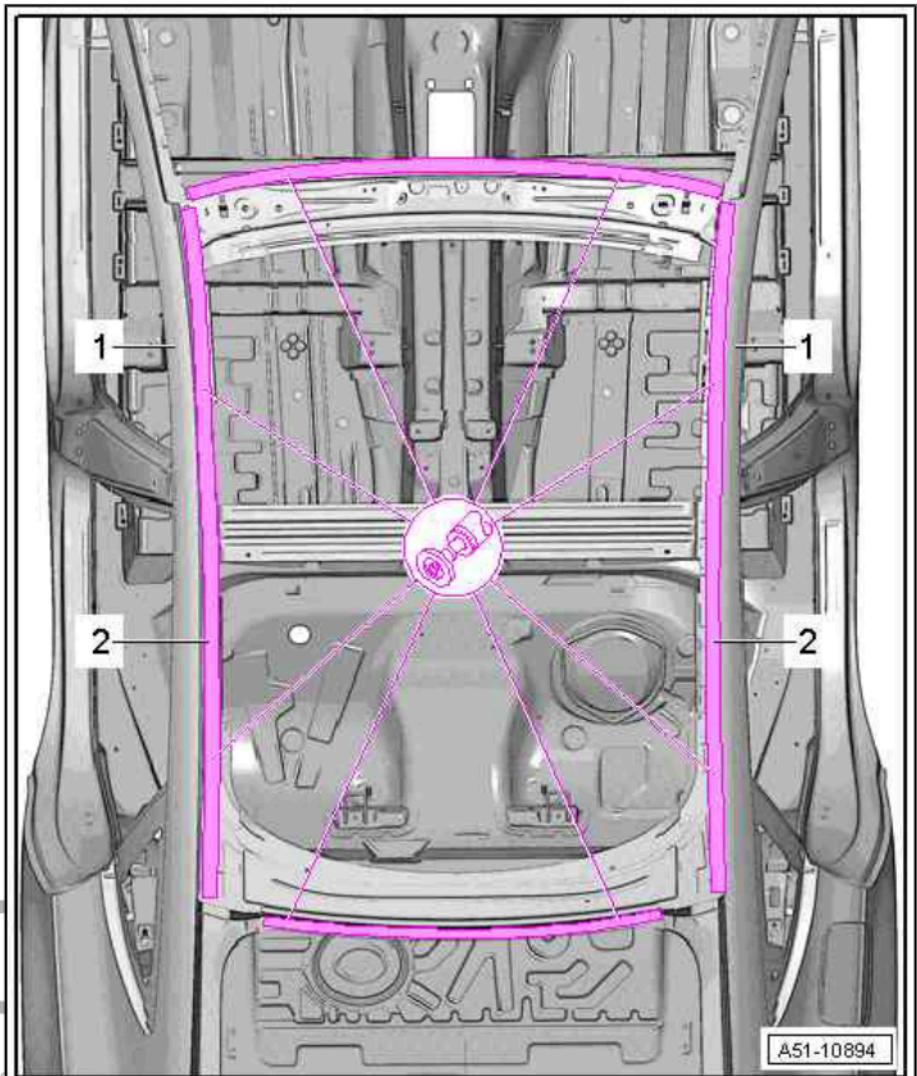

Preparing new part




Note

- ◆ *It is important to keep to the following procedure to ensure a satisfactory and effective roof repair.*
- ◆ *Bonded areas must not be treated with filler coat (surfacer) and painted before bonding in the roof.*
- ◆ *The adhesive materials must be applied very quickly.*
- ◆ *Make sure adhesive is applied before pot life is exceeded.*
- ◆ *Use a pneumatic cartridge gun to apply the bonding materials.*
- ◆ *Affixing adhesive tape to the roof parallel with the bonded seam on the side prevents soiling when bonding.*


Bonding in

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not


- Position roof on roof frame and check alignment of roof with roof side members (visual inspection).
- Check fit of roof with rear lid and windscreens.
- Fix roof in position in windscreen flange and sealing flange of rear lid using one self-tapping screw at each end.
- Remove roof.
- Apply glass and paint primer - D 009 200 02- in area of roof frame -a-.

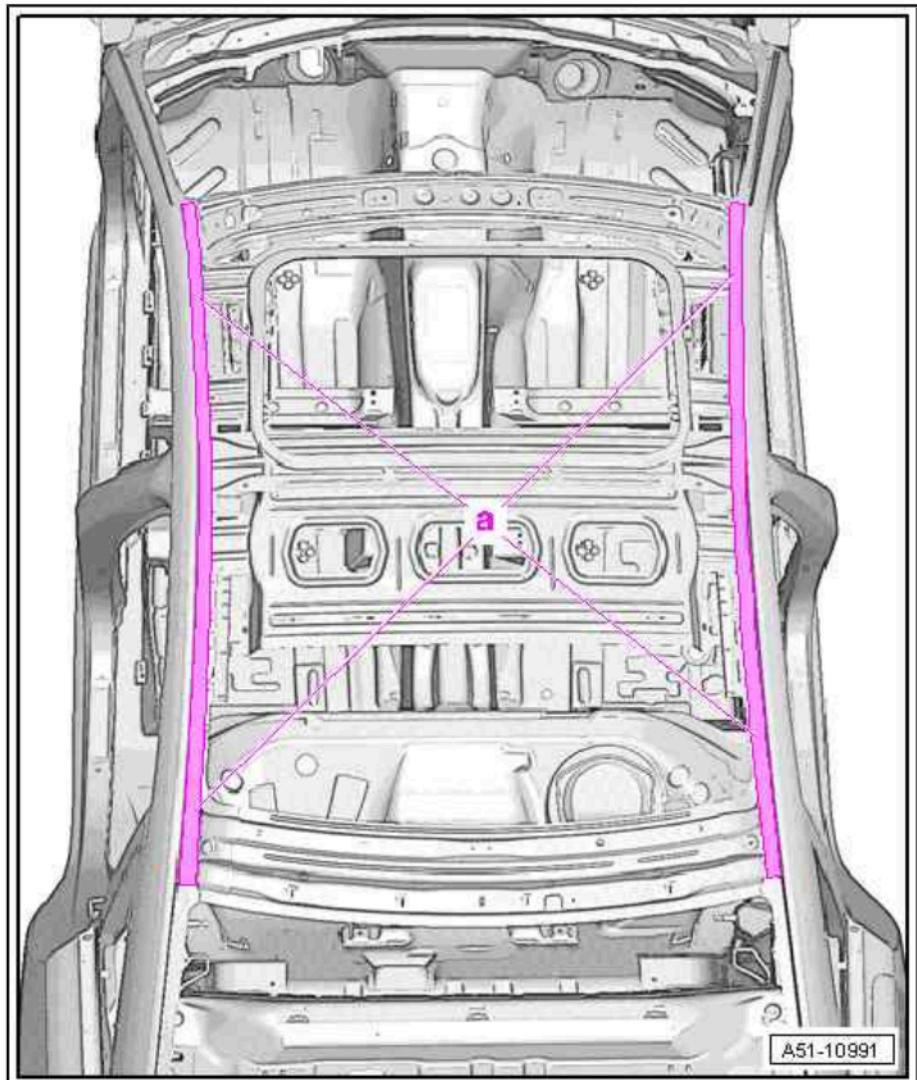

- Apply glass and paint primer - D 009 200 02- approx. 5 cm wide -b- on inner section of roof and inner side flange -a-.

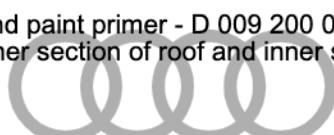


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

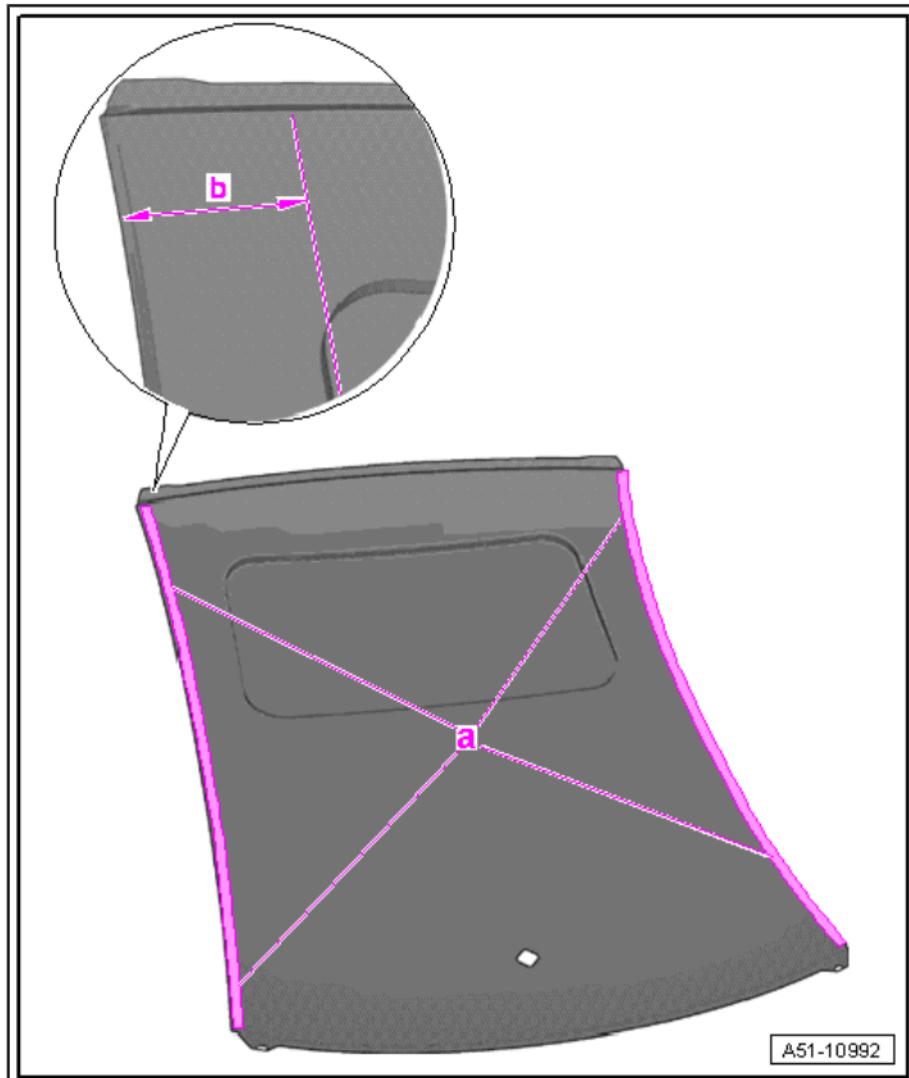


- Cut off approx. 2 mm from nozzle -B- to obtain appropriate bead geometry.

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

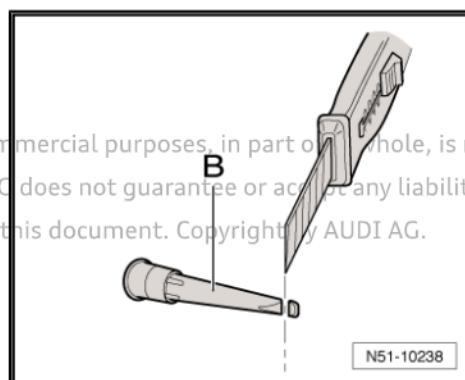

- Apply single-component assembly adhesive - D 190 MKD A3- with pneumatic cartridge gun - V.A.G 1761/1- to rear roof cross member in the area of the factory bonding location.

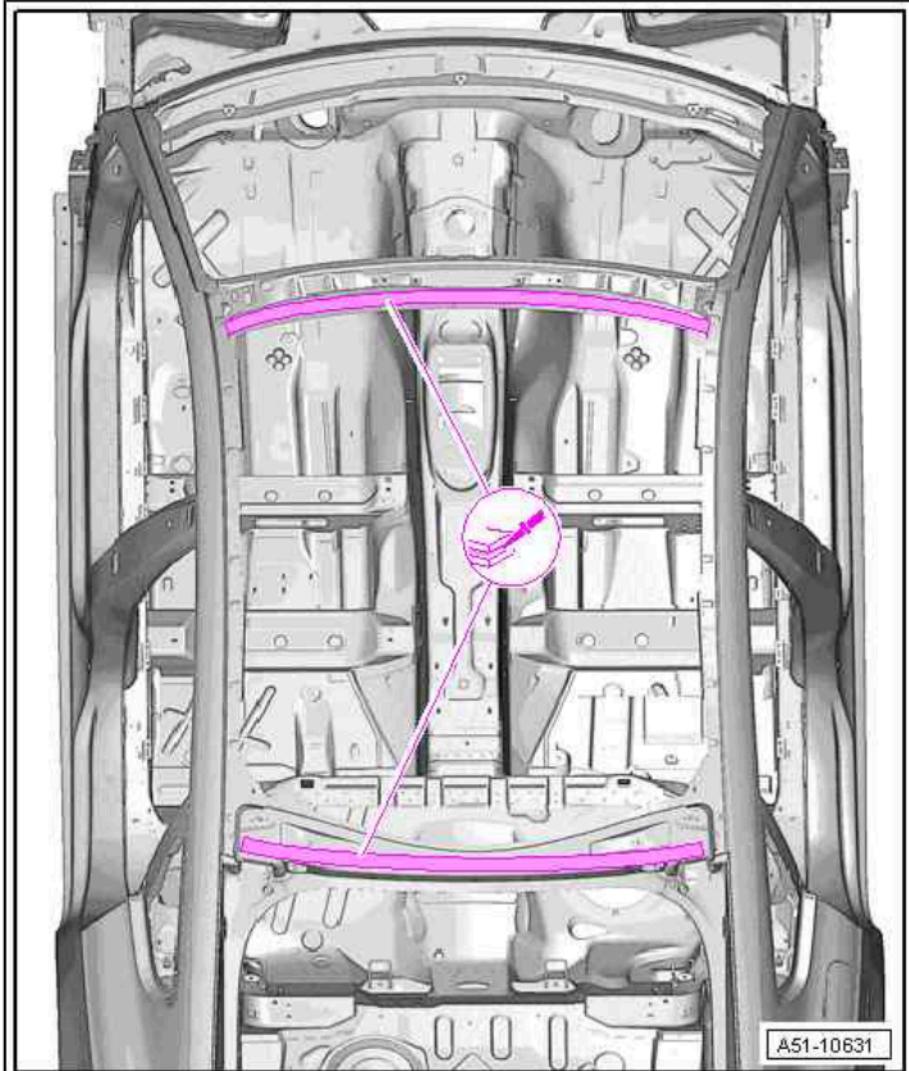

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not

permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability


Preparing new part
with respect to the correctness of information in this document. Copyright by AUDI AG.

- Cut static mixer from 2-component epoxy adhesive set - DA 180 A00 A2- down to 4th notch to obtain required bead cross section.




Note


- ◆ The pot life of the 2-component epoxy adhesive - DA 180 A00 A2- is roughly 90 minutes.
- ◆ A second mechanic is required for the next steps.

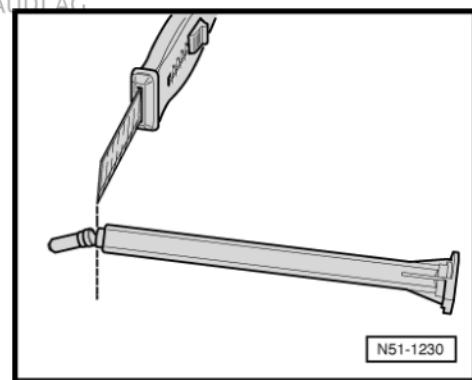

- Apply continuous bead -1- of 2-component epoxy adhesive - DA 180 A00 A2- to bevelled sections of roof side members using double-cartridge gun - VAS 6453- .

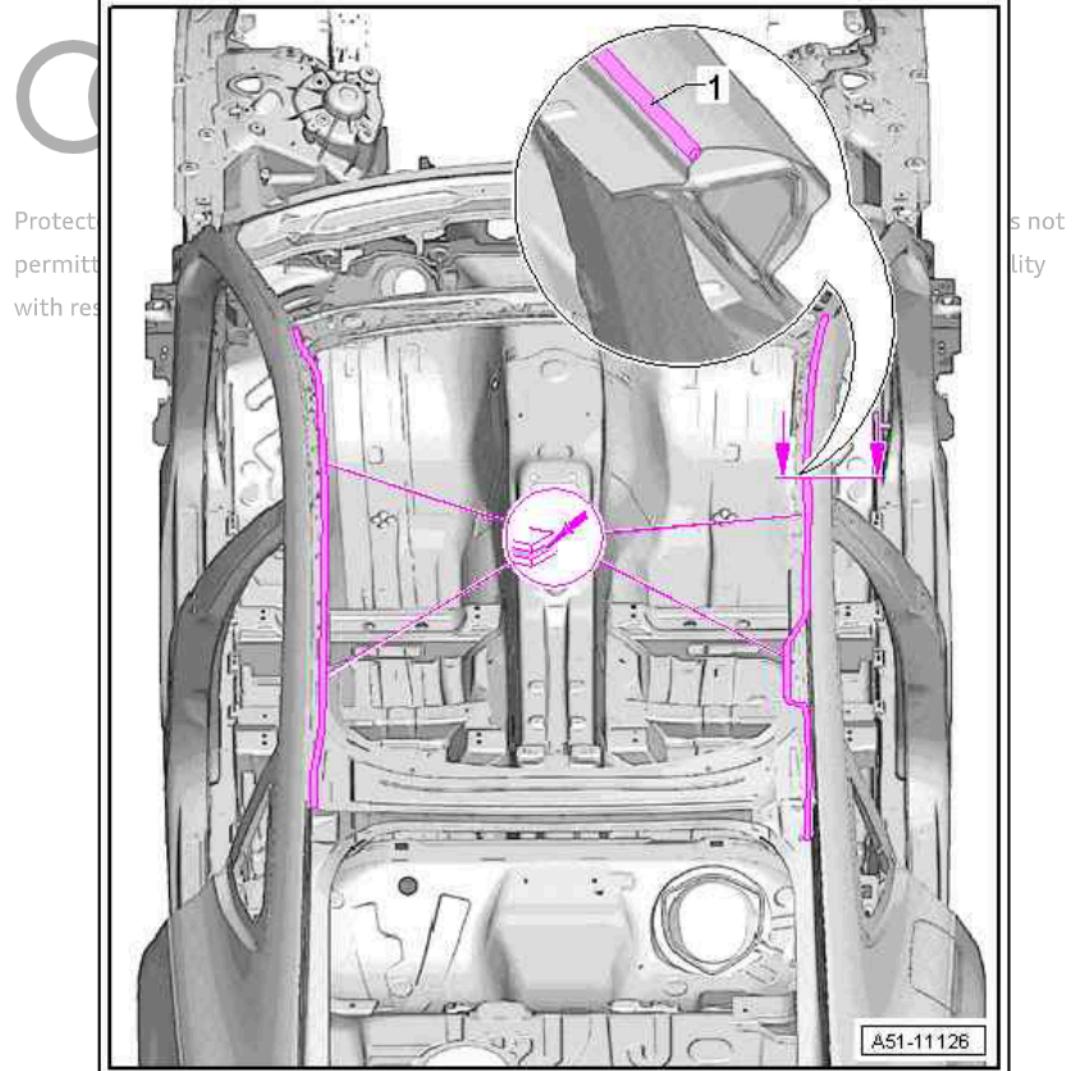

- Apply one continuous bead of 2-component epoxy adhesive - DA 180 A00 A2- to side flanges of roof using double cartridge gun - VAS 6453- .

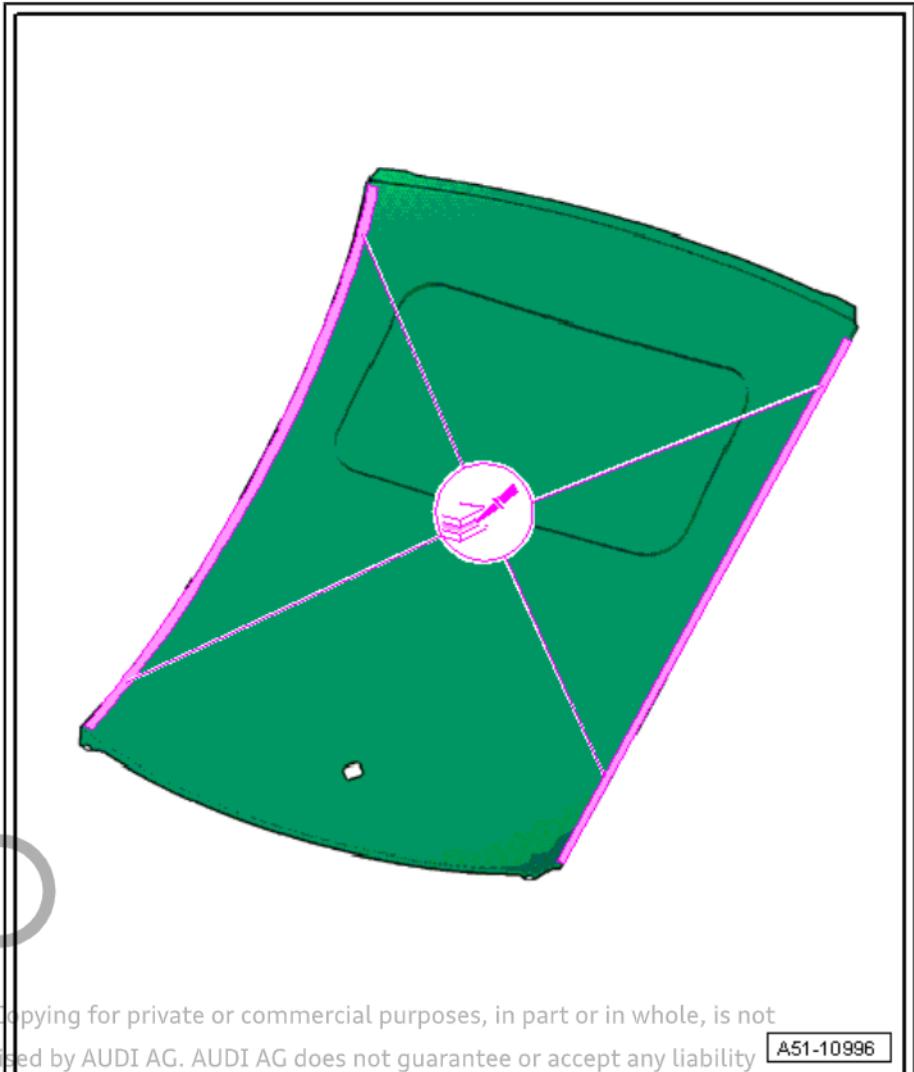

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

A51-10996


- Immediately fit and align roof.
- Use one self-tapping screw at each end to fix roof in position in centring hole in windscreens flange and sealing flange for rear lid.
- Fix roof in position at windscreens opening and rear window opening using mole grips, 18-18 - VAS 5430/1- .

Adjusting roof depth

- Additionally fix roof in position with two tensioning straps - T 10038- -1-.
- Set required depth using e.g. drill bit or suitable wooden spacer -2-.

Depth setting in centre part of front door -a = 3.0 mm -

Depth setting in centre part of rear door -a = 2.5 mm -

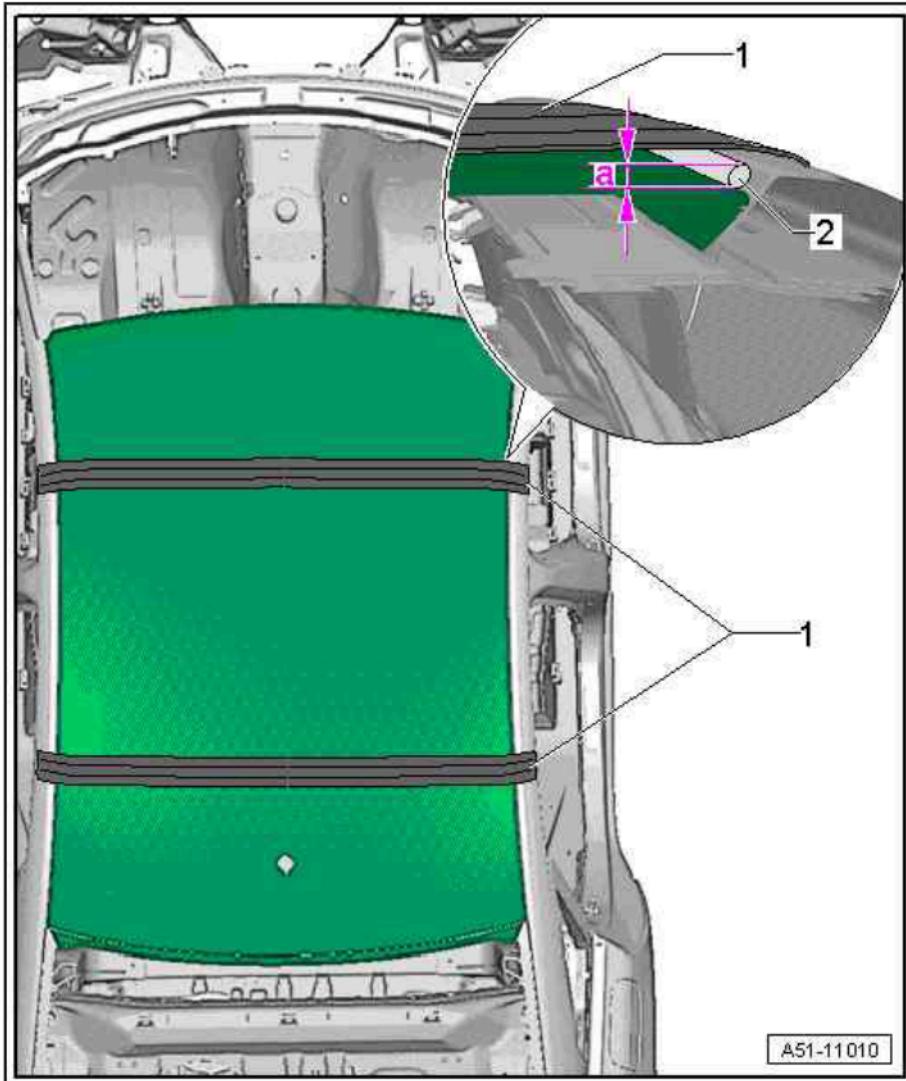

- Roughly spread any 2-component epoxy adhesive - DA 180 A00 A2- that comes out at edge of roof.

⚠ CAUTION

Allow bonded joint on roof to harden for 60 minutes at approx. 65 °C using radiant heater. Check temperature constantly with temperature sensor.


i Note

Due to the different types of steel and panel thicknesses employed, one of the resistance spot welding units listed in this manual and approved by Audi must be used to ensure correct results when spot welding.

Welding in


Weld in roof at front and rear using resistance spot welder. Protection by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability

with respect to the correctness of information in this document. Copyright by AUDI AG.

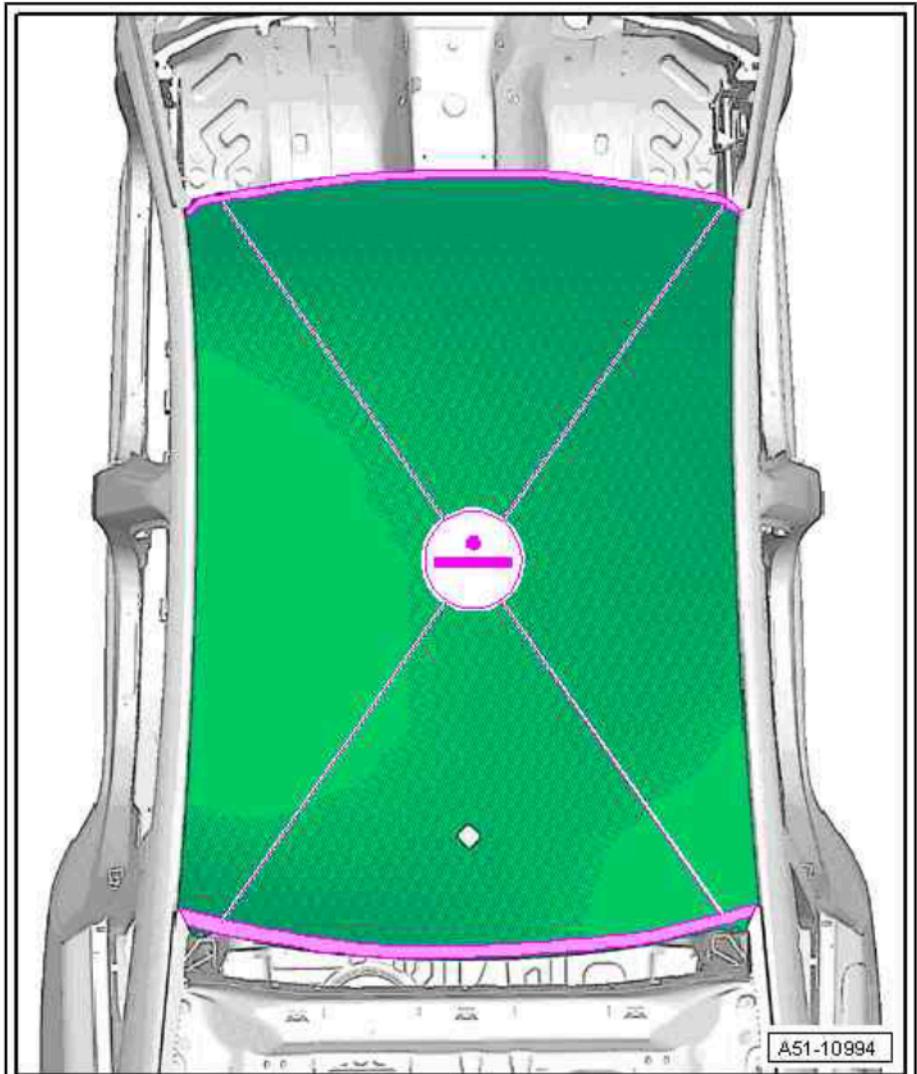

Protected by copyright. Copying for
permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability
with respect to the correctness of information contained in this document. Copyright by AUDI AG.
Weld in roof additionally at corners using shielded arc welding equipment : SG continuous seam.

- Grind down SG continuous weld seams using compact angle grinder .

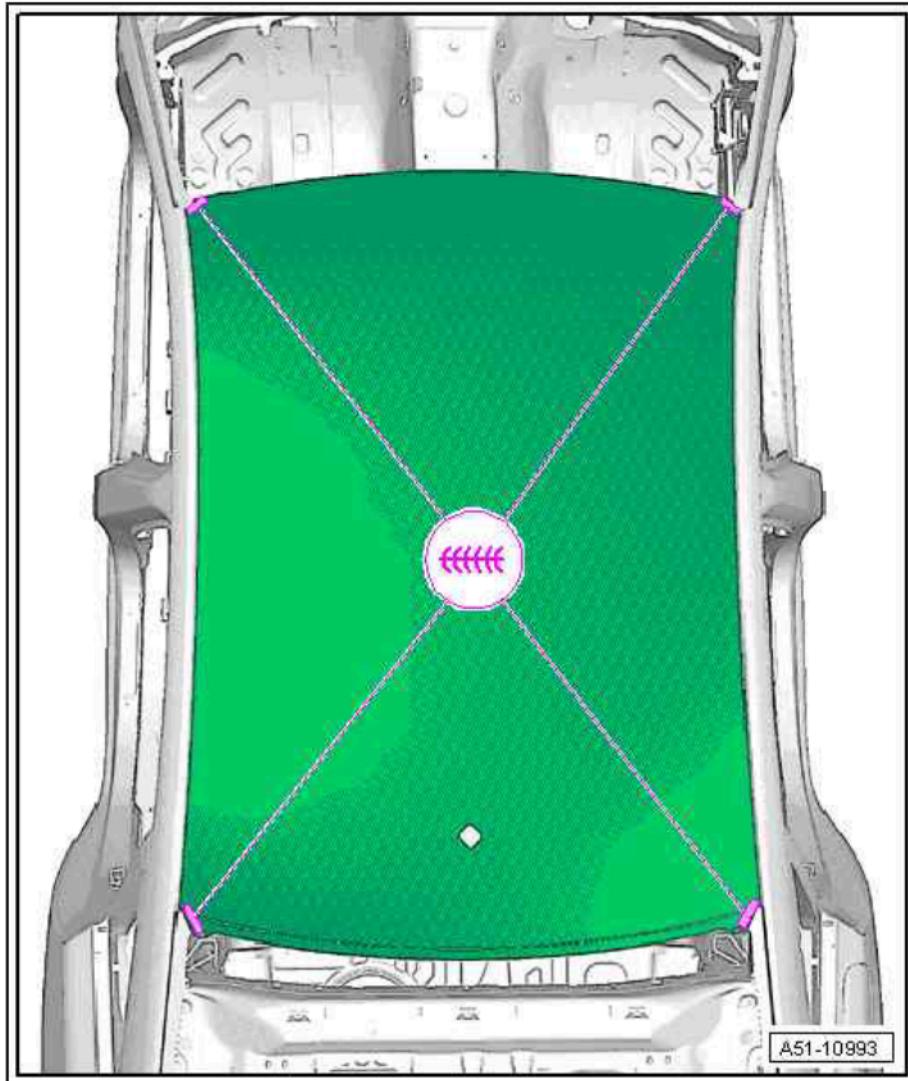


- Grind zero-gap joint -1- into shape (left and right).



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.



Protected by copyright.
permitted unless
with respect to

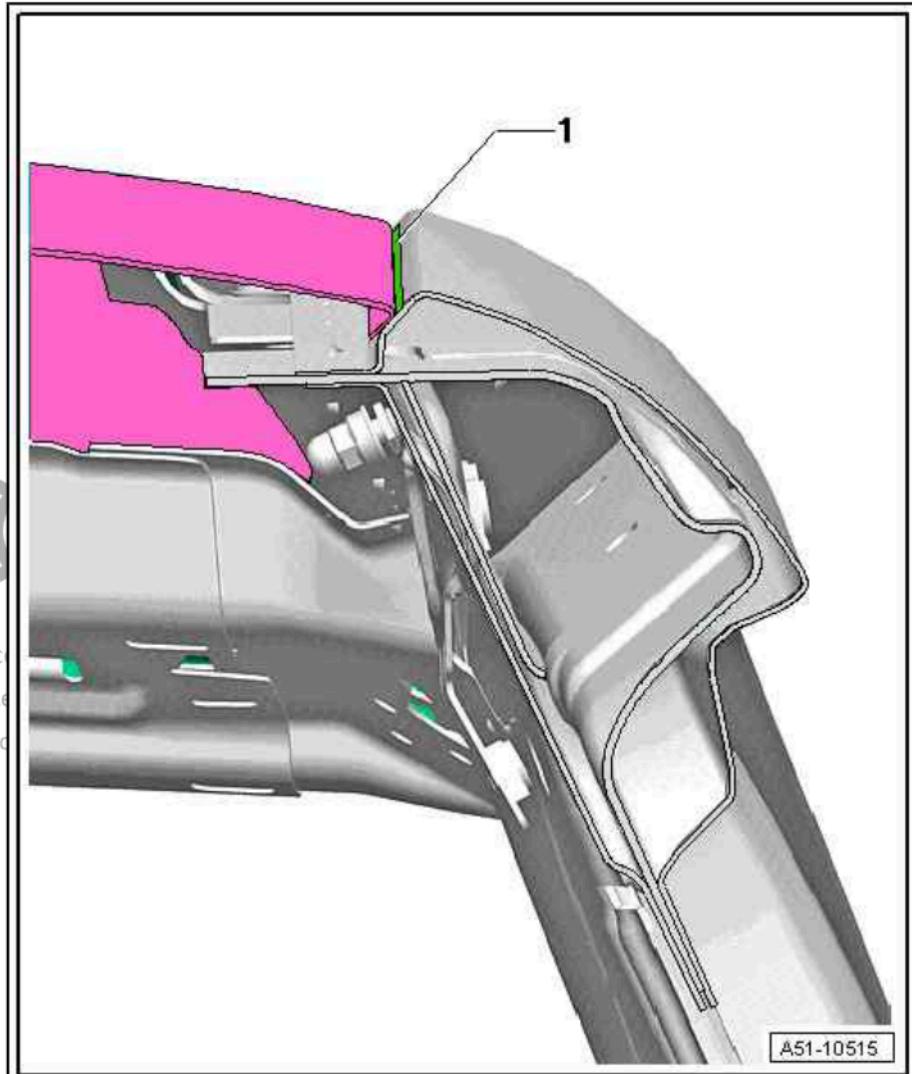

A51-10515




Note

Please note instructions for use: window adhesive should be applied at a temperature of approx. 20°C.

- Apply one cartridge of 2-component window adhesive - DA 004 660 M2 - -3- into each roof side member using double cartridge gun - VAS 5237- .
 - ◆ 1 = 2-component epoxy adhesive - DA 180 A00 A2-
 - ◆ 2 = Glass and paint primer - D 009 200 02-
 - ◆ 3 = 2-component window adhesive - DA 004 660 M2 -



Protected by
permitted un
with respect to

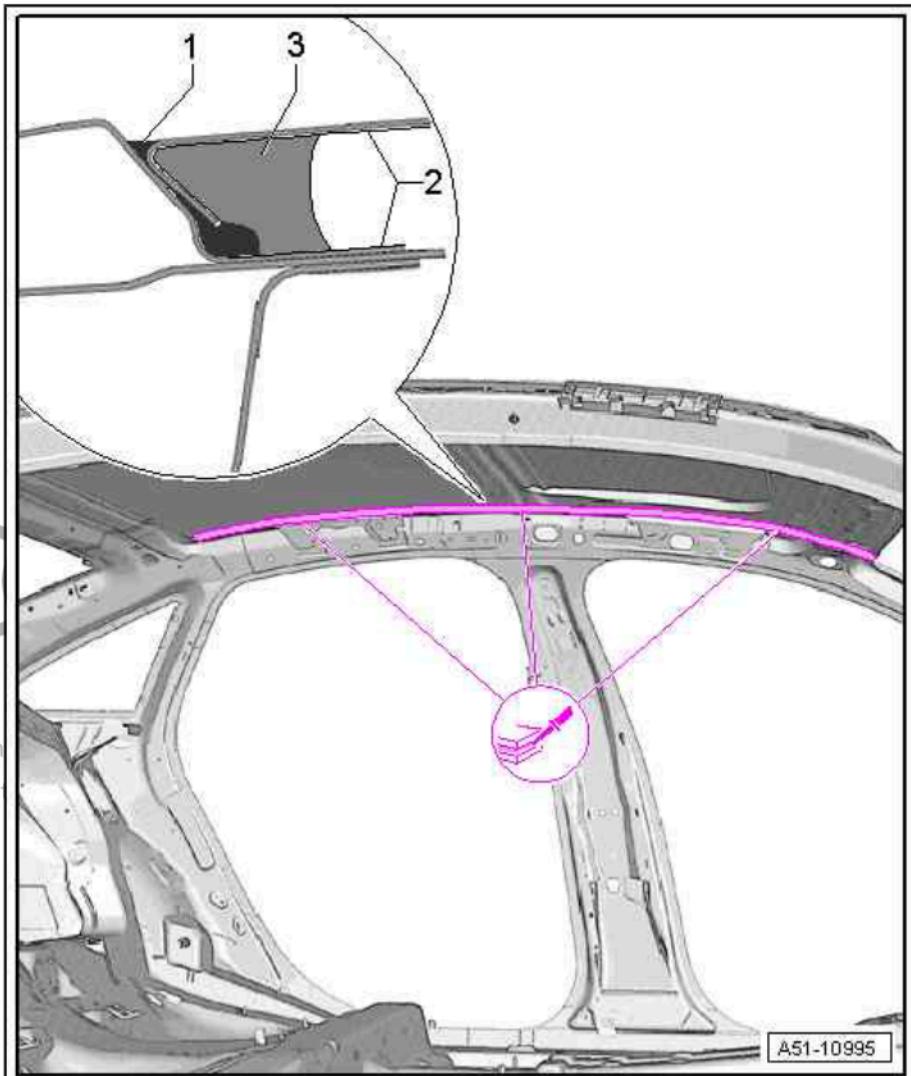

A51-10995

RO: 51 23 55 00


3 Roof - Renewal (Saloon with tilting sunroof)

1 - Roof

2 - Plasmatron weld seam

3 - Bonded area

Protected by copyright. Copy
permitted unless authorised
with respect to the correctness

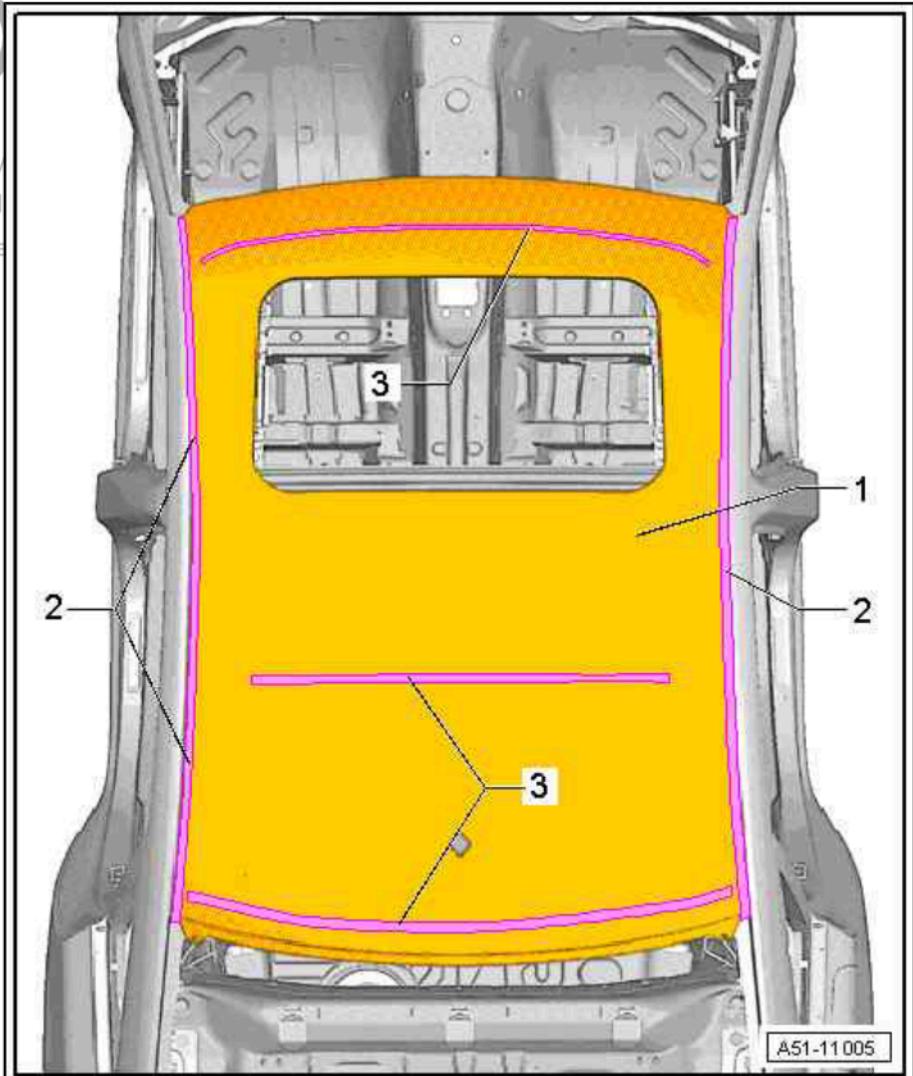

3.1 Notes for vehicles with hybrid drive


[⇒ page 5](#)

3.2 Tools

Special tools and workshop equipment required

- ◆ Resistance spot welder
- ◆ Shielded arc welding equipment
- ◆ Brush grinder
- ◆ Drill
- ◆ Spot weld breaker
- ◆ Body saw
- ◆ Suction lifter or magnet
- ◆ Setting gauge - 3371-

- ◆ Compressed-air gun
- ◆ Tensioning strap
- ◆ Compressed-air gun
- ◆ Electric cutter
- ◆ Mole grips, 18-18
- ◆ Double cartridge gun - VAS 6453-
- ◆ Double cartridge gun - VAS 5237-

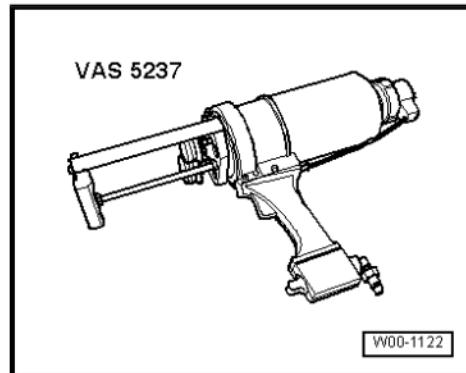

Tools approved by AUDI AG must be used to ensure correct results when carrying out repair work [⇒ page 54](#).

1 - 2-component window adhesive - DA 004 660 M2 -

- Open cap.

Not permitted by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability

2 - Static mixer

- Drill open static mixer with 9 mm Ø drill bit.

3 - Extension hose

Part number 000 809 937

- Screw onto static mixer -2- with adapter -4-.

4 - Adapter




Note

The adapter is required for injecting the 2-component window adhesive - DA 004 660 M2 -.

5 - Union nut

- Screw onto 2-component window adhesive - DA 004 660 M2 - -1- together with static mix-

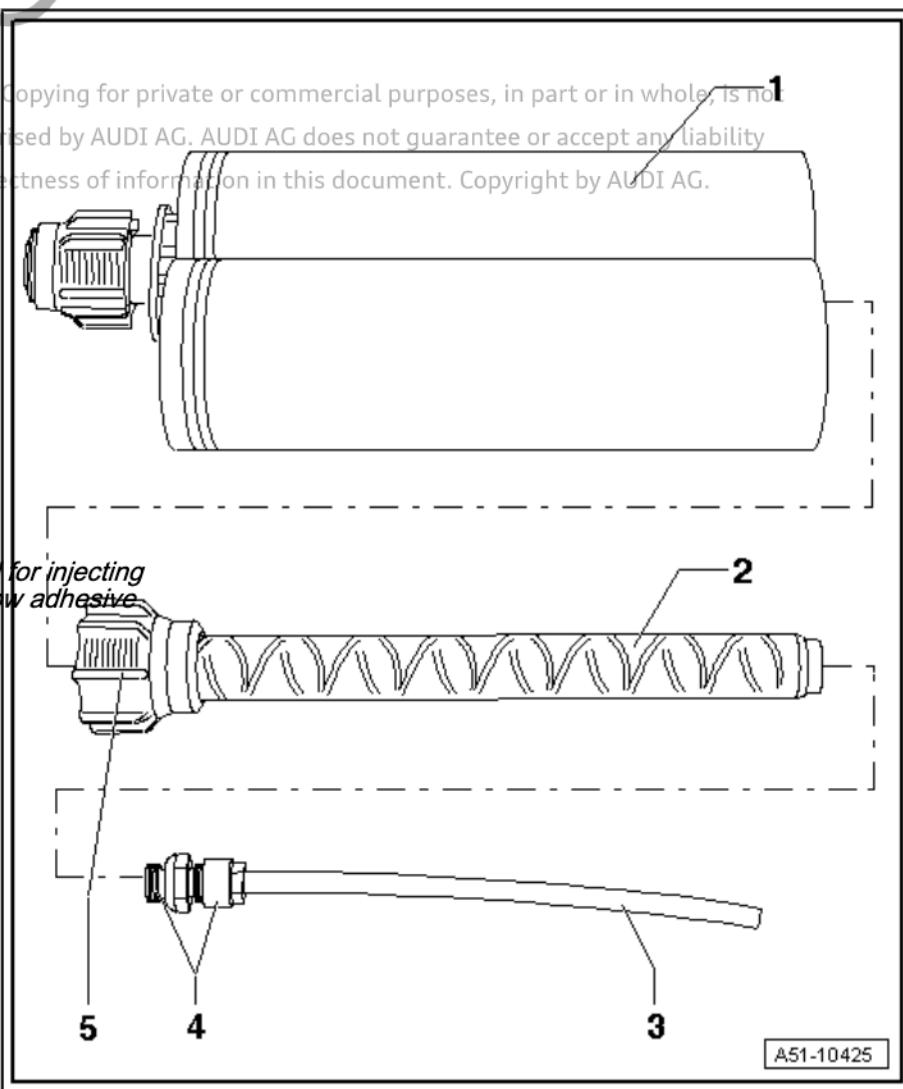


er -2-.

3.3 Procedure

Cutting locations

- Roughly cut out roof parallel with plasmatron weld seam -1- at a distance of approx. 30 mm using body saw .
- Separate original joint to windscreens opening and rear window opening using spot weld breaker .
- Working from passenger compartment, separate bonded joints between roof and roof cross members using electric cutter - V.A.G 1561 A- .

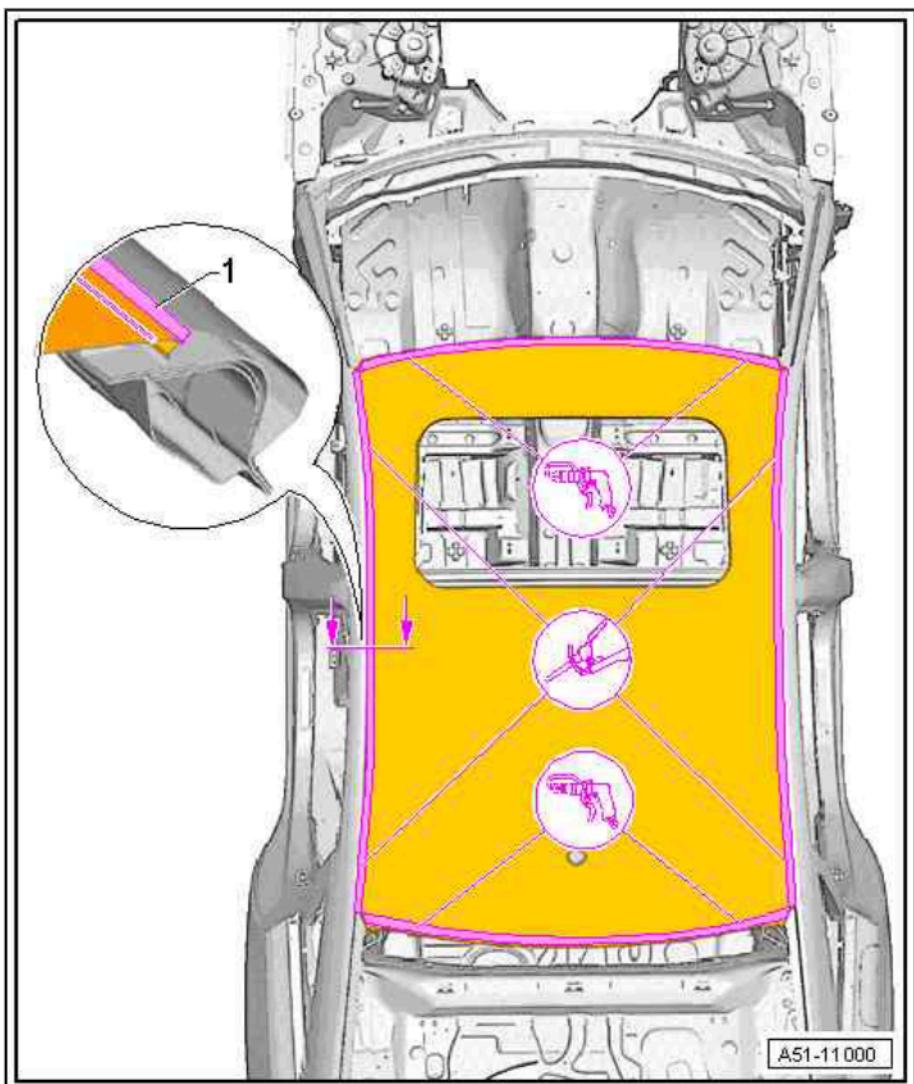

Note




Take care not to damage the roof side members when making cuts and when moving the remaining sections of the roof up and down.

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not


- Make cuts in remaining sections of roof using tin snips A/VAS 5357- .

with respect to the correctness of information in this document. Copyright by AUDI AG.

- Take hold of remaining sections with pliers and break open plasmatron weld seam by pulling up and down.

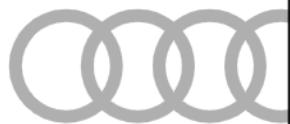

Protected by copyright. Copying, distribution, or
permitted unless authori
with respect to the correctness of information in this document. Copyright by AUDI AG.

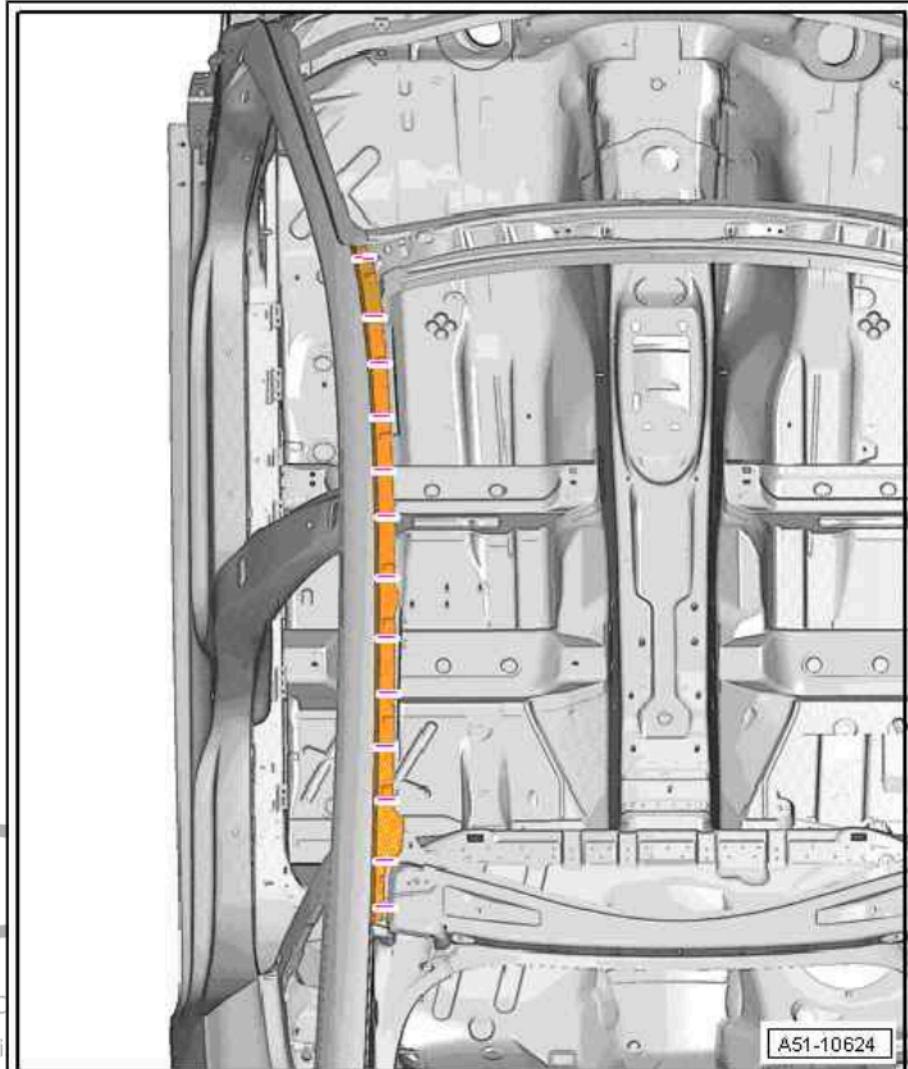


- Remove remaining material using compact angle grinder .

Take care not to damage roof frame when removing remaining material from roof frame.

Do not use cutting discs or rough-filing discs.




Protected by copyright.
Duplication or communication
not permitted unless au...
with respect to the d...

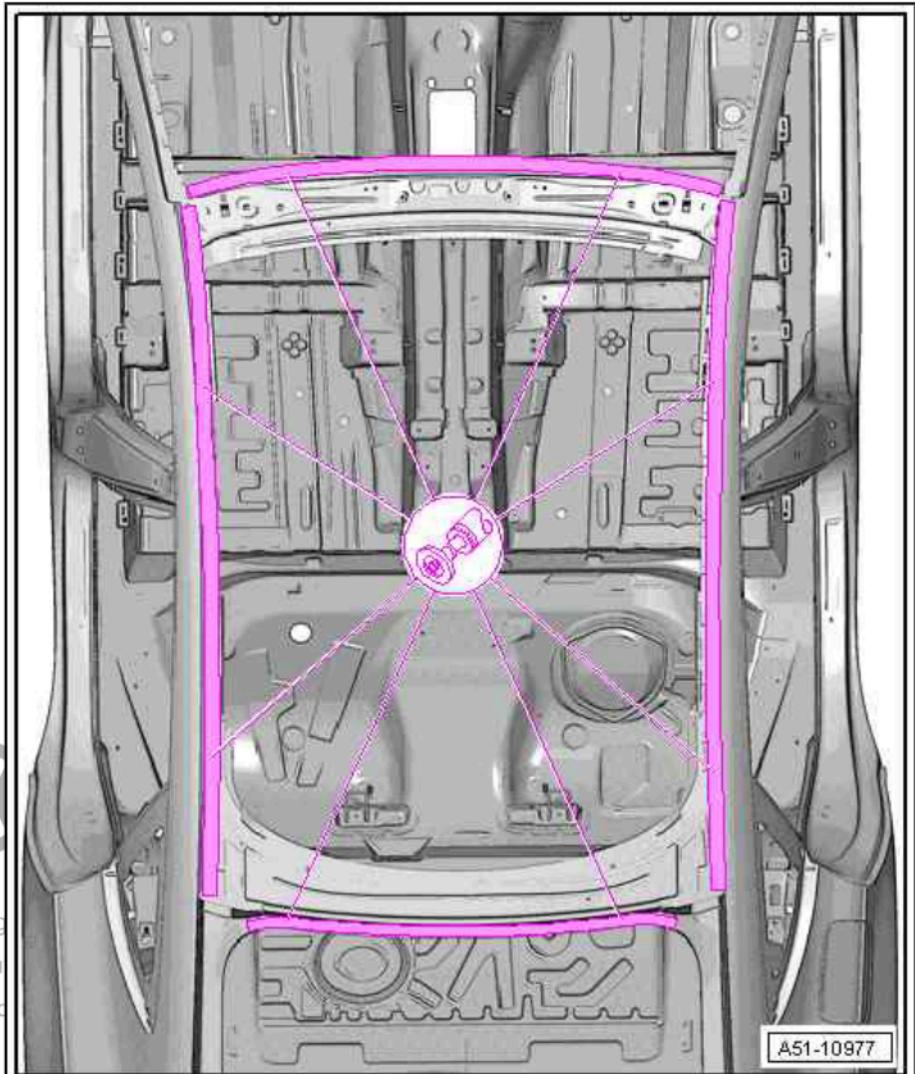

- Place roof in position and drill 7 holes (5.0 mm Ø) for pop rivets
- N 909 236 01- on both sides of roof frame reinforcement as shown in illustration using BTR drill bit and drill .



Protected by
permitted un
with respect

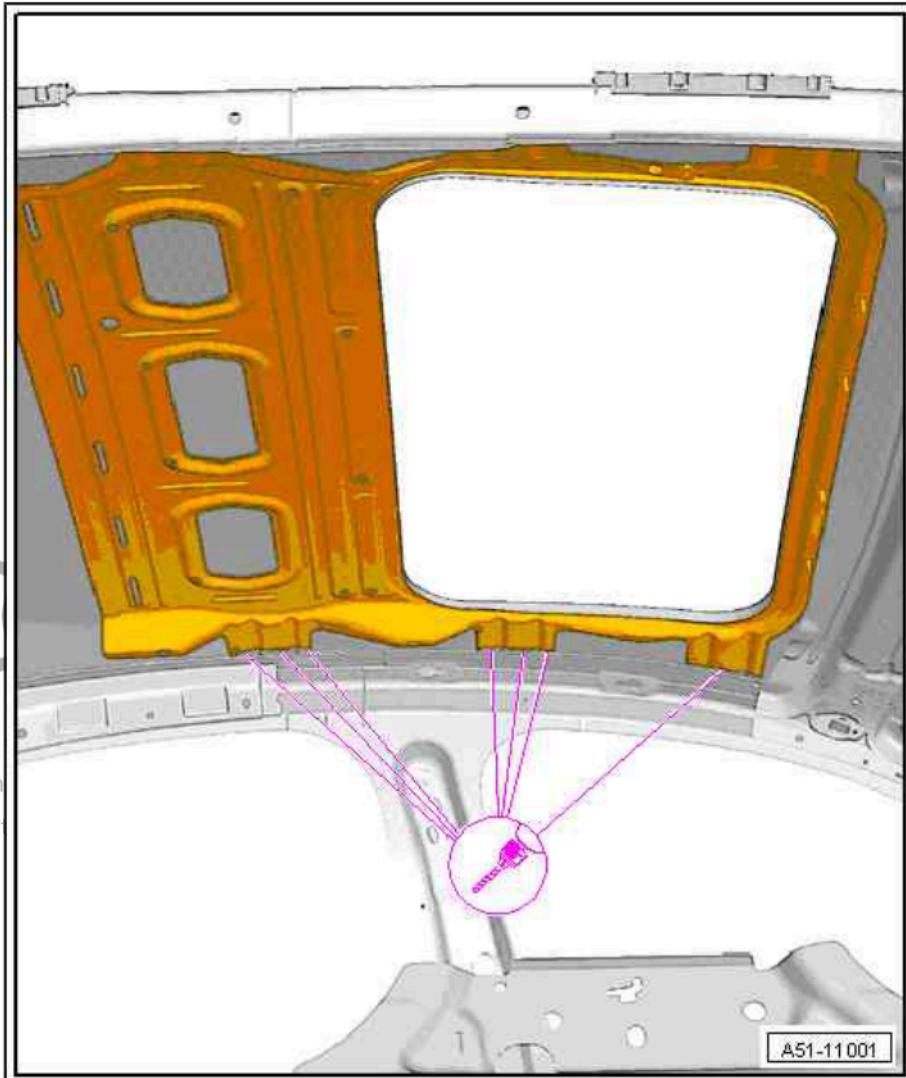

Replacement parts

- ◆ Cleaning solution - D 009 401 04-
- ◆ Roof with tilting sunroof
- ◆ Pop rivet - N 909 236 01- , 14x
- ◆ Single-component assembly adhesive - D 190 MKD A3 - , 1 cartridge
- ◆ 2-component epoxy adhesive - DA 180 A00 A2 - , 3 sets of cartridges
- ◆ Glass and paint primer - D 009 200 02-
- ◆ 2-component window adhesive - DA 004 660 M2 - , 2 sets of cartridges




Note

- ◆ *It is important to keep to the following procedure to ensure a satisfactory and effective roof repair.*
- ◆ *Bonding areas must not be treated with filler coat (surfacer) before bonding in roof.*


Preparing new part

- Prepare adhesive cartridges required for bonding.
- Cut static mixer from 2-component epoxy adhesive set - DA 180 A00 A2 - down to 4th notch to obtain required bead cross section.

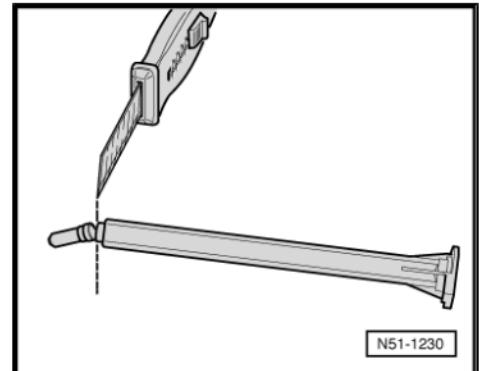

- Apply glass and paint primer - D 009 200 02- approx. 5 cm wide -b- on inner section of roof and inner side flange -a-.

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not assume or accept any liability with respect to the correctness of information provided. Copyright © by AUDI AG.

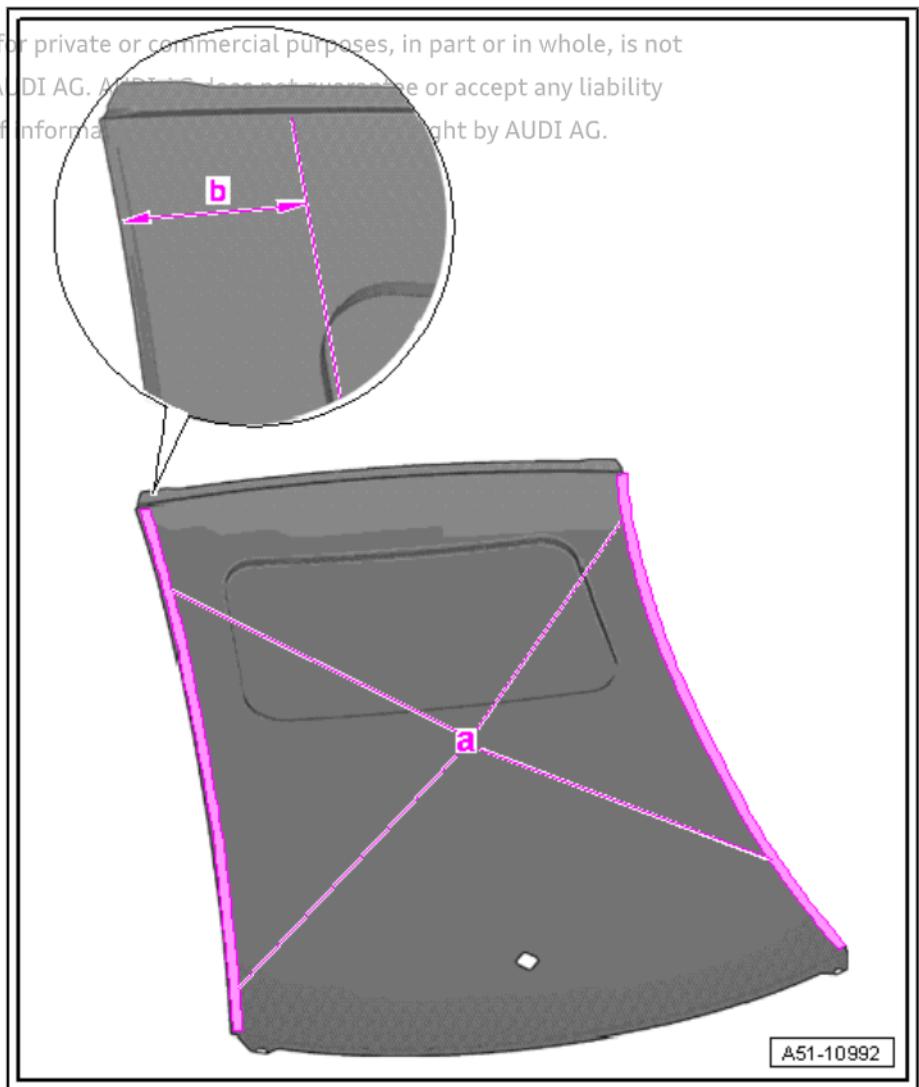


- Apply assembly adhesive D 190 MKD A3 to roof frame using pneumatic cartridge gun - V.A.G 1761/1- .


- Apply continuous bead -1- of 2-component epoxy adhesive - DA 180 A00 A2- to bevelled sections of roof side members using double-cartridge gun - VAS 6453- .




Protected by
copyright.
Use
permitted un
der the
terms
with respect to
the
conditions
of use
of the
material
in
the
original
format
and
in
the
modified
format
as
well
as
in
the
form
of
print
or
electr
on
ic
file
format.

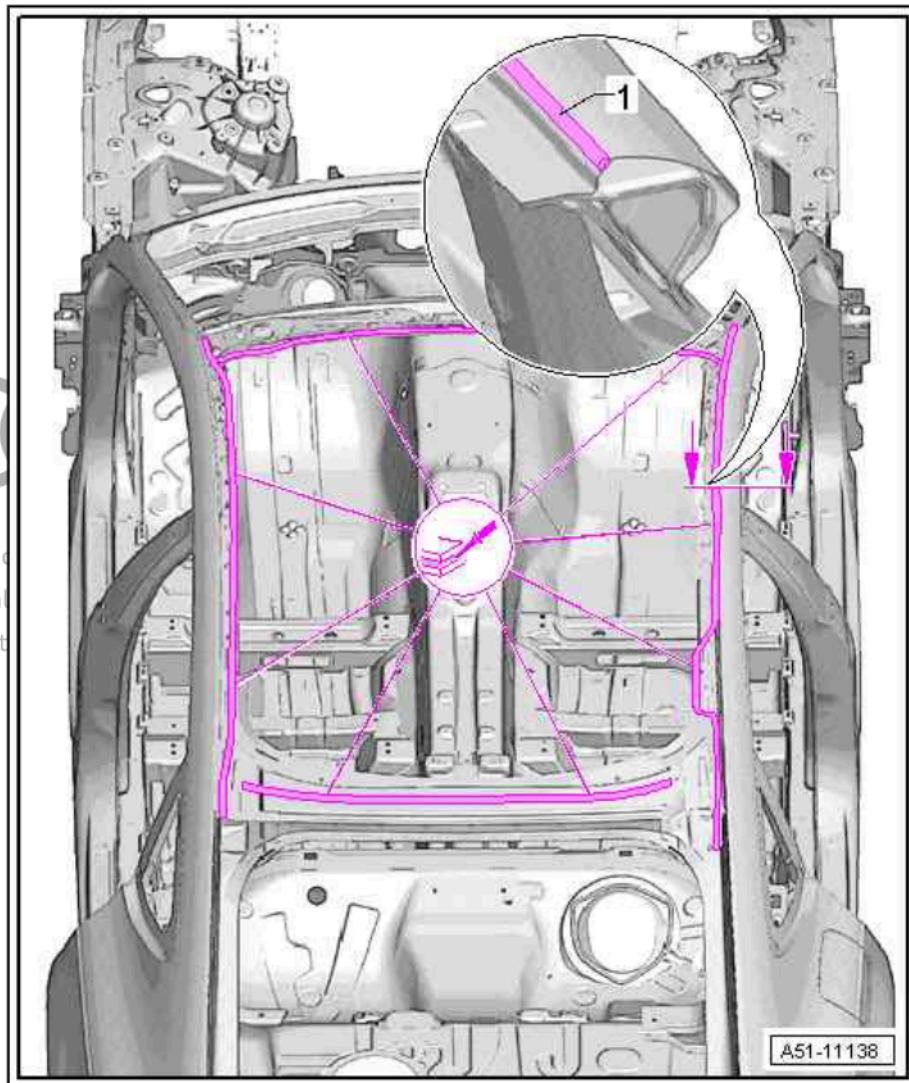

- Apply one continuous bead of 2-component epoxy adhesive - DA 180 A00 A2- to side flanges of roof -1- using double cartridge gun - VAS 6453- .

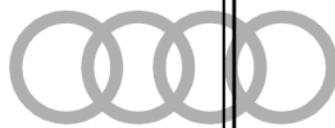

Protected by copyright. Copying for private
use is permitted unless authorised by AUDI AG.
With respect to the correctness of information

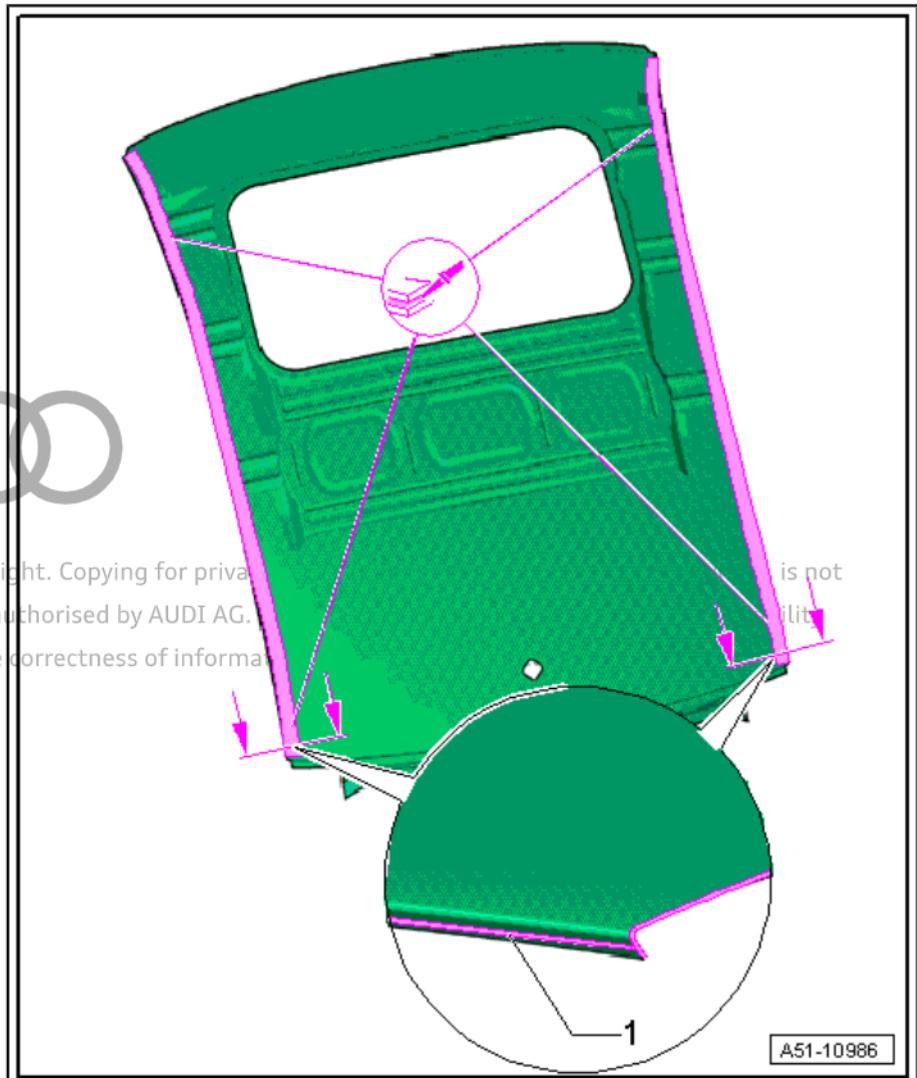

- Immediately fit and align roof.
- Use one self-tapping screw at each end to fix roof in position in centring hole in windscreens flange and sealing flange for rear lid.
- Fix roof in position at windscreens opening and rear window opening using mole grips, 18-18 - VAS 5430/1- .

Adjusting roof depth


- Additionally fix roof in position with two tensioning straps - T 10038- -1-.
- Set required depth using e.g. drill bit or suitable wooden spacer -2-.

Depth setting in centre part of front door -a = 3.0 mm -

Depth setting in centre part of rear door -a = 2.5 mm -




Protected by copyright. Copying
permitted unless authorised by
with respect to the correctness

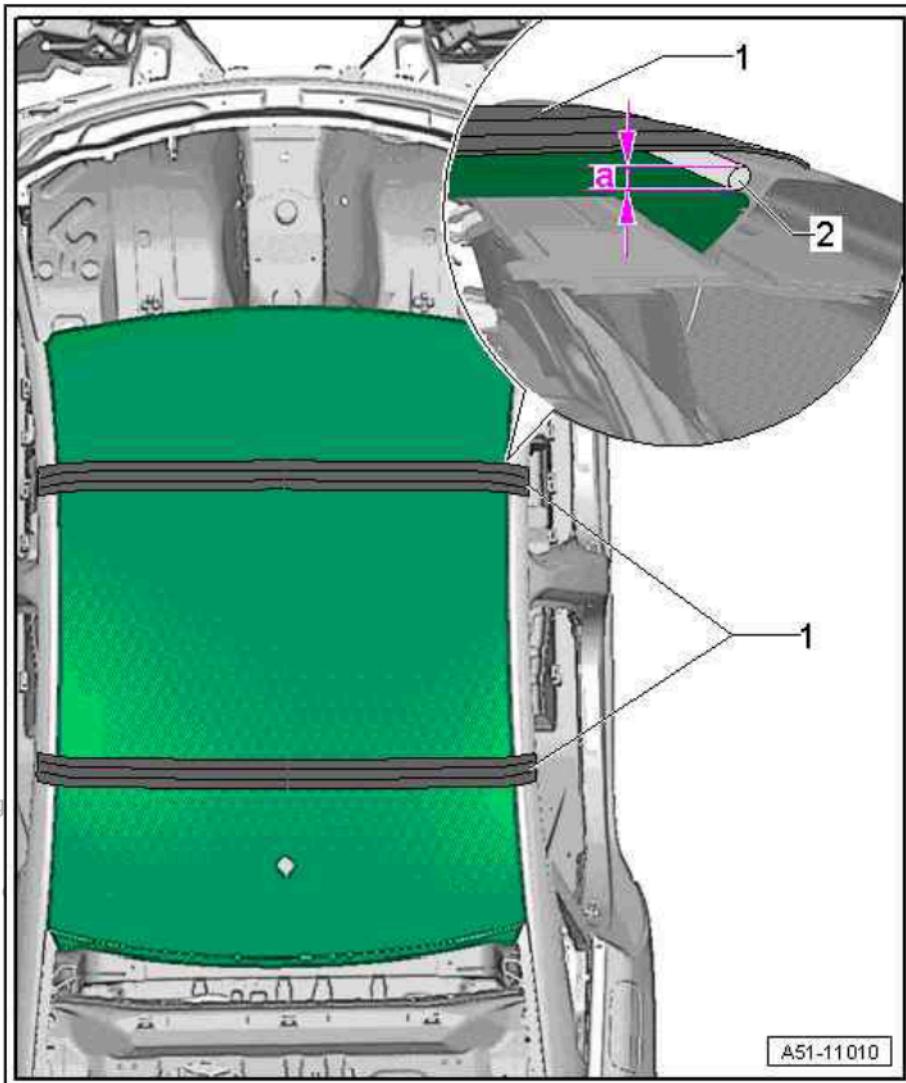

⚠ CAUTION

Allow bonded joint on roof to harden for 60 minutes at approx. 65 °C using radiant heater. Check temperature constantly with temperature sensor.

- 1 - Install 3x pop rivet - N 909
236 01- -2- using pneumatic
pop riveter - V.A.G 2003 A- .
- 2 - Install 3x pop rivets - N 909
236 01- -3- using pneumatic
pop riveter - V.A.G 2003 A- .
- 3 - Install 1x pop rivet - N 909
236 01- -4- using pneumatic
pop riveter - V.A.G 2003 A- .

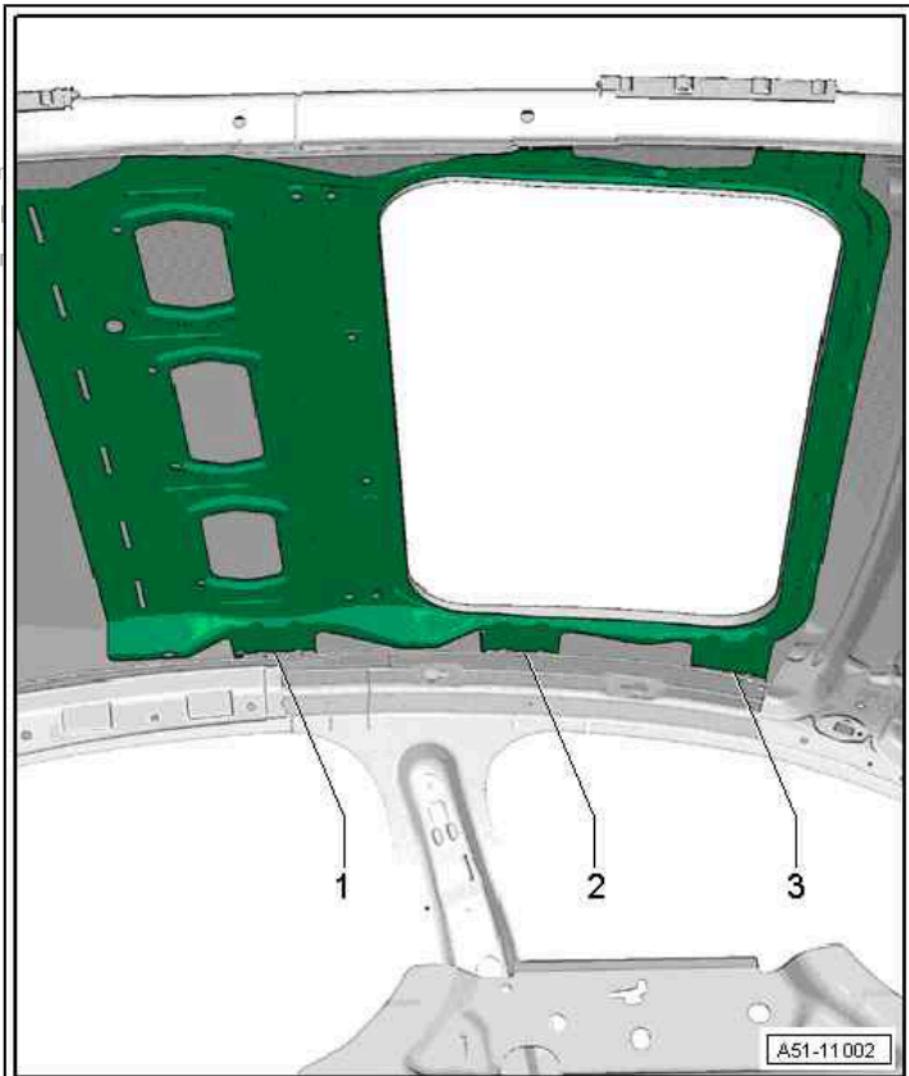

Welding in




Note

Due to the different types of steel and panel thicknesses employed, one of the resistance spot welding units listed in this manual and approved by Audi must be used to ensure correct results when spot welding.

- Weld in roof using resistance spot welder : RP spot weld seam.

Protect
permit
with re


is not
ility

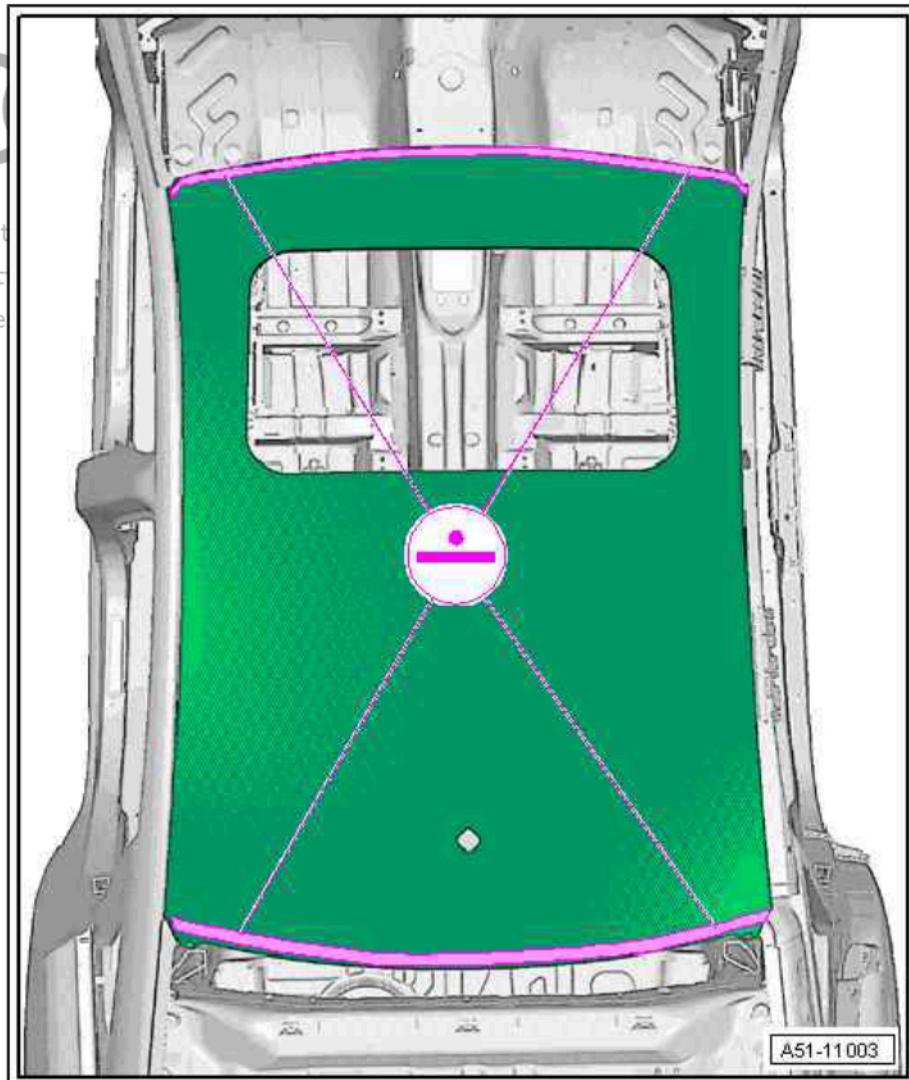

- Make additional welds for roof using shielded arc welding equipment : SG continuous seam.
- Grind down SG continuous weld seams using compact angle grinder .




Protected by copyright.
permitted unless
with respect to

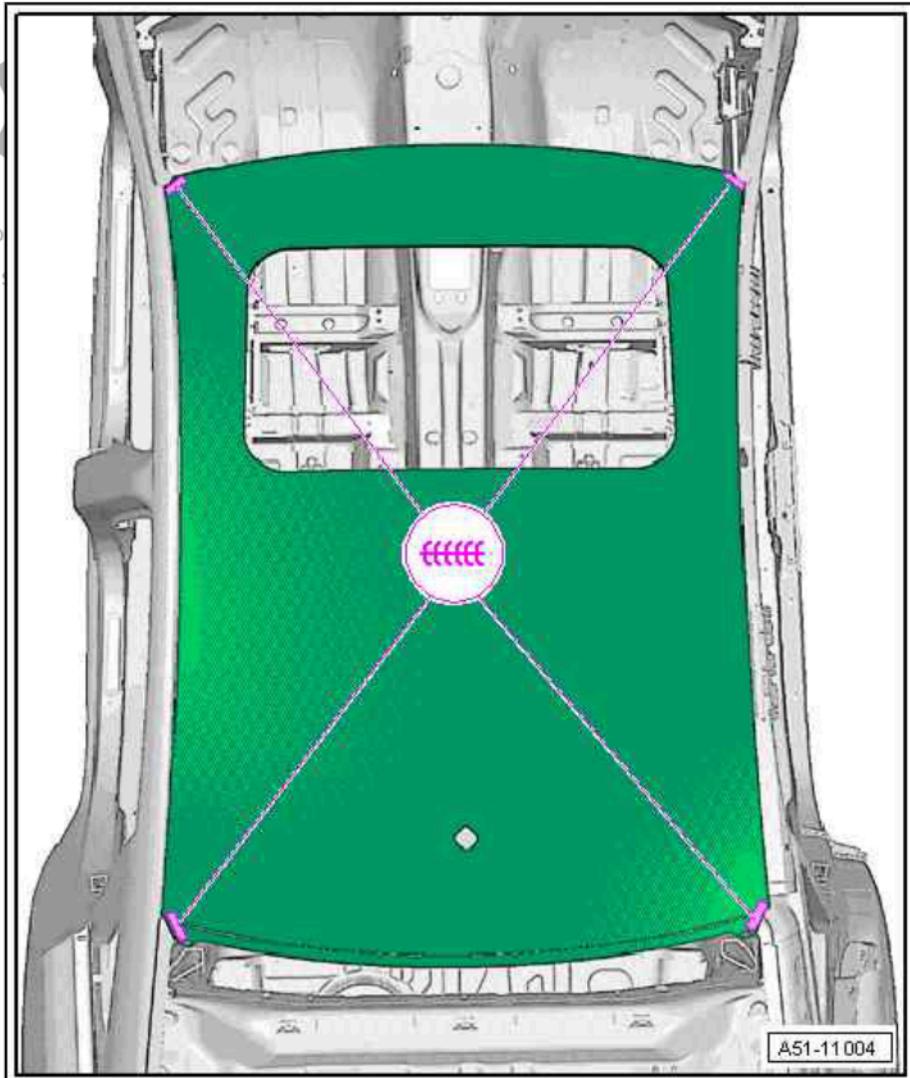

Note

- ◆ After completing the joint, the vehicle must be left standing for 8 hours on a level surface at a room temperature of 15°C to allow the adhesive components to harden (curing time).
 - ◆ Do not continue working on the vehicle until the curing time has elapsed.
- Grind zero-gap joint -1- into shape (left and right).

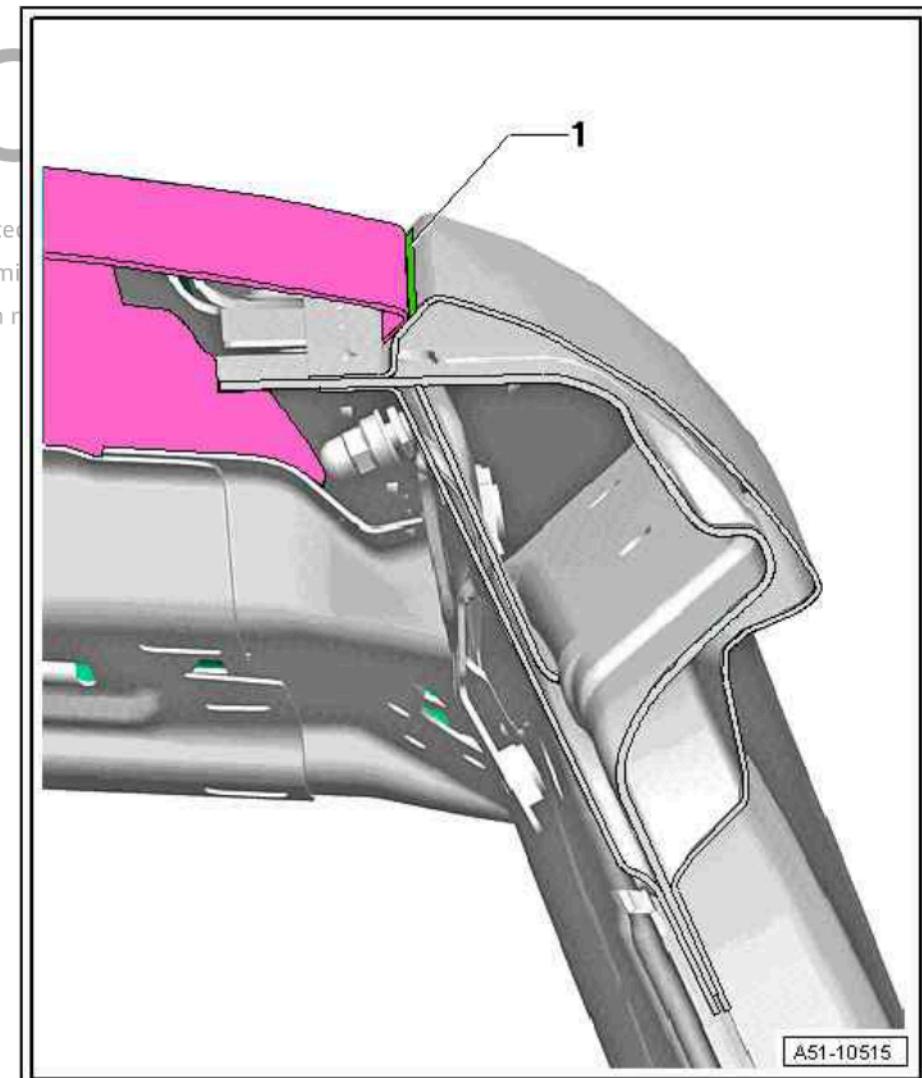


 Note

Please note instructions for use: window adhesive should be applied at a temperature of approx. 20°C.

- Apply one cartridge of 2-component window adhesive - DA 004 660 M2 - 3- into each roof side member using double cartridge gun - VAS 5237- .
 - ◆ 1 = 2-component epoxy adhesive - DA 180 A00 A2-
 - ◆ 2 = Glass and paint primer - D 009 200 02-
 - ◆ 3 = 2-component window adhesive - DA 004 660 M2 -



Protected by copyright. Copying
permitted unless authorised by
the copyright owner.
with respect to the correctness o

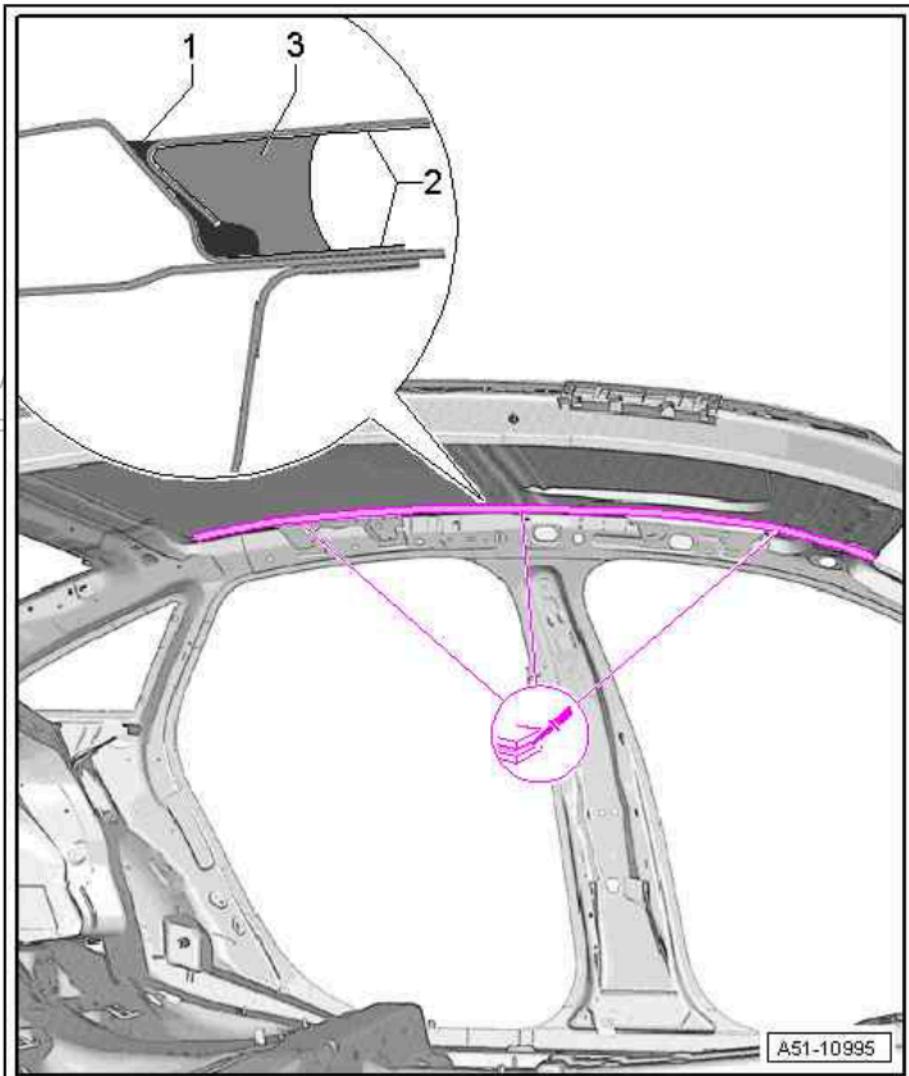


RO: 51 23 55 00

4 Roof - Renewal (Saloon with large sunroof, long version)

1 - Roof

2 - Plasmatron weld seam

3 - Bonded area

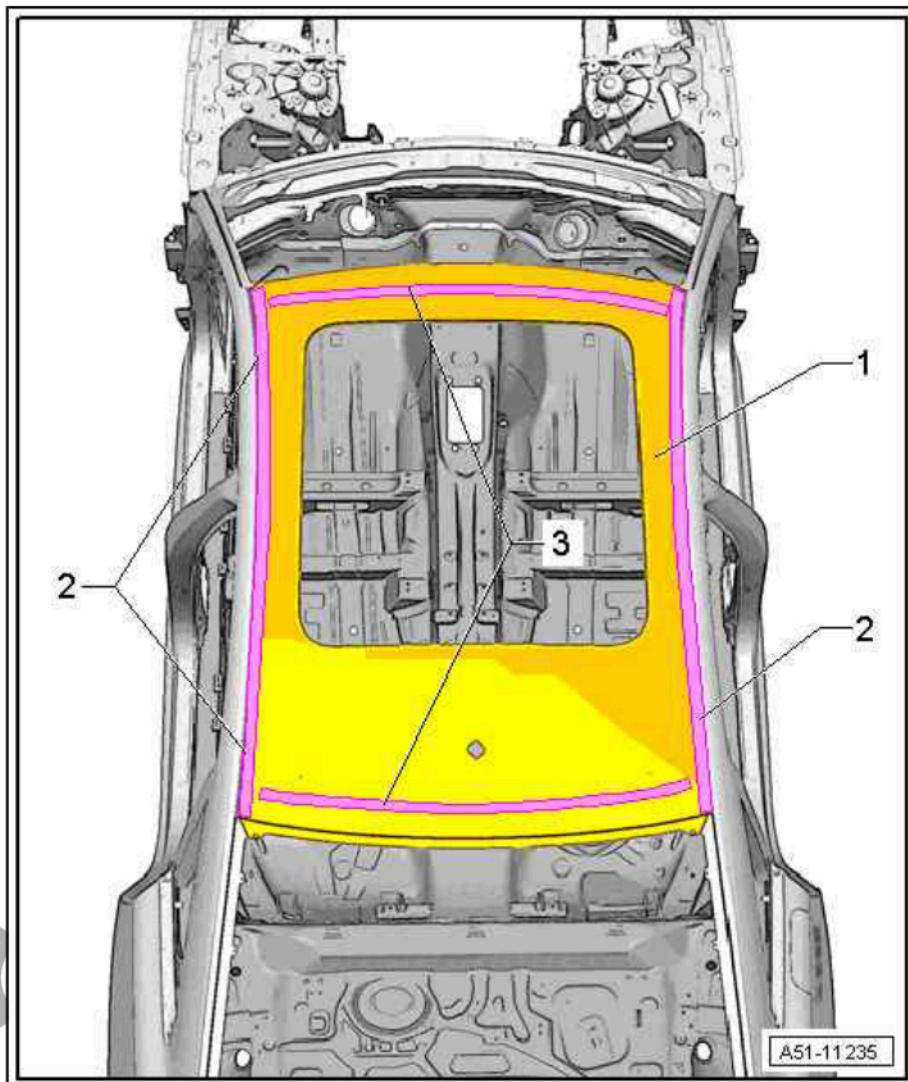

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

4.1 Notes for vehicles with hybrid drive [⇒ page 5](#)

4.2 Tools

Special tools and workshop equipment required

◆ Resistance spot welder

◆ Shielded arc welding equipment

◆ Brush grinder

◆ Drill


◆ Spot weld breaker

◆ Body saw

◆ Suction lifter or magnet

◆ Setting gauge - 3371-

- ◆ Compressed-air gun - V.A.G 1761/1-
- ◆ Tensioning strap - T 10038-
- ◆ Electric cutter
- ◆ Mole grips, 18-18
- ◆ Double cartridge gun - VAS 6453-
- ◆ Double cartridge gun - VAS 5237-

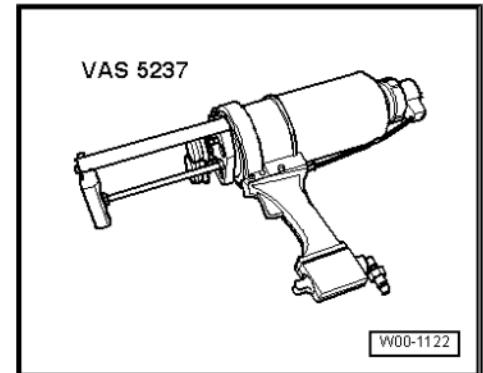


4.3 Procedure

Cutting locations

- Roughly cut out roof parallel with plasmatron weld seam -1- at a distance of approx. 30 mm using body saw .
- Separate original joint to windscreens opening and rear window opening using spot weld breaker .
- Working from passenger compartment, separate bonded joints between roof and roof cross members using electric cutter - V.A.G 1561 A- .




Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

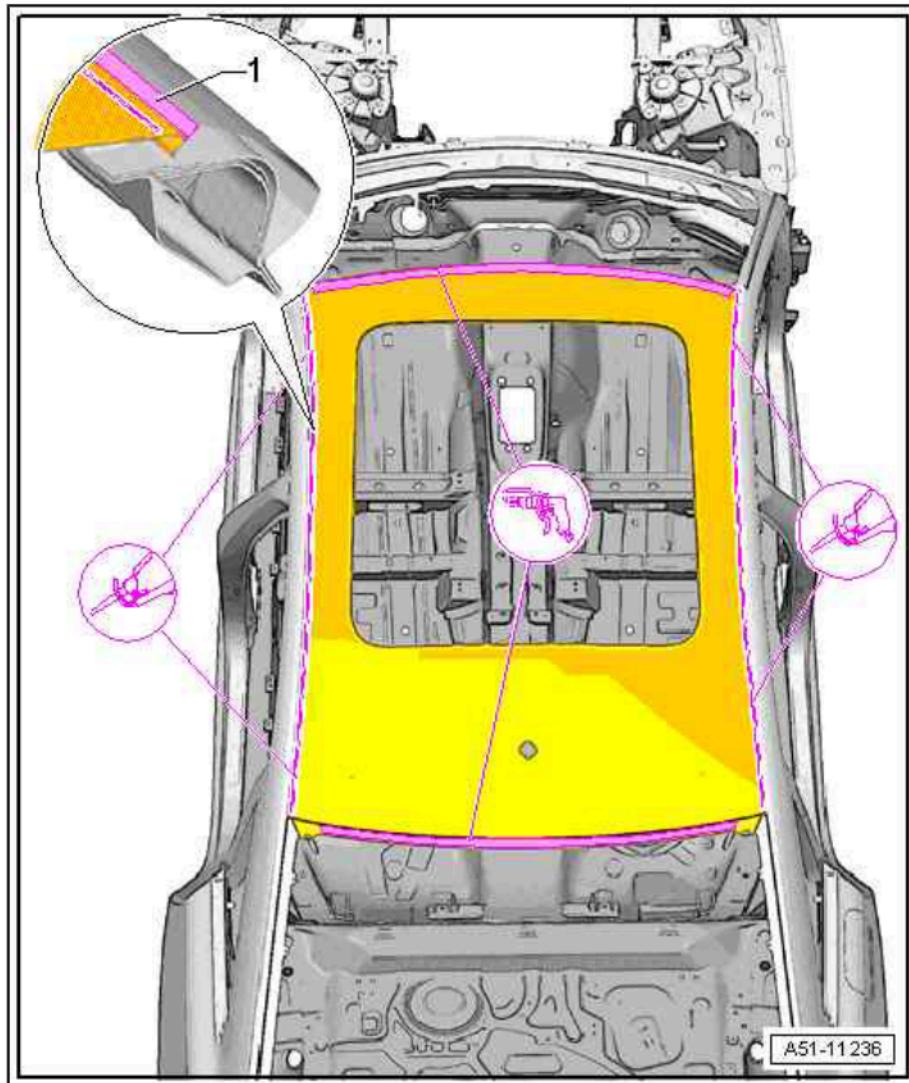

Note

Take care not to damage the roof side members when making cuts and when moving the remaining sections of the roof up and down.

- Make cuts in remaining sections of roof using tin snips - VAS 5357- . Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.
- Take hold of remaining sections with pliers and break open plasmatron weld seam by pulling up and down.

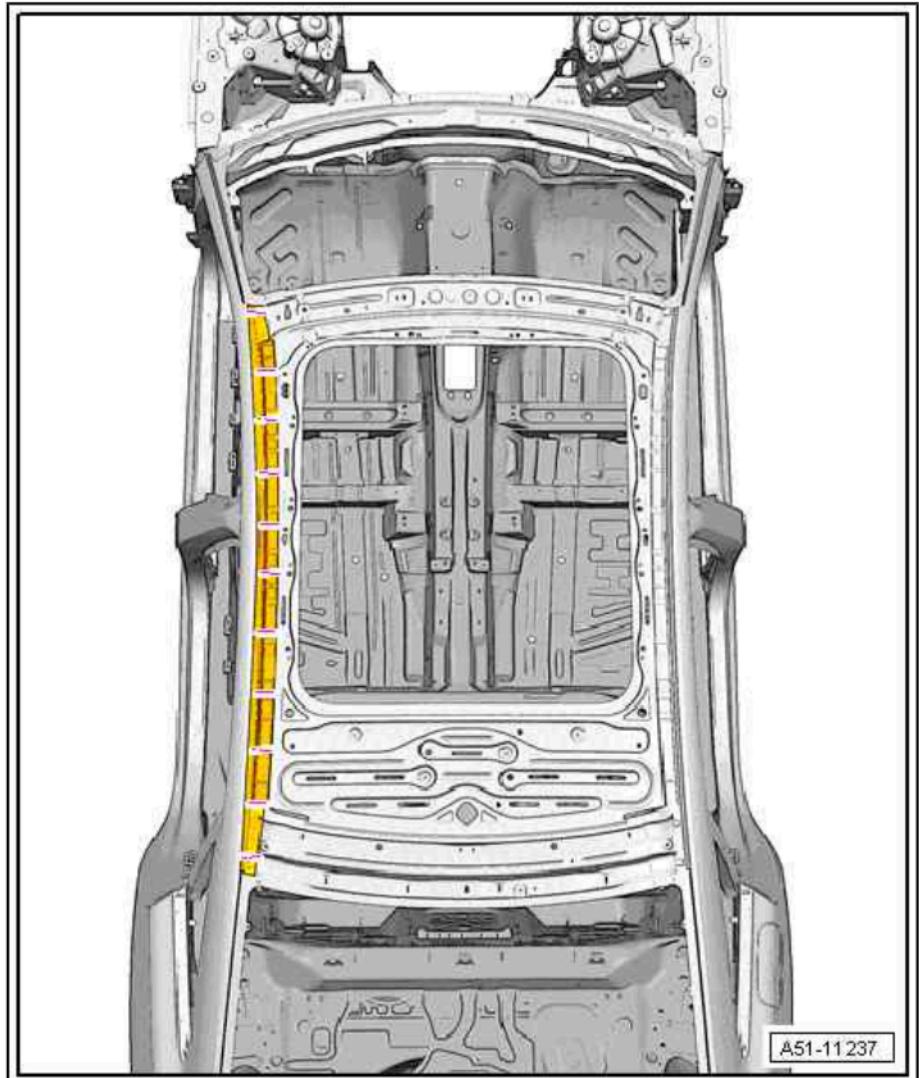


- Remove remaining material using compact angle grinder .

Take care not to damage roof frame when removing remaining material from roof frame.

Do not use cutting discs or rough-filing discs.



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

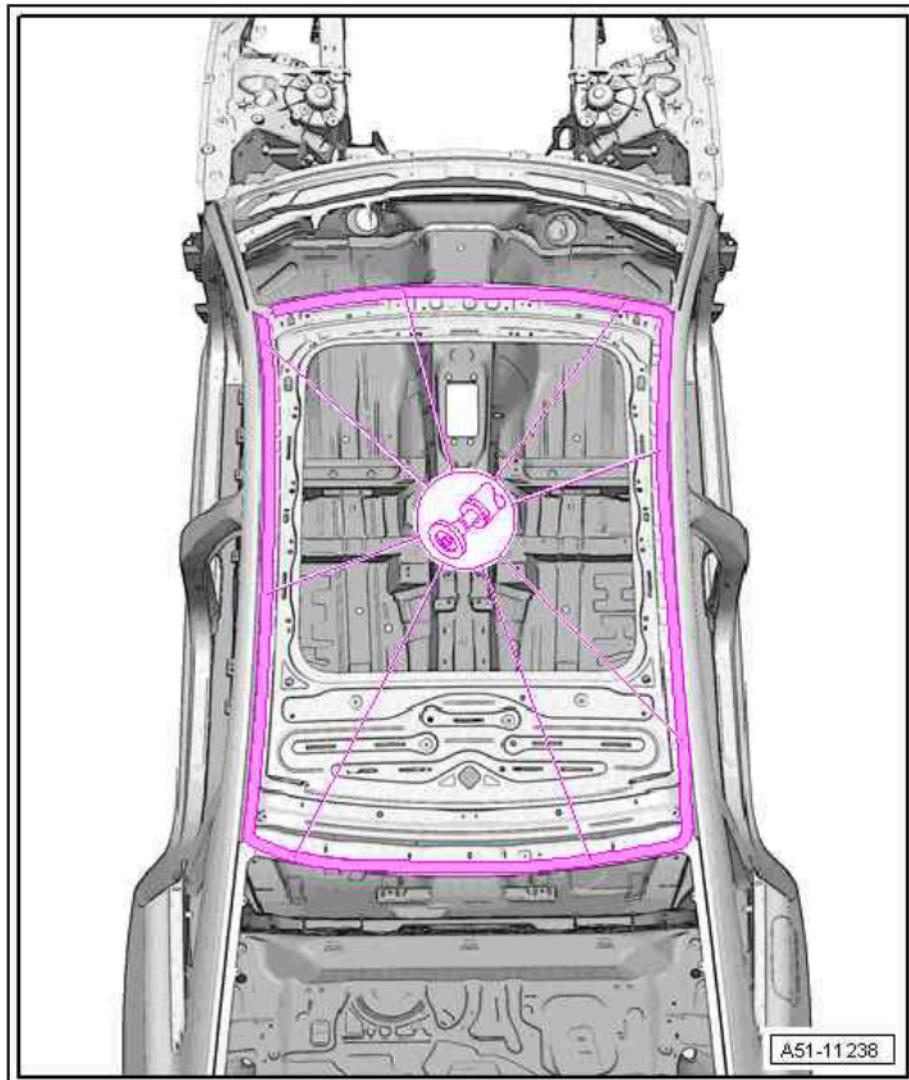

A51-11238

Replacement parts

- ◆ Cleaning solution - D 009 401 04-
- ◆ Roof (version with large sunroof)
- ◆ Single-component assembly adhesive - D 190 MKD A3 - , 1 cartridge
- ◆ 2-component epoxy adhesive - DA 180 A00 A2 - , 2 sets of cartridges



Note


- ◆ *It is important to keep to the following procedure to ensure a satisfactory and effective roof repair.*
- ◆ *Bonding areas must not be treated with filler coat (surfacer) before bonding in roof.*

Preparing new part


- Prepare adhesive cartridges required for bonding.

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

- Cut static mixer from 2-component epoxy adhesive set - DA 180 A00 A2 - down to 4th notch to obtain required bead cross section.

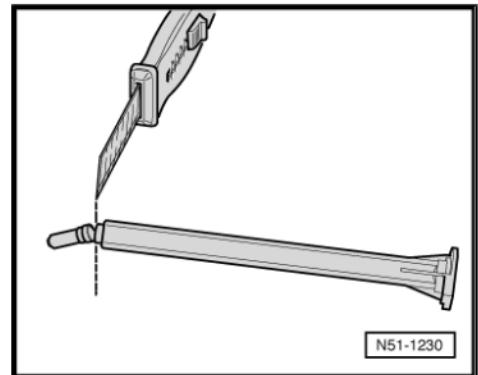

- Apply assembly adhesive D 190 MKD A3 to roof frame using pneumatic cartridge gun - V.A.G 1761/1- .

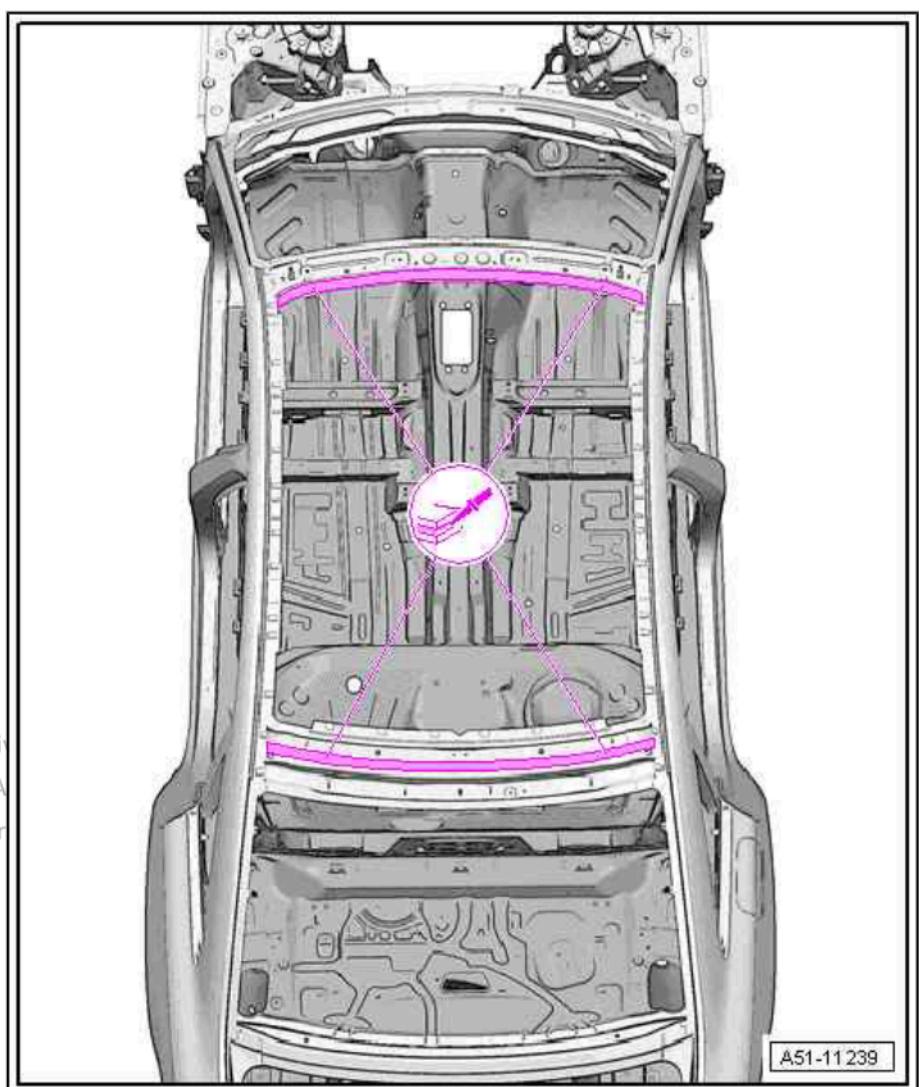


Protected by copyright. Copying for private use is
permitted unless authorised by AUDI AG.
With respect to the correctness of information


- Apply continuous bead -1- of 2-component epoxy adhesive - DA 180 A00 A2- to bevelled sections of roof side members using double-cartridge gun - VAS 6453- .



Protected by copyri
permitted unless a
with respect to the

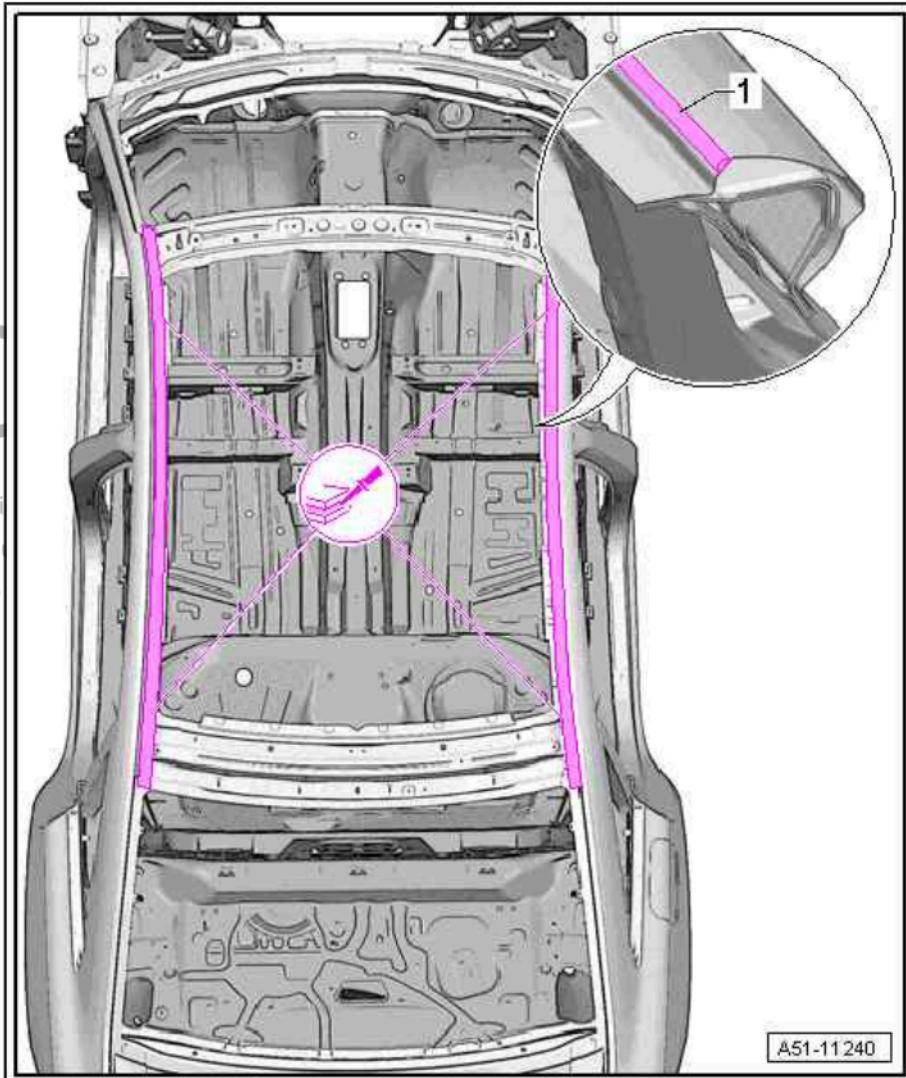

- Apply one continuous bead of 2-component epoxy adhesive - DA 180 A00 A2- to side flanges of roof -1- using double cartridge gun - VAS 6453- .

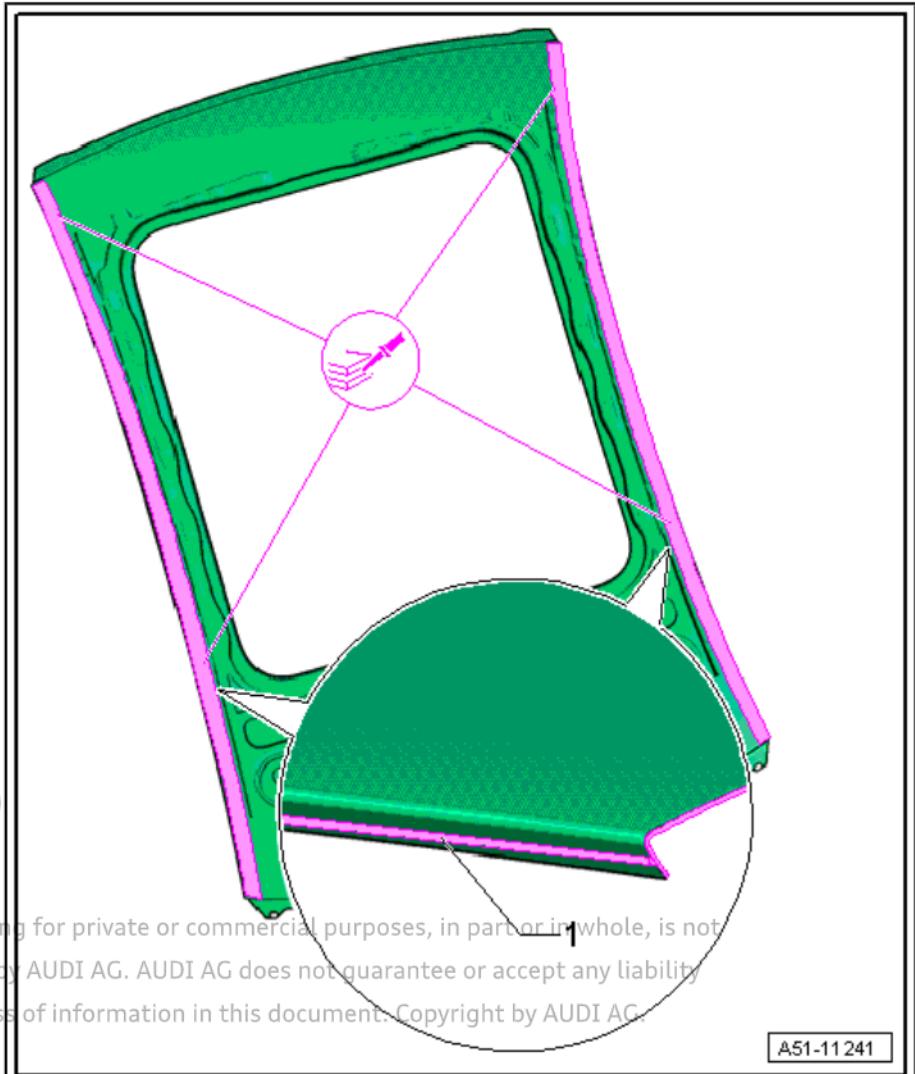

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

A51-11 241


- Immediately fit and align roof.
- Use one self-tapping screw at each end to fix roof in position in centring hole in windscreen flange and sealing flange for rear lid.
- Fix roof in position at windscreen opening and rear window opening using mole grips, 18-18 - VAS 5430/1- .

Adjusting roof depth

- Additionally fix roof in position with two tensioning straps - T 10038- -1-.
- Set required depth using e.g. drill bit or suitable wooden spacer -2-.

Depth setting in centre part of front door -a = 3.0 mm -

Depth setting in centre part of rear door -a = 2.5 mm -

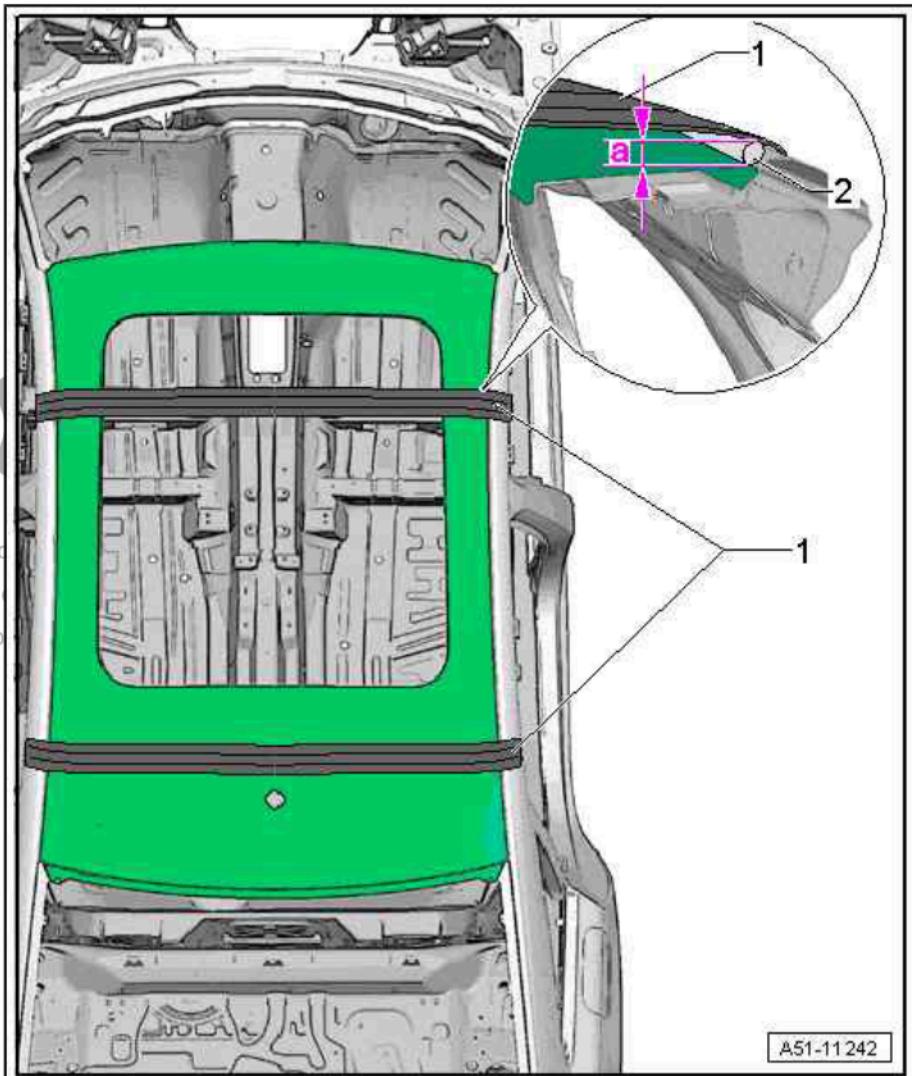

- Roughly spread any 2-component epoxy adhesive - DA 180 A00 A2- that comes out at edge of roof.

⚠ CAUTION


Allow bonded joint on roof to harden for 60 minutes at approx. 65 °C using radiant heater. Check temperature constantly with temperature sensor.

i Note

Due to the different types of steel and panel thicknesses employed, one of the resistance spot welding units listed in this manual and approved by Audi must be used to ensure correct results when spot welding.

Welding in

- Weld in roof using resistance spot welder : RP spot weld seam.

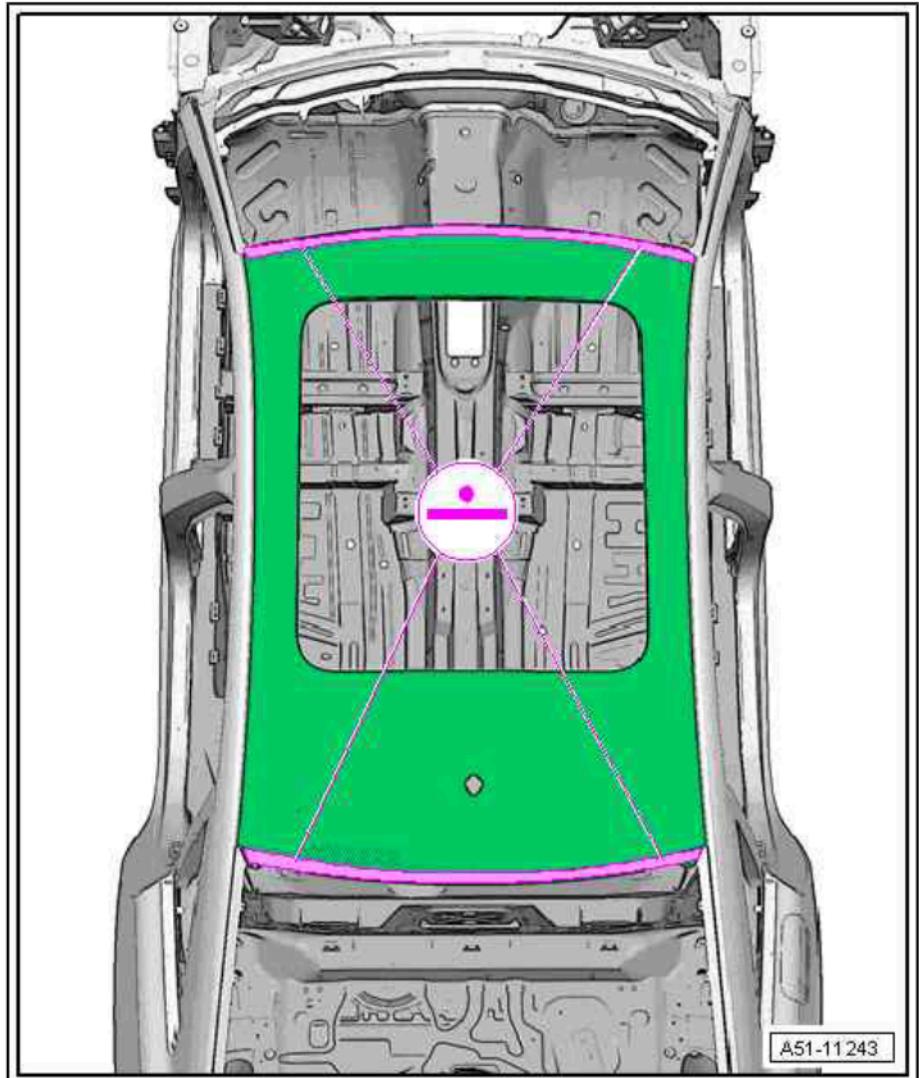

A51-11243

- Make additional welds for roof using shielded arc welding equipment : SG continuous seam.
- Grind down SG continuous weld seams using compact angle grinder .




Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.




Protected
permitted
with resp.

not
y

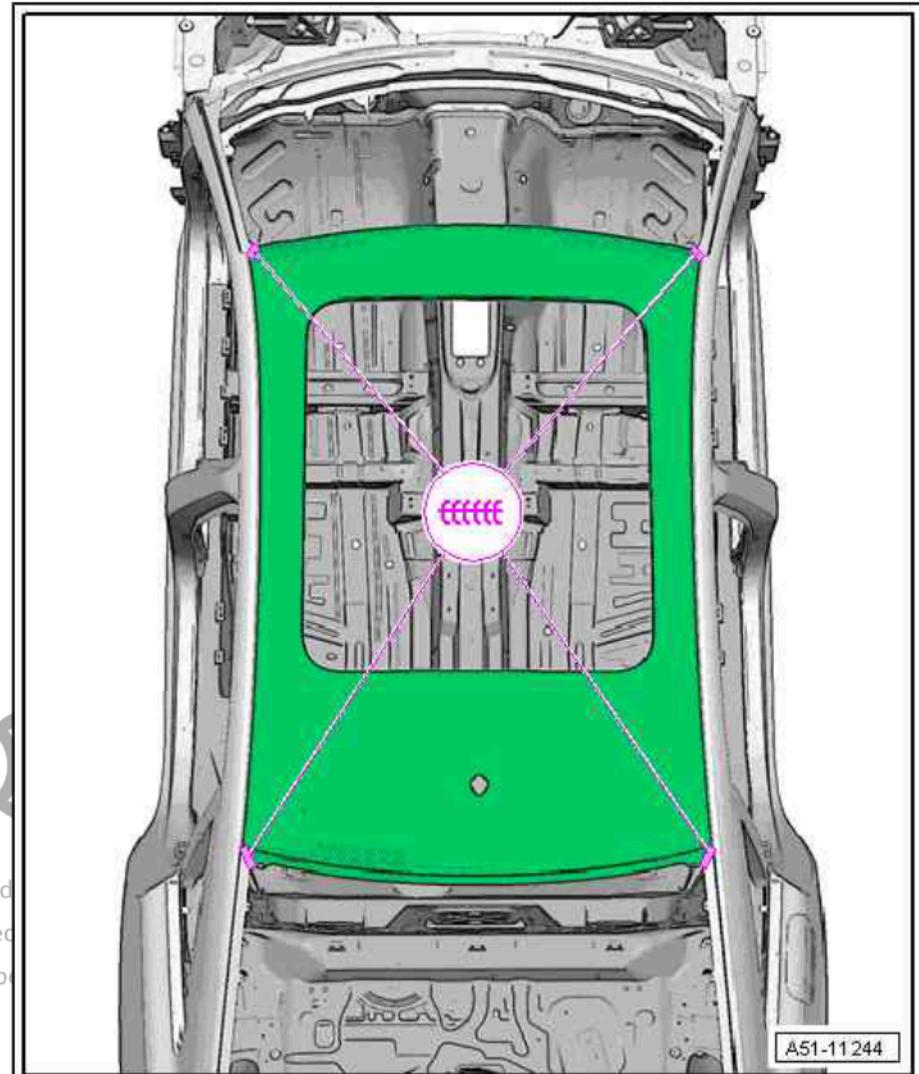


- Weld in roof using shielded arc welding equipment : SG continuous seam (8 x 15 mm).

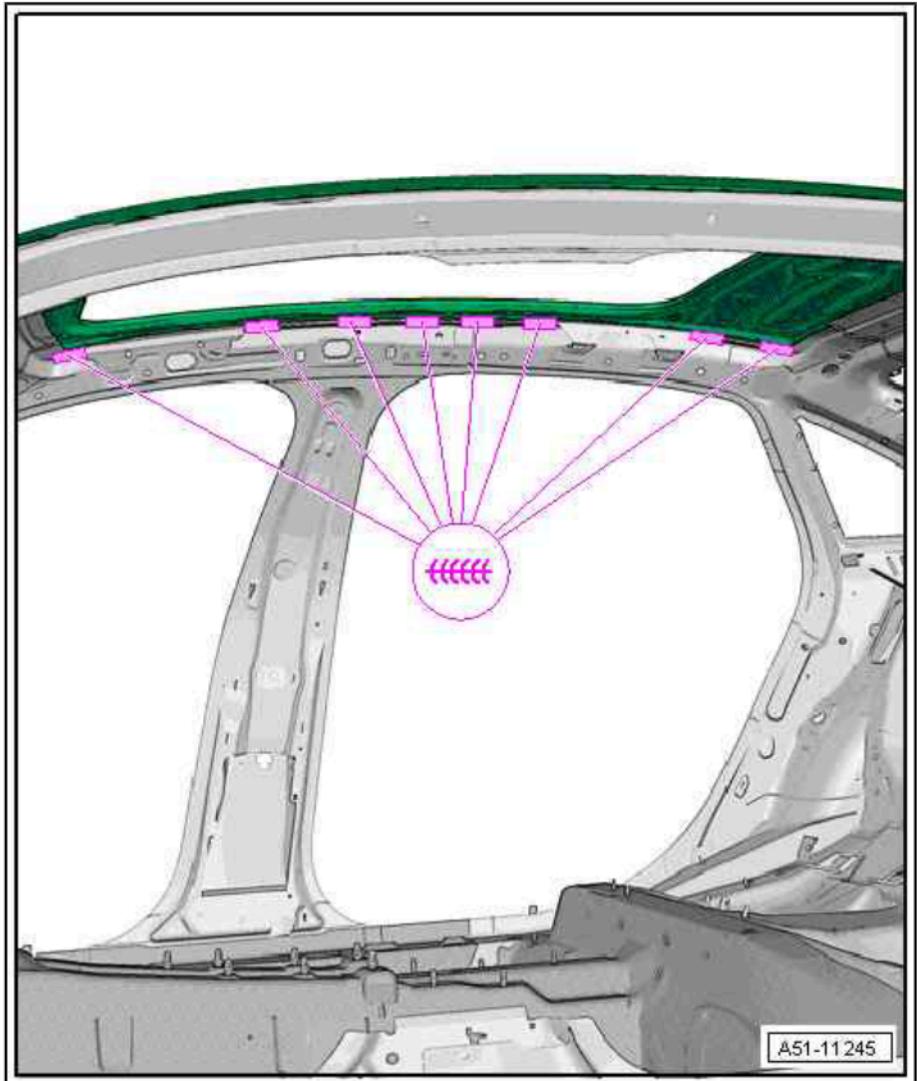

Note

- ◆ After completing the joint, the vehicle must be left standing for 8 hours on a level surface at a room temperature of 15°C to allow the adhesive components to harden (curing time).
- ◆ Do not continue working on the vehicle until the curing time has elapsed.

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

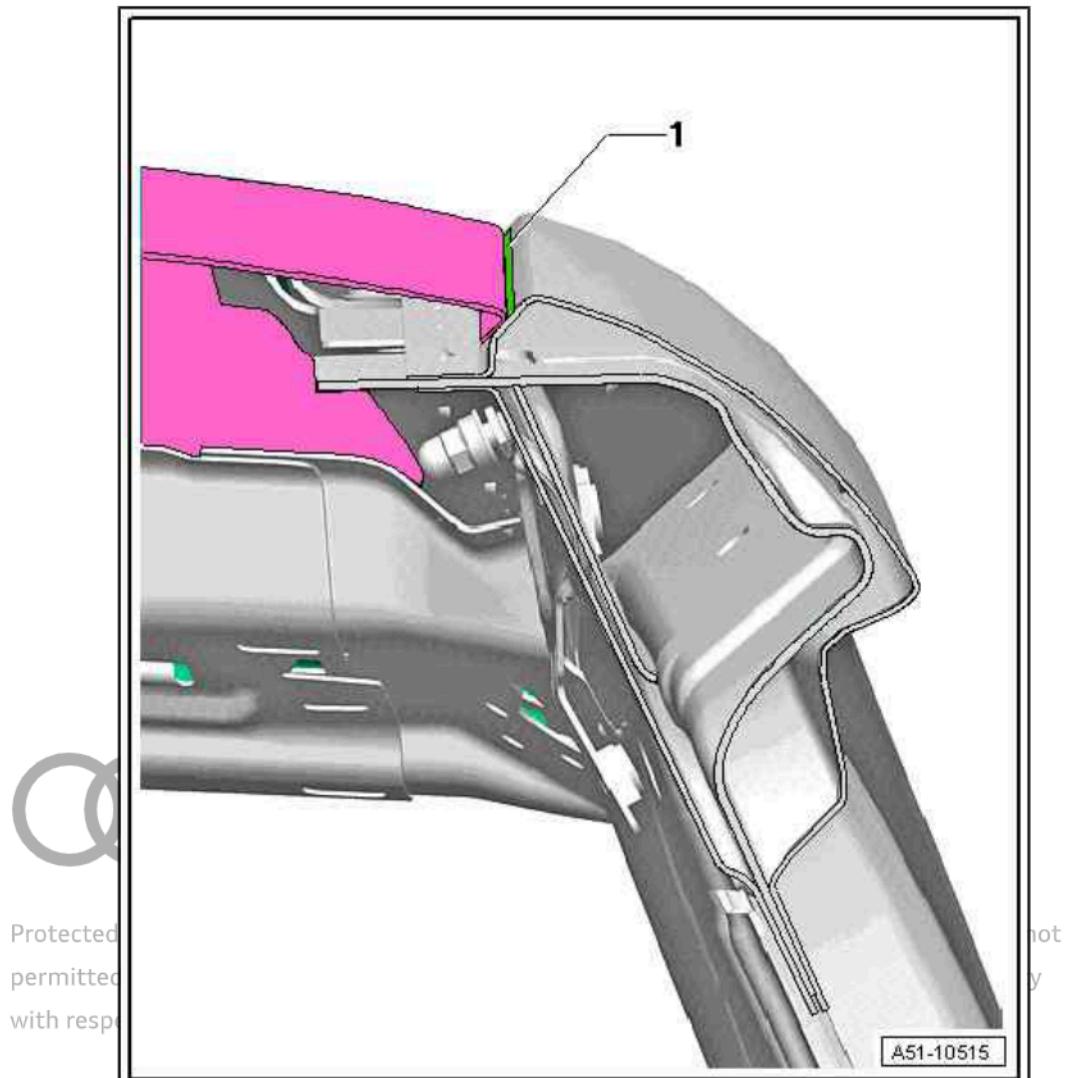


RO: 51 03 55 00

5 Roof - Renewal (Avant)

- 1 - Roof
- 2 - Plasmatron weld seam
- 3 - Bonded area



Protected by copyright. Copying
permitted unless authorised by
with respect to the correctness

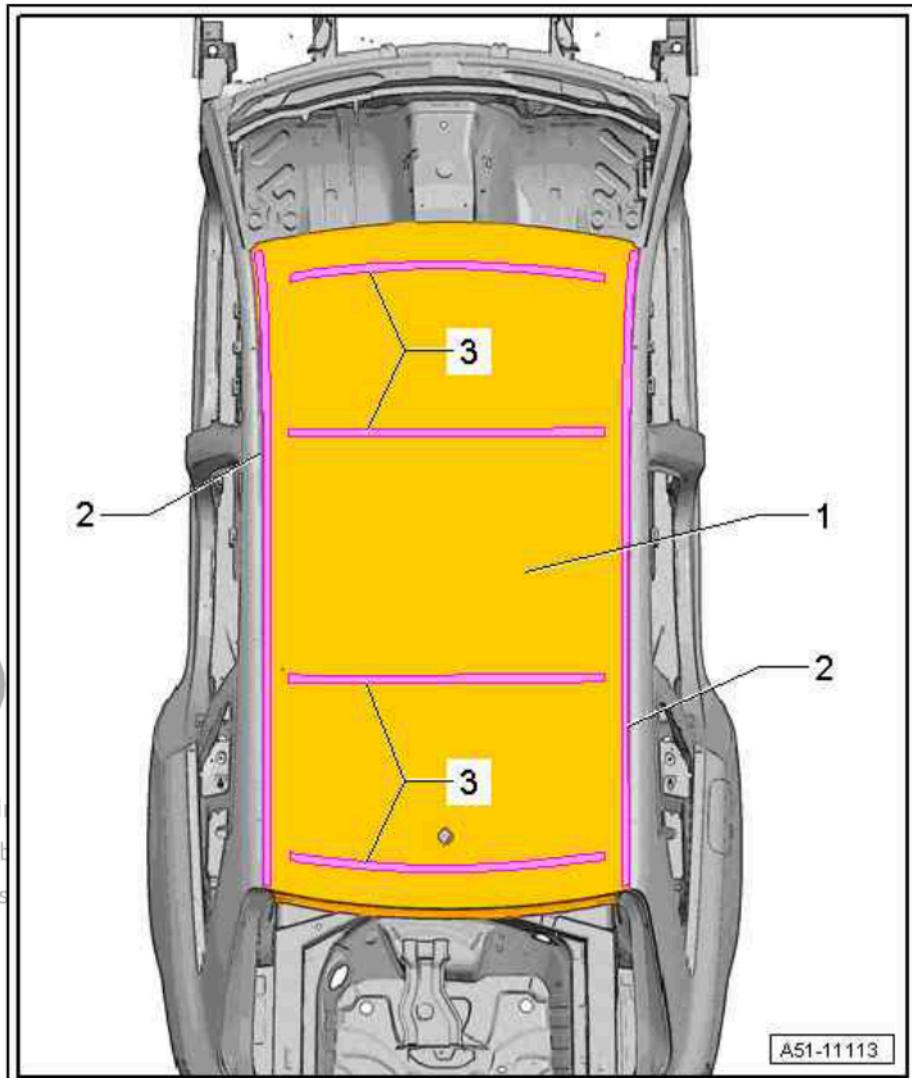

5.1 Notes for vehicles with hybrid drive

[⇒ page 5](#)

5.2 Tools


Special tools and workshop equipment required

- ◆ Resistance spot welder
- ◆ Shielded arc welding equipment
- ◆ Drill
- ◆ Radiant heater
- ◆ Mole grips, 18-18
- ◆ Spot weld breaker
- ◆ Body saw
- ◆ Suction lifter - V.A.G 1344- or magnet - VAS 6739-

- ◆ Setting gauge - 3371-
- ◆ Compressed-air gun - V.A.G 1761/1-
- ◆ Tensioning strap - T 10038-
- ◆ Double cartridge gun - VAS 6453-
- ◆ Tin snips
- ◆ Double cartridge gun VAS 5237



Copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

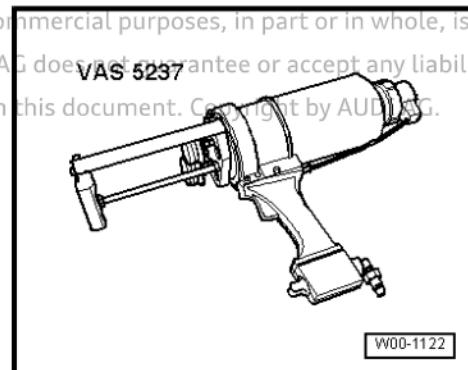

Tools approved by AUDI AG must be used to ensure correct results when carrying out repair work [see page 54](#).

1 - 2-component window adhesive - DA 004 660 M2 -

- Open cap.

2 - Static mixer

3 - Extension hose

Part number 000 809 937


- Screw onto static mixer
-2- with adapter -4-.

4 - Adapter



Note

The adapter is required for injecting the 2-component window adhesive!

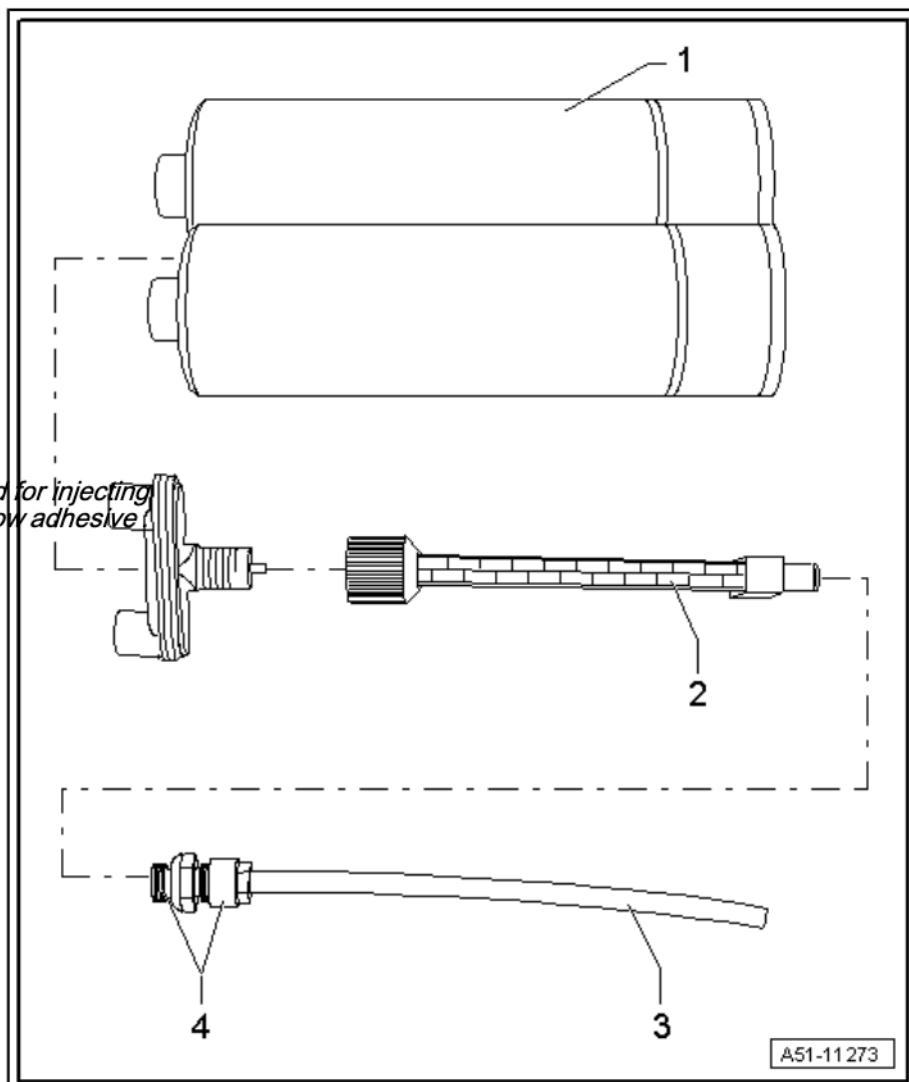


Instructions for using extension hose for window adhesive



- Take static mixer out of window adhesive kit.



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

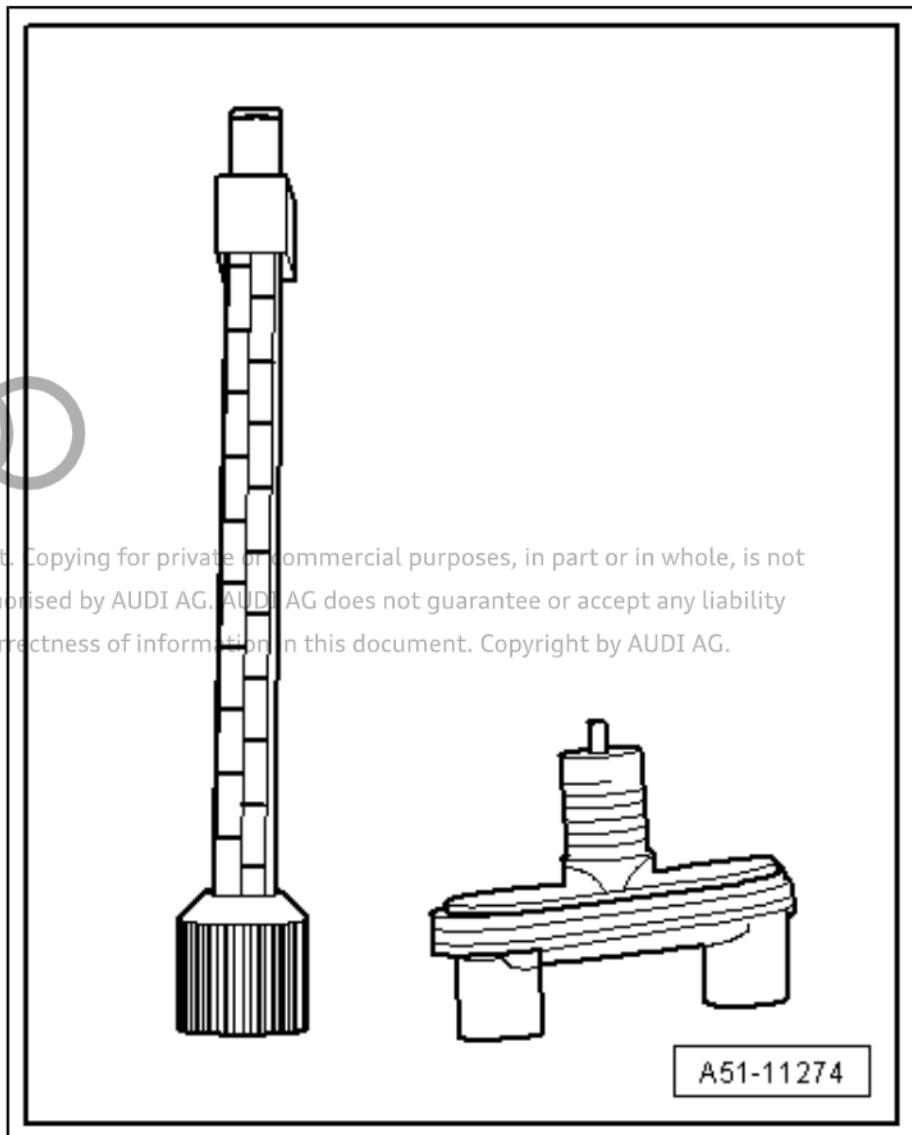


- Remove front cap from static mixer.

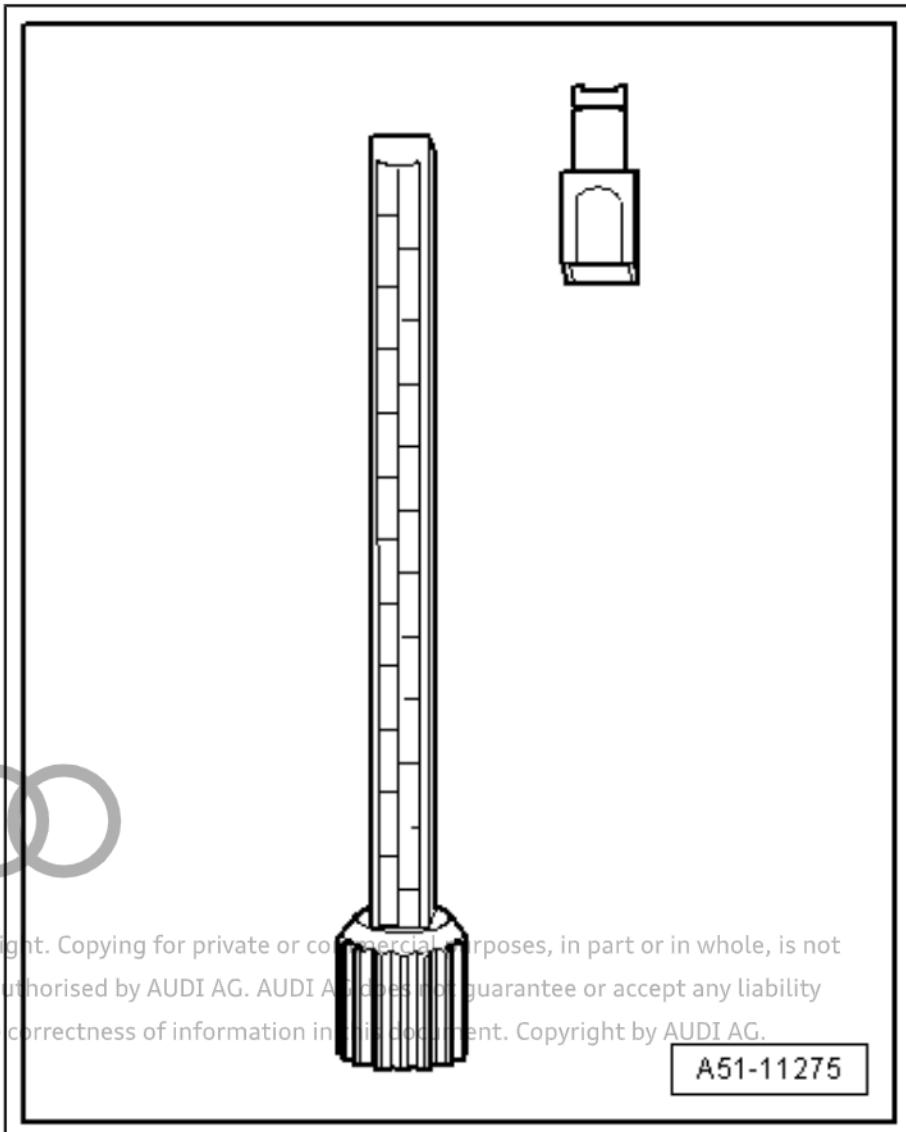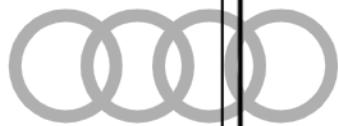

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

A51-11275

- Drill out opening in static mixer -a- to 9 mm Ø using drill .

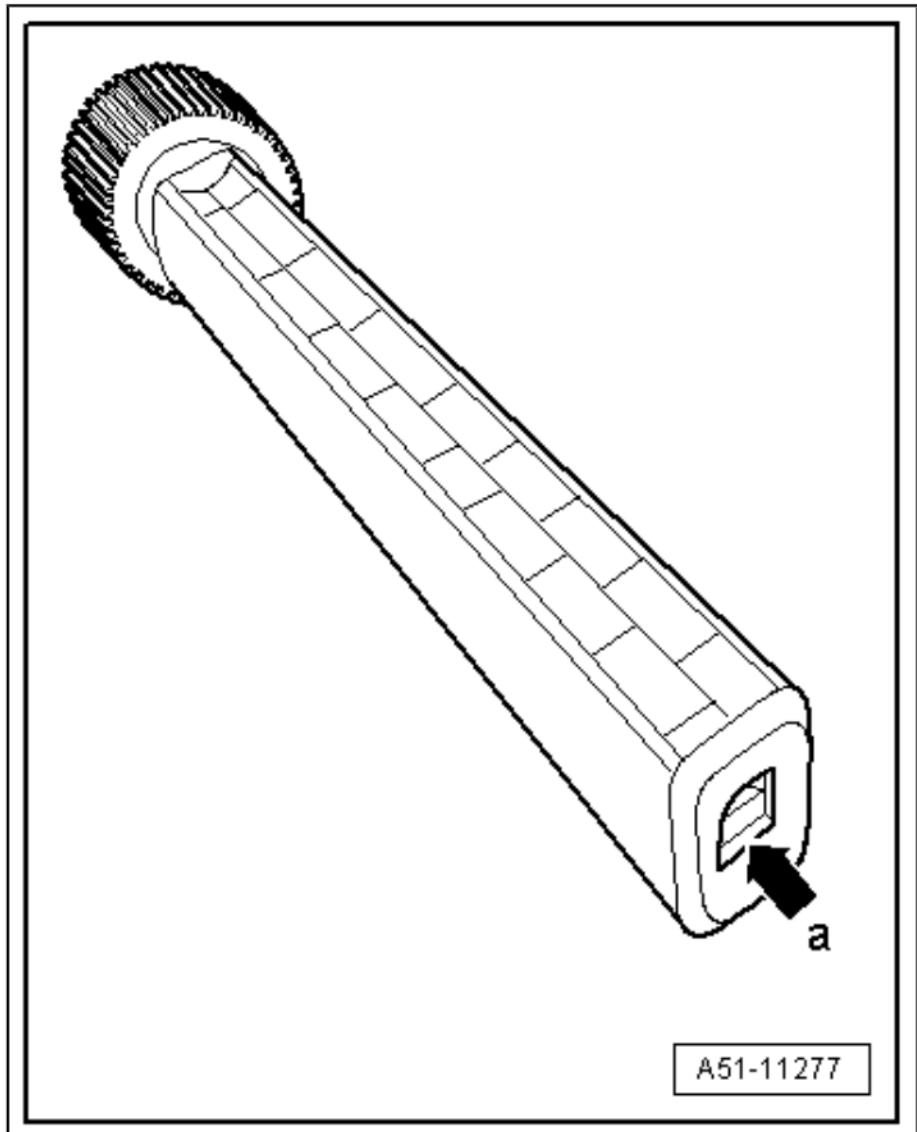


A51-11277


- Shorten inner section of mixer so that hose can be screwed in fully.



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

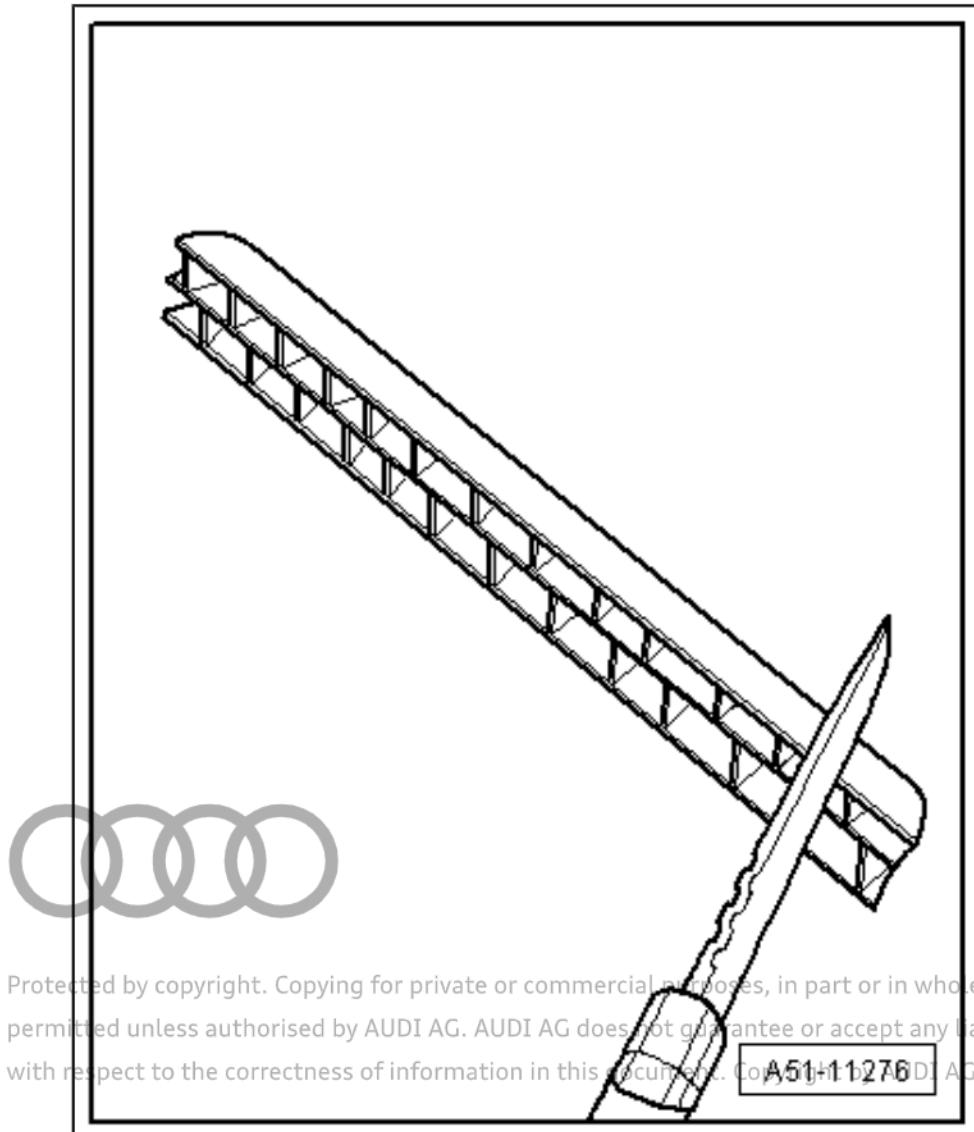

- Screw extension hose onto mixer.

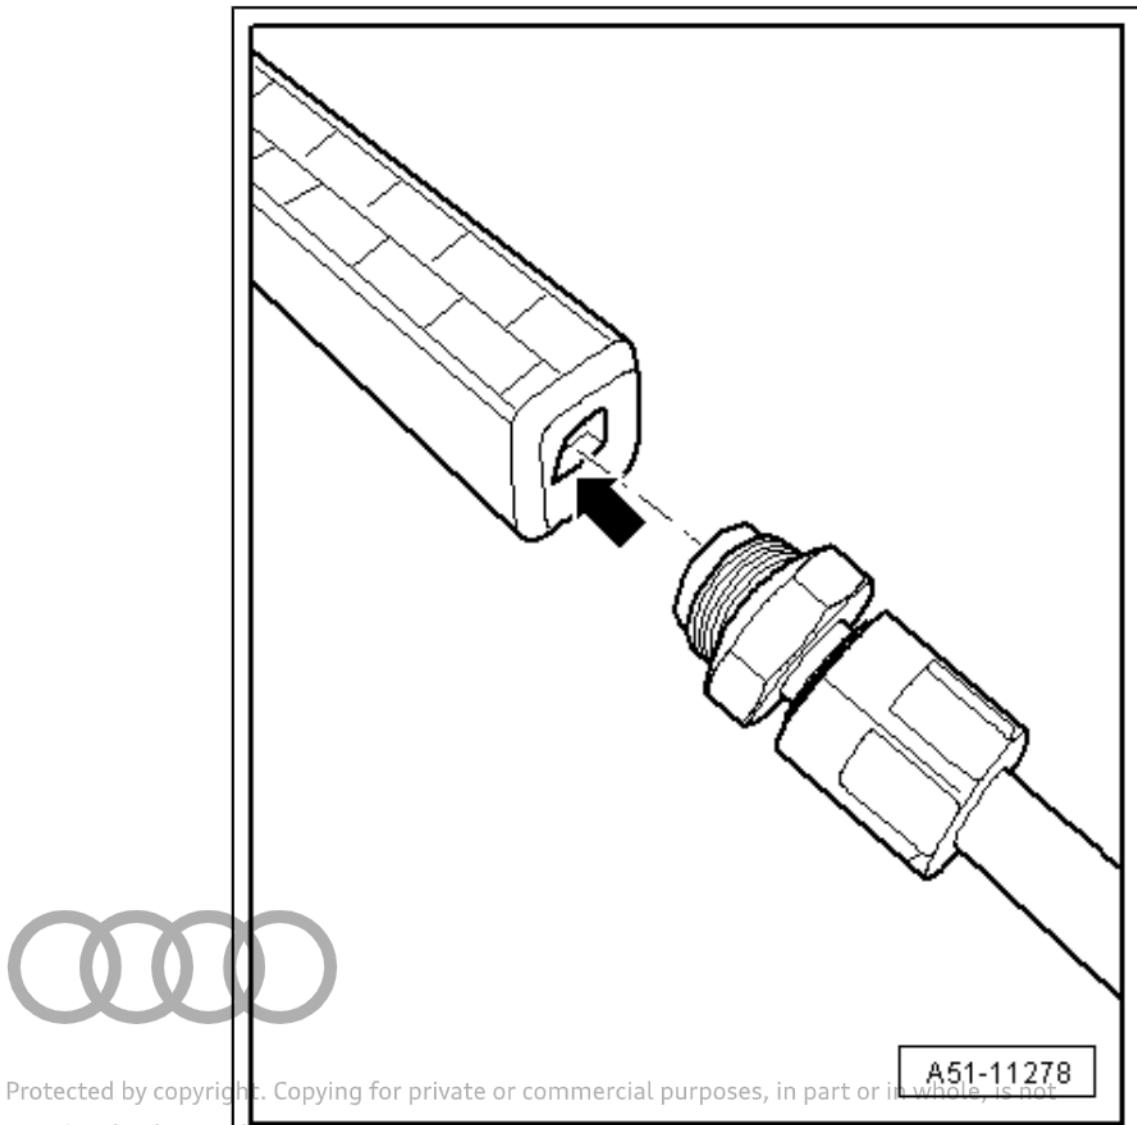


5.3 Procedure

Cutting locations

- Roughly cut out roof parallel with plasmatron weld seam -1- at a distance of approx. 30 mm using body saw .
- Separate original joint to windscreen opening and rear lid opening using spot weld breaker .
- Working from passenger compartment, separate bonded joints between roof and roof cross members using electric cutter - V.A.G 1561 A- .



Protected by copyright.
Any unauthorized copying or distribution
is prohibited.

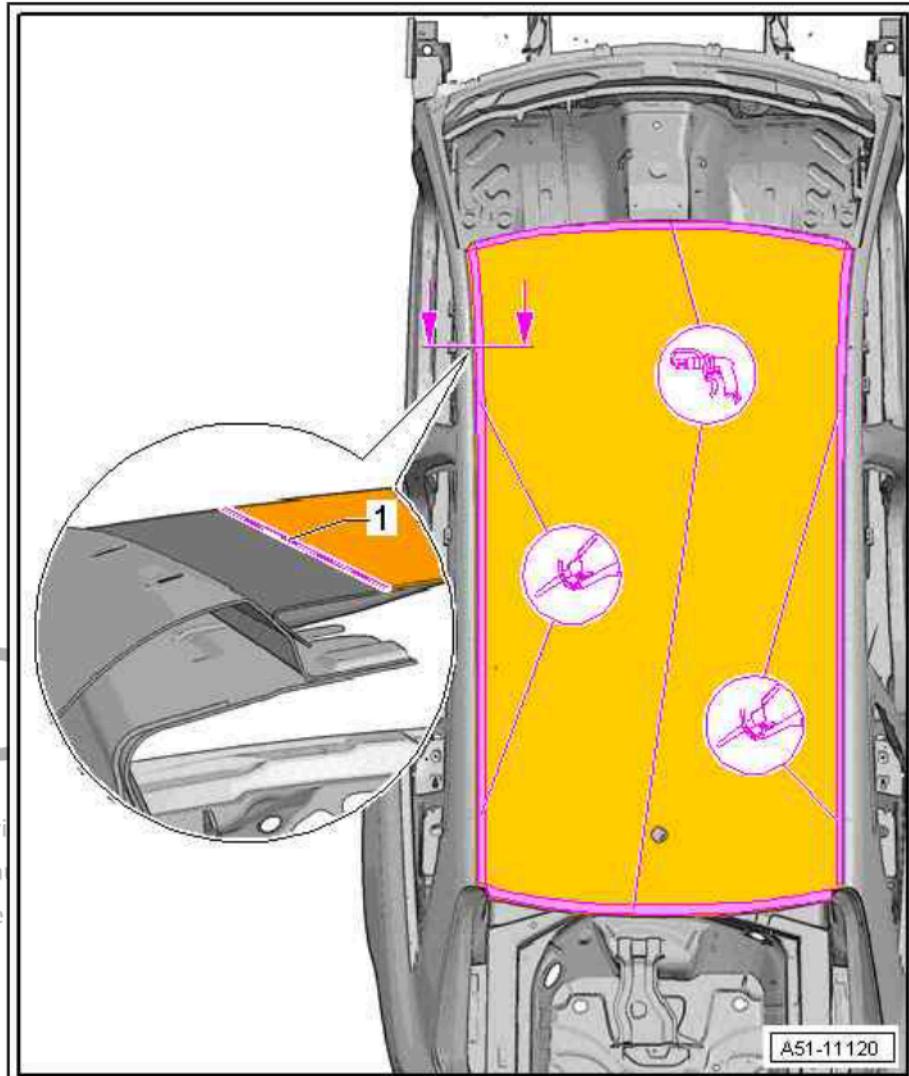


Note

Take care not to damage the roof side members when making cuts and when moving the remaining sections of the roof up and down.

- Make cuts in remaining sections of roof using tin snips - VAS 5357- .
- Grip remaining sections with pliers and break open plasmatron weld seam by moving up and down.




Protected by copyright. Copying
permitted unless authorised by
with respect to the correctness

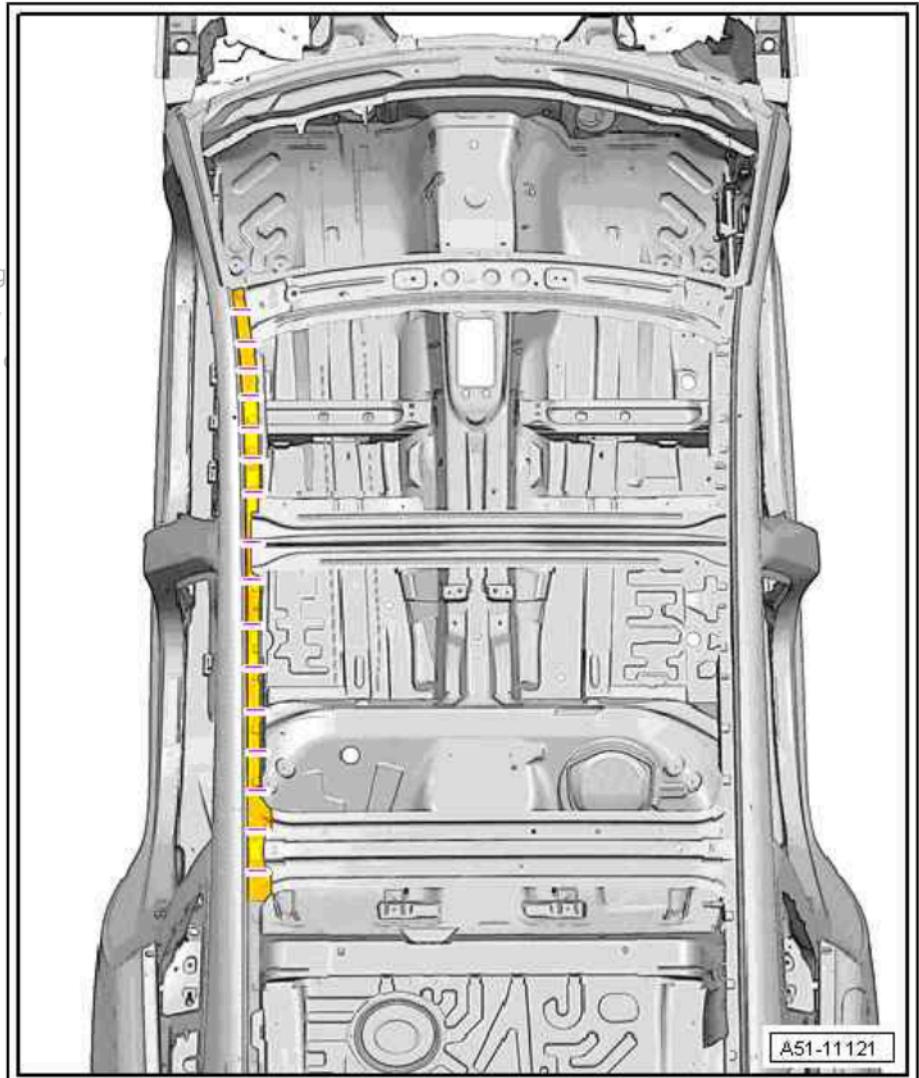

Note

- ◆ Take care not to damage the roof side members -1- when removing the remaining sections of the roof -2-.
- ◆ Use a suitable flap disc; do not use a cutting disc or rough-filing disc.
- Remove remaining material using compact angle grinder .
- Remove all residual adhesive and sealing compound -3- from roof cross members using scraper - VAS 5448- .
- Grind bonding areas down to bare metal.

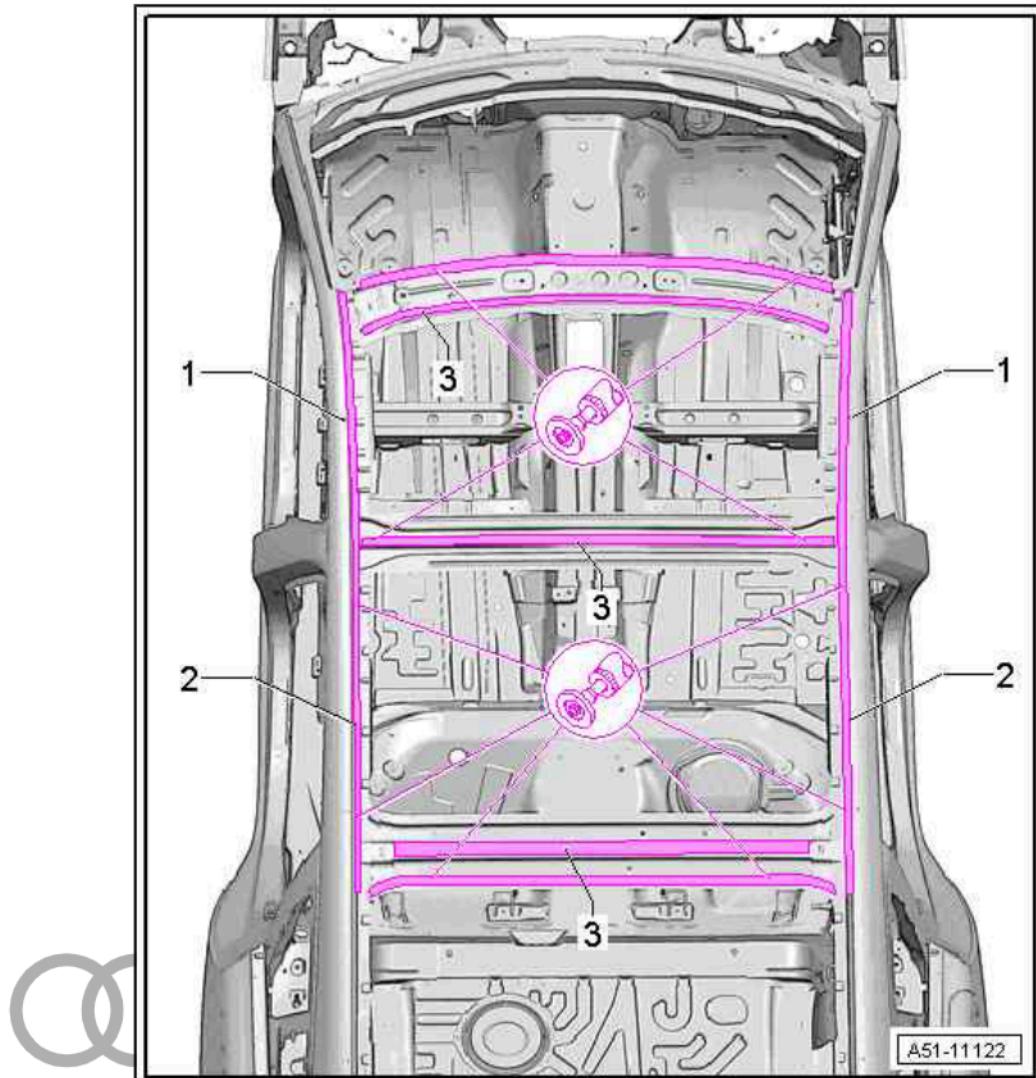

Replacement parts

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

- ◆ Roof (normal version)
- ◆ Single-component assembly adhesive - D 190 MKD A3 - , 1 cartridge
- ◆ 2-component epoxy adhesive - DA 180 A00 A2 - , 2 sets of cartridges
- ◆ Cleaning solution - D 009 401 04-
- ◆ Glass and paint primer - D 009 200 02-
- ◆ 2-component window adhesive - DA 004 660 M2 - , 3 sets of cartridges

Preparing new part



Note


- ◆ *It is important to keep to the following procedure to ensure a satisfactory and effective roof repair.*
- ◆ *Bonded areas must not be treated with filler coat (surfacer) and painted before bonding in the roof.*
- ◆ *The adhesive materials must be applied very quickly.*
- ◆ *Make sure adhesive is applied before pot life is exceeded.* Commercial purposes, in part or in whole, is not
- ◆ *Use a pneumatic cartridge gun to apply the bonding materials.* does not guarantee or accept any liability
- ◆ *Affixing adhesive tape to the roof parallel with the bonded seam on the side prevents soiling when bonding.*

Bonding in


- Position roof on roof frame and check alignment of roof with roof side members (visual inspection).
- Check fit of roof with rear lid and windscreen.
- Fix roof in position in windscreen flange and sealing flange of rear lid using one self-tapping screw at each end.
- Remove roof.
- Apply glass and paint primer - D 009 200 02- in area of roof frame -a-.




Protected by copyright
permitted unless auth
with respect to the cor

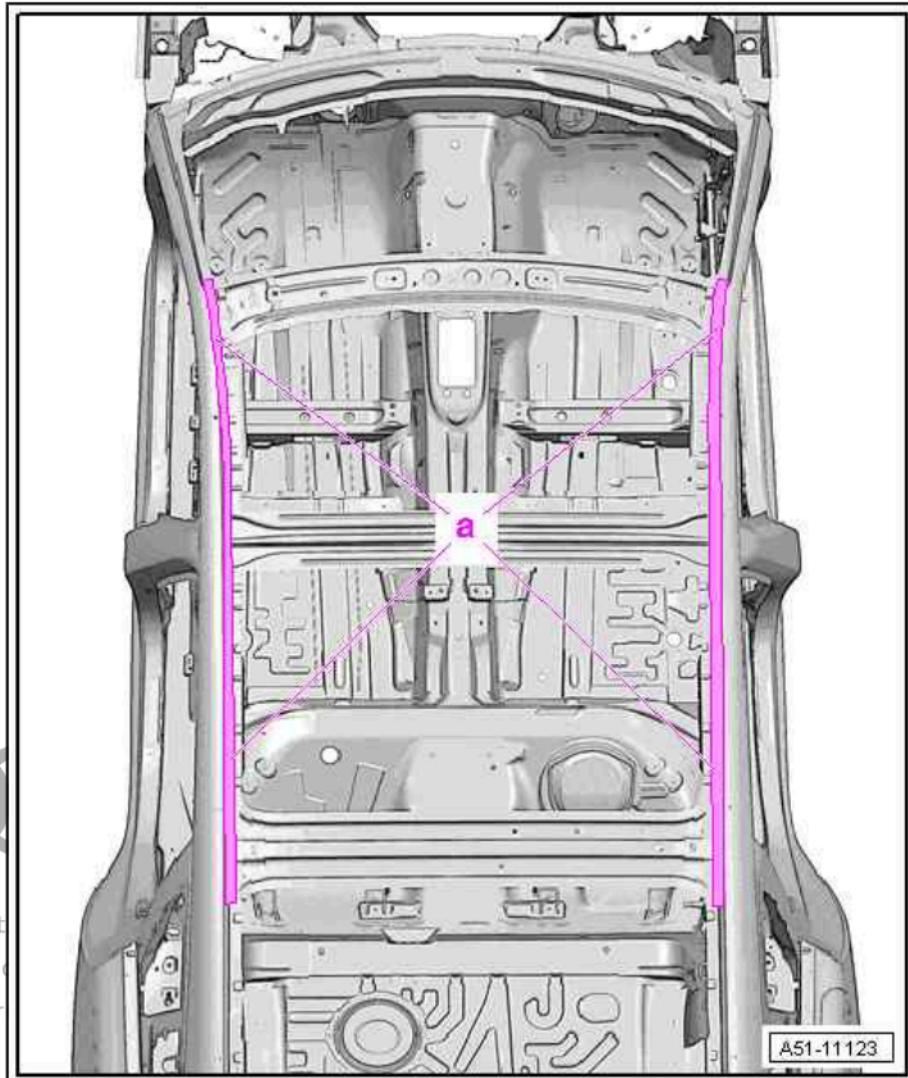


- Apply glass and paint primer - D 009 200 02- approx. 5 cm wide -b- on inner section of roof and inner side flange -a-.

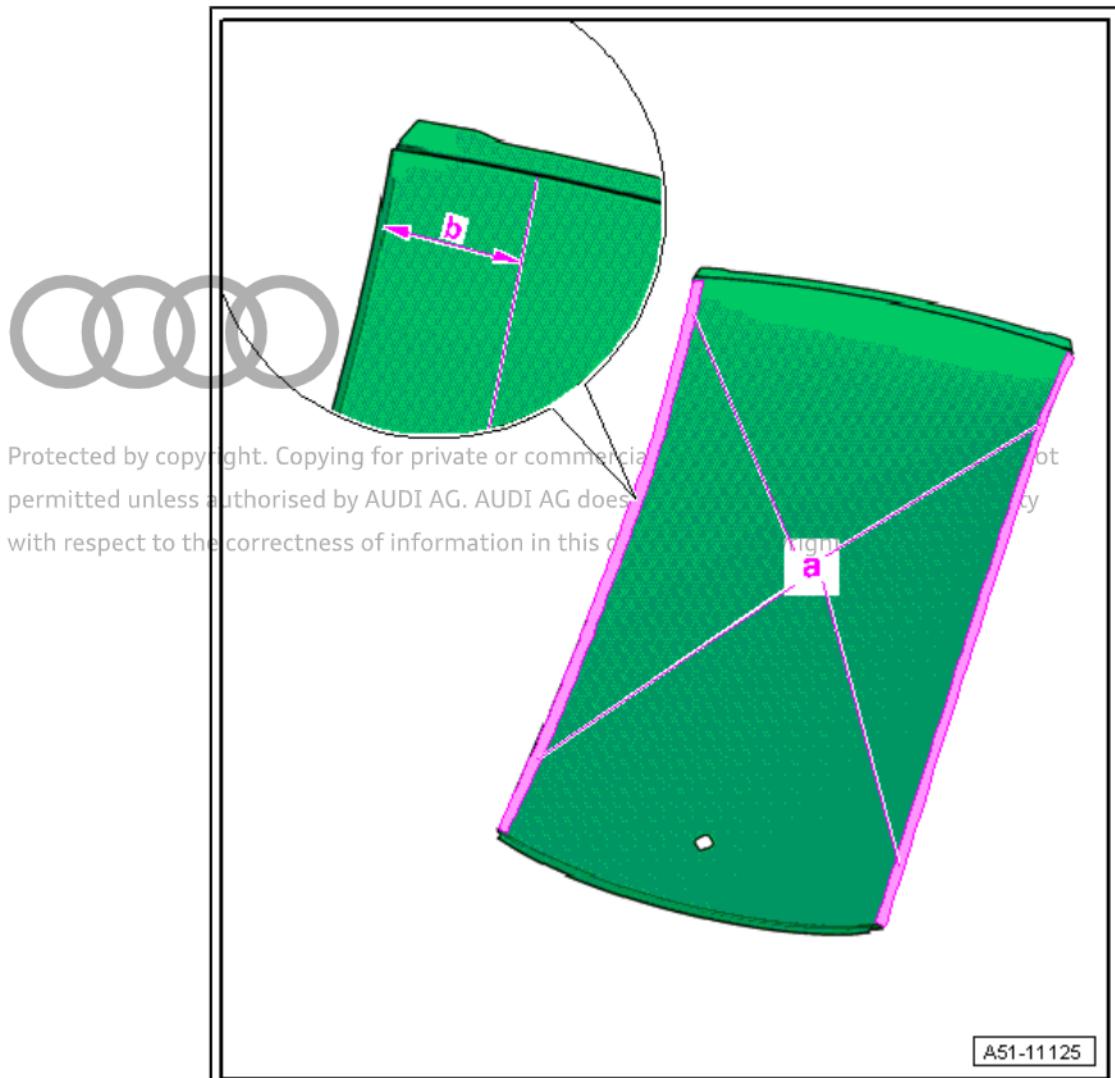

- Cut off approx. 2 mm from nozzle -B- to obtain appropriate bead geometry.

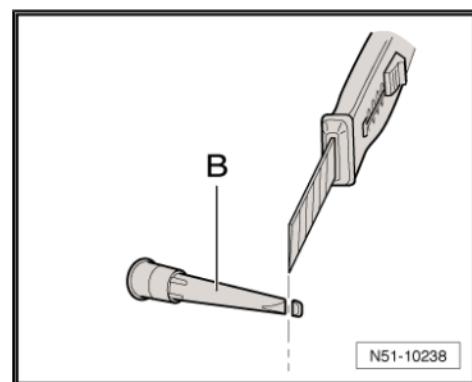

- Apply single-component assembly adhesive - D 190 MKD A3- to roof cross members in the area of the factory bonding location using pneumatic cartridge gun - V.A.G 1761/1- .

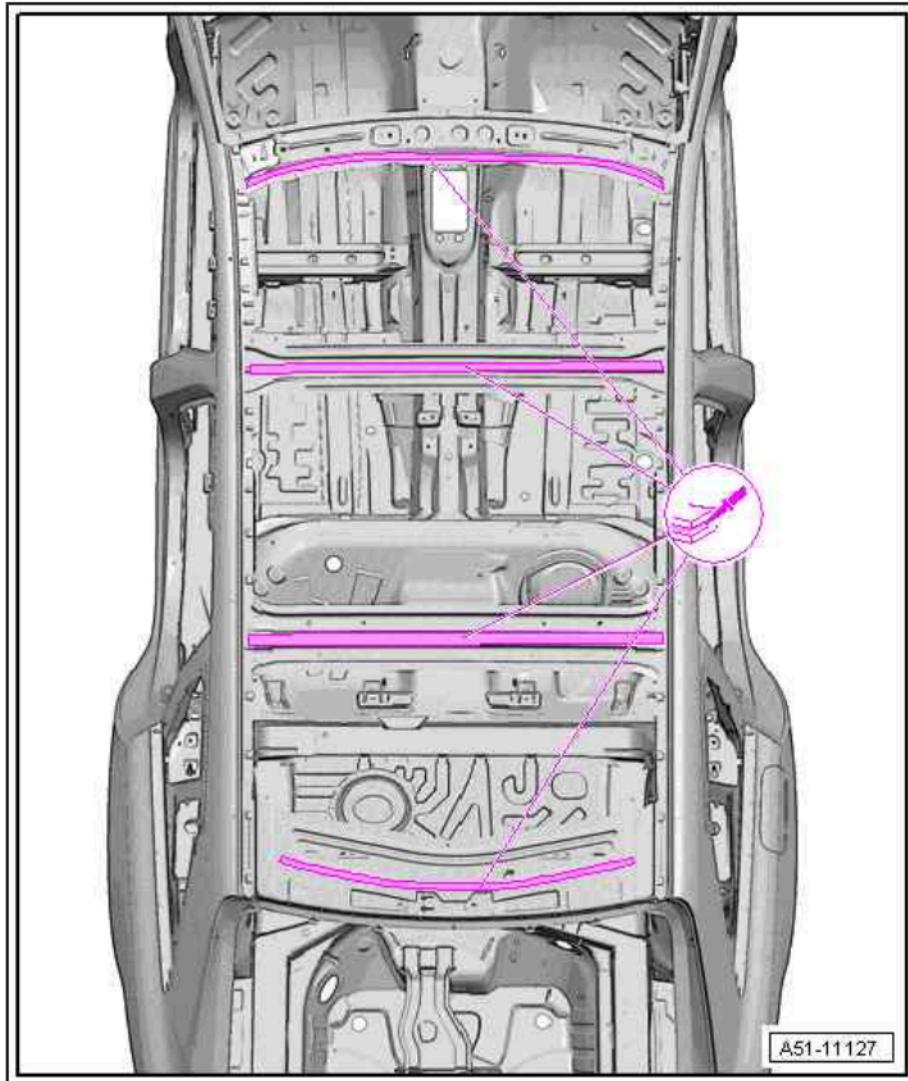


Preparing new part

- Cut static mixer from 2-component epoxy adhesive set - DA 180 A00 A2- down to 4th notch to obtain required bead cross section.




Note

- ◆ The pot life of the 2-component epoxy adhesive - DA 180 A00 A2- is roughly 90 minutes.
- ◆ A second mechanic is required for the next steps.

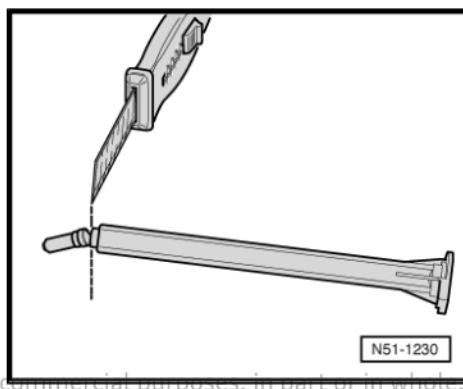

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not


- Apply continuous bead permitted of 2-component epoxy adhesive - DA 180 A00 A2- to bevelled sections of roof side members using double-cartridge gun - VAS 6453- . AUDI AG does not guarantee or accept any liability for any damage resulting from incorrect use or incorrectness of information in this document. Copyright by AUDI AG.

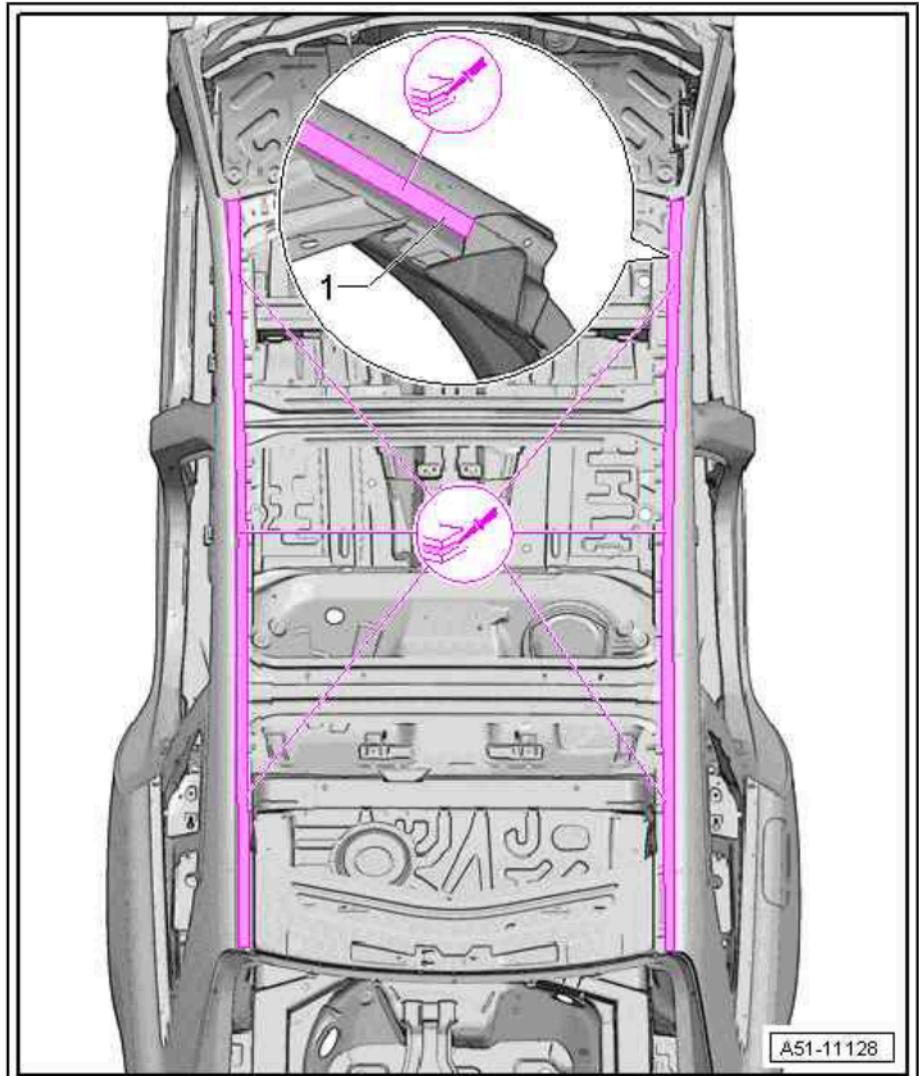

- Apply one continuous bead of 2-component epoxy adhesive - DA 180 A00 A2- to side flanges of roof using double cartridge gun - VAS 6453- .



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

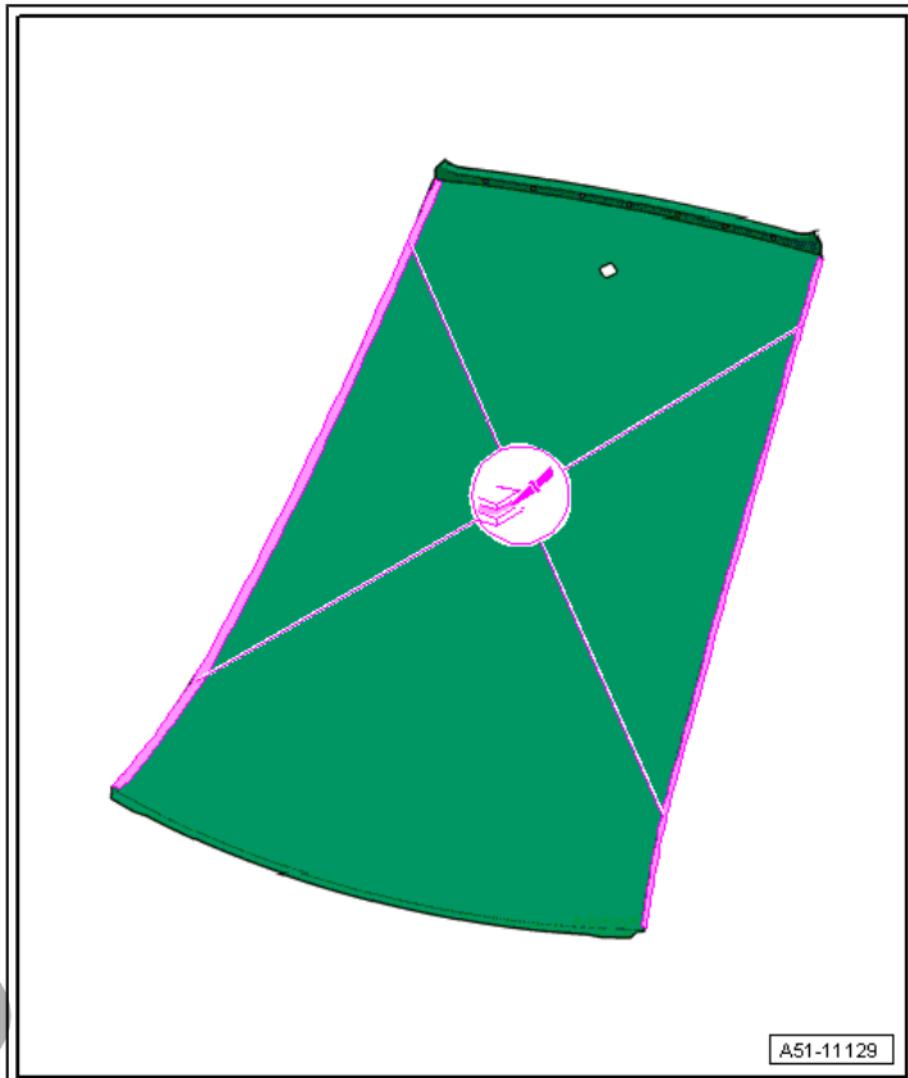

- Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability.
- Immediately fit and align roof.
 - Use one self-tapping screw at each end to fix roof in position in centring hole in windscreens flange and sealing flange for rear lid.
 - Fix roof in position at windscreens opening and rear window opening using mole grips, 18-18 - VAS 5430/1- .

Adjusting roof depth


- Additionally fix roof in position with two tensioning straps - T 10038- -1-.
- Set required depth using e.g. drill bit or suitable wooden spacer -2-.

Depth setting in centre part of front door -a = 3.0 mm -

Depth setting in centre part of rear door -a = 2.5 mm -



Protected by copyright. Copying for private use is
permitted unless authorised by AUDI AG.
Violations will be prosecuted with respect to the correctness of information.

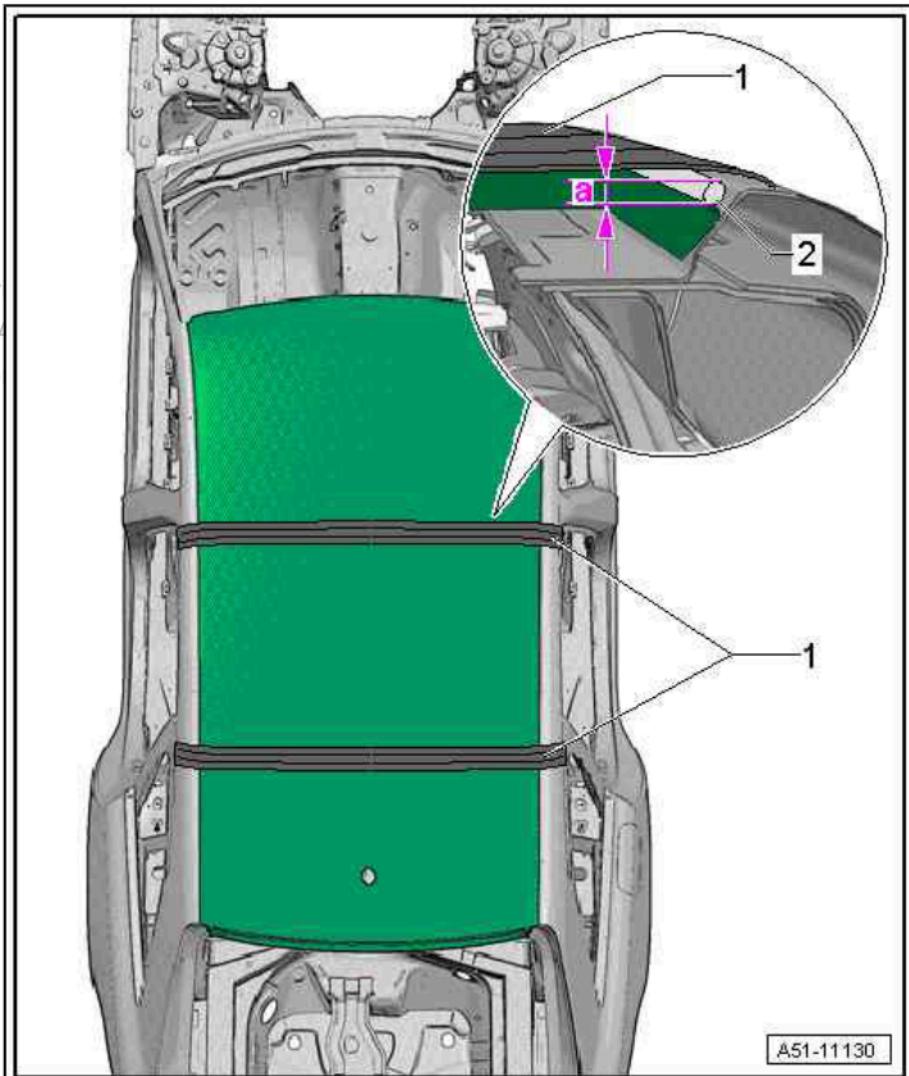

- Roughly spread any 2-component epoxy adhesive - DA 180 A00 A2- that comes out at edge of roof.



CAUTION

Allow bonded joint on roof to harden for 60 minutes at approx. 65 °C using radiant heater. Check temperature constantly with temperature sensor.



Note


Due to the different types of steel and panel thicknesses employed, one of the resistance spot welding units listed in this manual and approved by Audi must be used to ensure correct results when spot welding.

Welding in

Weld in roof at front and rear using resistance spot welder : RP spot weld seam.




Protected by copyright
permitted unless au
with respect to the d

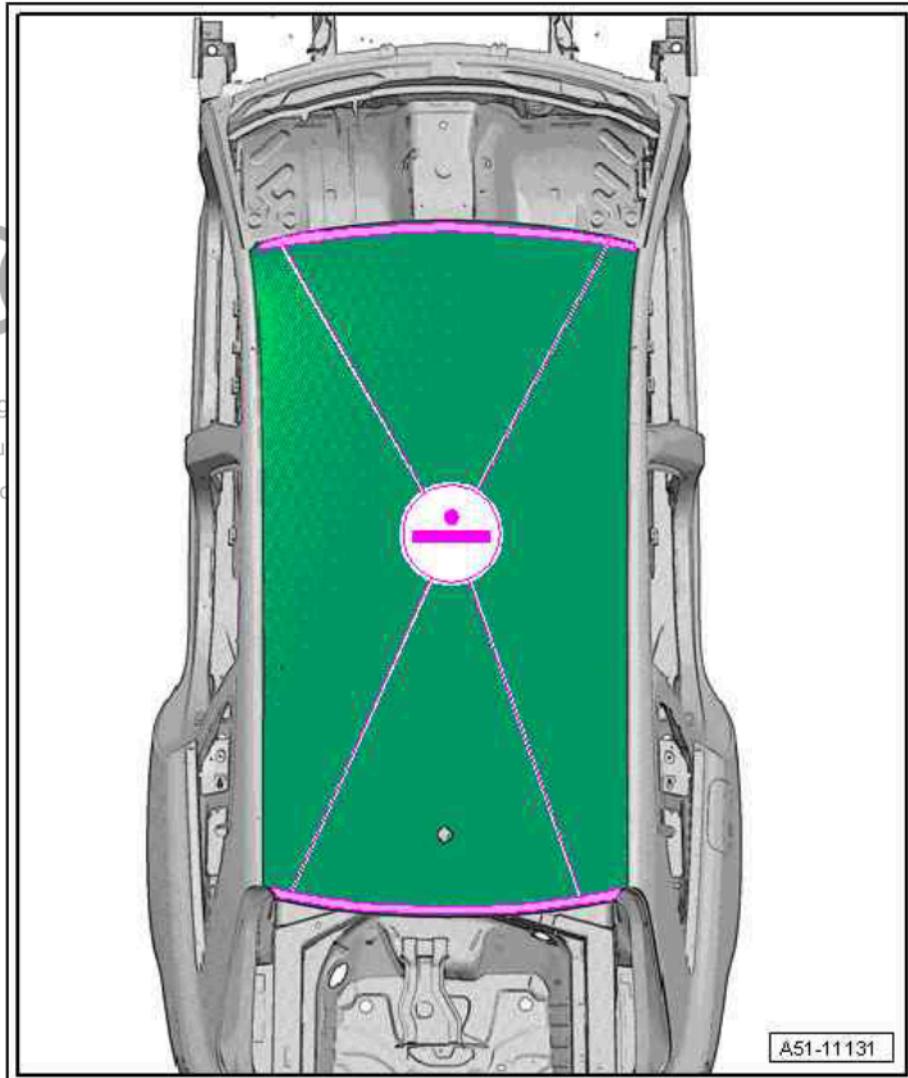

- Weld in roof additionally at corners using shielded arc welding equipment : SG continuous seam.
- Grind down SG continuous weld seams using compact angle grinder .




Protected by copyright. Copying for
permitted unless authorised by AUDI
with respect to the correctness of in

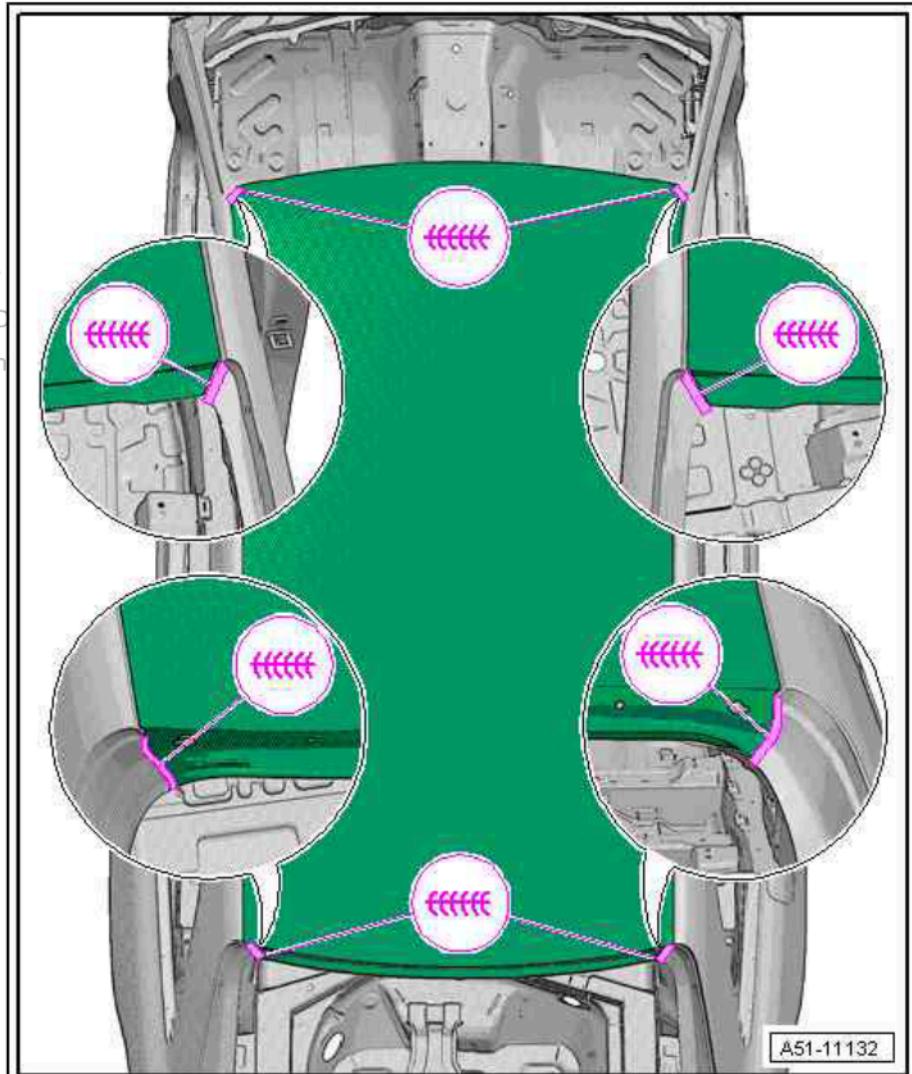

- Grind zero-gap joint -1- into shape (left and right).




Protected by copyright. Copying
permitted unless authorised by A
with respect to the correctness o

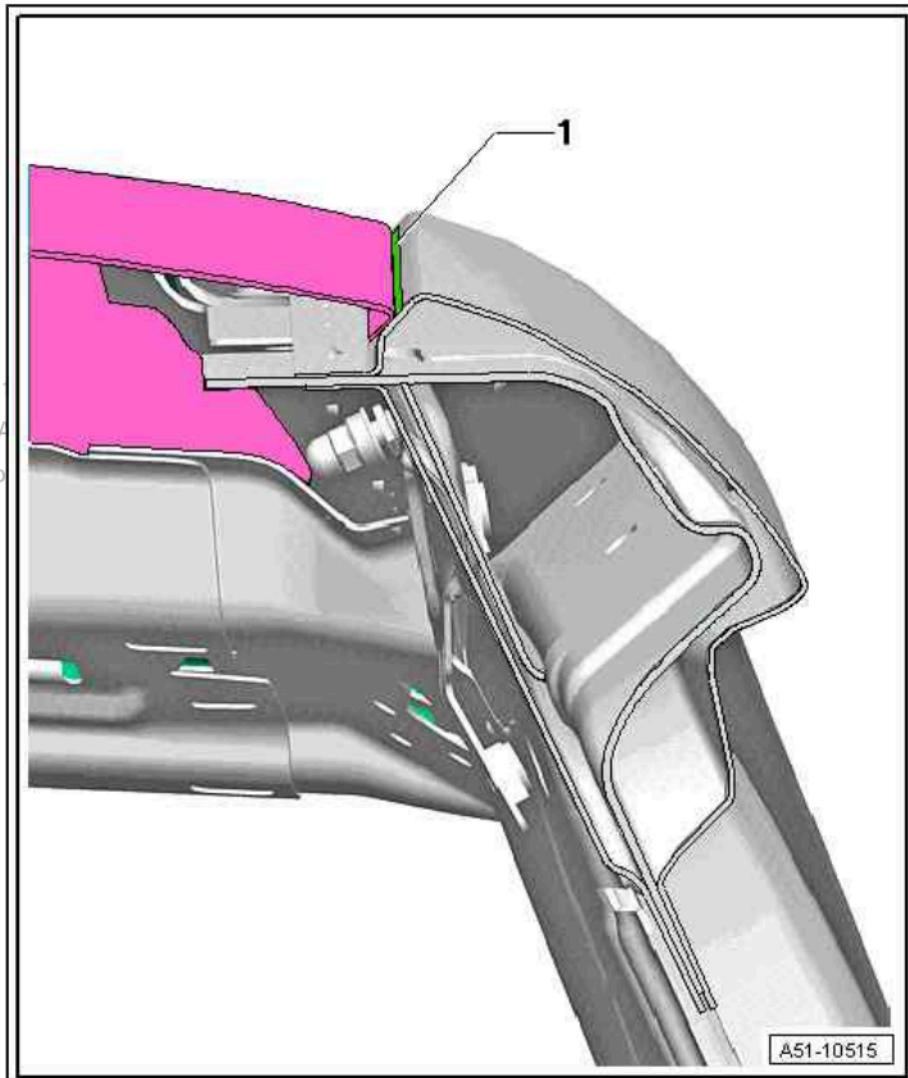

Note

Please note instructions for use: window adhesive should be applied at a temperature of approx. 20°C.

- Apply one cartridge of 2-component window adhesive - DA 004 660 M2 - 3- into each roof side member using double cartridge gun - VAS 5237- .
 - ◆ 1 = 2-component epoxy adhesive - DA 180 A00 A2-
 - ◆ 2 = Glass and paint primer - D 009 200 02-
 - ◆ 3 = 2-component window adhesive - DA 004 660 M2 -

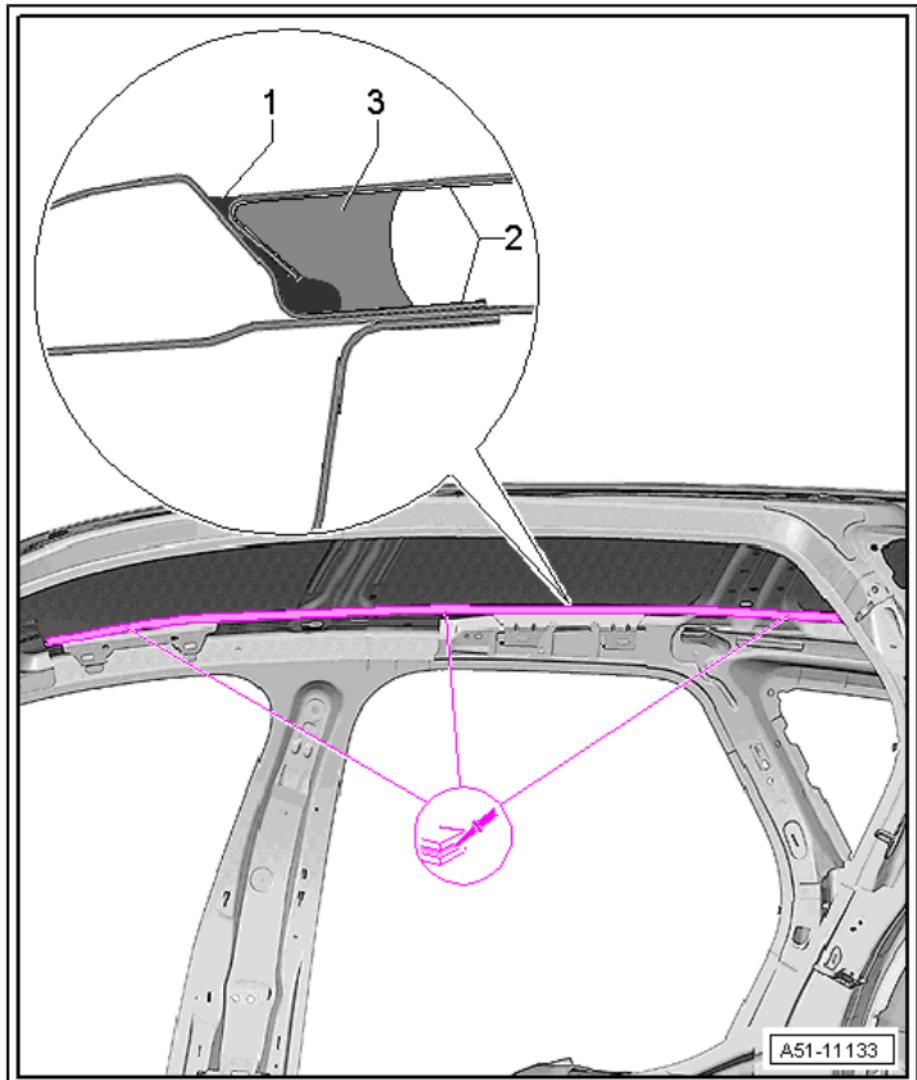

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.


RO: 51 03 55 00

6 Roof - Renewal (Avant with large sunroof)

- 1 - Roof
- 2 - Plasmatron weld seam
- 3 - Bonded area



Protected by copyright. Copying, distribution, or
permitted unless authori
with respect to the corre

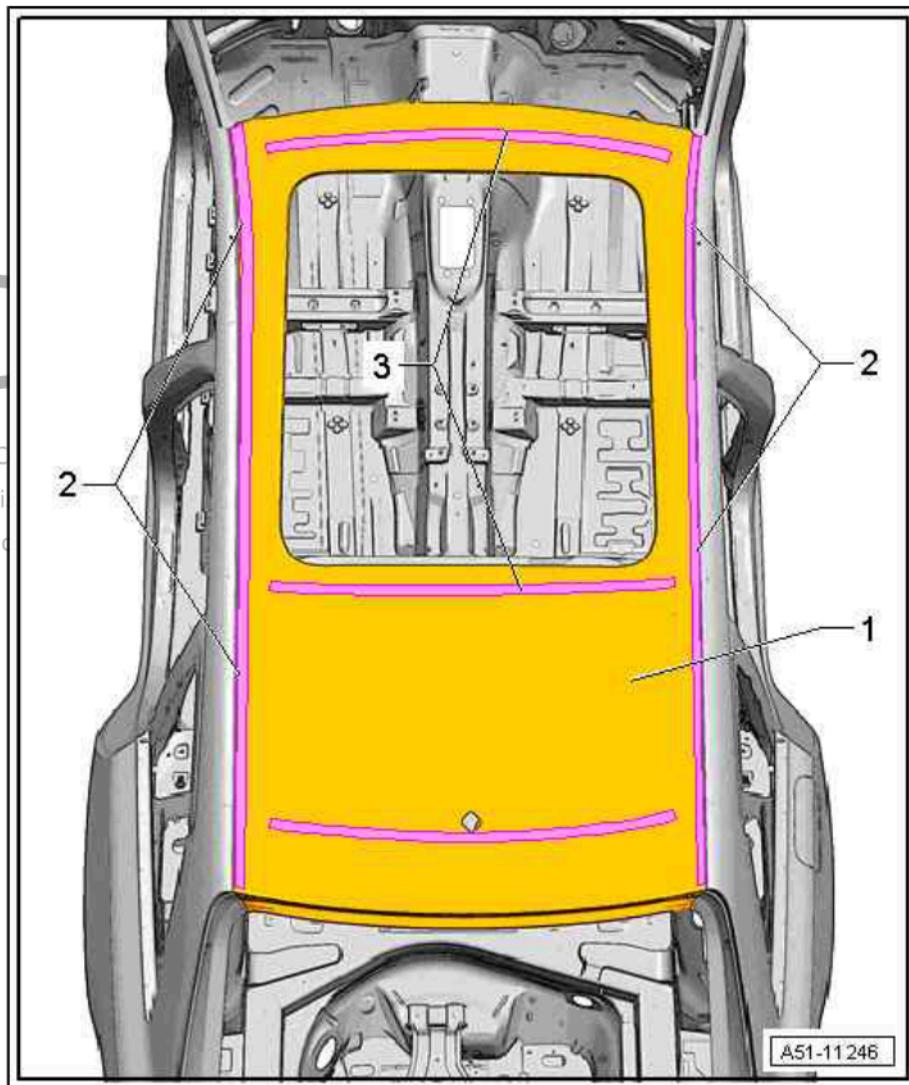

6.1 Notes for vehicles with hybrid drive


[⇒ page 5](#)

6.2 Tools

Special tools and workshop equipment required

- ◆ Resistance spot welder
- ◆ Shielded arc welding equipment
- ◆ Brush grinder
- ◆ Drill
- ◆ Spot weld breaker
- ◆ Suction lifter or magnet
- ◆ Setting gauge
- ◆ Compressed-air gun

- ◆ Tensioning strap
- ◆ Body saw
- ◆ Electric cutter
- ◆ Mole grips, 18-18
- ◆ Double cartridge gun - VAS 6453-
- ◆ Double cartridge gun - VAS 5237-

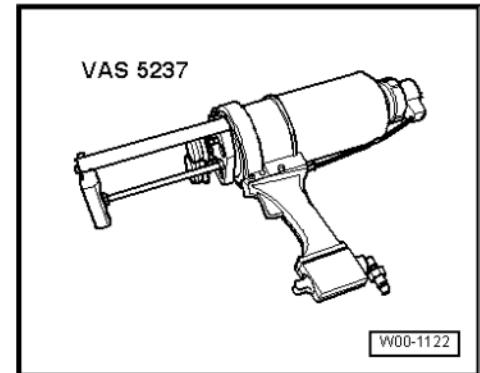

Tools approved by AUDI AG must be used to ensure correct results when carrying out repair work [⇒ page 54](#).


6.3 Procedure

Cutting locations

- Roughly cut out roof parallel with plasmatron weld seam -1- at a distance of approx. 30 mm using body saw .
- Drill off original joint to windscreen opening and rear lid opening using spot weld breaker .
- Working from passenger compartment, separate bonded joints between roof and roof cross members using electric cutter - V.A.G 1561 A- .



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

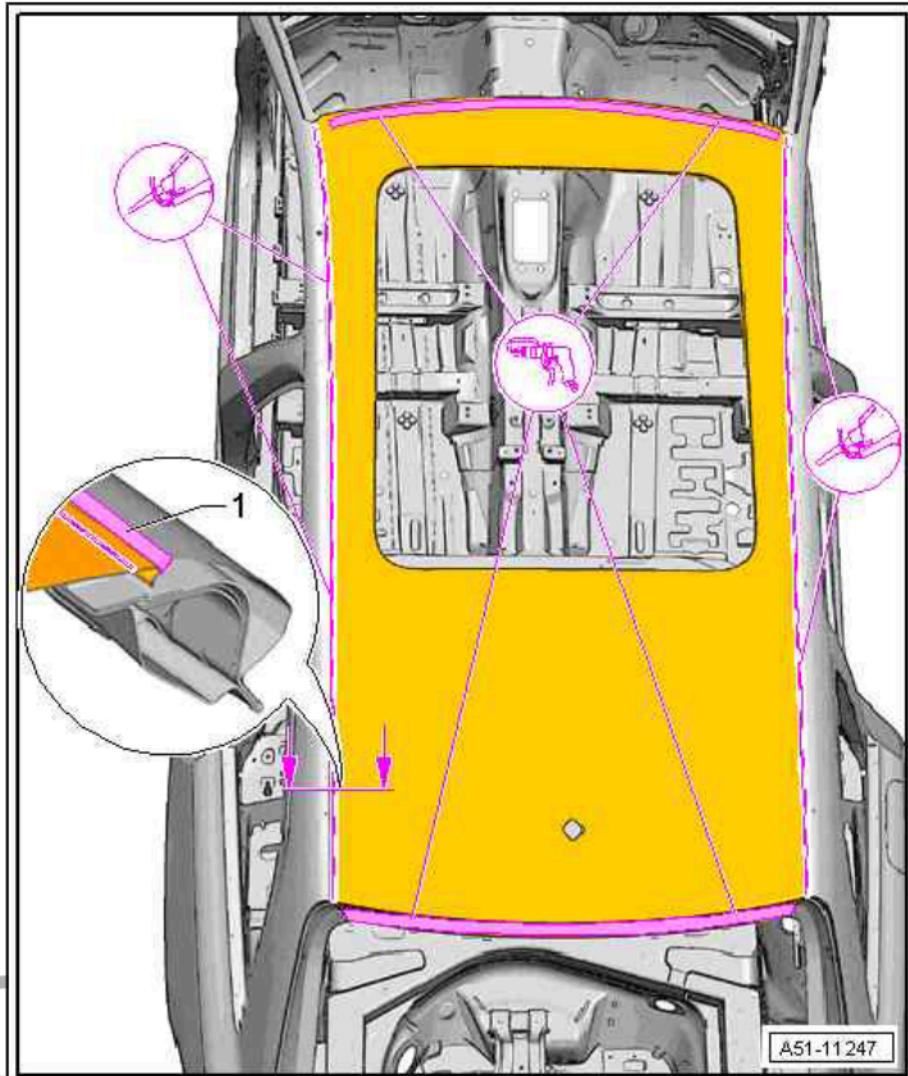


A51-11247



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability

Take care not to damage the roof side members when making cuts and when moving the remaining sections of the roof up and down.

- Make cuts in remaining sections of roof using tin snips .
- Grip remaining sections with pliers and break open plasmatron weld seam by moving up and down.

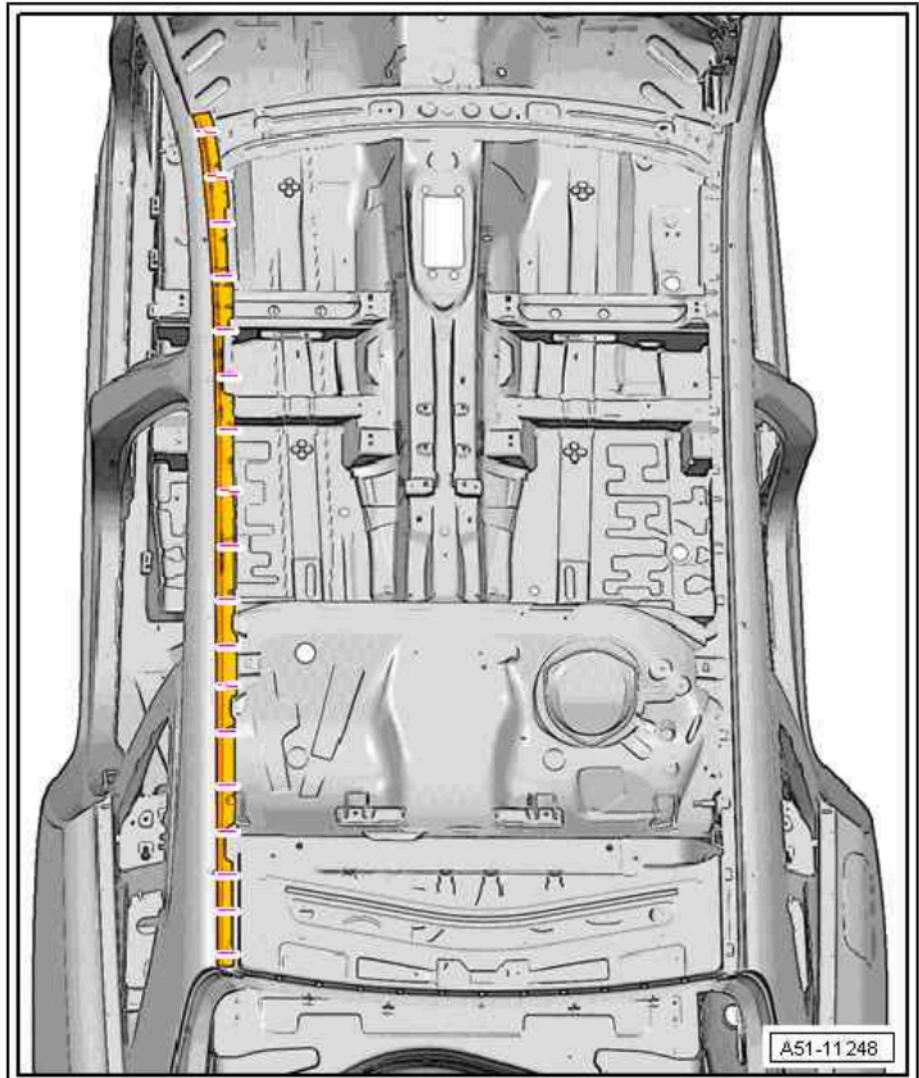


Note

- ◆ Take care not to damage the roof side members -1- when removing the remaining sections of the roof -2-.
- ◆ Use a suitable flap disc; do not use a cutting disc or rough-filing disc.
- Remove remaining material using compact angle grinder .
- Remove all residual adhesive and sealing compound from roof cross members at front and rear using scraper
- Grind bonding areas down to bare metal.

Printed by Audi Hungaria Kft. For internal commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.



Protected by copy
permitted unless
with respect to th

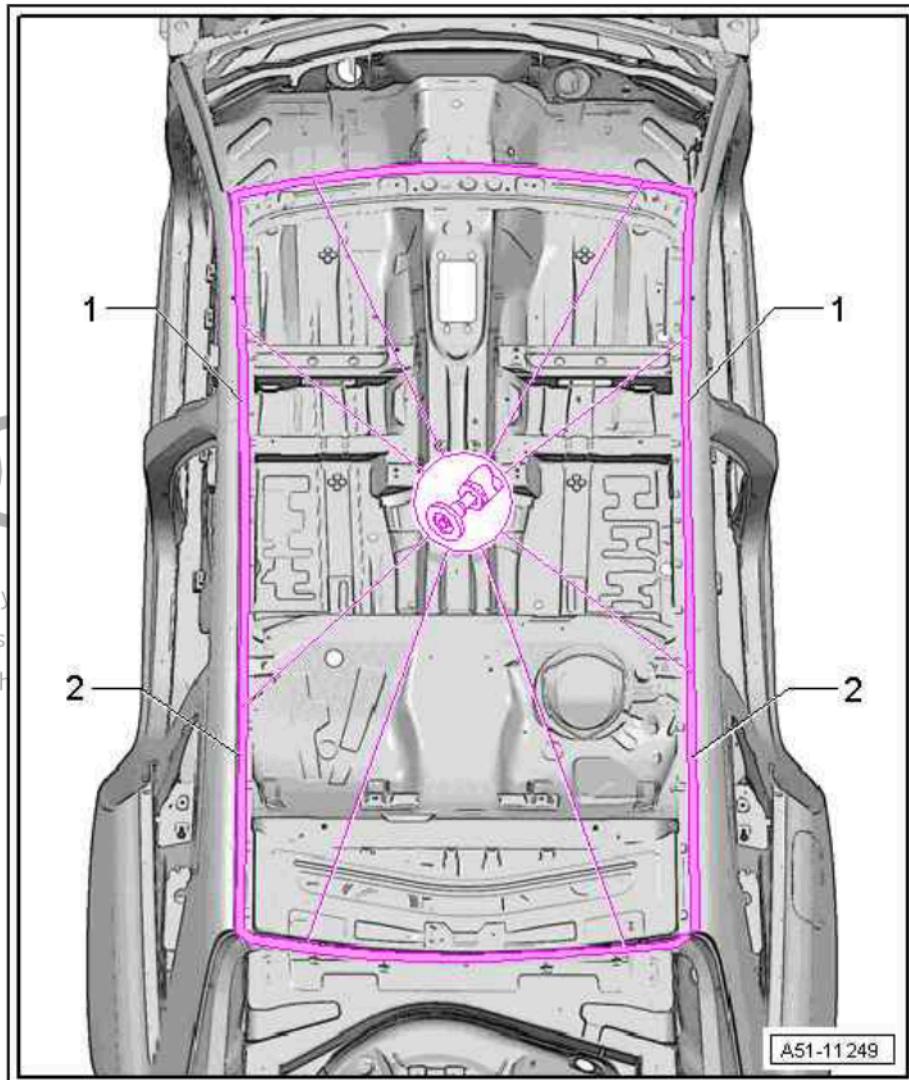

Replacement parts

- ◆ Roof (version with large sunroof)
- ◆ Single-component assembly adhesive - D 190 MKD A3 - , 1 cartridge
- ◆ 2-component epoxy adhesive - DA 180 A00 A2 - , 2 sets of cartridges
- ◆ Cleaning solution - D 009 401 04-
- ◆ ⇒ Audi Paintwork manual

Preparing new part



Note

- ◆ *It is important to keep to the following procedure to ensure a satisfactory and effective roof repair.*
- ◆ *Bonded areas must not be treated with filler coat (surfacer) and painted before bonding in the roof.*
- ◆ *The adhesive materials must be applied very quickly.*
- ◆ *Make sure adhesive is applied before pot life is exceeded.*
- ◆ *Use a pneumatic cartridge gun to apply the bonding materials.*
- ◆ *Affixing adhesive tape to the roof parallel with the bonded seam on the side prevents soiling when bonding.*


Bonding in



- Position roof on roof frame and check alignment of roof with roof side members (visual inspection).
- Check fit of roof with rear lid and windscreen.
- Fix roof in position in windscreen flange and sealing flange of rear lid using one self-tapping screw at each end.
- Remove roof.


Apply zinc spray to welding flanges for RP spot weld seam on roof cross members -1- and roof -1-.

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability in this document. Copyright by AUDI AG.

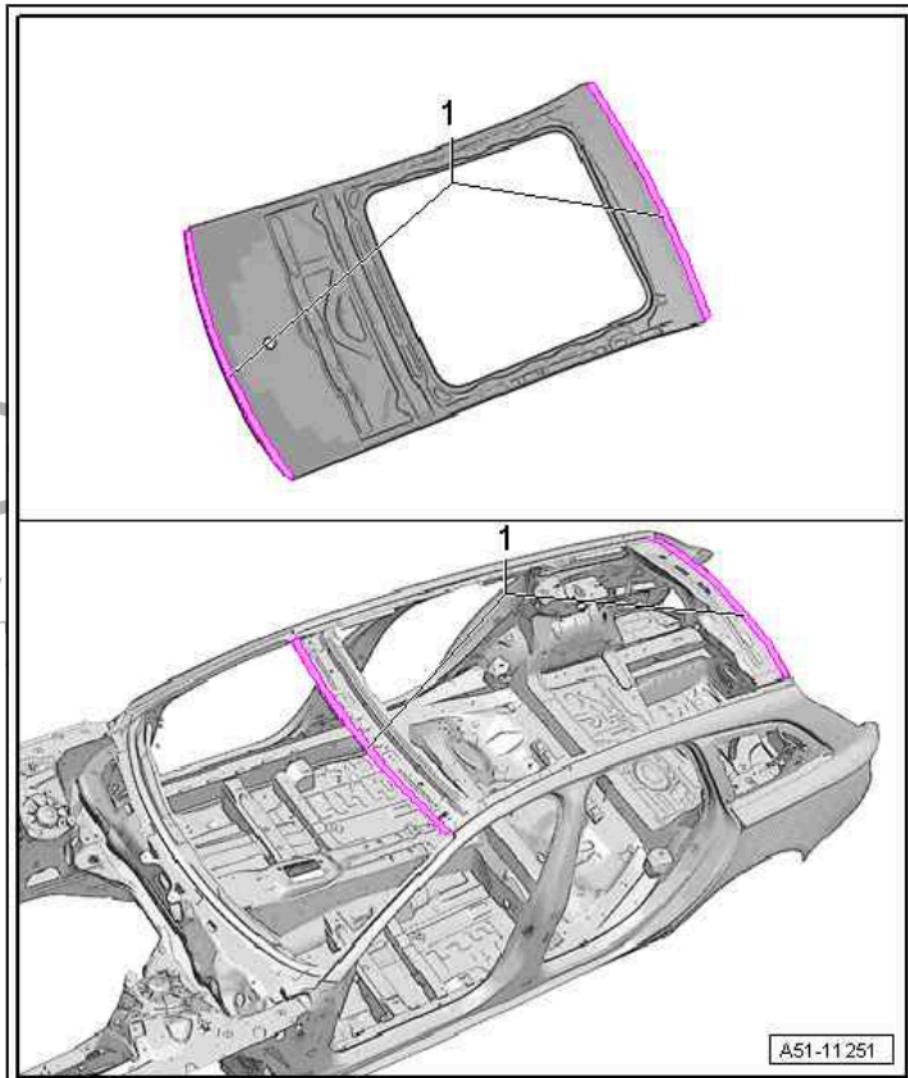


Preparing new part

- Cut off approx. 2 mm from nozzle -B- to obtain appropriate bead geometry.

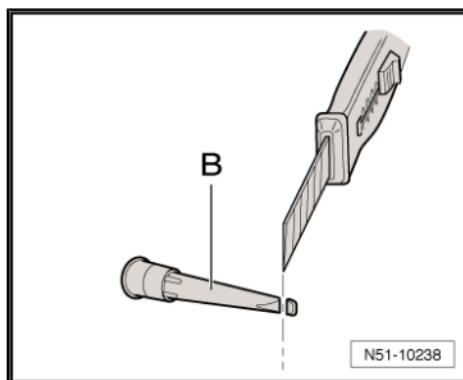

- Apply single-component assembly adhesive - D 190 MKD A3- with pneumatic cartridge gun - V.A.G 1761/1- to rear roof cross member in the area of the factory bonding location.

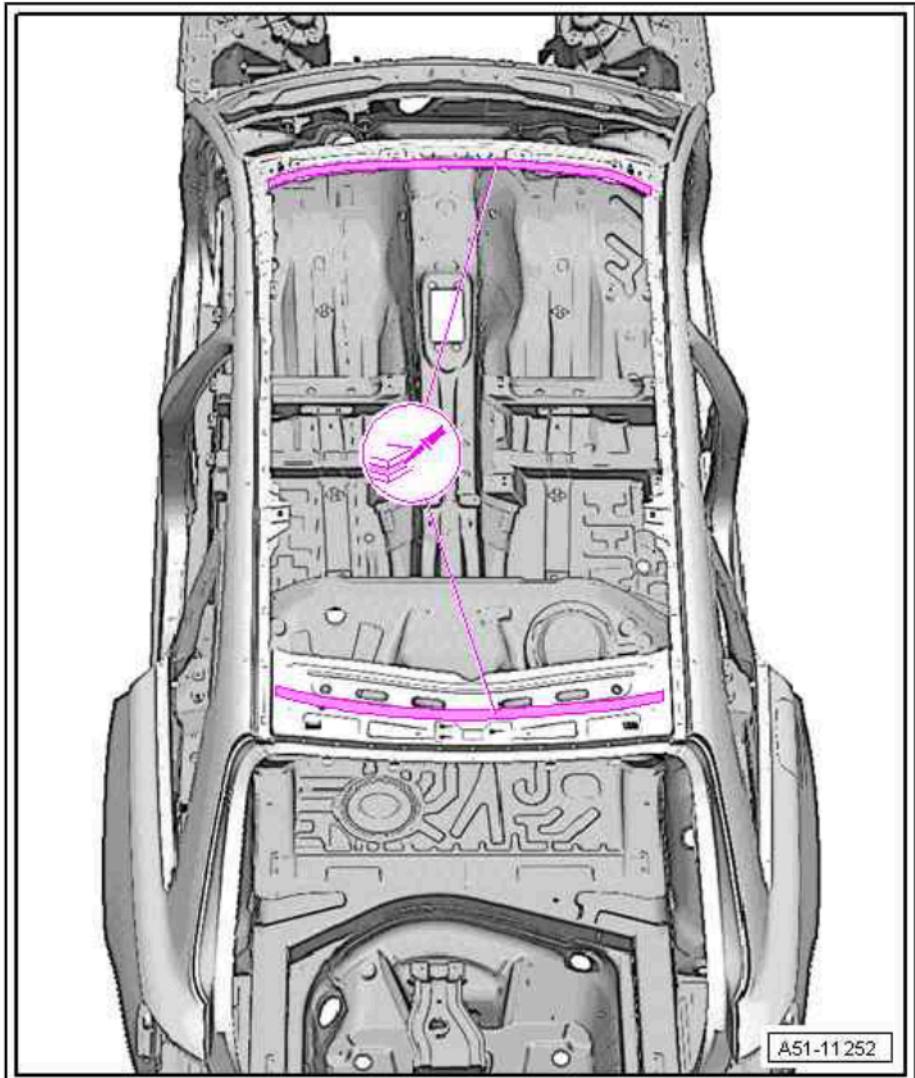

A51-11252


- Cut static mixer from 2-component epoxy adhesive set - DA 180 A00 A2- down to 4th notch to obtain required bead cross section.



Note



- ◆ *The pot life of the 2-component epoxy adhesive - DA 180 A00 A2- is roughly 90 minutes.*
- ◆ *A second mechanic is required for the next steps.*

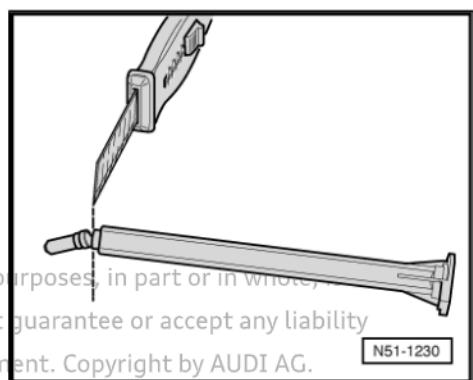


N51-1230


- Apply two continuous beads -1- of 2-component epoxy adhesive - DA 180 A00 A2- to bevelled sections of roof side members in area of zero-gap joint using double cartridge gun - VAS 6453- .
- Apply one continuous bead -2- of 2-component epoxy adhesive - DA 180 A00 A2- to roof frame and roof cross members over entire contact area of roof reinforcement using double cartridge gun - VAS 6453- .



Protected by copy
permitted unless
with respect to

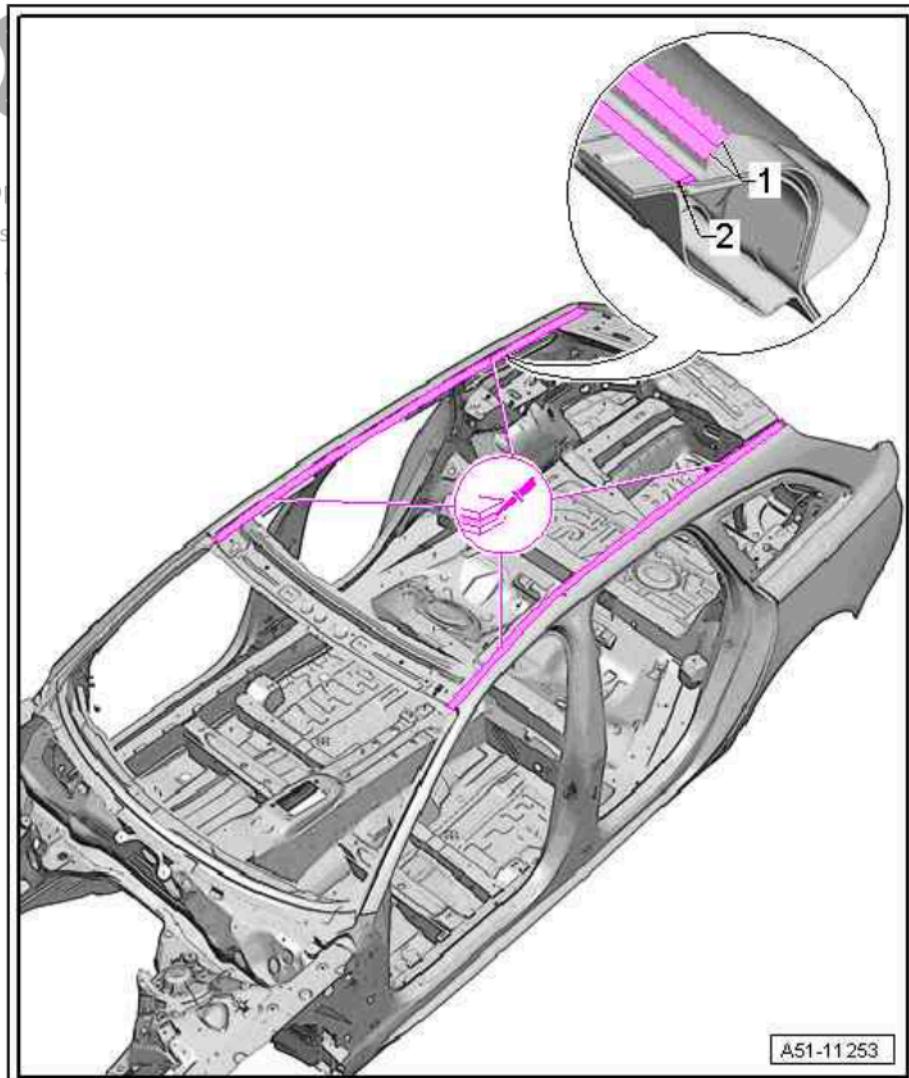

- Apply one continuous bead of 2-component epoxy adhesive - DA 180 A00 A2- to side flanges of roof using double cartridge gun - VAS 6453- .

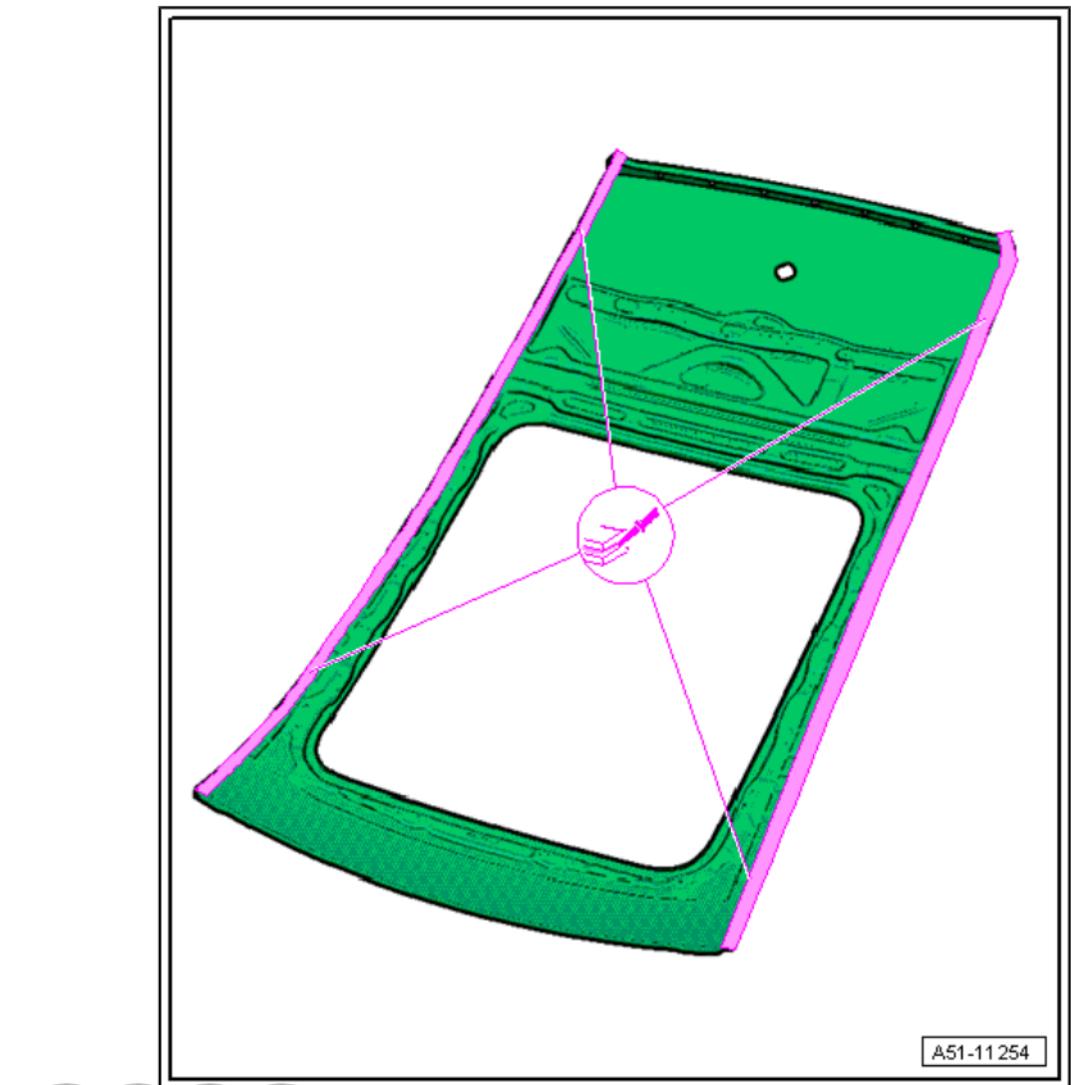


- Immediately fit and align roof.
- Use one self-tapping screw at each end to fix roof in position in centring hole in windscreens flange and sealing flange for rear lid. Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted.
- Fix roof in position at **windscreen opening and rear window**. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

Adjusting roof depth


- Additionally fix roof in position with two tensioning straps - T 10038- -1-.
- Set required depth using e.g. drill bit or suitable wooden spacer -2-.

Depth setting in centre part of front door -a = 3.0 mm -

Depth setting in centre part of rear door -a = 2.5 mm -

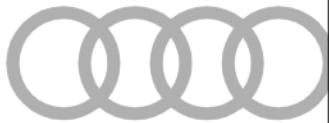

Protected by copyright. Copy
permitted unless authorised
with respect to the correctne

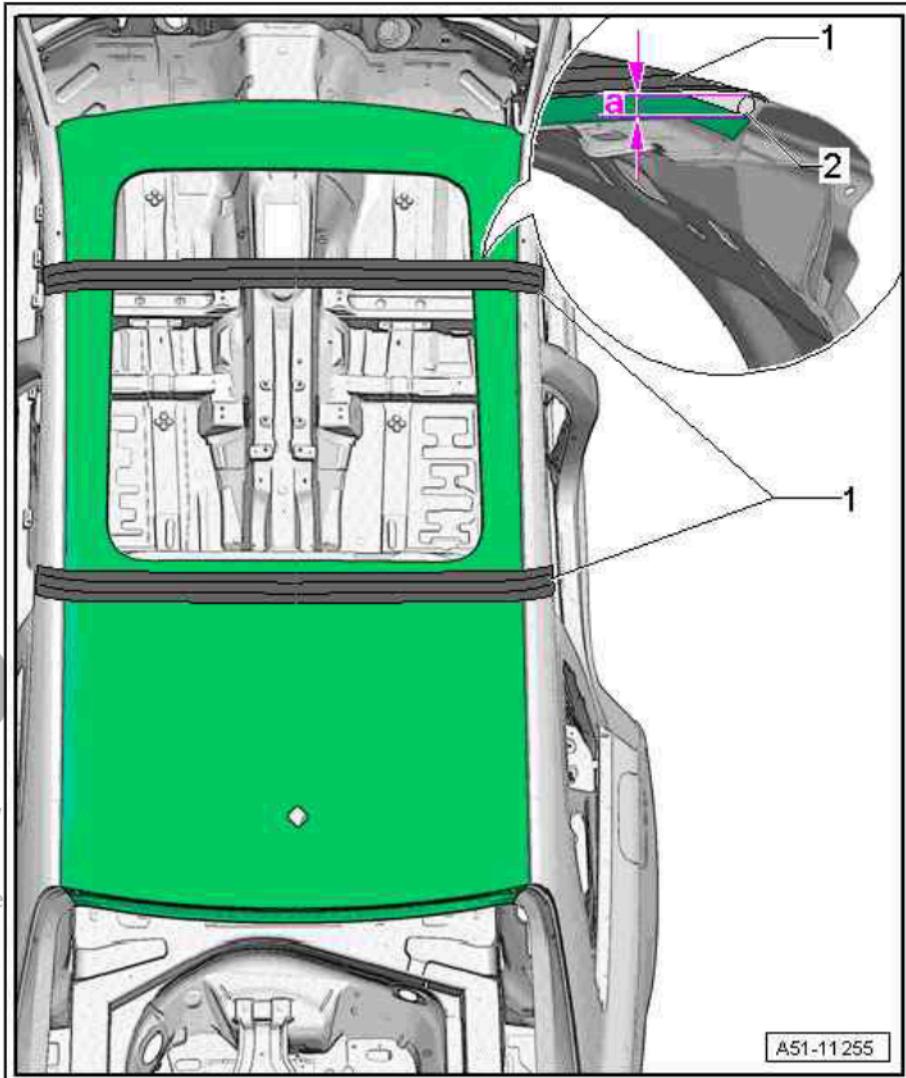

- Roughly spread any 2-component epoxy adhesive - DA 180 A00 A2- that comes out at edge of roof.

⚠ CAUTION

Allow bonded joint on roof to harden for 60 minutes at approx. 65 °C using radiant heater. Check temperature constantly with temperature sensor.

i Note


Due to the different types of steel and panel thicknesses employed, one of the resistance spot welding units listed in this manual and approved by Audi must be used to ensure correct results when spot welding.

Welding in


- Weld in roof using shielded arc welding equipment : SG continuous seam (12 x 15 mm).



Protected by
permitted un
with respect

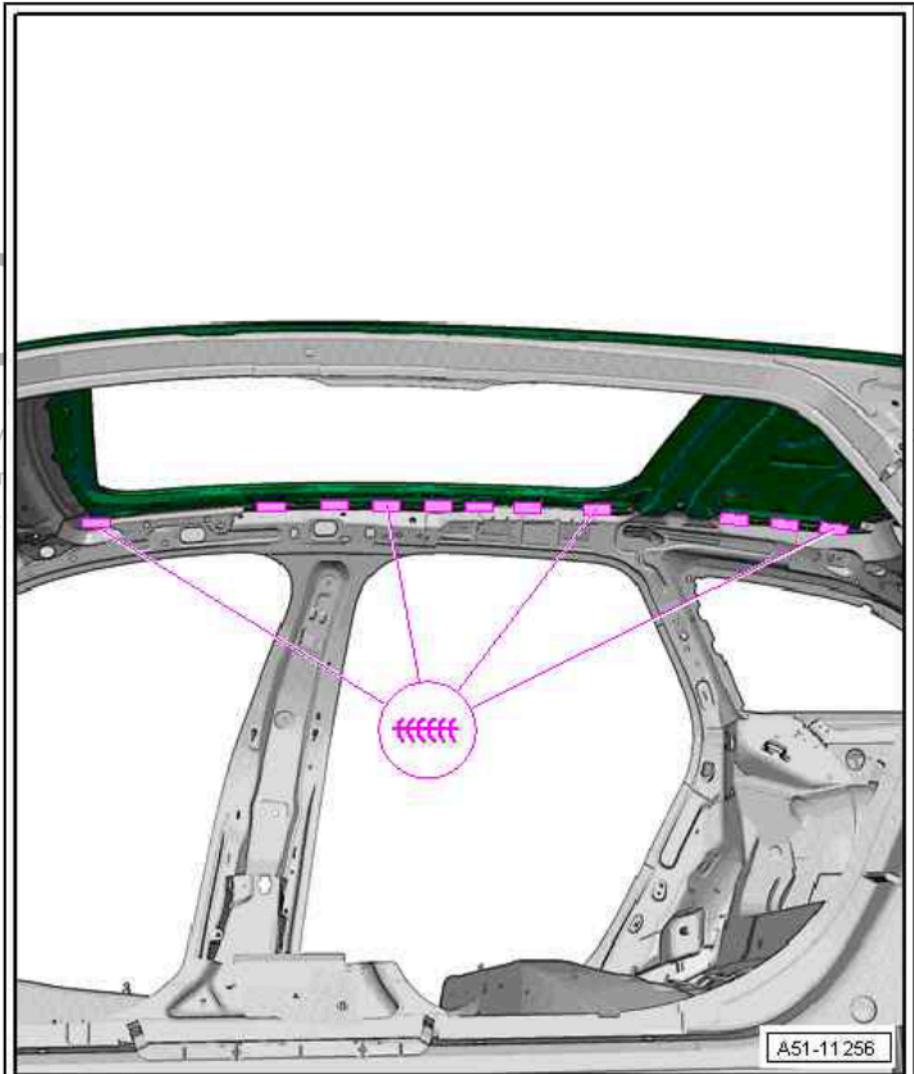

Weld in roof at front and rear using resistance spot welder : RP
spot weld seam.

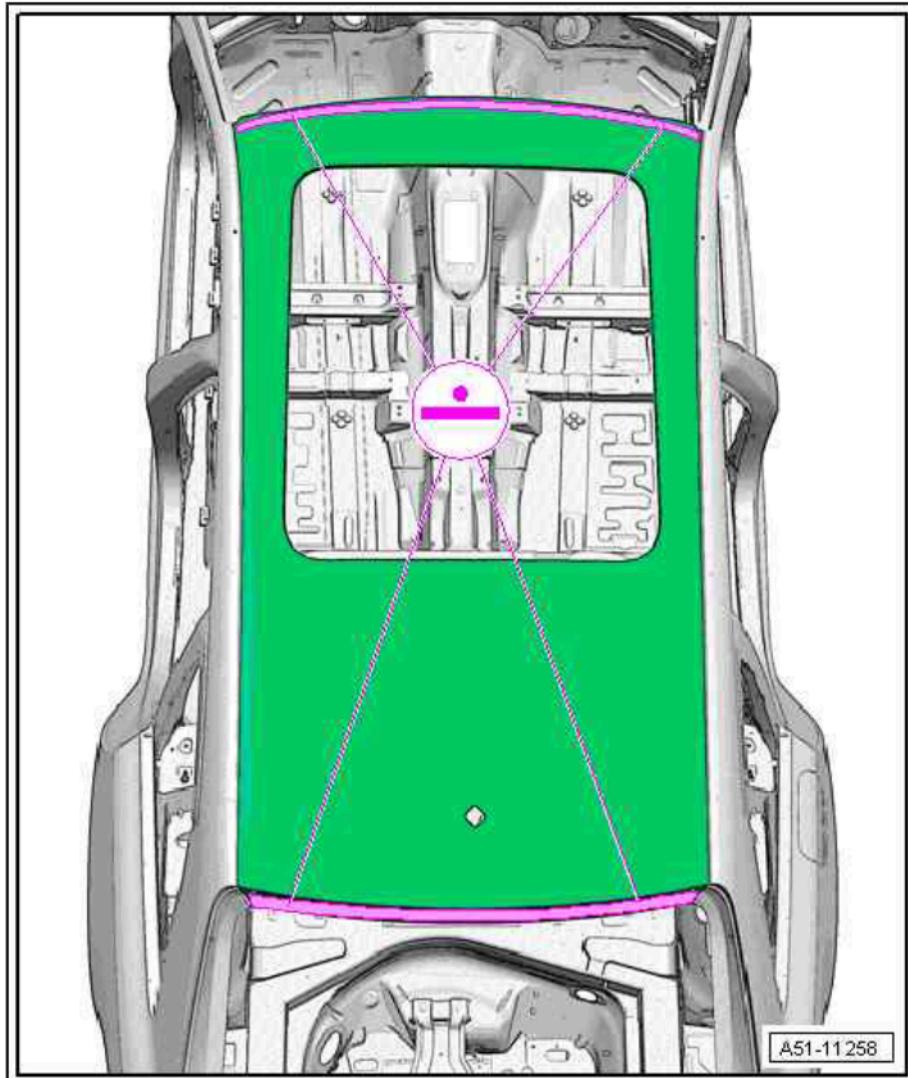


- Make additional welds for roof using shielded arc welding equipment : SG continuous seam.
- Grind down SG continuous weld seams using compact angle grinder .




Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.



Protected by copyright
permitted unless auth
with respect to the co

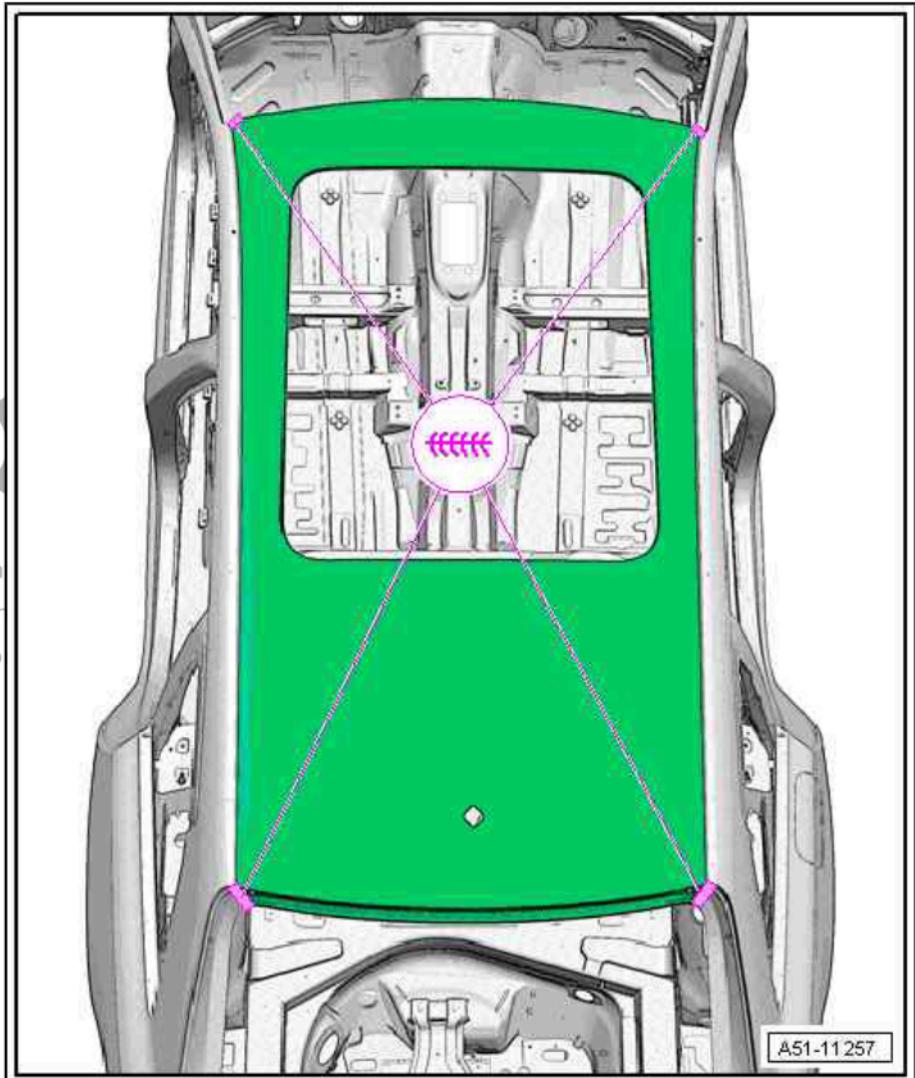

- Grind zero-gap joint -1- into shape (left and right).

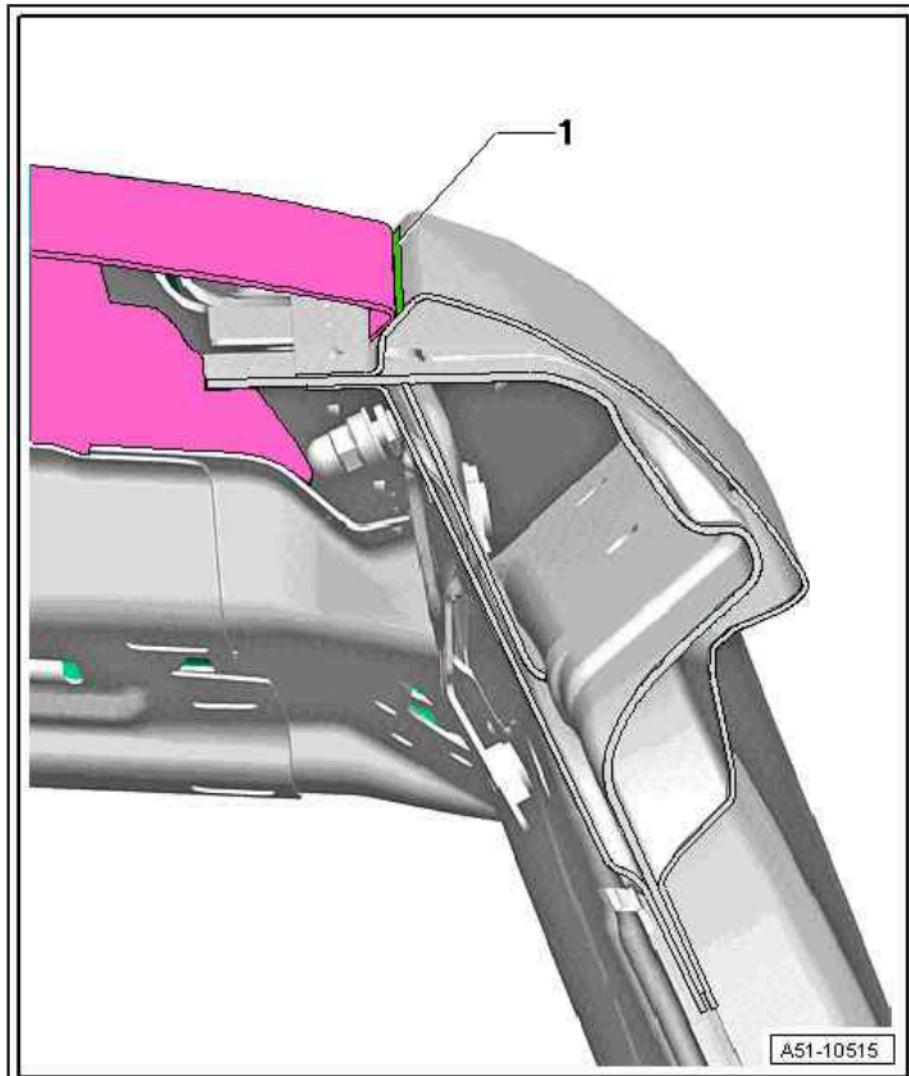

A51-10515



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.


RO: 51 05 55 50

7 Roof side member - Renewal (Saloon)

- 1 - Separating cut in A-pillar
- 2 - Roof side member
- 3 - Separating cut in B-pillar
- 4 - Separating cut in C-pillar
- 5 - Separating cut in D-pillar



Protected by copyright. Copying
permitted unless authorised
with respect to the correcti

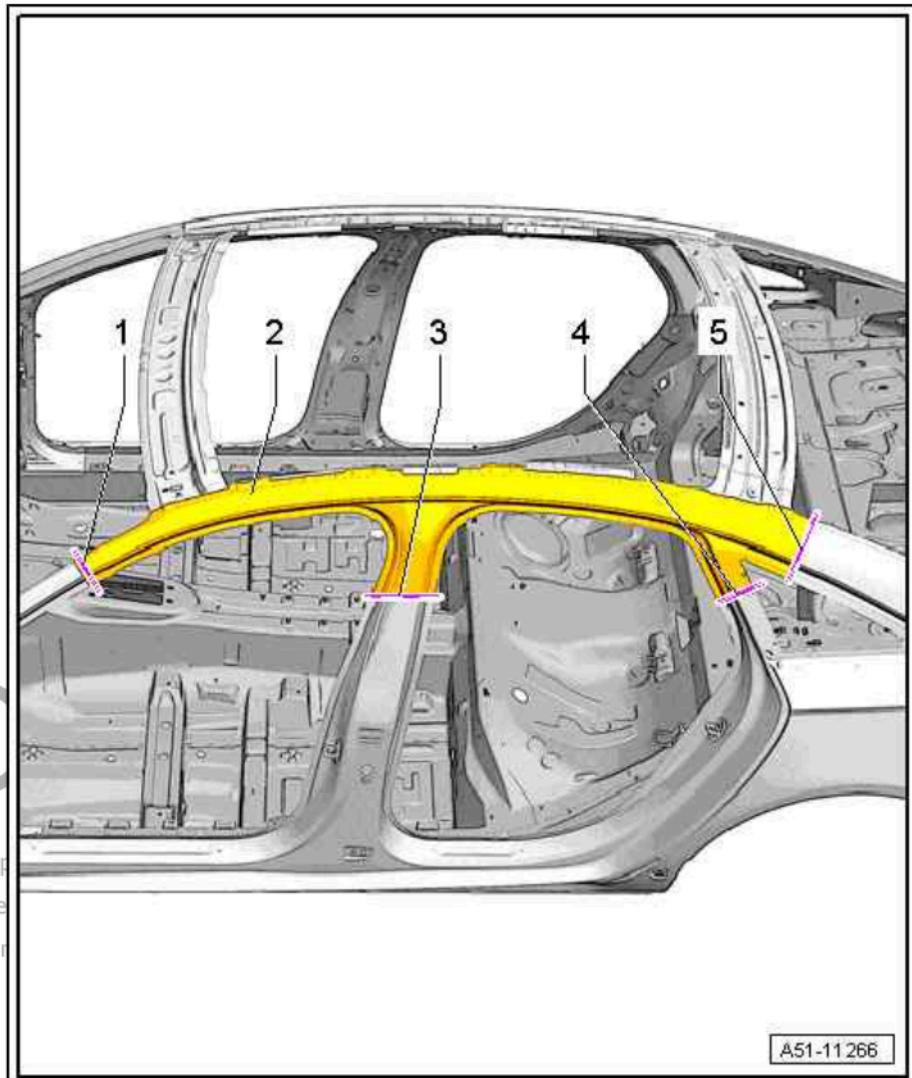

A51-11 266

7.1 Notes for vehicles with hybrid drive

[⇒ page 5](#)

7.2 Tools

Special tools and workshop equipment required

- ◆ Resistance spot welder
- ◆ Shielded arc welding equipment
- ◆ Compact angle grinder
- ◆ Body saw
- ◆ Spot weld breaker

Tools approved by AUDI AG must be used to ensure correct results when carrying out repair work [⇒ page 54](#).


7.3 Procedure

- Roof removed (Saloon) [⇒ page 130](#)
- Roof removed (Saloon with tilting sunroof) [⇒ page 151](#)
- Roof removed (Saloon with large sunroof, long version)
[⇒ page 166](#)

Cutting locations

Permitted separating cuts on complete side panel [⇒ page 128](#).

- Make separating cuts at A, B, C and D-pillars according to degree of damage using body saw.
- Separate original joint using spot weld breaker.

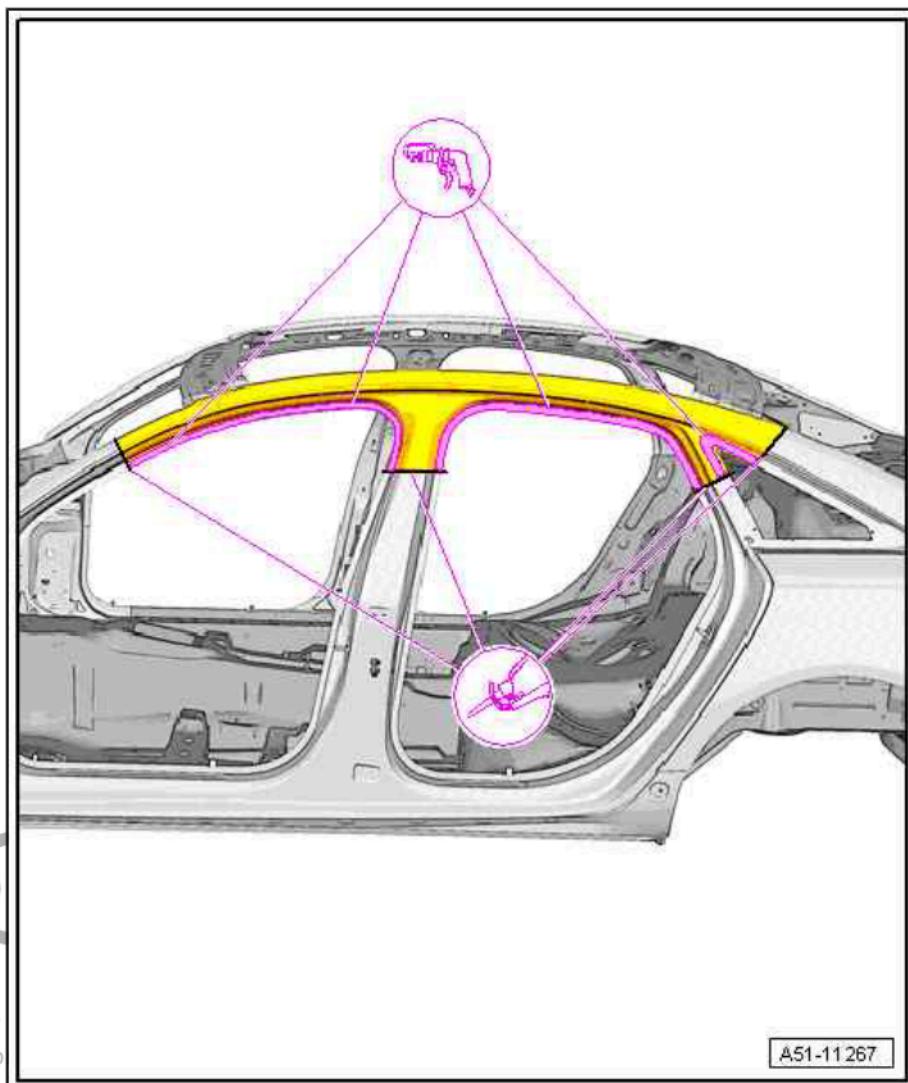


Protected by copyright.

permitted unless autho

with respect to the correctness of information in this document. Copyright by AUDI AG.

A51-11267

- Separate original joint using spot weld breaker.

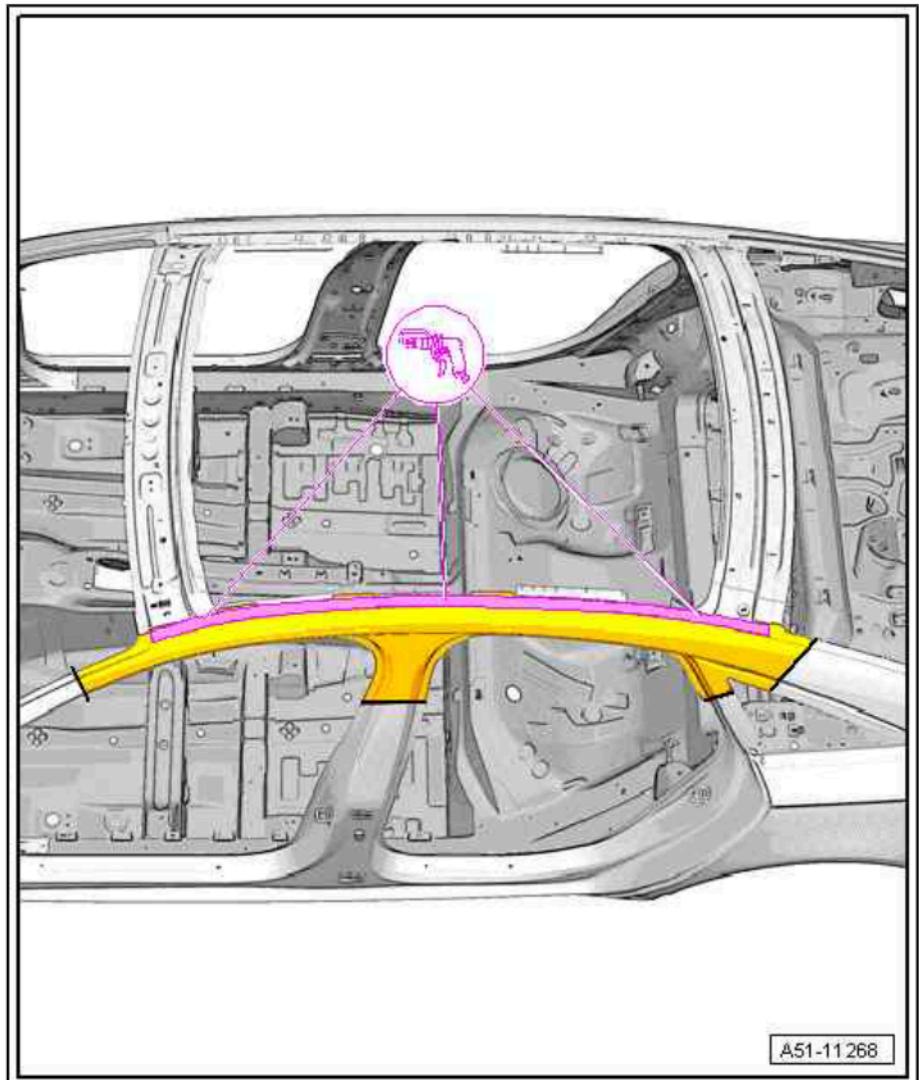


A51-11268


- Remove remaining material using compact angle grinder .



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

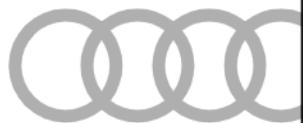

Protected by copyright. Copying
permitted unless authoris
with respect to the correct

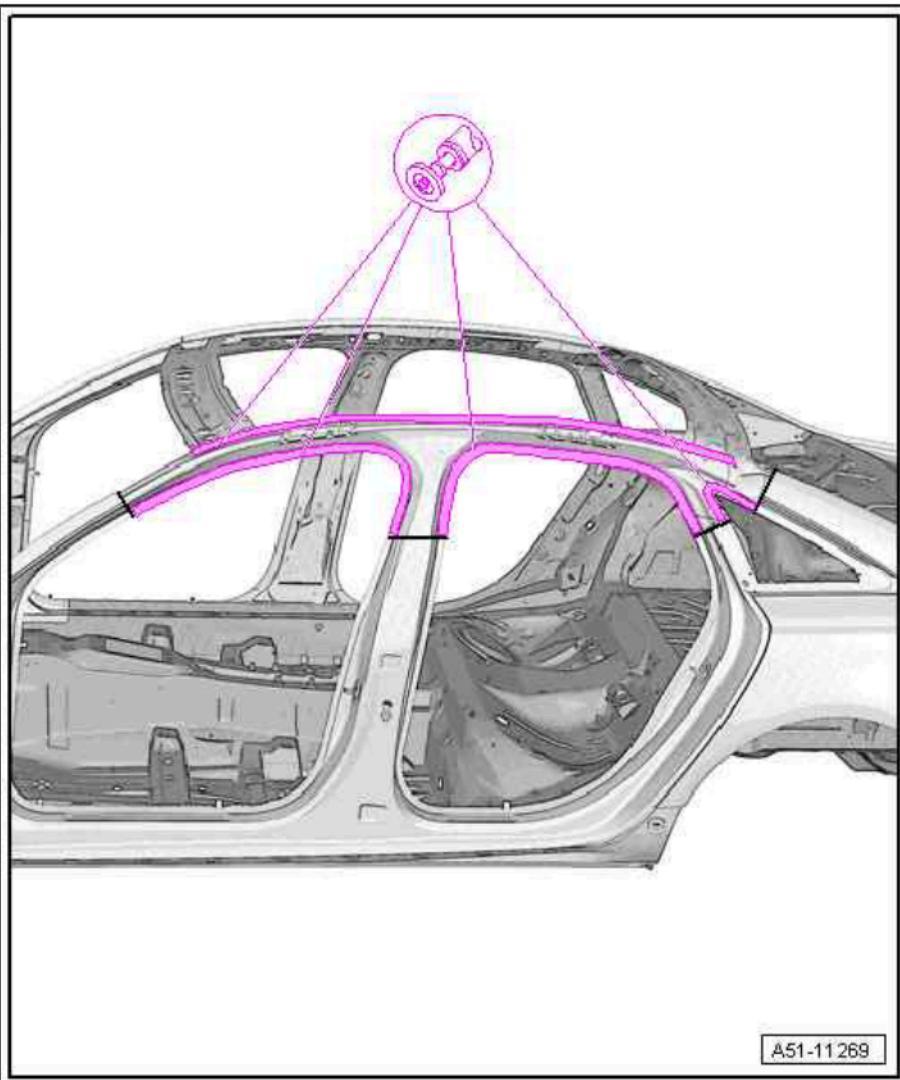


Replacement part

- ◆ Side frame

Preparing new part

- Transfer separating cuts to new part and cut off hatched area using body saw .

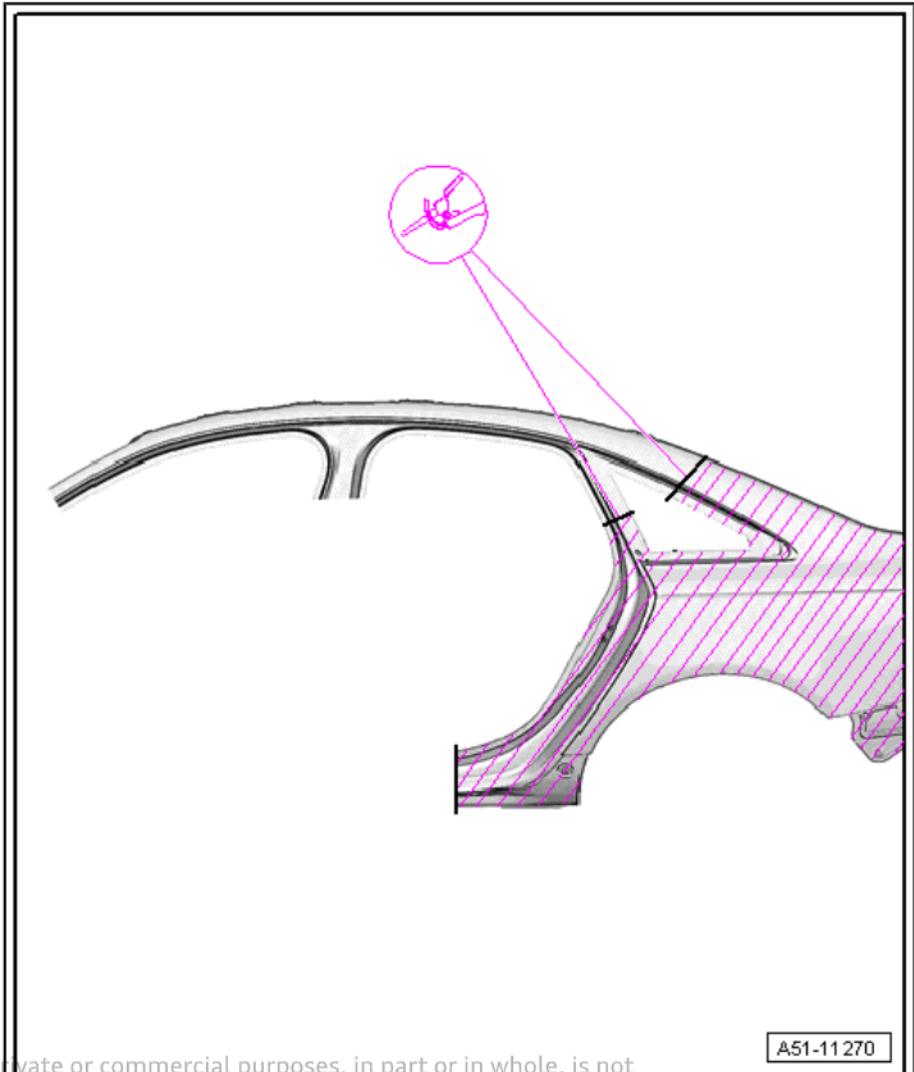

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

A51-11 270




Note

Due to the different types of steel and panel thicknesses employed, one of the resistance spot welding units listed in this manual and approved by Audi must be used to ensure correct results when spot welding.

Welding in

- Match up roof side member and fix in position.
- Check fit relative to bolt-on parts.
- Weld in roof side member using resistance spot welder : RP
spot weld seam.

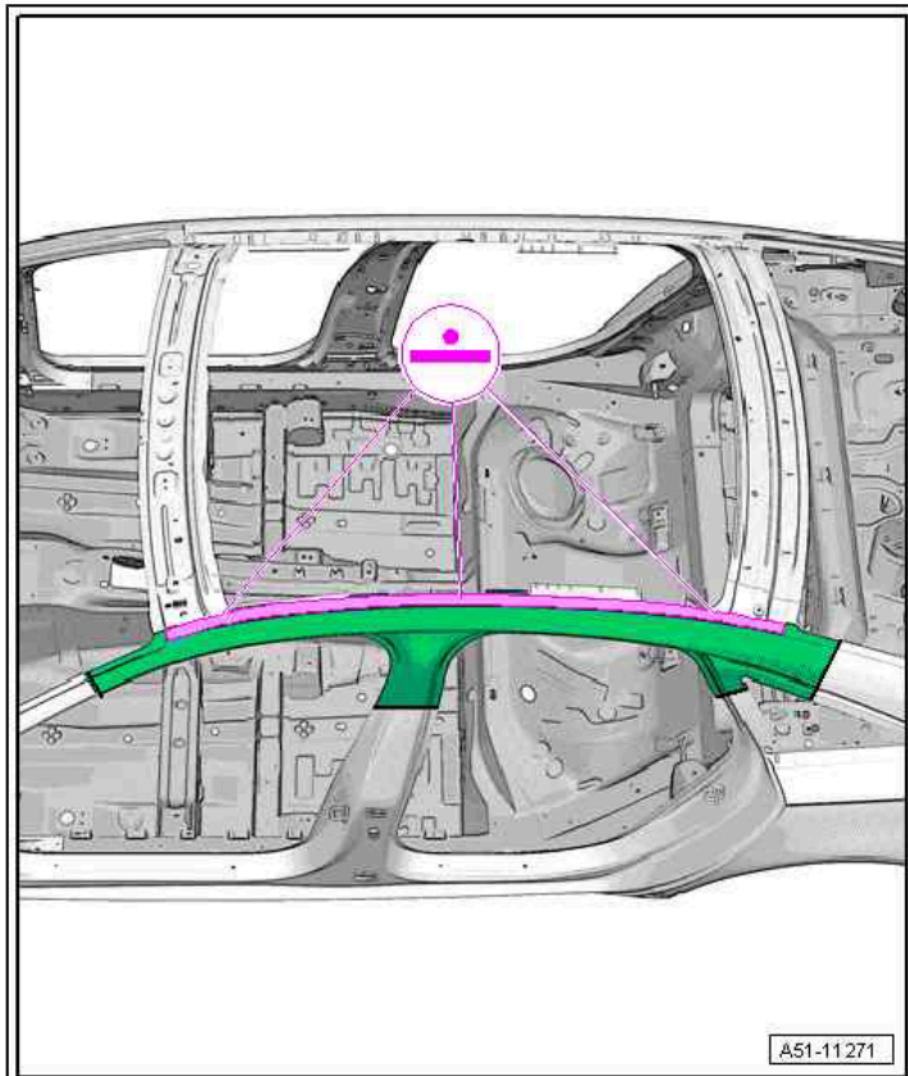

A51-11271


- Weld in roof side member using resistance spot welder : RP
spot weld seam.
- Butt weld separating cuts using shielded arc welding equipment : SG continuous seam.



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.



Protected by copyright.
permitted unless autho
with respect to the corr

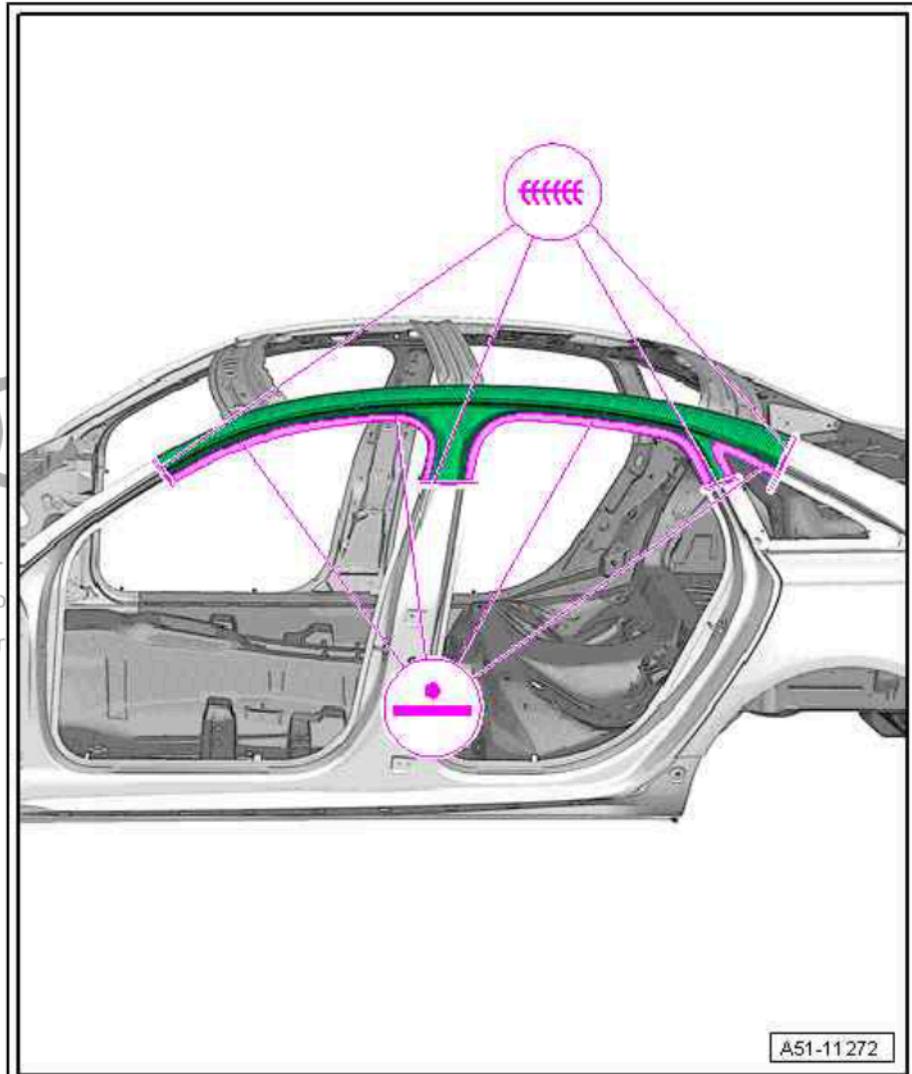

- Welding in roof (Saloon) ➤ [page 130](#)
- Welding in roof (Saloon with tilting sunroof) ➤ [page 151](#)
- Welding in roof (Saloon with large sunroof, long version)
➤ [page 166](#)


RO: 51 05 55 50

8 Roof side member - Renewal (Avant)

- 1 - Separating cut in A-pillar
- 2 - Roof side member
- 3 - Separating cut in B-pillar
- 4 - Separating cut in C-pillar
- 5 - Separating cut in D-pillar



Protected by copyright.
permitted unless
with respect to

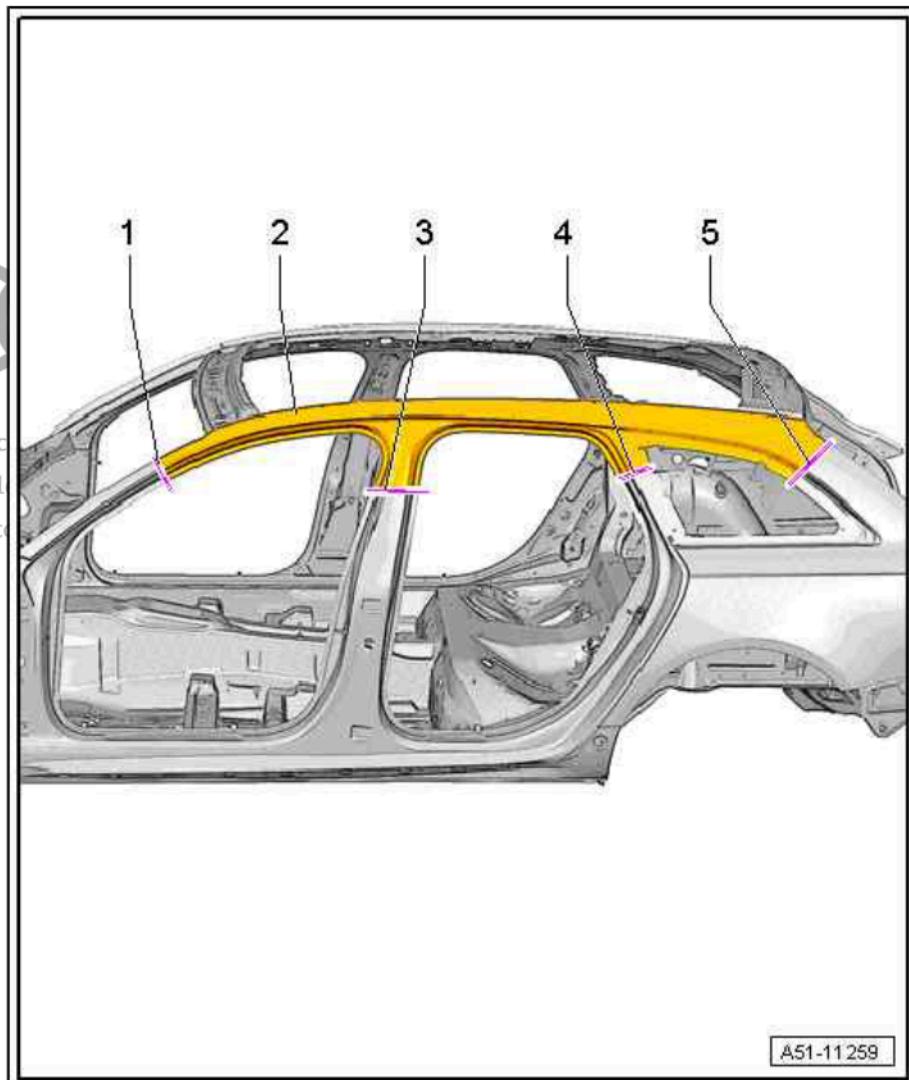

A51-11259

8.1 Notes for vehicles with hybrid drive

[⇒ page 5](#)

8.2 Tools

Special tools and workshop equipment required

- ◆ Resistance spot welder
- ◆ Shielded arc welding equipment
- ◆ Compact angle grinder
- ◆ Body saw
- ◆ Spot weld breaker

Tools approved by AUDI AG must be used to ensure correct results when carrying out repair work [⇒ page 54](#).

8.3 Procedure

- Roof removed (Avant with large sunroof) [⇒ page 200](#)
- Roof removed [⇒ page 179](#)

Cutting locations

Permitted separating cuts on complete side panel [⇒ page 128](#).

- Make separating cuts at A, B, C and D-pillars according to degree of damage using body saw.
- Separate original joint using spot weld breaker.




Protected by copyri

A51-11260

permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability


- Separate original joint using spot weld breaker.

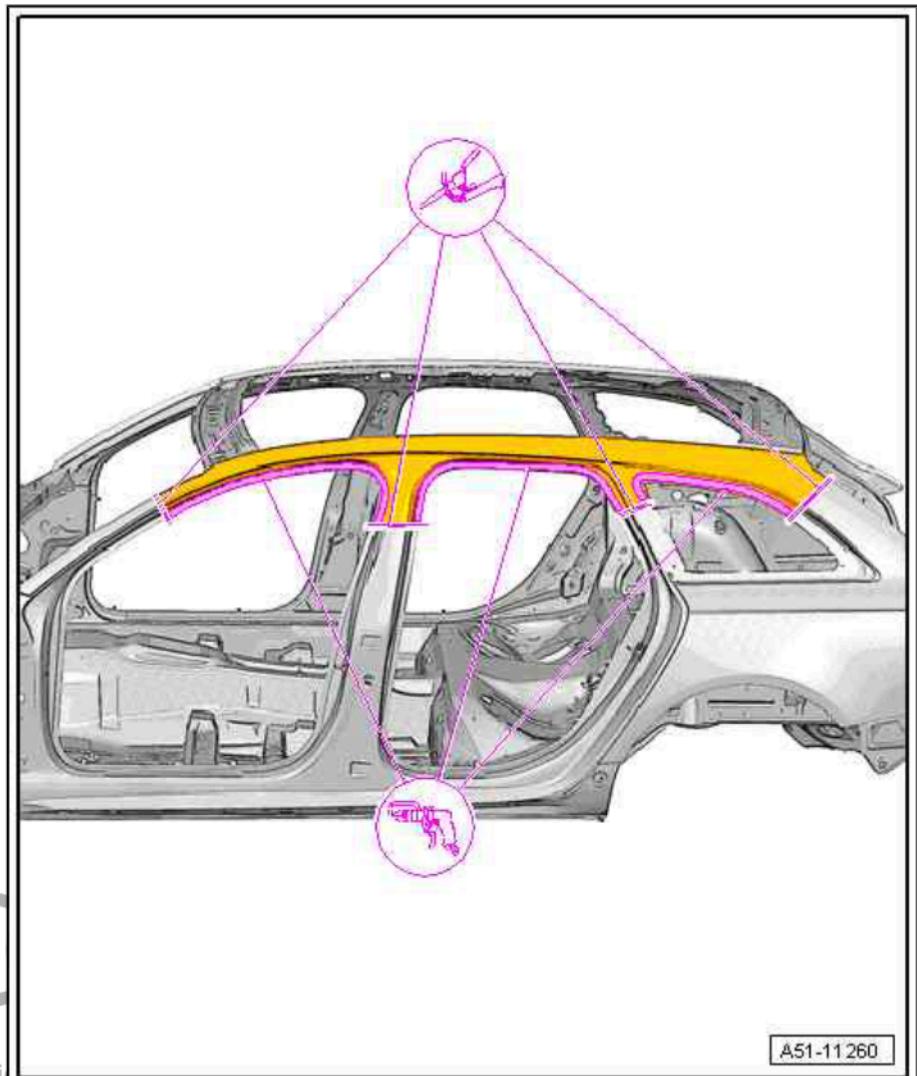

C
C

Protected
permitted
with res

not
ity

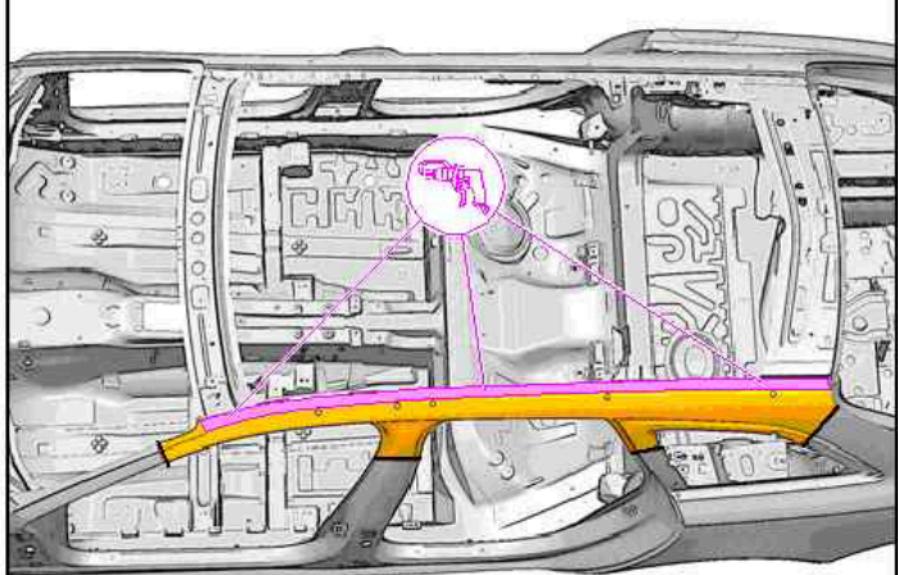


A51-11261

- Remove remaining material using compact angle grinder .



Protected by copyright. Copying for personal use is
permitted unless authorised by AUDI AG.
With respect to the correctness of information

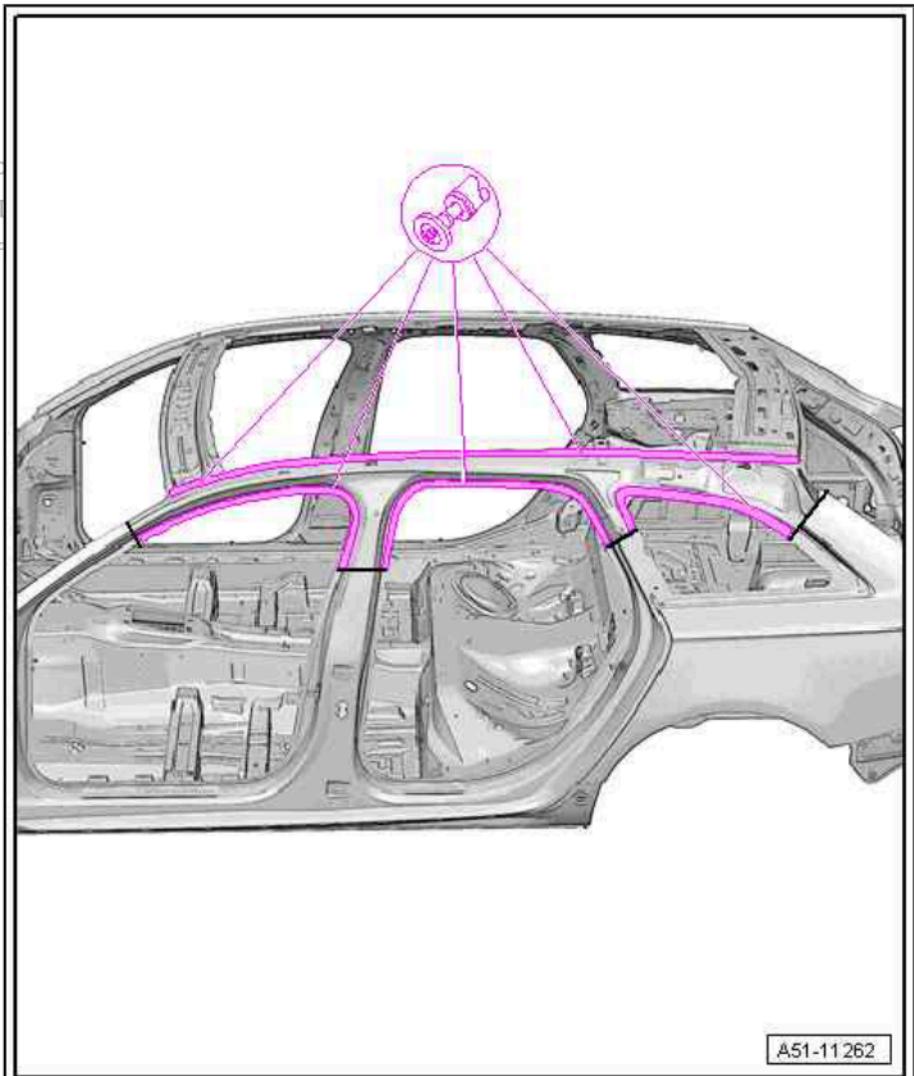


Replacement part

- ◆ Roof side member

Preparing new part

- Transfer separating cuts to new part and cut off hatched area using body saw .

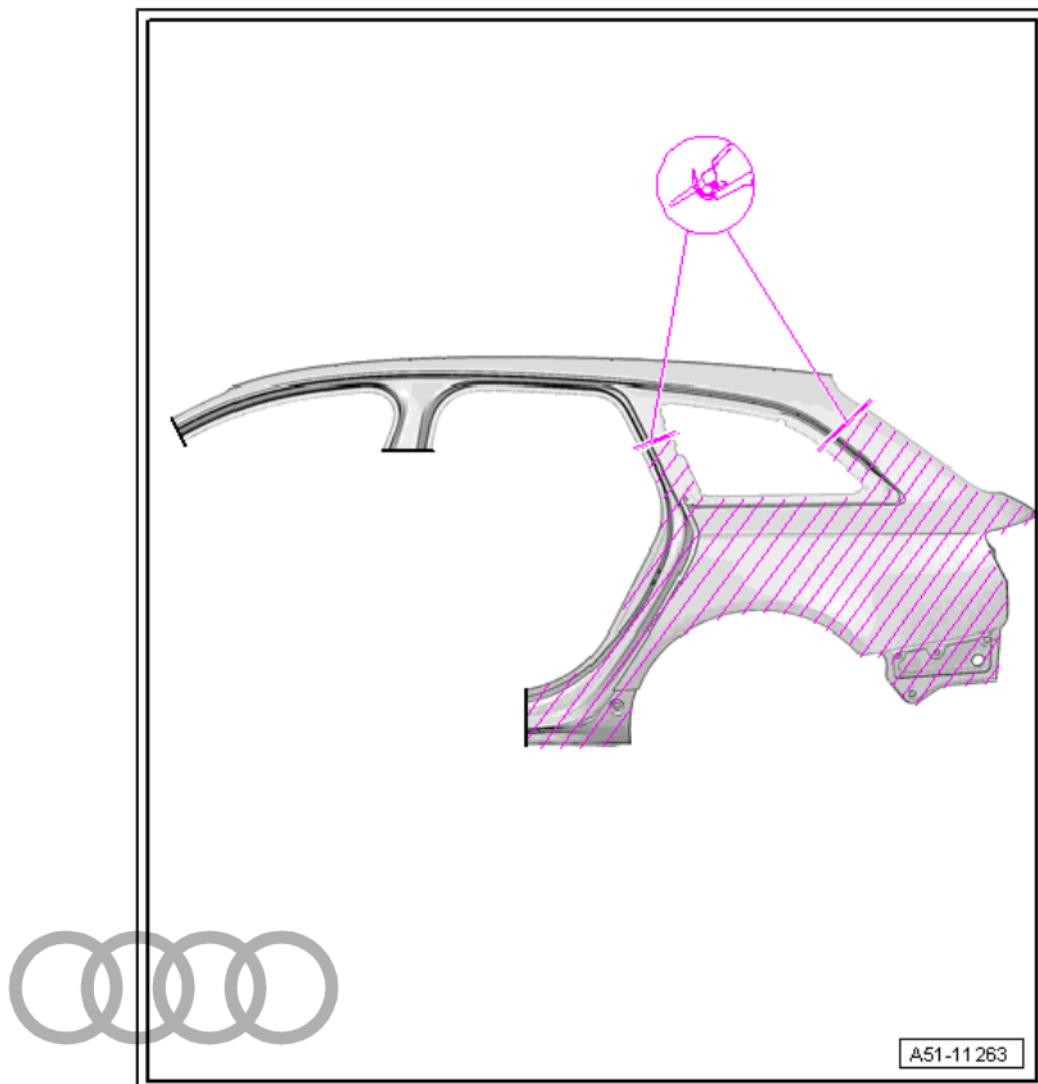

A51-11 263

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

 Note

Due to the different types of steel and panel thicknesses employed, one of the resistance spot welding units listed in this manual and approved by Audi must be used to ensure correct results when spot welding.


Welding in

- Match up roof side member and fix in position.
- Check fit relative to bolt-on parts.
- Weld in roof side member using resistance spot welder : RP
spot weld seam.




Protected by copyright. Copying
permitted unless authorised by
with respect to the correctness

A51-11 264

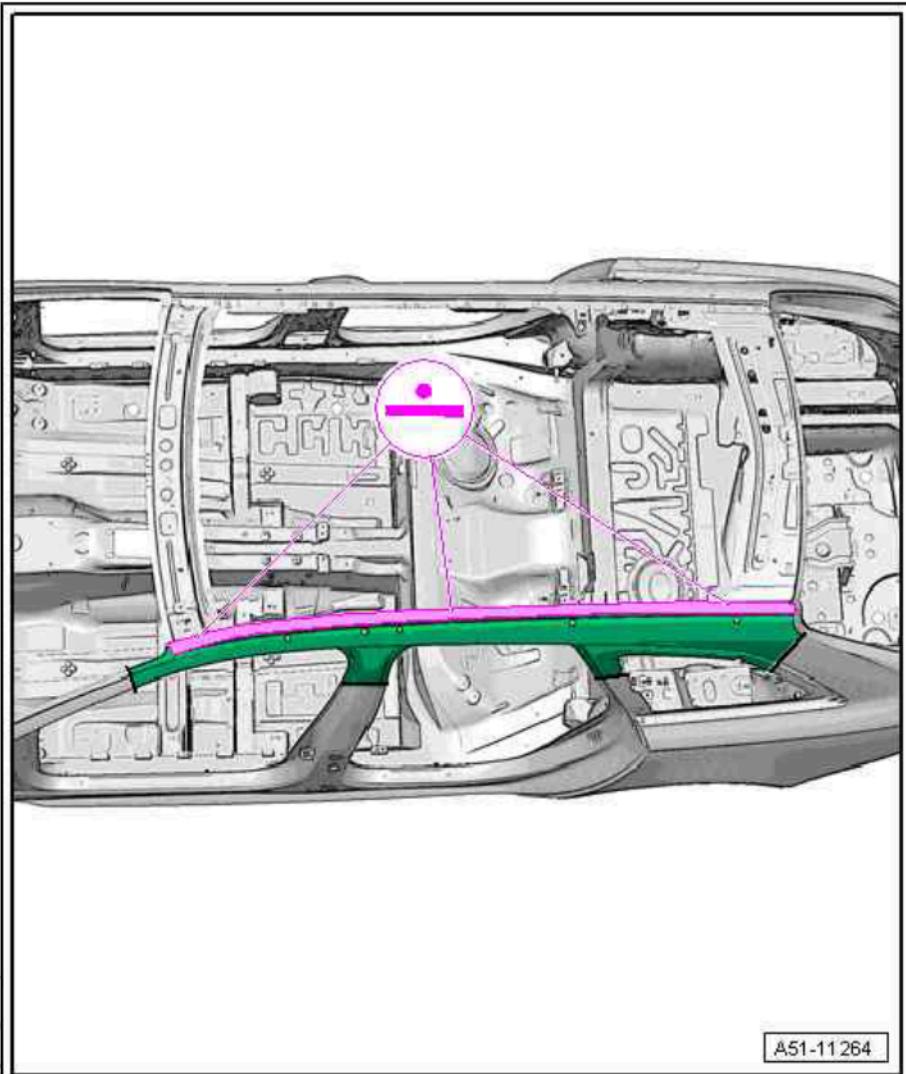

- Butt weld separating cuts using shielded arc welding equipment : SG continuous seam.
- Weld in roof side member using resistance spot welder : RP spot weld seam.

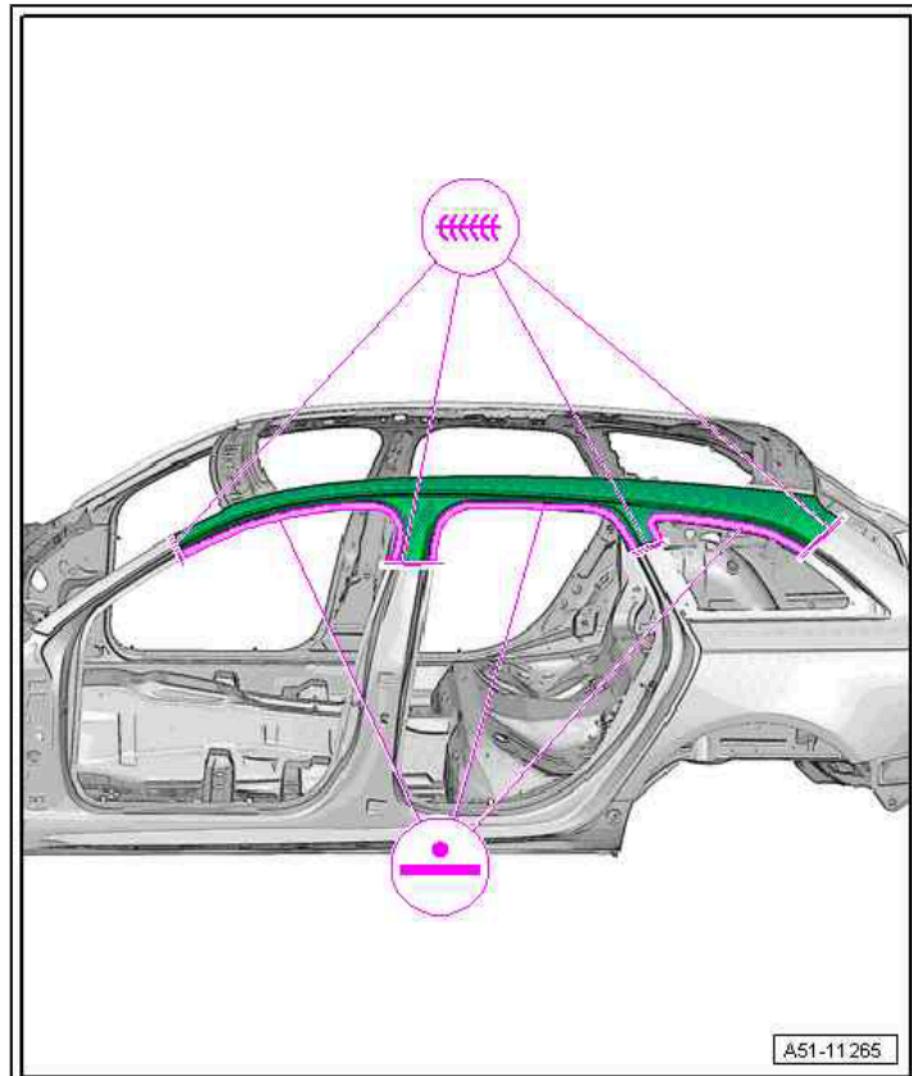

A51-11265

- Welding in roof (Avant with large sunroof) [⇒ page 200](#)
- Welding in roof (Avant) [⇒ page 179](#)




Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

RO: 51 07 55 50

9 Front roof cross member - Renewal

(Saloon and Avant identical)

- 1 - Side frame (left-side)
- 2 - Roof cross member (front)
- 3 - Side frame (right-side)

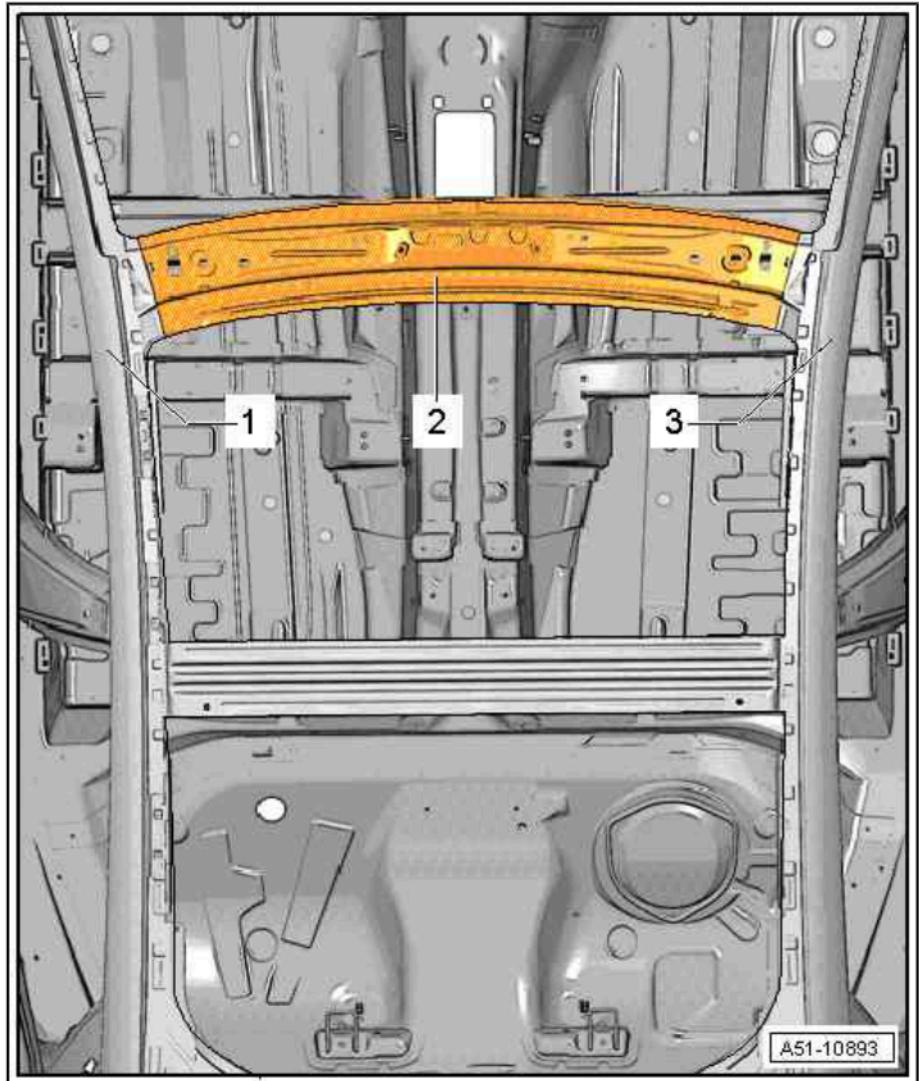

9.1 Notes for vehicles with hybrid drive

[⇒ page 5](#)

9.2 Tools

Special tools and workshop equipment required

- ◆ Resistance spot welder
- ◆ Shielded arc welding equipment
- ◆ Compact angle grinder
- ◆ Spot weld breaker

Tools approved by AUDI AG must be used to ensure correct results when carrying out repair work [⇒ page 54](#).
The use of tools or special equipment not recommended by AUDI AG, for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

9.3 Procedure


- Roof removed (Saloon) [⇒ page 130](#)
- Roof removed (Saloon with tilting sunroof) [⇒ page 151](#)
- Roof removed (Saloon with large sunroof, long version)
[⇒ page 166](#)

Cutting locations


- Separate original joint using spot weld breaker .



Protected by copyright.
permitted unless author
with respect to the corre

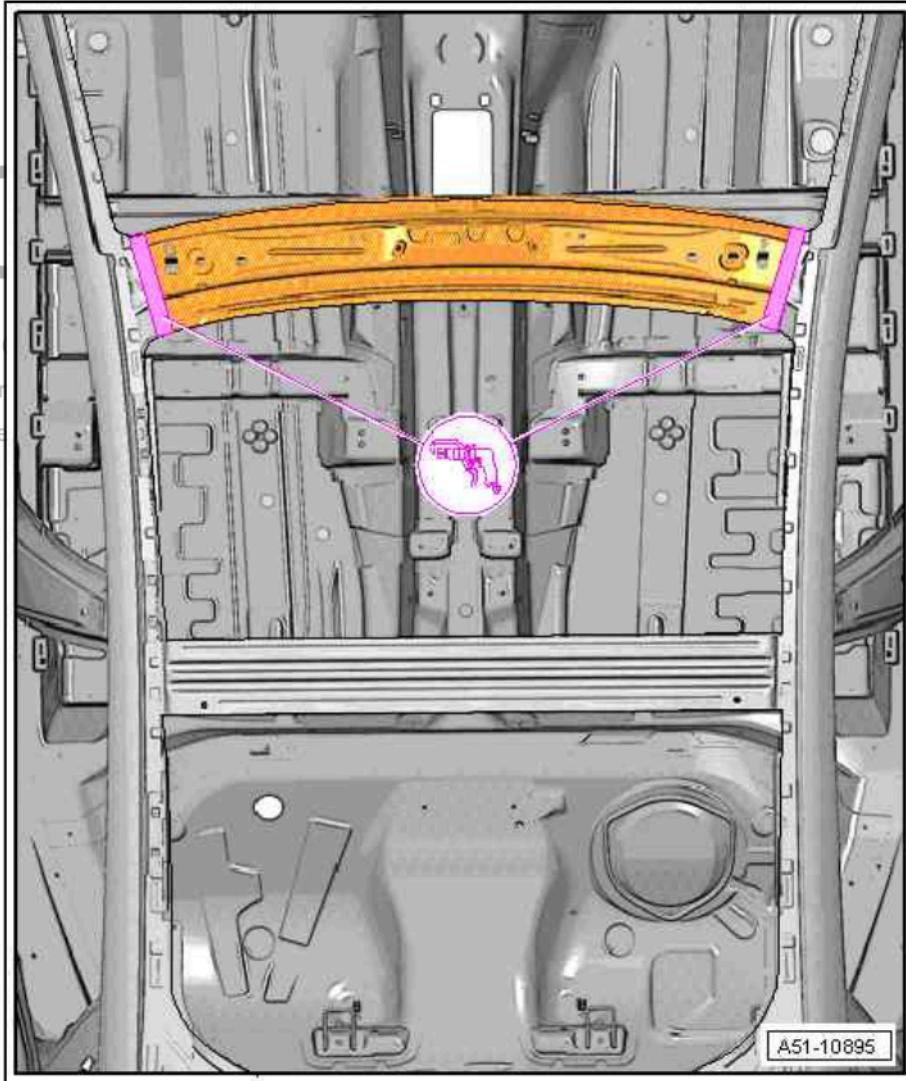

- Remove remaining material using compact angle grinder .

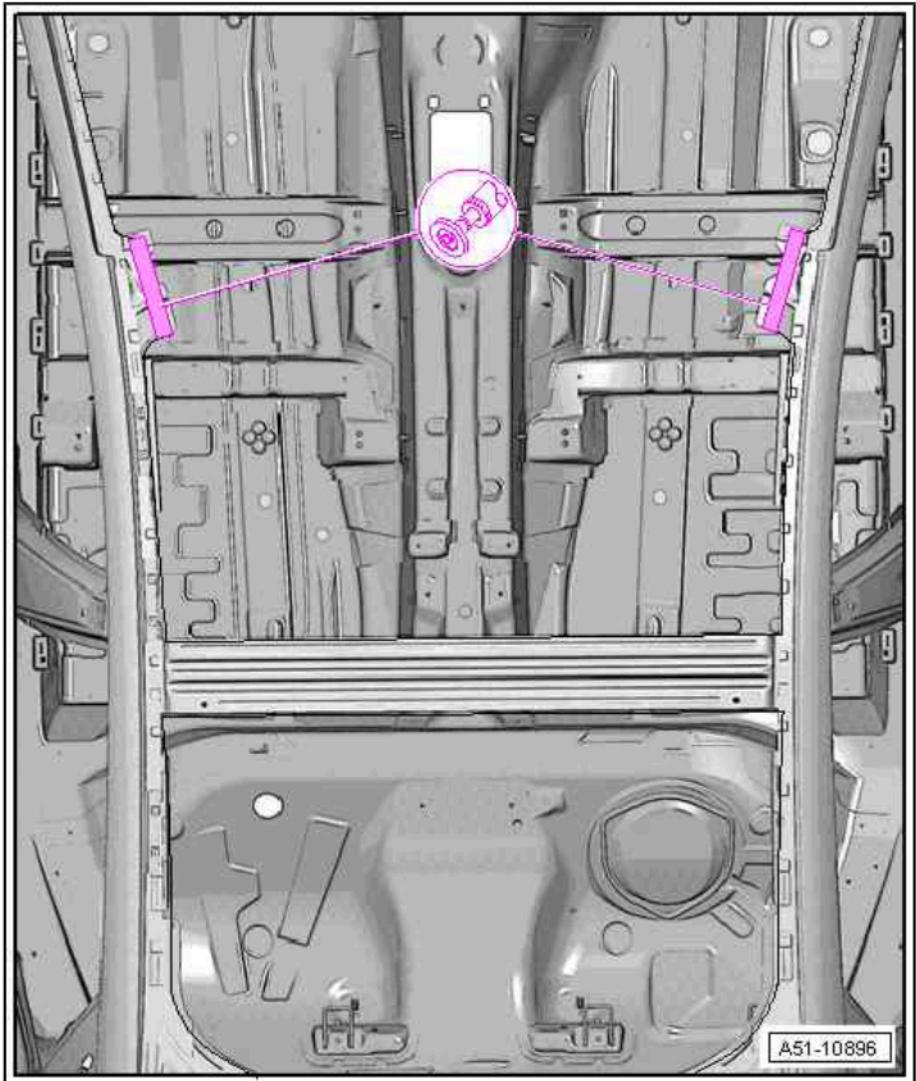

Replacement part

- ◆ Roof cross member




Note

Due to the different types of steel and panel thicknesses employed, one of the resistance spot welding units listed in this manual and approved by Audi must be used to ensure correct results when spot welding.

Welding in

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not

- Match up and fix new part in position.
permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability
- Weld in new part using resistance spot welder : RP spot weld
with respect to the correctness of information in this document. Copyright by AUDI AG.

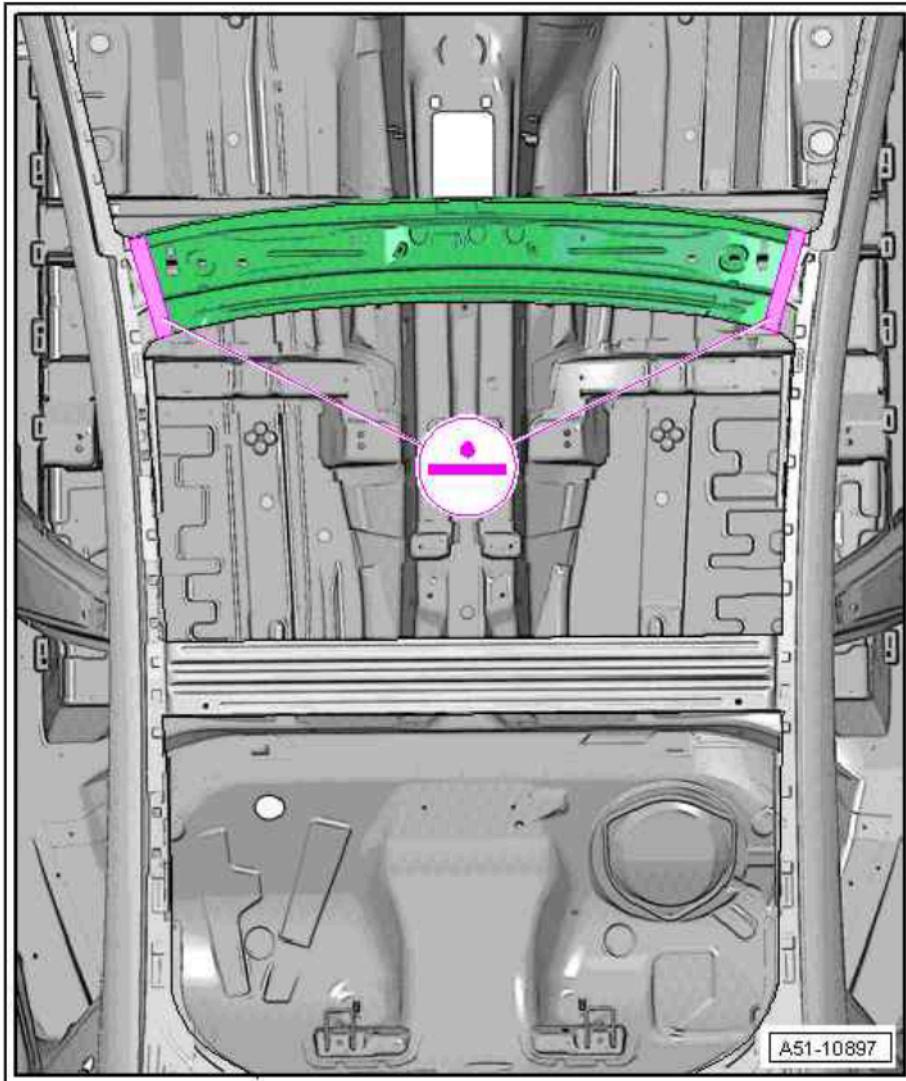

A51-10897

- Welding in roof (Saloon) ⇒ [page 130](#)
- Welding in roof (Avant) ⇒ [page 179](#)
- Welding in roof (Saloon with large sunroof, long version)
⇒ [page 166](#)




Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

RO: 51 09 55 50

10 Rear roof cross member - Renewal

- 1 - Roof cross member
- 2 - Right roof frame connection
- 3 - Left roof frame connection

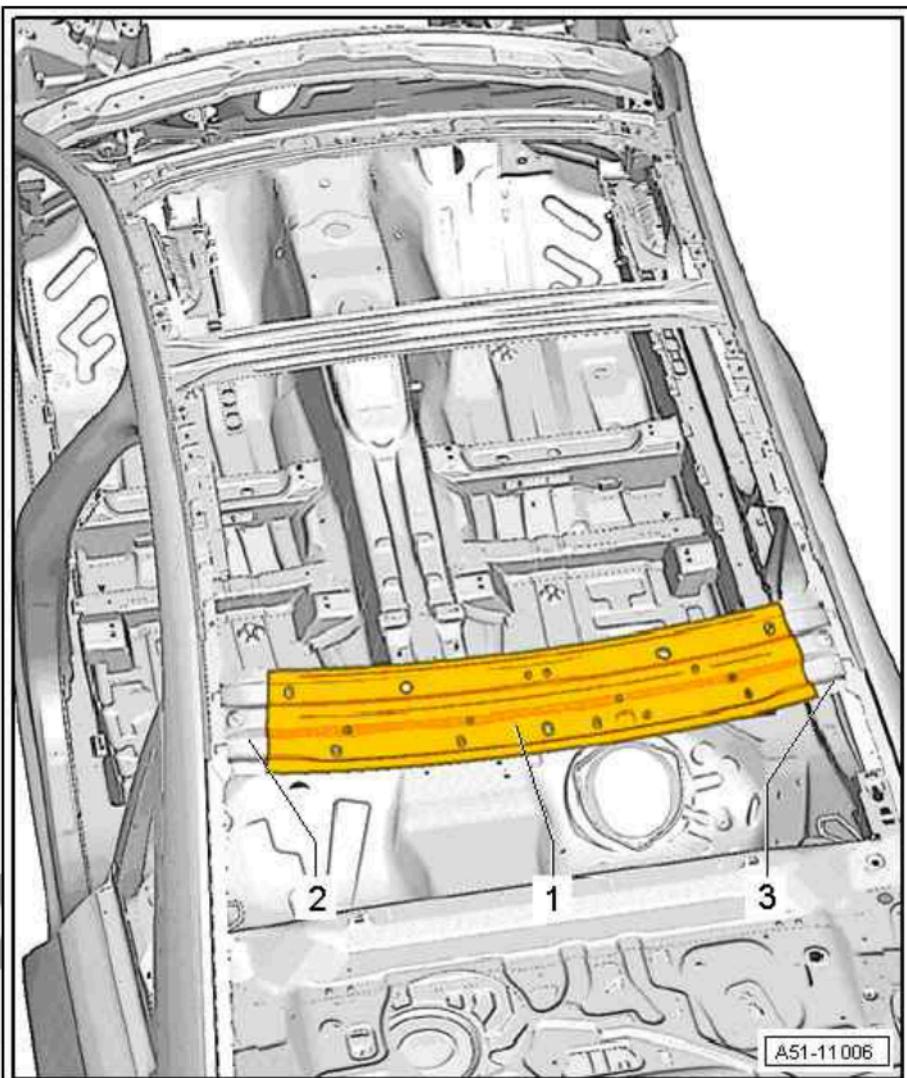

Protected by copyright
permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability
with respect to the correctness of information in this document. Copyright by AUDI AG.

A51-11 006

10.1 Notes for vehicles with hybrid drive

[⇒ page 5](#)

10.2 Tools

Special tools and workshop equipment required

- ◆ Resistance spot welder
- ◆ Shielded arc welding equipment
- ◆ Drill
- ◆ Compact angle grinder
- ◆ Body saw
- ◆ Spot weld breaker
- ◆ Pneumatic glue gun

Tools approved by AUDI AG must be used to ensure correct results when carrying out repair work [⇒ page 54](#).

10.3 Procedure

- Roof removed (Saloon) [⇒ page 130](#)
- Roof removed (Saloon with tilting sunroof) [⇒ page 151](#)
- Roof removed (Saloon with large sunroof, long version)
[⇒ page 166](#)


Cutting locations

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not


- Roughly cut out roof cross member using body saw

permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability

with respect to the correctness of information in this document. Copyright by AUDI AG.

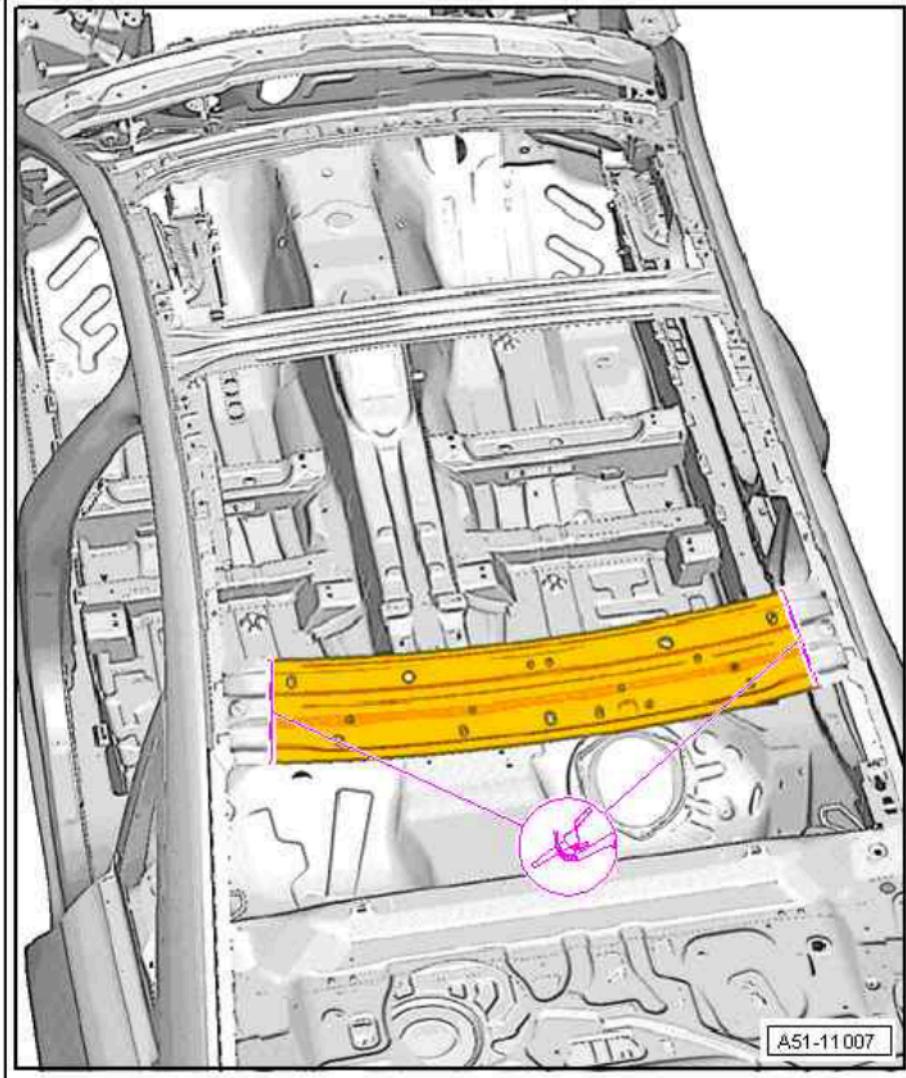

- Remove remaining material using compact angle grinder.

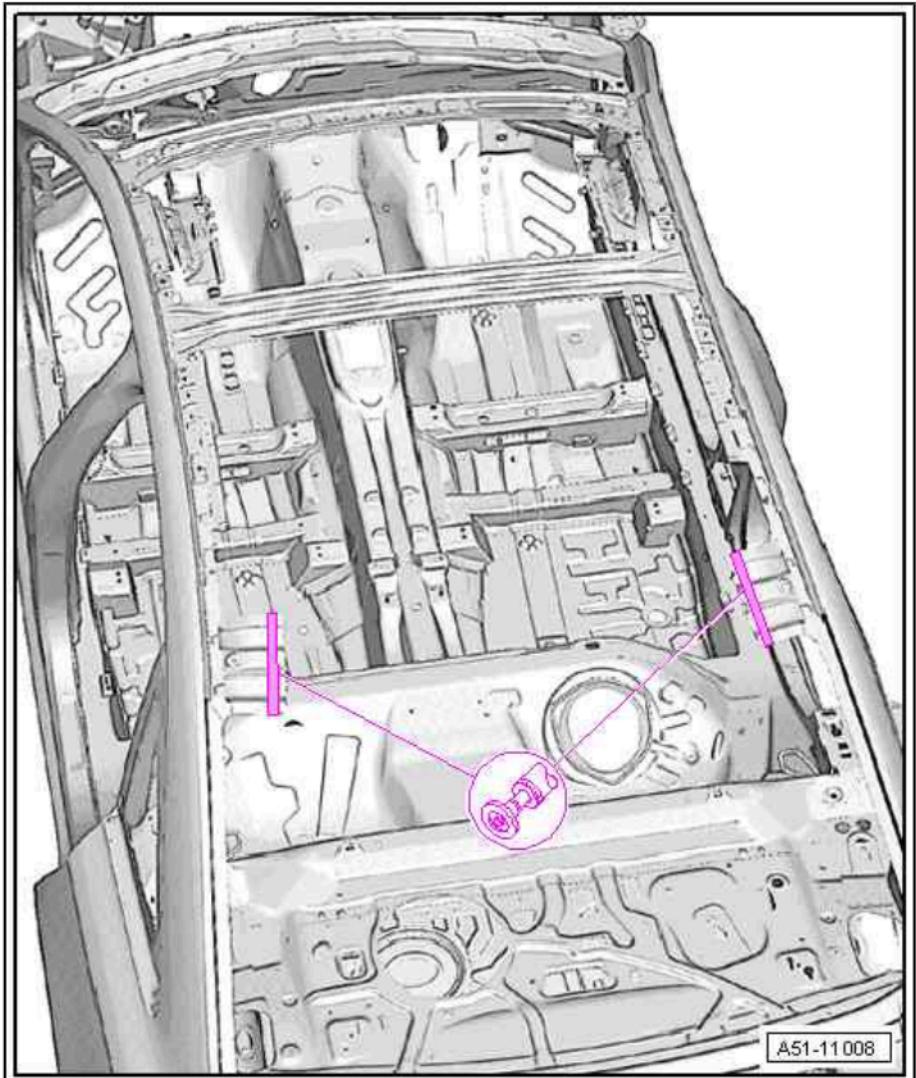

Replacement parts

◆ Upper rear roof cross member

◆ Lower rear roof cross member

Due to copyright restrictions, private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability




Note


Due to the different types of steel and panel thicknesses employed, one of the resistance spot welding units listed in this manual and approved by Audi must be used to ensure correct results when spot welding.

Welding in

- Match up upper rear roof cross member and fix in position.
- Check fit relative to roof.
- Weld in roof frame using resistance spot welder : RP spot weld seam.

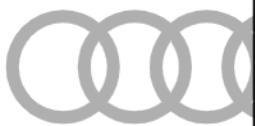

Protected by copyright
permitted unless auth
with respect to the con

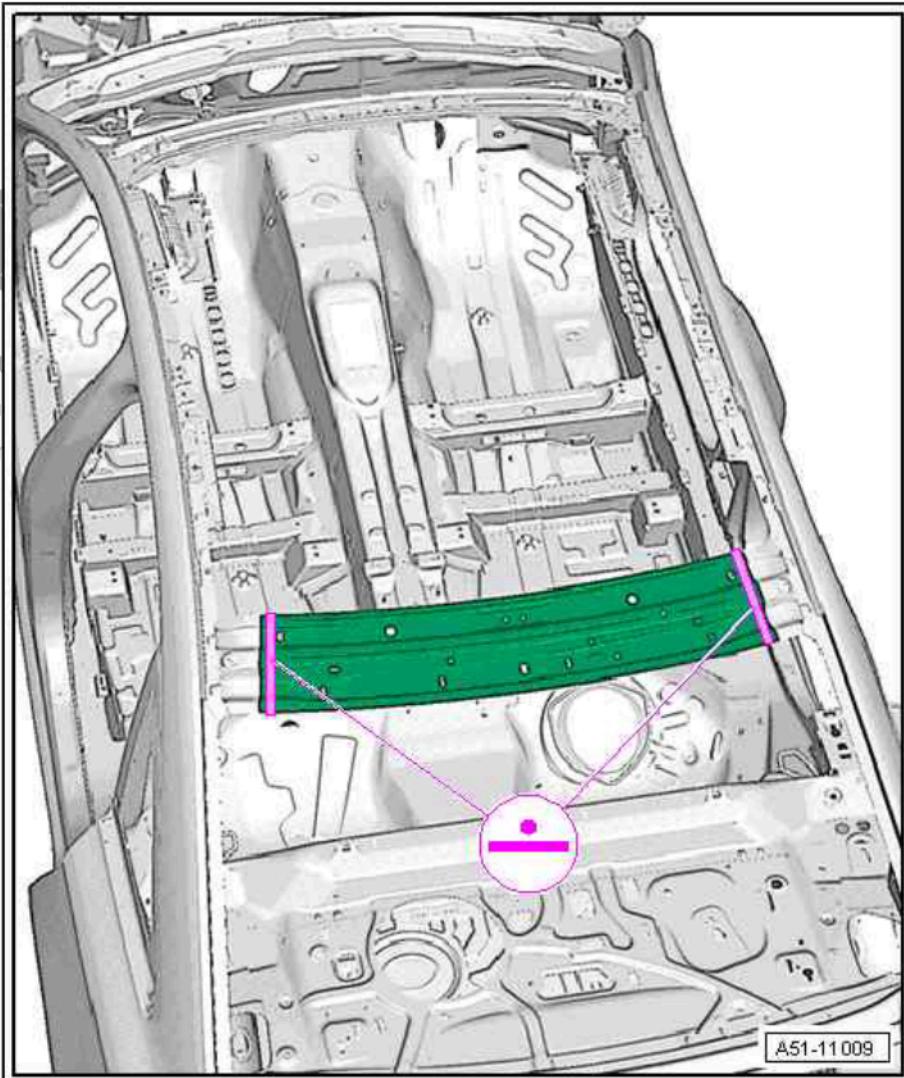


- Welding in roof (Saloon) ⇒ [page 130](#)
- Welding in roof (Saloon with tilting sunroof) ⇒ [page 151](#)
- Welding in roof (Saloon with large sunroof, long version)
⇒ [page 166](#)

RO: 51 09 55 50

11 Rear roof cross member - Renewal (Avant)

- 1 - Roof cross member
- 2 - Right roof frame connection
- 3 - Left roof frame connection

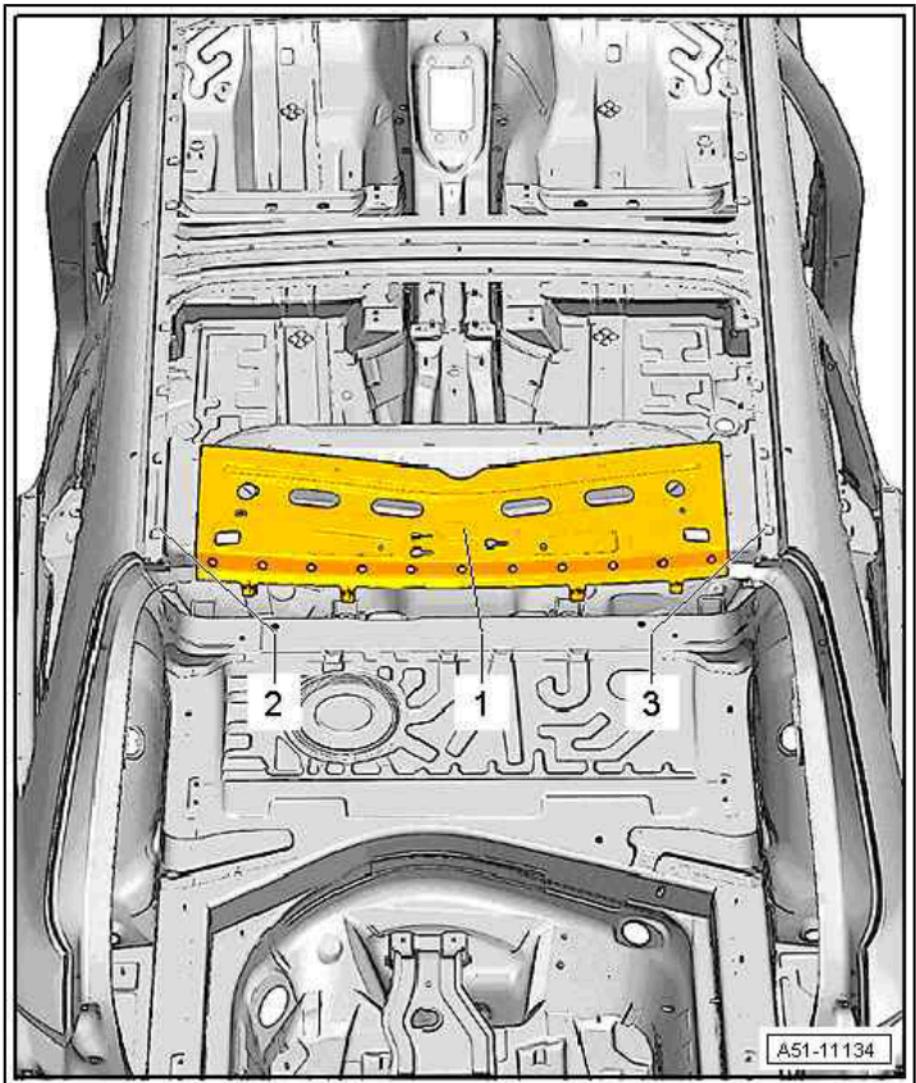

11.1 Notes for vehicles with hybrid drive

[⇒ page 5](#)



11.2 Tools

Special tools and workshop equipment required

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not

- ◆ Resistance spot welder
permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability
- ◆ Shielded arc welding equipment
with respect to the correctness of information in this document. Copyright by AUDI AG.
- ◆ Drill
- ◆ Compact angle grinder
- ◆ Body saw
- ◆ Spot weld breaker
- ◆ Pneumatic glue gun

Tools approved by AUDI AG must be used to ensure correct results when carrying out repair work [⇒ page 54](#).


11.3 Procedure

- Roof removed [⇒ page 179](#)
- Roof removed (version with large sunroof) [⇒ page 166](#)


Cutting locations

- Separate original joint using spot weld breaker.

Protected by copy
permitted unless a
with respect to the

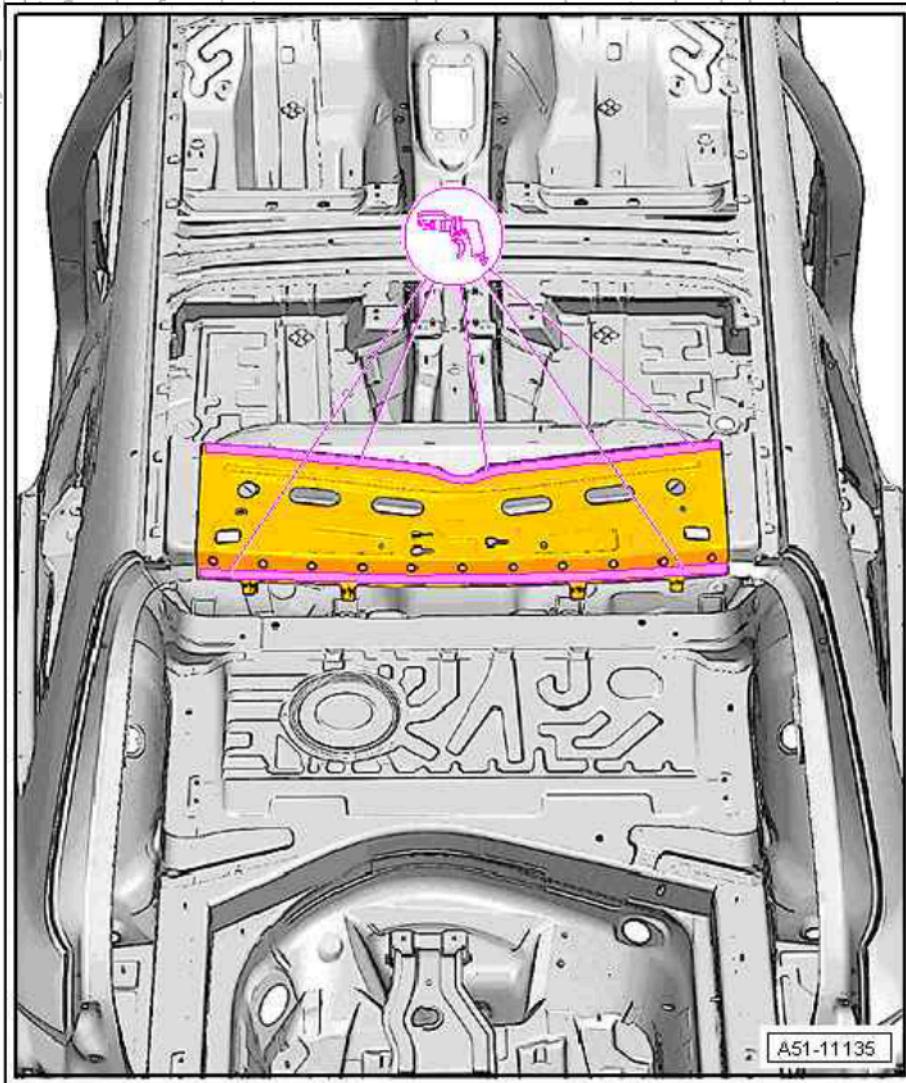


- Remove remaining material using compact angle grinder.

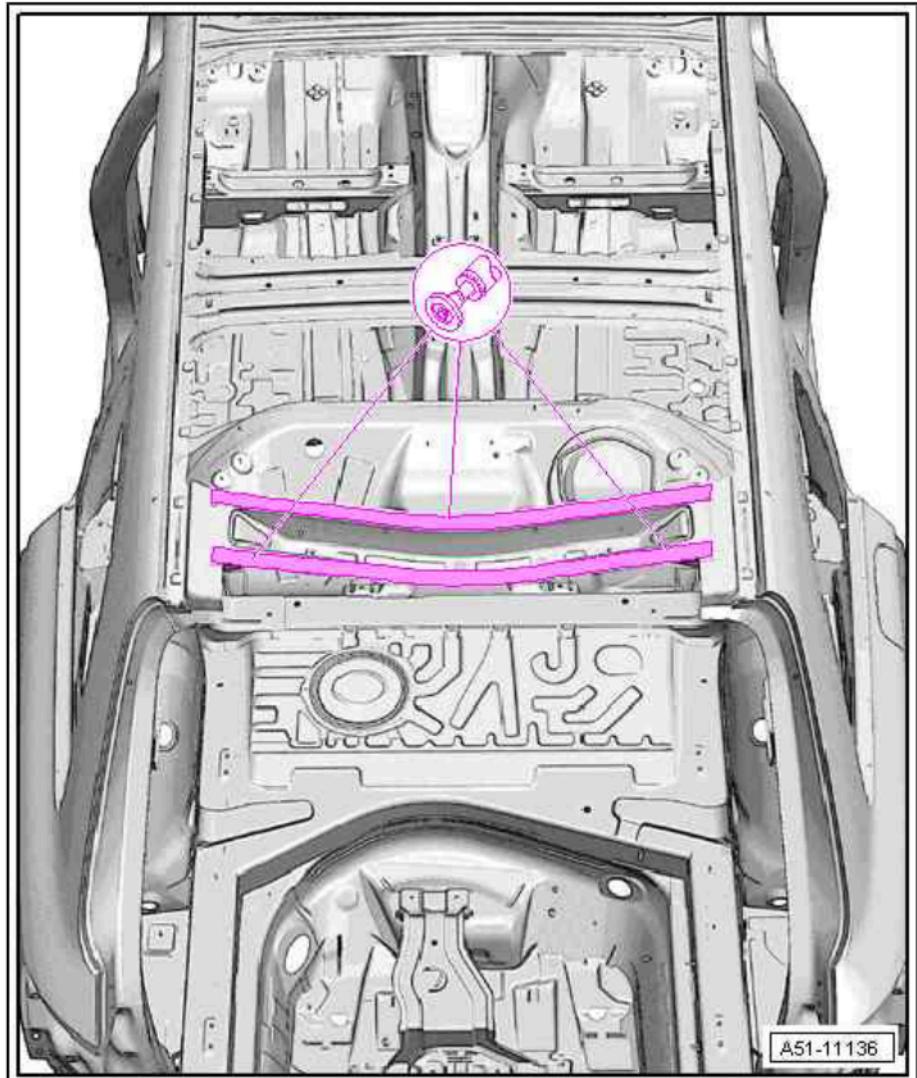

Replacement parts

- ◆ Upper rear roof cross member

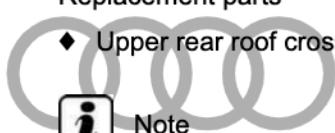

Note


Protected by copyright. All rights reserved. Any unauthorized disclosure, in part or in whole, is not permitted. One of the resistance spot welding units listed in this manual and approved by Audi must be used to ensure correct results when spot welding.

Welding in

- Match up upper rear roof cross member and fix in position.
- Check fit relative to roof.
- Weld in roof frame using resistance spot welder : RP spot weld seam.



Protected by copyright.
Use is
permitted un
with respect to
the original

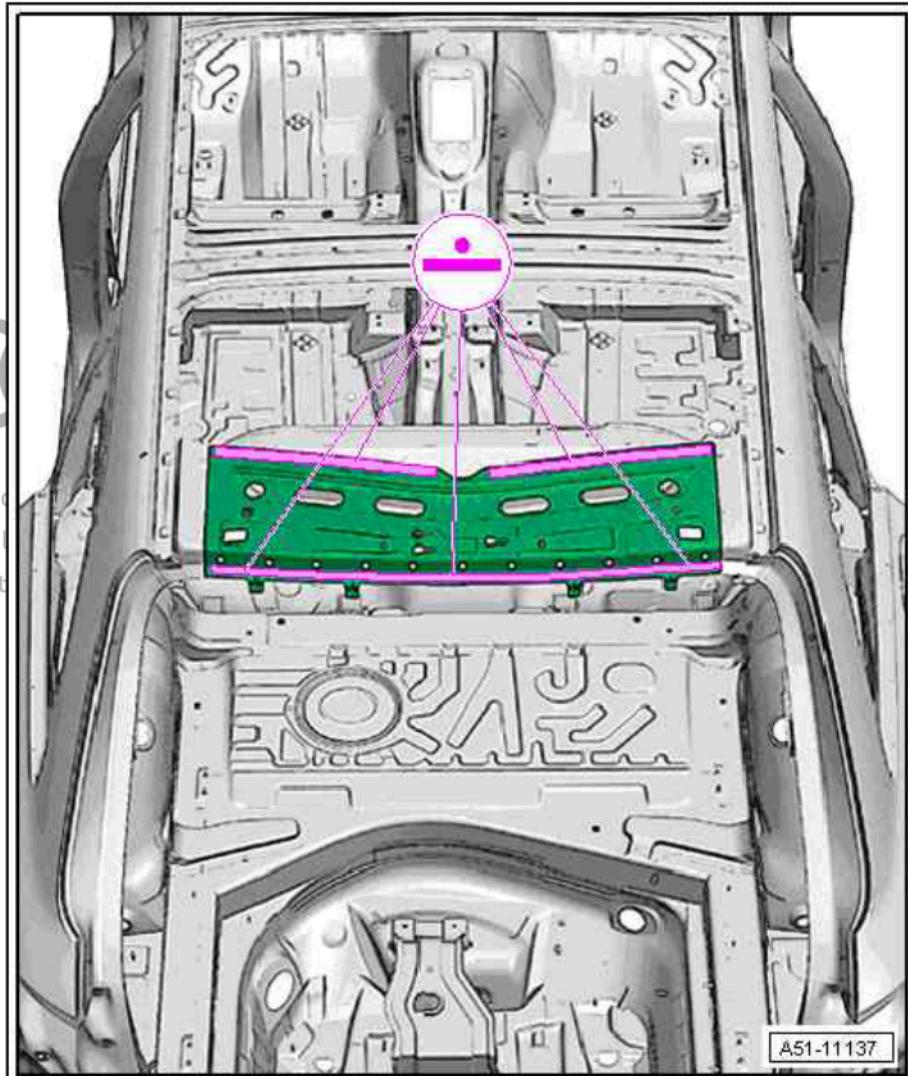


- Welding in roof [⇒ page 179](#)
- Welding in roof with large sunroof [⇒ page 166](#)

RO: 51 09 55 50

12 Inner rear roof frame - Renewal (Avant)

- 1 - Hinge mounting, left-side
(aluminium casting)
- 2 - Rear roof frame (inner)
- 3 - Hinge mounting, right-side
(aluminium casting)

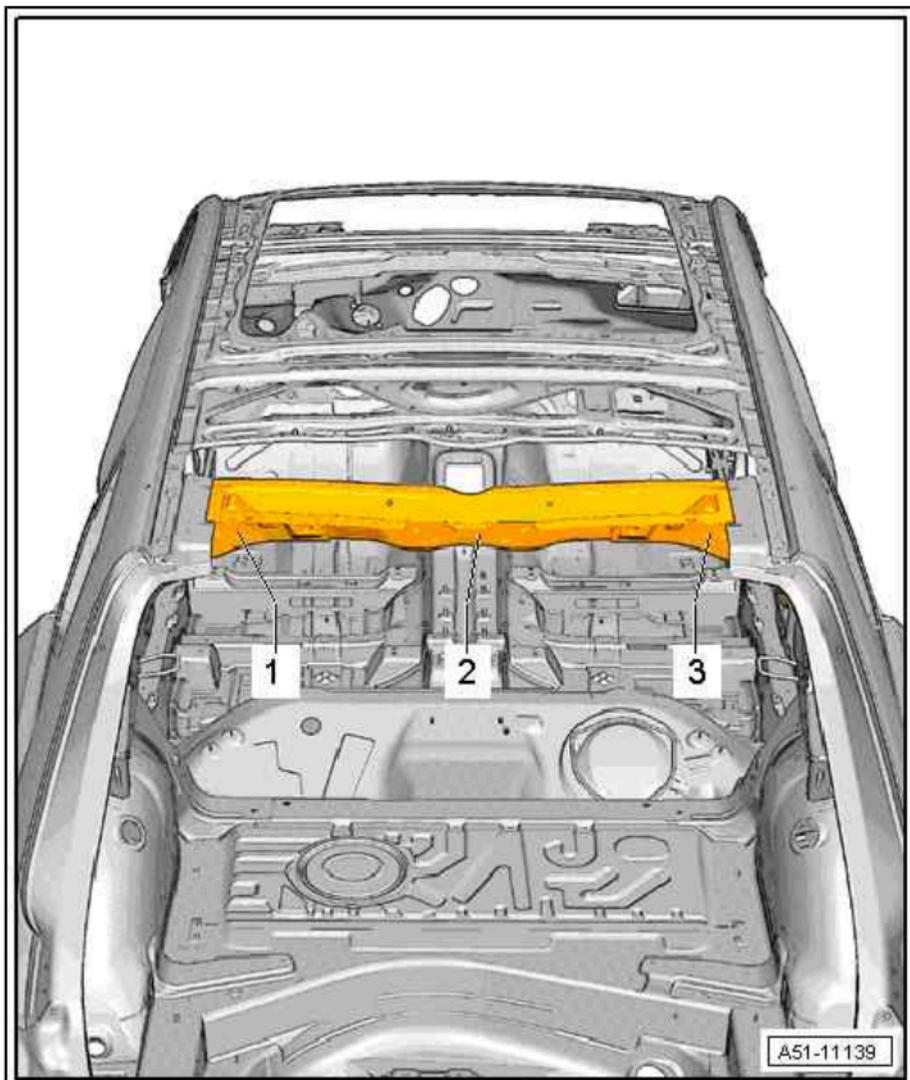

12.1 Notes for vehicles with hybrid drive

[⇒ page 5](#)


12.2 Tools

Photocopy and copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability

Special tools and workshop equipment required
with respect to the correctness of information in this document. Copyright by AUDI AG.

- ◆ Resistance spot welder
- ◆ Shielded arc welding equipment
- ◆ Drill
- ◆ Compact angle grinder
- ◆ Crack testing set
- ◆ Body saw
- ◆ Pneumatic glue gun
- ◆ Compact booster

- ◆ Alternatively, you can use the rechargeable riveter - VAS 5279 B- . This is a complete set.

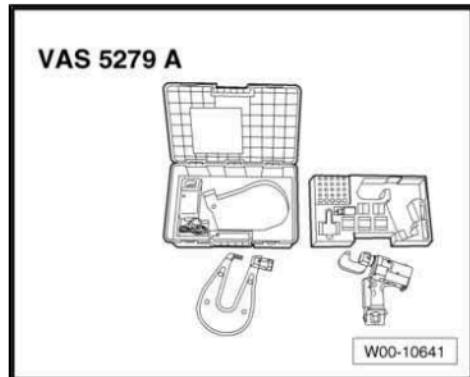


Tools approved by AUDI AG must be used to ensure correct results when carrying out repair work [⇒ page 54](#).

12.3 Procedure

- Roof removed (version with large sunroof) [⇒ page 200](#)
- Roof removed [⇒ page 179](#)
- Upper roof cross member removed [⇒ page 237](#)

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability
Cutting locations
– Remove punch rivets using rechargeable riveter - VAS 5279
with A- or compact booster - VAS 6790 [⇒ page 24](#). Copyright by AUDI AG.

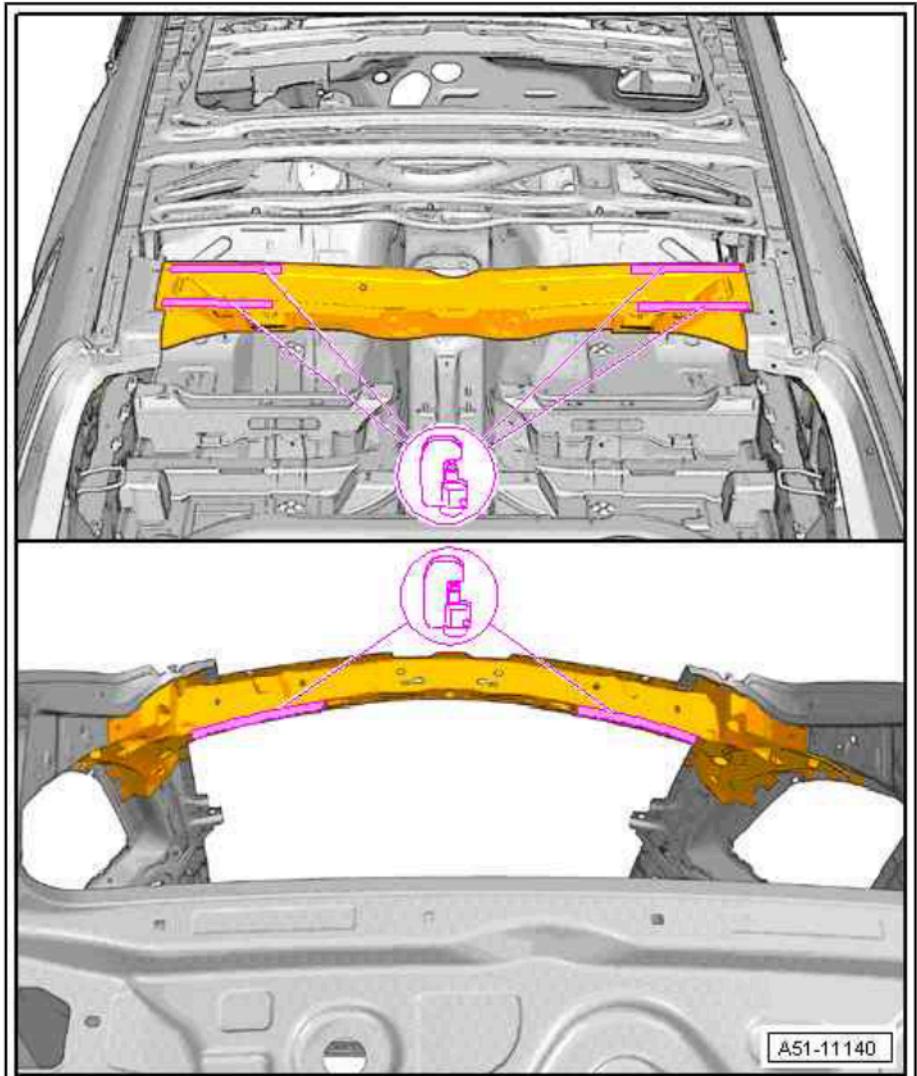


- Remove remaining material using compact angle grinder .



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.



Protected by copyright. Copying
permitted unless authorised by
with respect to the correctness

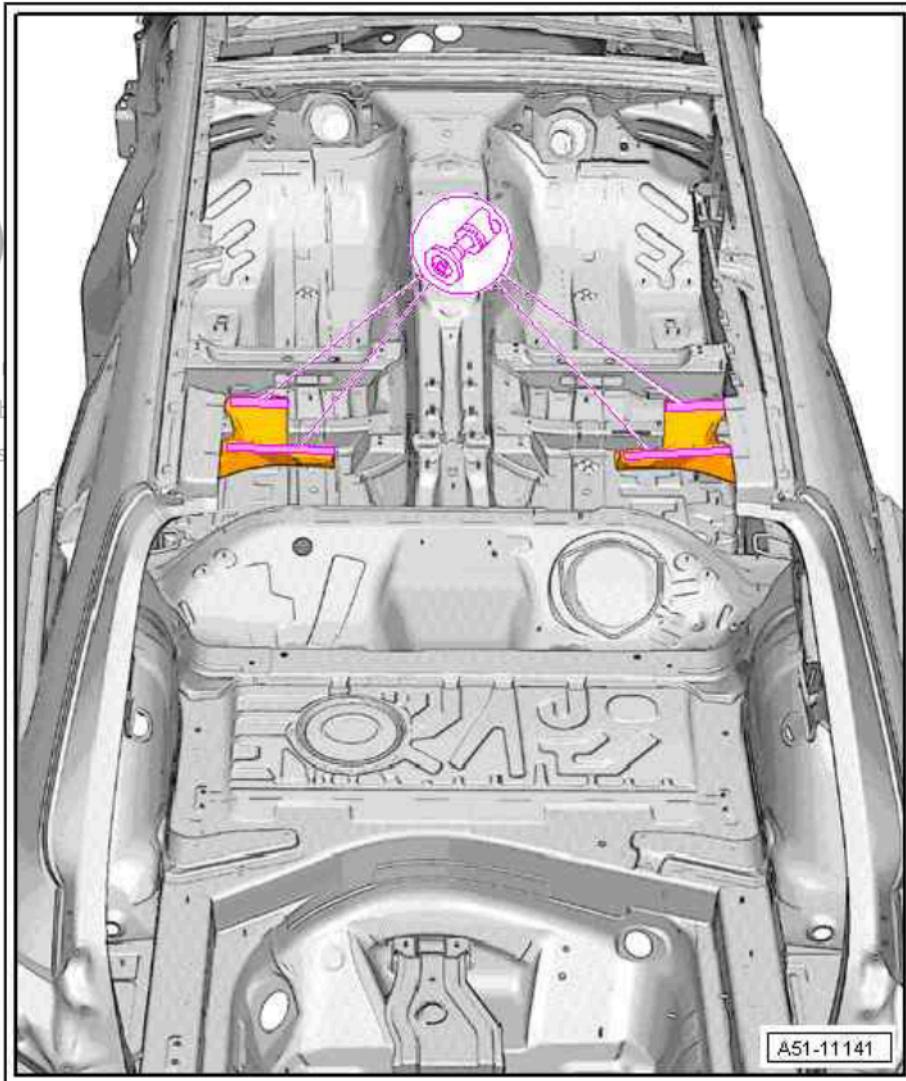


Replacement parts

- ◆ Rear roof frame (inner)
- ◆ Pop rivets (6.5 mm) - WHT 005 413 A- , 6x
- ◆ Silicate stone - DA 009 800 -
- ◆ Cleaning solution - D 009 401 04-
- ◆ Aluminium primer - DA 009 801 -
- ◆ Applicator - D 009 500 25 -
- ◆ 2-component epoxy adhesive - DA 001 730 A2-

Preparing new part

- Locate inner rear roof frame on hinge mounting and drill 3x 7.0 mm Ø holes for pop rivet - WHT 005 413- on each side using drill .

Protected by copyright
permitted unless aut
with respect to the c

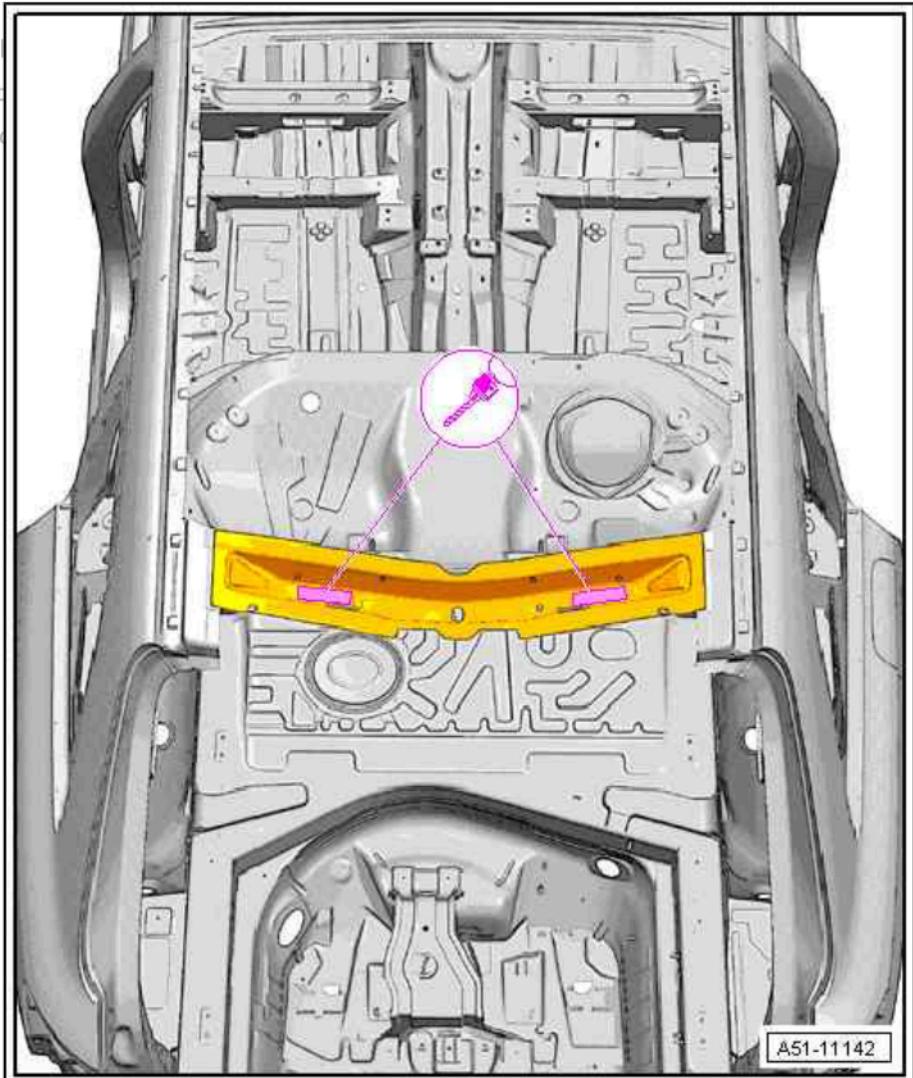

Preparing joints for adhesive application

- Prepare new part for riveting.
- Clean bonding surfaces with cleaning solution - D 009 401 04- .
- Prepare bonding area with silicate stone - DA 009 800 - and clean.
- Apply aluminium primer - DA 009 801 - to bonding surfaces using applicator - D 009 500 25 - .
- Apply 2-component epoxy adhesive - DA 001 730 A2- to riveting area and entire contact surface using pneumatic glue gun - V.A.G 2005 B- .



Protected by copyright. Copying, editing, translating and
permitted unless authorised. © Audi AG 2018.
With respect to the content, see also the information in this document. Copyright ©
Audi AG 2018.




A51-11143

Riveting in

- Match up inner rear roof frame and fix in position.
- Rivet in inner rear roof frame using compact booster - VAS 6790/20- and pop rivets - WHT 005 413 A- .



Protected by copyright. Copying for personal use is
permitted unless authorised by AUDI AG.
With respect to the correctness of info

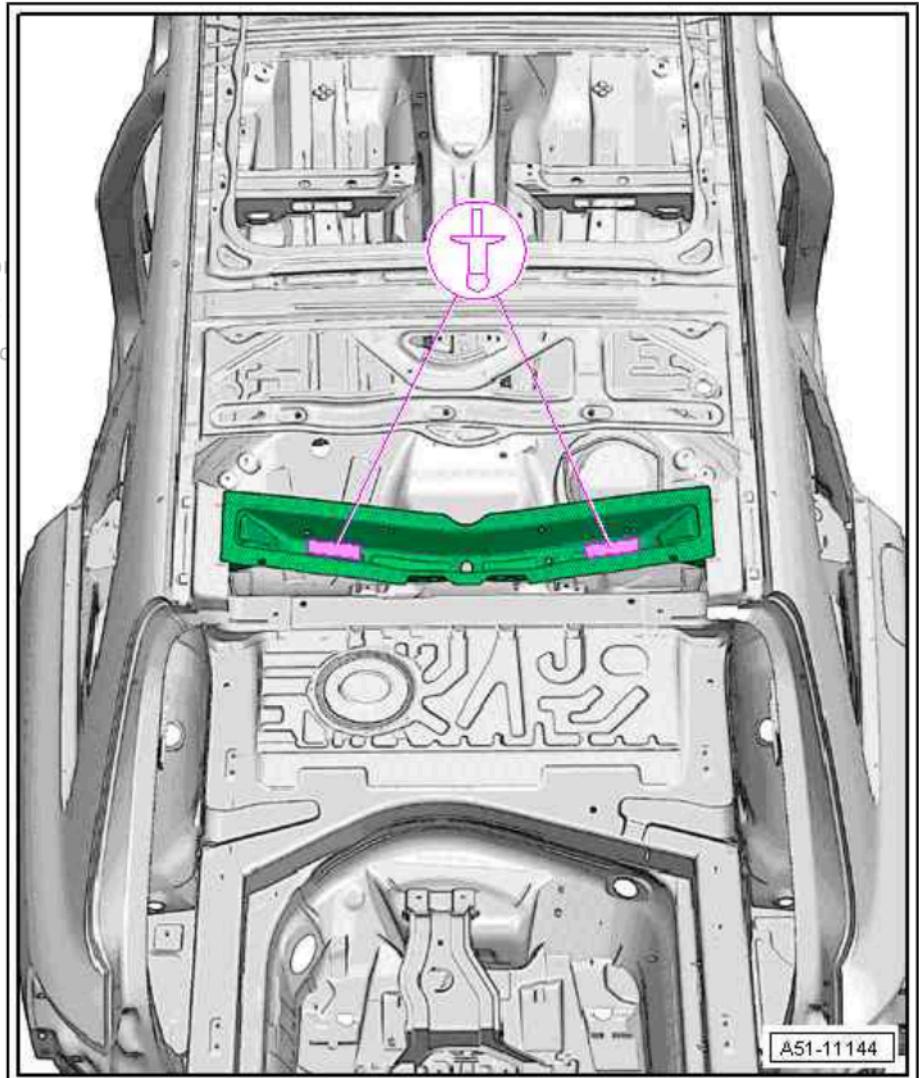


- Welding in roof (version with large sunroof) [⇒ page 200](#)
- Welding in roof [⇒ page 179](#)
- Welding in roof cross member [⇒ page 237](#)
- Upper roof cross member removed [⇒ page 237](#)

RO: 51 17 55 50

13 Hinge mounting - Renewal

- 1 - Inner side frame
- 2 - Hinge mounting (cast aluminium profile)
- 3 - Separating cut (top) on inner side frame
- 4 - Separating cut (bottom) on inner side frame

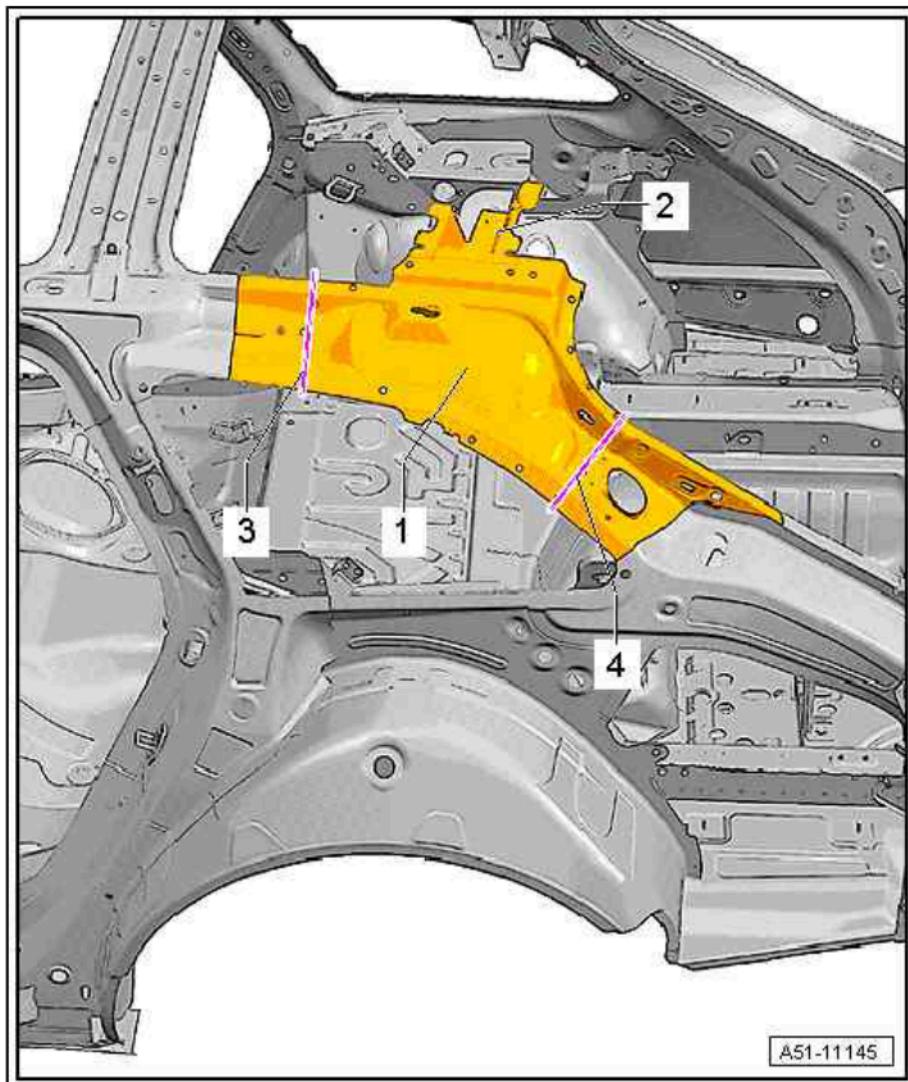

13.1 Notes for vehicles with hybrid drive

[⇒ page 5](#)

13.2 Tools

Special tools and workshop equipment required

- ◆ Resistance spot welder
- ◆ Shielded arc welding equipment
- ◆ Drill
- ◆ Compact angle grinder
- ◆ Body saw
- ◆ Spot weld breaker


Tools approved by AUDI AG must be used to ensure correct results when carrying out repair work [⇒ page 54](#).

13.3 Procedure


- Side panel removed [⇒ page 370](#)
- Roof removed (version with large sunroof) [⇒ page 200](#)
- Roof removed [⇒ page 179](#)
- Upper roof cross member removed [⇒ page 237](#)

Cutting locations

- Make separating cuts on inner side frame using body saw .

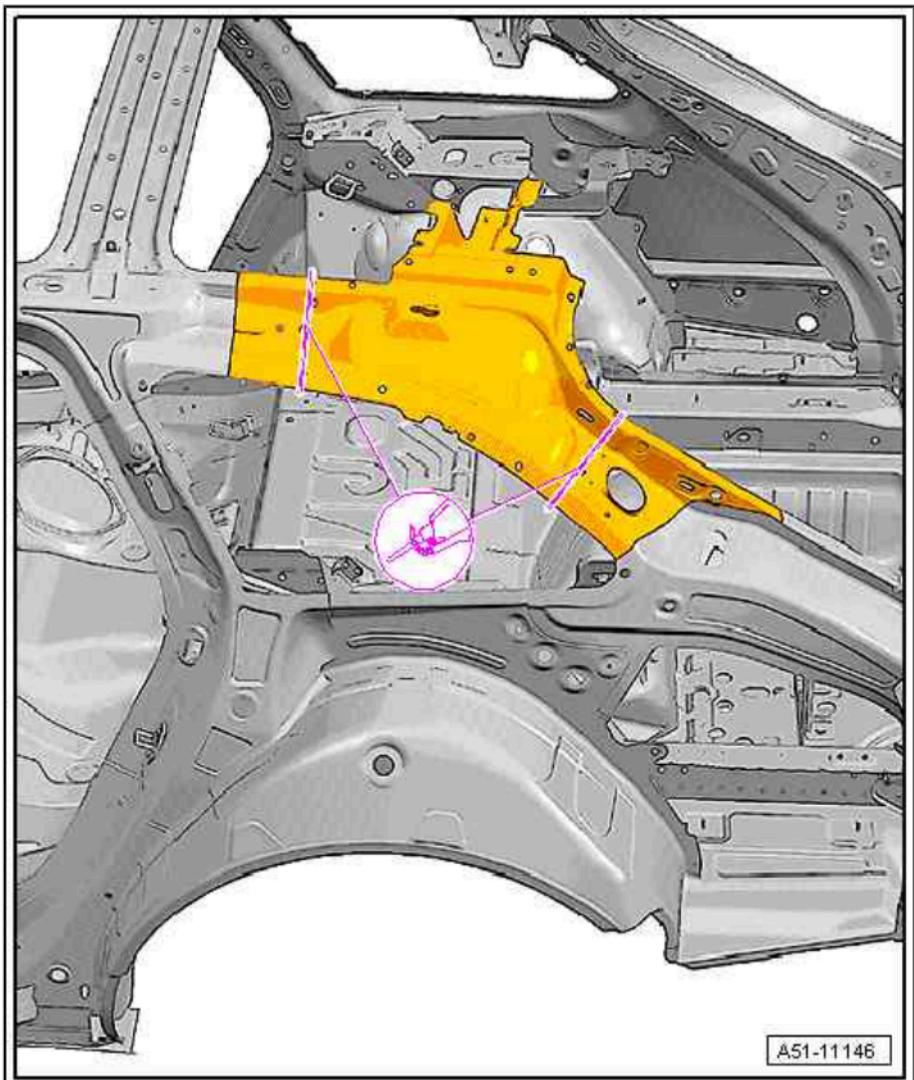

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

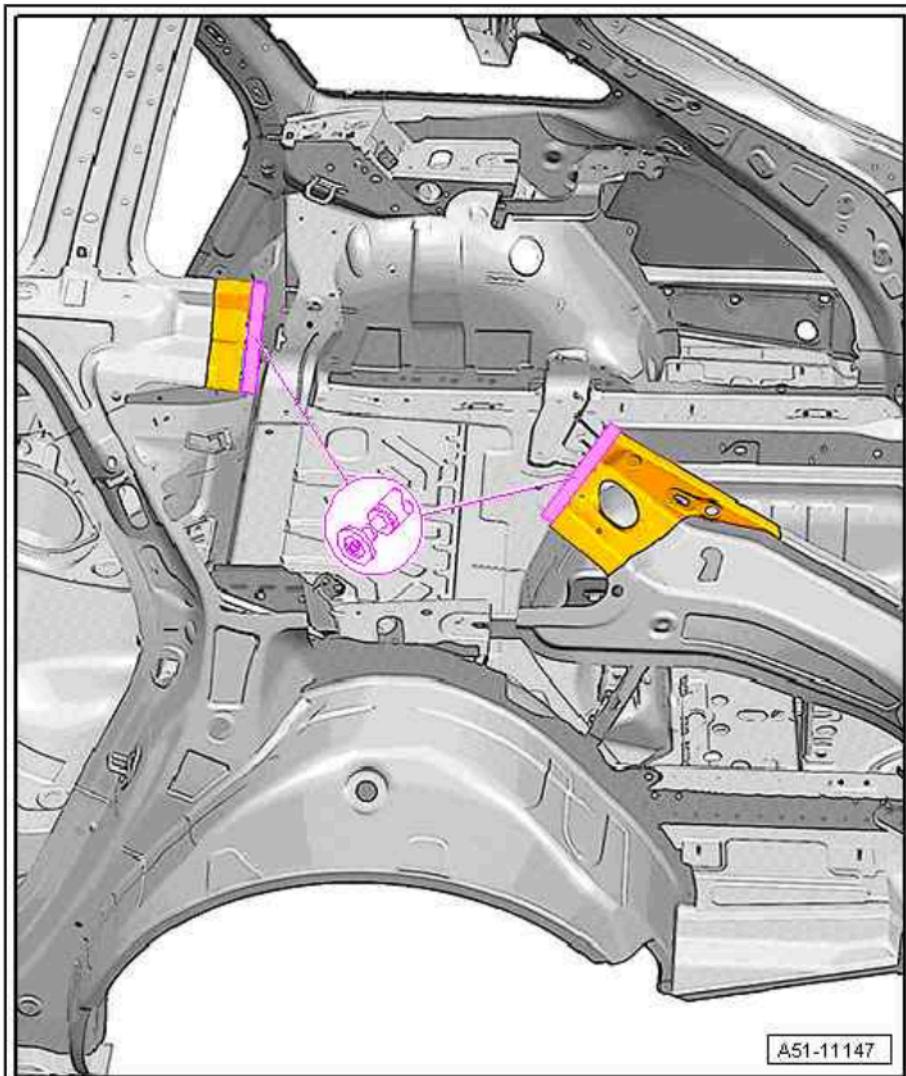

Replacement parts

- ◆ Inner side frame


Preparing new part

- Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability
- Transfer separating cuts to new part and cut to size using body saw

with respect to the correctness of information in this document. Copyright by AUDI AG.



Protected by copyright. Copying or
permitted unless authorised by A
with respect to the correctness o

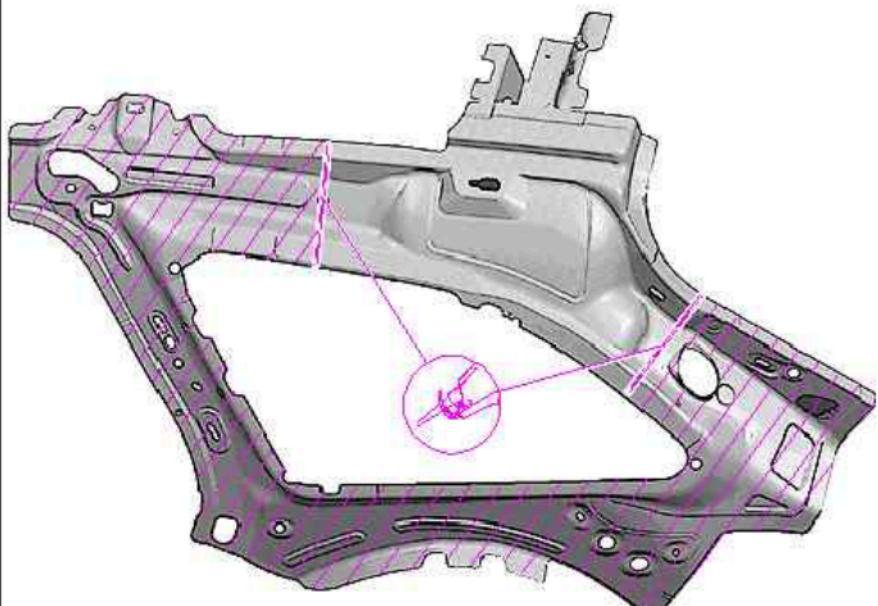

A51-11148



Note


*Due to the different types of steel and panel thicknesses em-
ployed, one of the resistance spot welding units listed in this
manual and approved by Audi must be used to ensure correct
results when spot welding.*

Welding in

- Match up new part with attached parts and fix position.
- Butt weld separating cuts using shielded arc welding equip-
ment : SG continuous seam.



Protected by copyright.
permitted unless autho
with respect to the corn

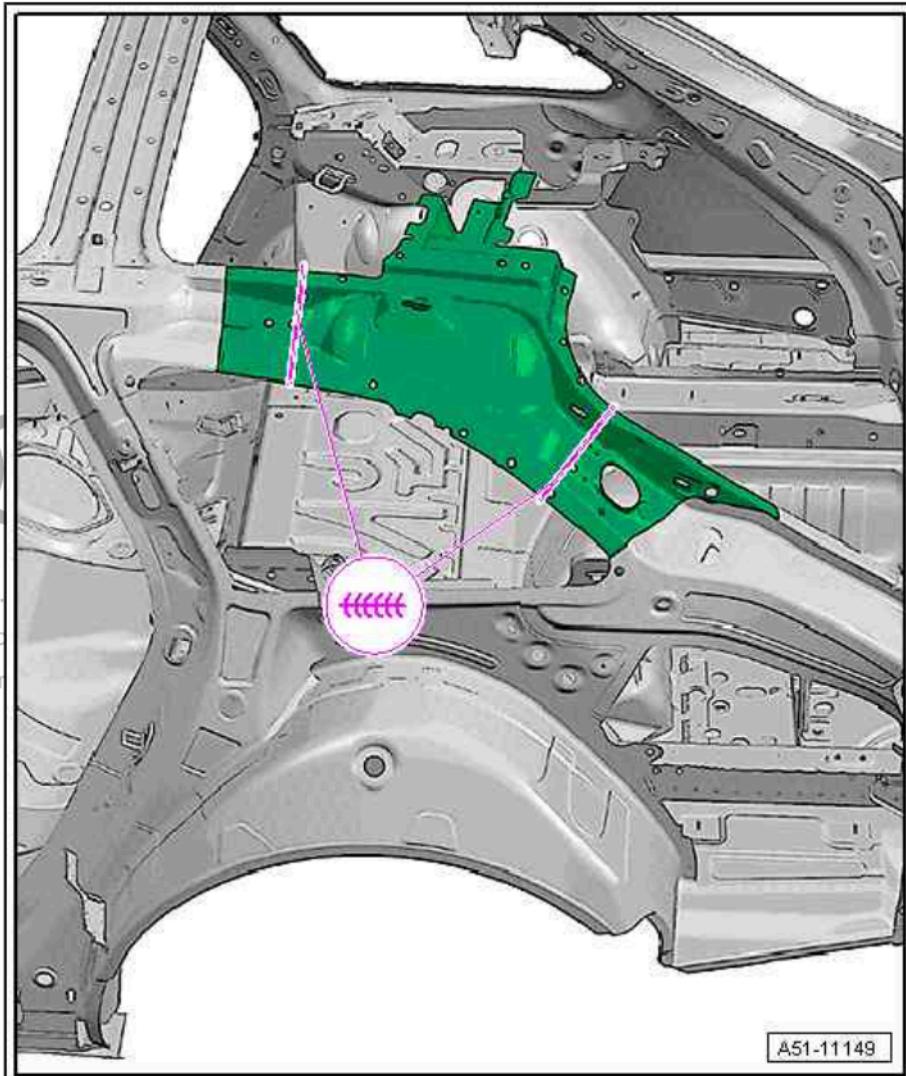

- Welding in side panel [⇒ page 370](#)
- Welding in roof with large sunroof [⇒ page 200](#)
- Welding in roof [⇒ page 179](#)
- Welding in roof cross member (top) [⇒ page 237](#)
- Welding in inner roof frame [⇒ page 241](#)

RO: 51 37 55 00


14 Outer A-pillar - Renewal

(Saloon and Avant identical)

- 1 - A-pillar
- 2 - Upper separating cut
- 3 - Separating cut in side member
- 4 - Separating cut for partial renewal

Partial renewal

Partial renewal of the A-pillar is possible using this separating cut.

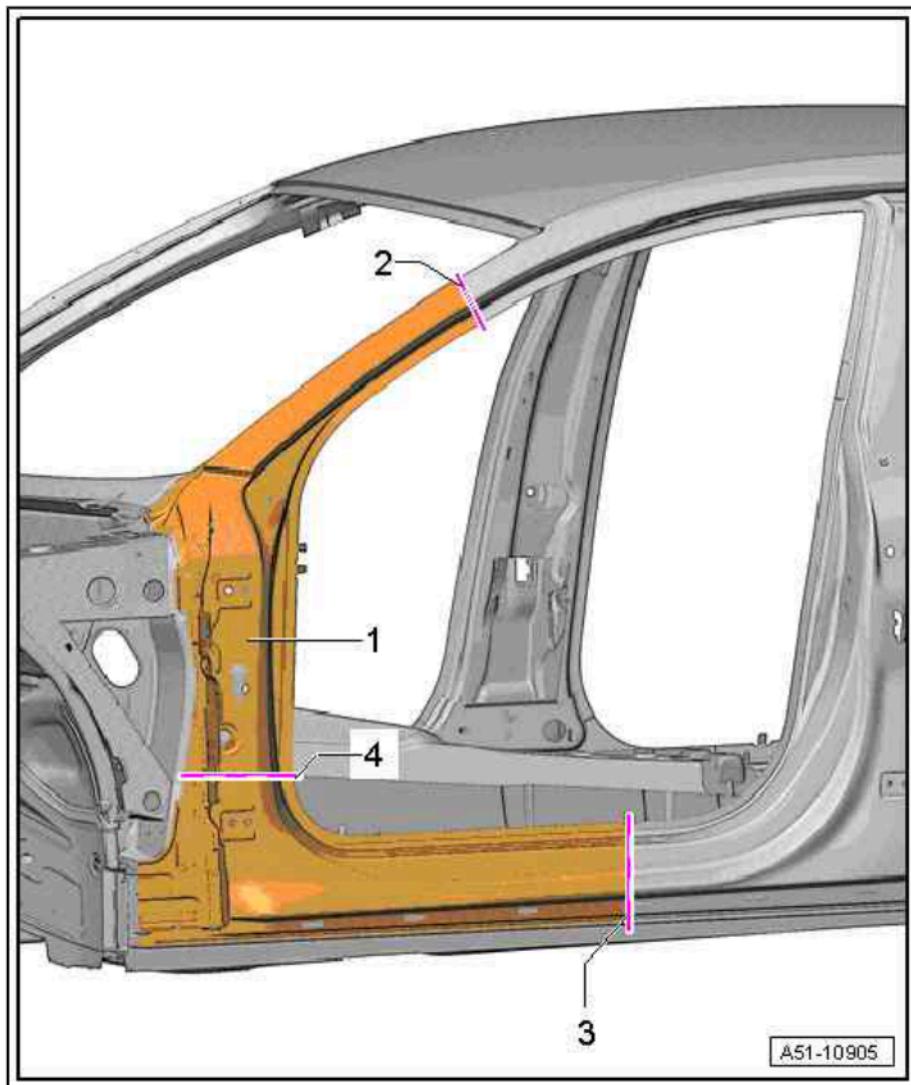

A51-10905

14.1 Notes for vehicles with hybrid drive

[⇒ page 5](#)

14.2 Tools

Special tools and workshop equipment required

- ◆ Resistance spot welder
- ◆ Shielded arc welding equipment
- ◆ Drill
- ◆ Compact angle grinder
- ◆ Body saw
- ◆ Spot weld breaker

selected by copyright. Copying for private or commercial purposes, in part or in whole, is not authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

Tools approved by AUDI AG must be used to ensure correct results when carrying out repair work [⇒ page 54](#).

14.3 Procedure


Cutting locations

Permitted separating cuts on complete side panel [⇒ page 128](#).


Note Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability

If the inner A-pillar is also being renewed, the separating cut -1- must be made at a distance of 330 mm -a- from the edge of the roof.


- Mark off separating cut -1- according to the degree of damage and make the cut using body saw .
- Mark off separating cut -2- according to the degree of damage and make the cut using body saw .

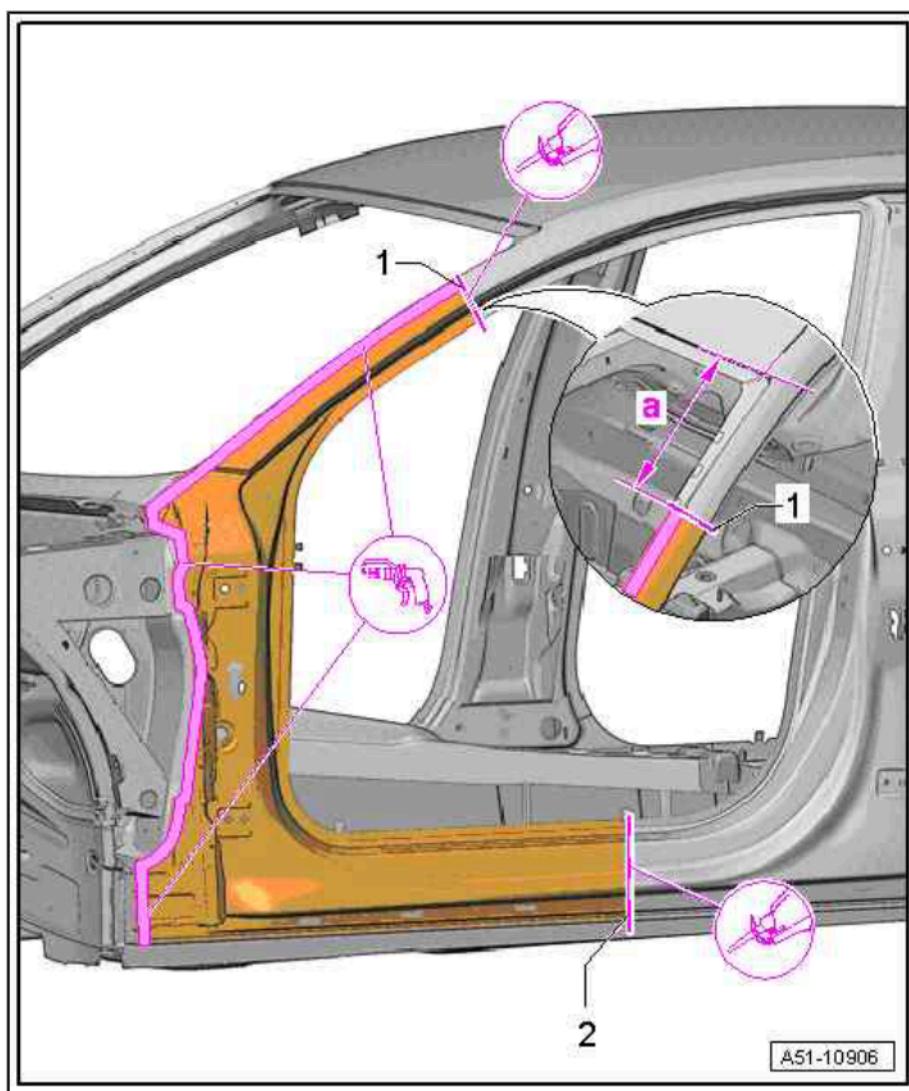

- Separate original joint using spot weld breaker .
- Make separating cut as shown using body saw .

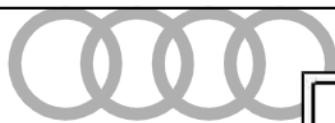


Protected by copyright. Copying, publishing, editing and any other commercial use of this document is
permitted unless authorised by the copyright holder.
with respect to the correct execution of repair work.

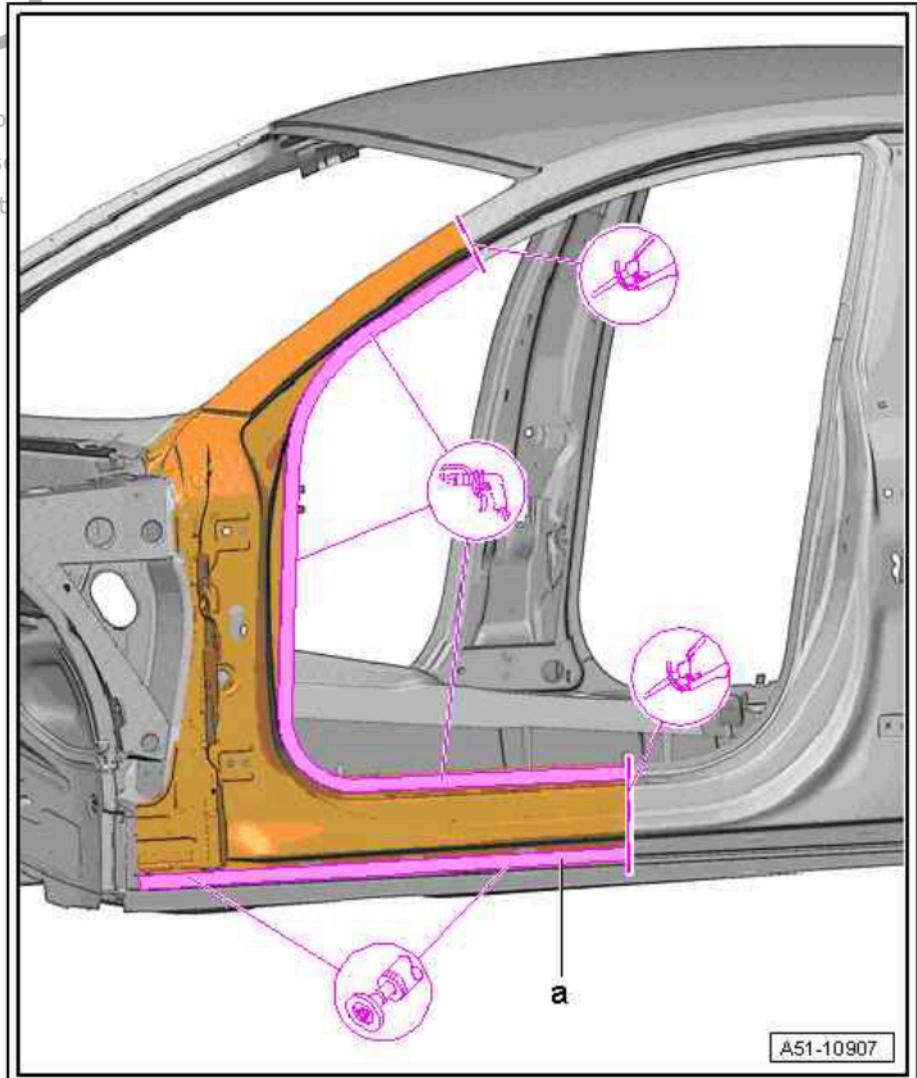

- Remove remaining material using compact angle grinder .



Protected by cop
permitted unless
with respect to t

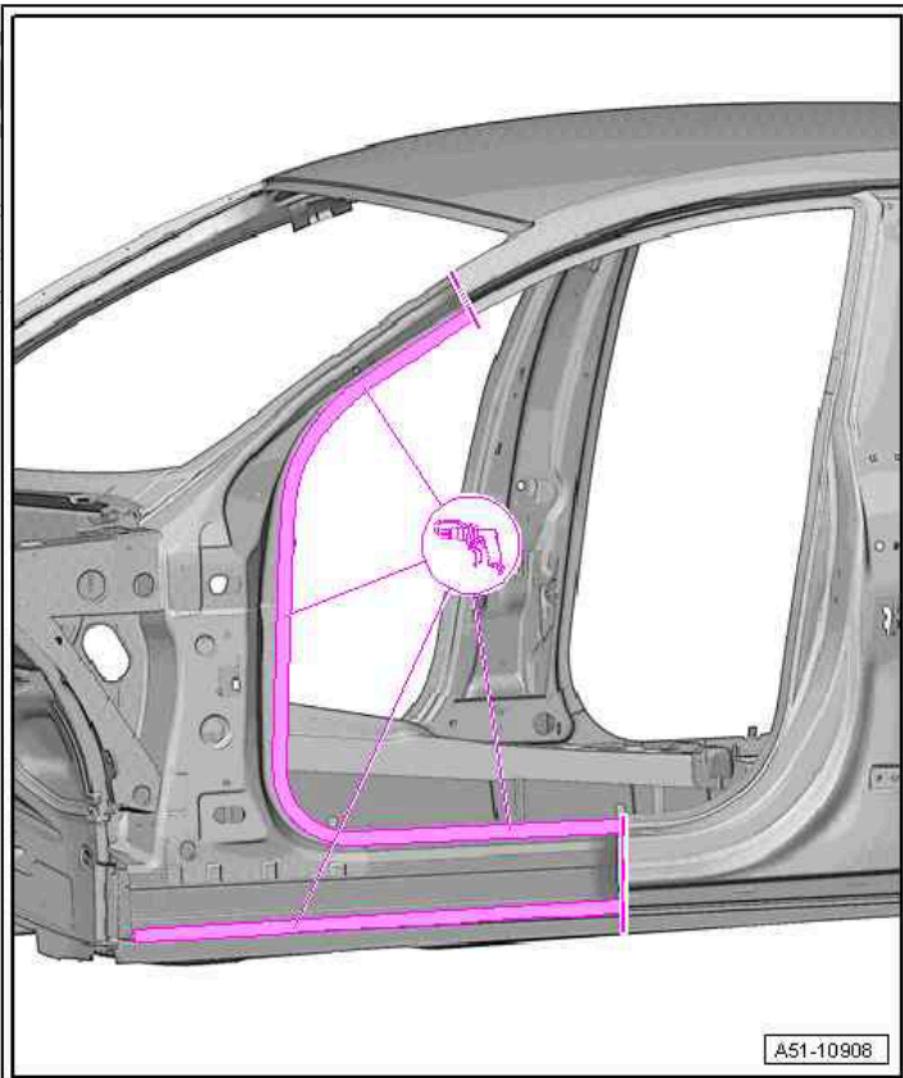


Replacement part

- ◆ A-pillar (sub-part)

Preparing new part

- Transfer separating cuts to new part and cut to size using body saw .
- Drill holes for SG plug weld seam, 8 mm Ø using drill .

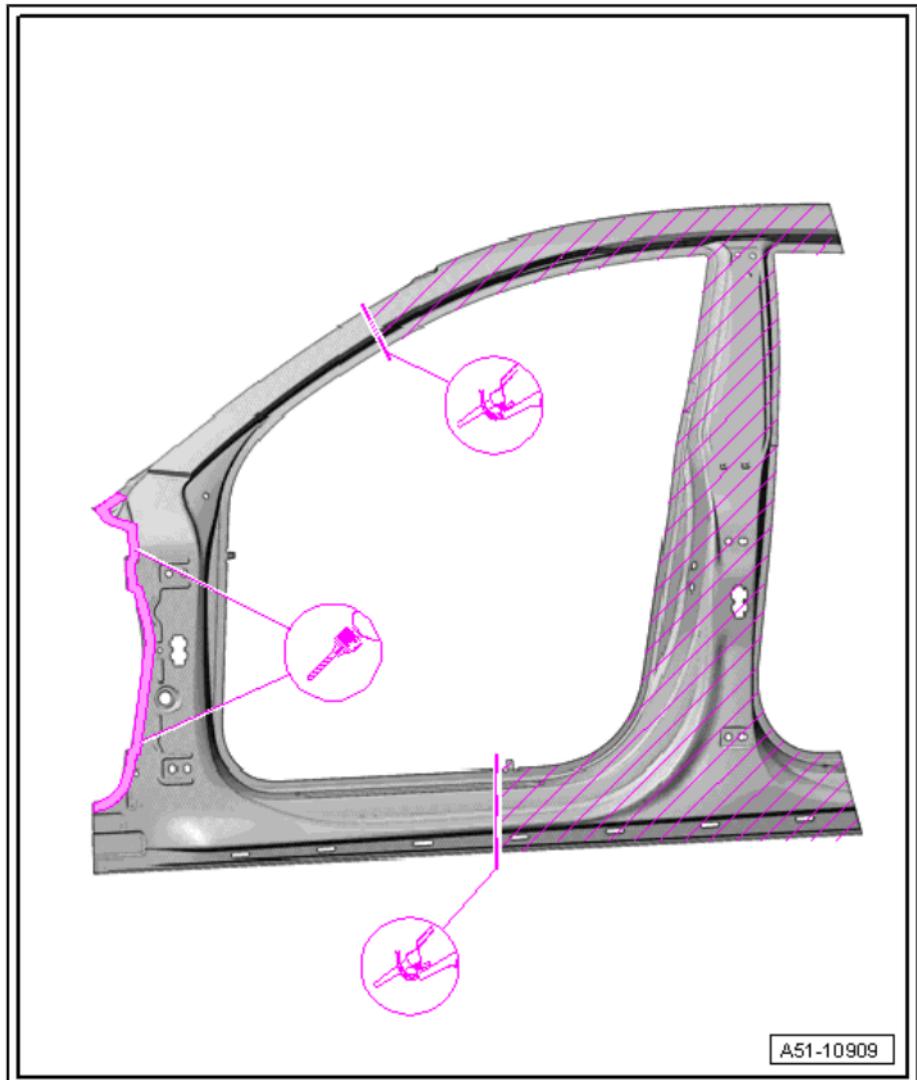

A51-10909



Note

Due to the different types of steel and panel thicknesses employed, one of the resistance spot welding units listed in this manual and approved by Audi must be used to ensure correct results when spot welding.


Welding in

- Butt weld at separating cuts using shielded arc welding equipment : SG continuous seam.
- Weld in outer A-pillar using resistance spot welder : RP spot weld seam.
- Weld in outer A-pillar using shielded arc welding equipment : SG continuous seam (staggered - with gaps).

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.




Protected by copyright.
Use is permitted unless
otherwise indicated
with respect to the
material.

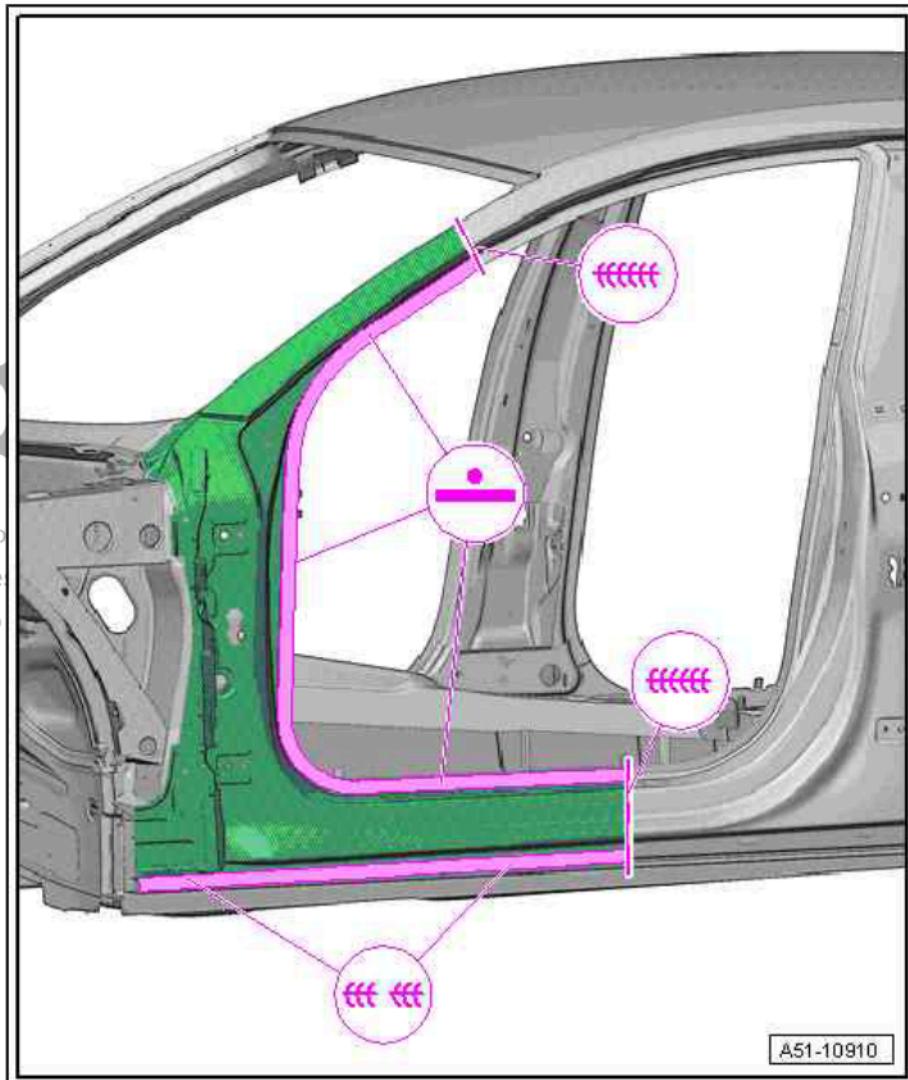

- Weld in A-pillar using resistance spot welder : RP spot weld seam.
- Weld in A-pillar using shielded arc welding equipment : SG plug weld seam.



Protected by copyright. Copying for private
use is permitted unless authorised by AUDI AG.
With respect to the correctness of information

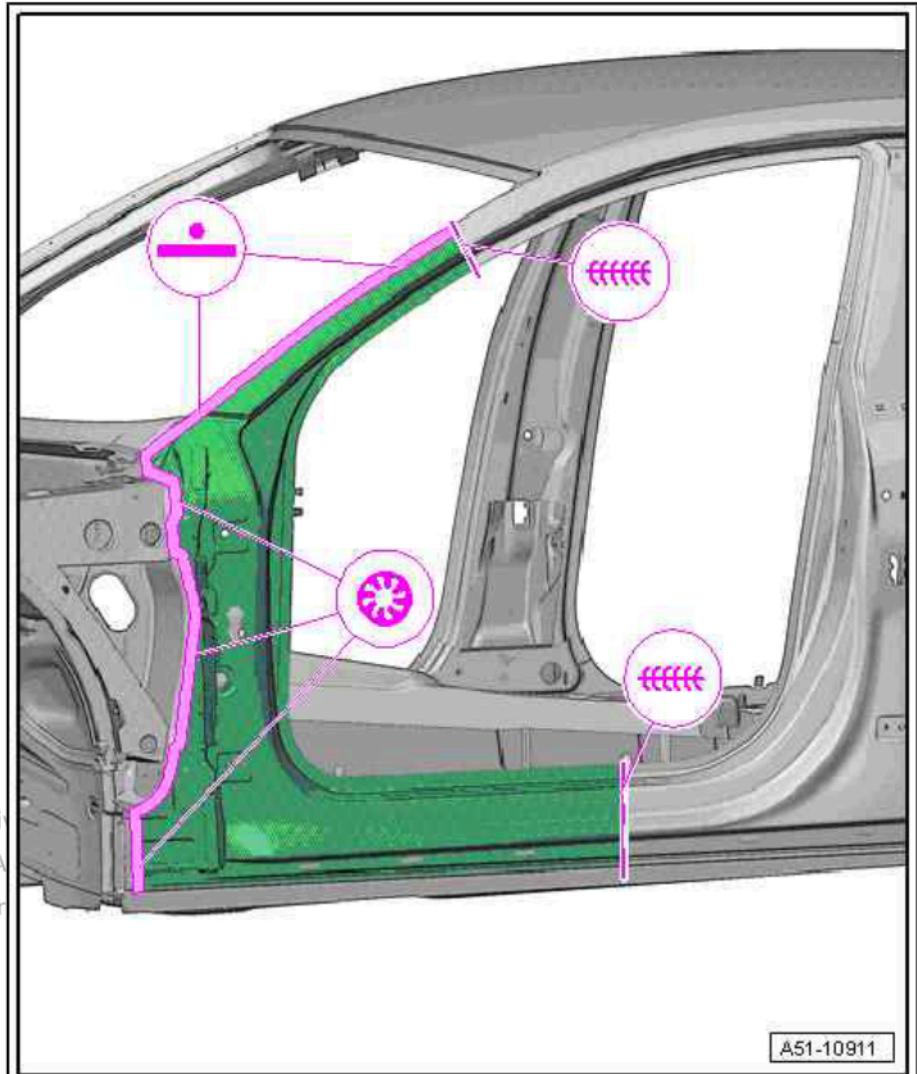


RO: 51 38 55 50

15 Upper inner A-pillar - Partial renewal

(Saloon and Avant identical)

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

- 1 - Separating cut, inner A-pillar
- 2 - Side panel
- 3 - Outer side member
- 4 - Separating cut in inner side member
- 5 - Inner side member
- 6 - Lower inner A-pillar
- 7 - Upper inner A-pillar

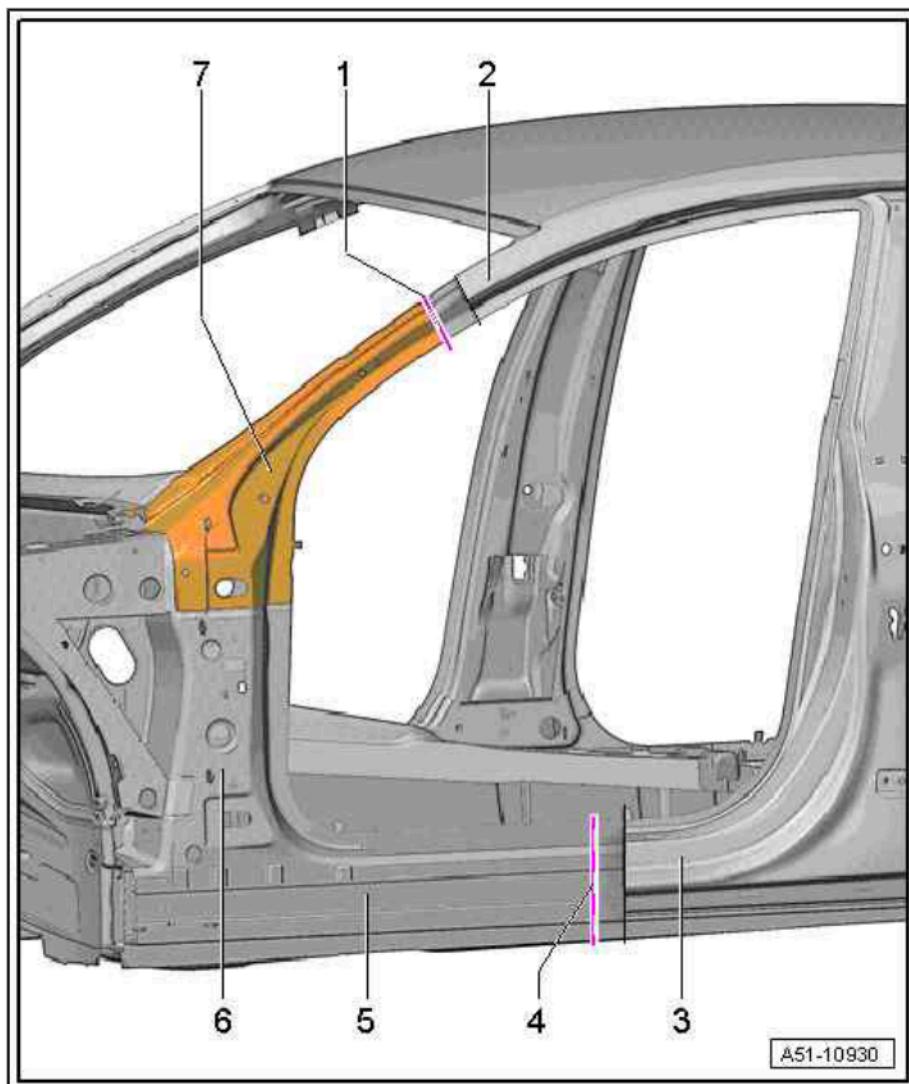

15.1 Notes for vehicles with hybrid drive

[⇒ page 5](#)

15.2 Tools

Special tools and workshop equipment required

- ◆ Resistance spot welder
- ◆ Shielded arc welding equipment
- ◆ Drill
- ◆ Compact angle grinder
- ◆ Body saw
- ◆ Spot weld breaker

Tools approved by AUDI AG must be used to ensure correct results when carrying out repair work [⇒ page 54](#).

15.3 Procedure


- Outer A-pillar removed [⇒ page 253](#)
- Intermediate piece removed [⇒ page 61](#)

Cutting locations


Permitted separating cuts on complete side panel [⇒ page 128](#).

- Cut through A-pillar completely using compact angle grinder
(important: keep to dimension -1- for separating cut).


Dimension -1- = 330 mm

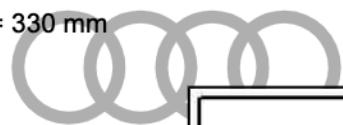

Protected by copyright.
permitted unless
with respect to

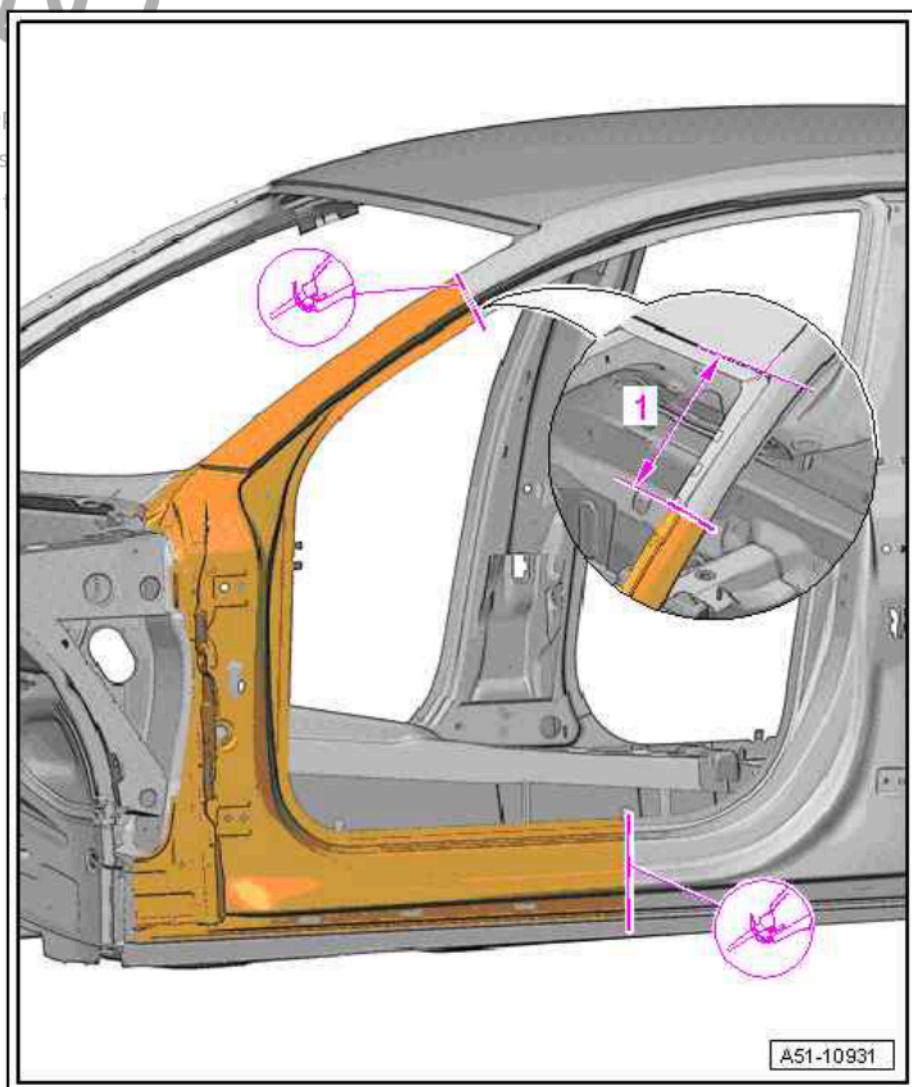

- Separate original joint using spot weld breaker.

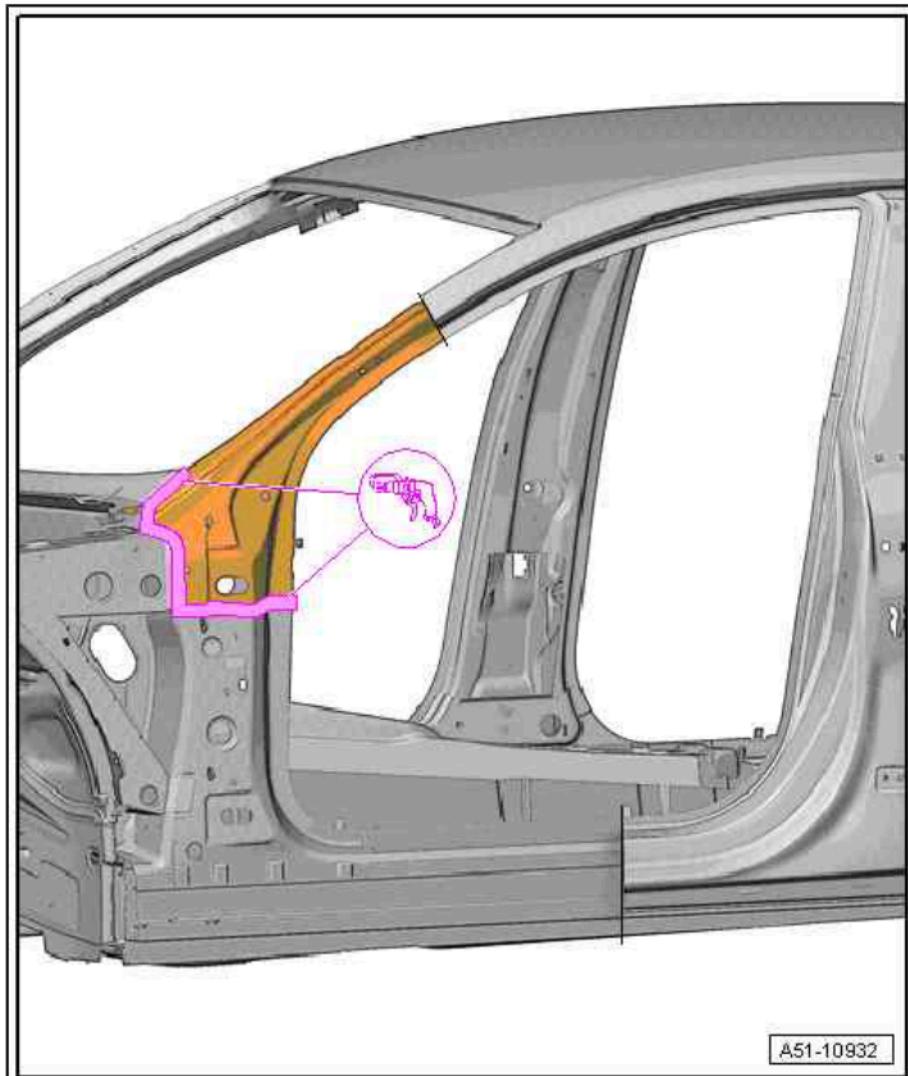


- Make separating cut in outer A-pillar using compact angle grinder (important: keep to dimension -1-).

Dimension -1- = 70 mm




Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

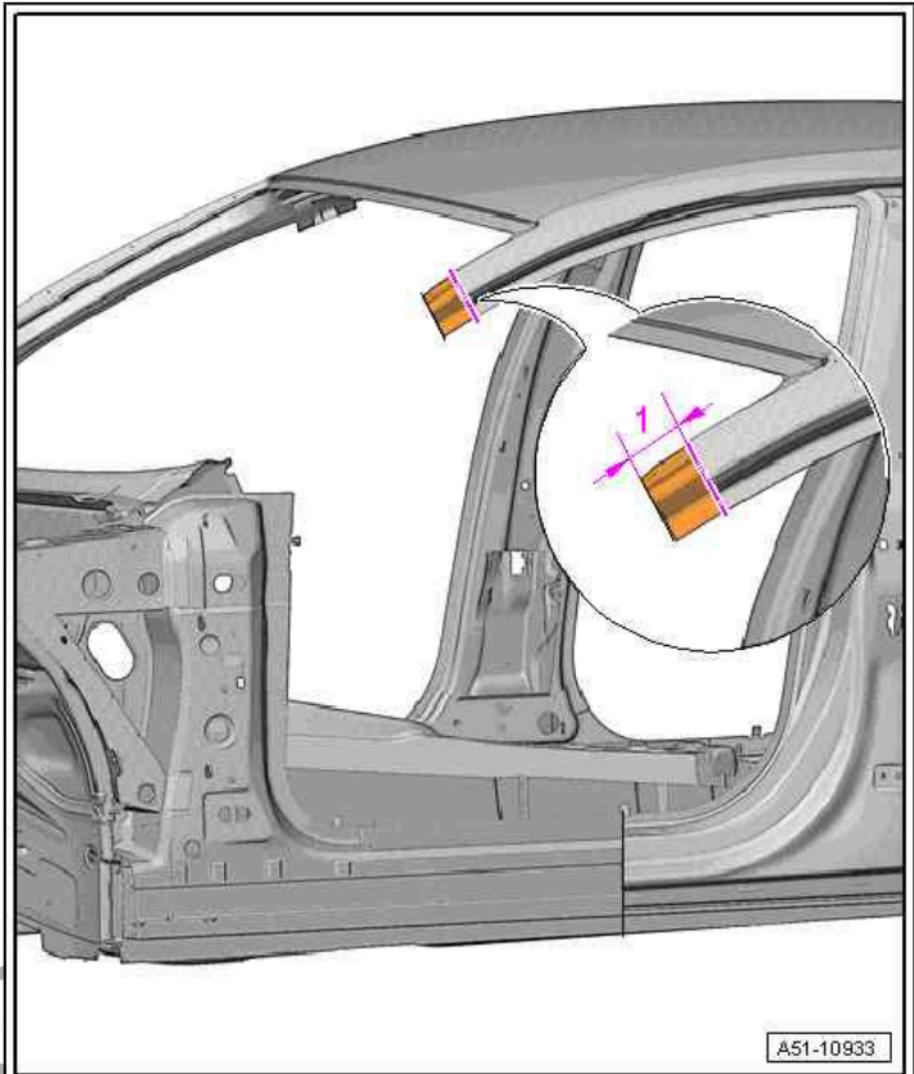

- Cut through inner A-pillar cover plate using compact angle grinder (important: keep to dimension 1 for separating cut).
Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability

Dimension 1 = 100 mm
With respect to the correctness of information in this document. Copyright by AUDI AG.

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

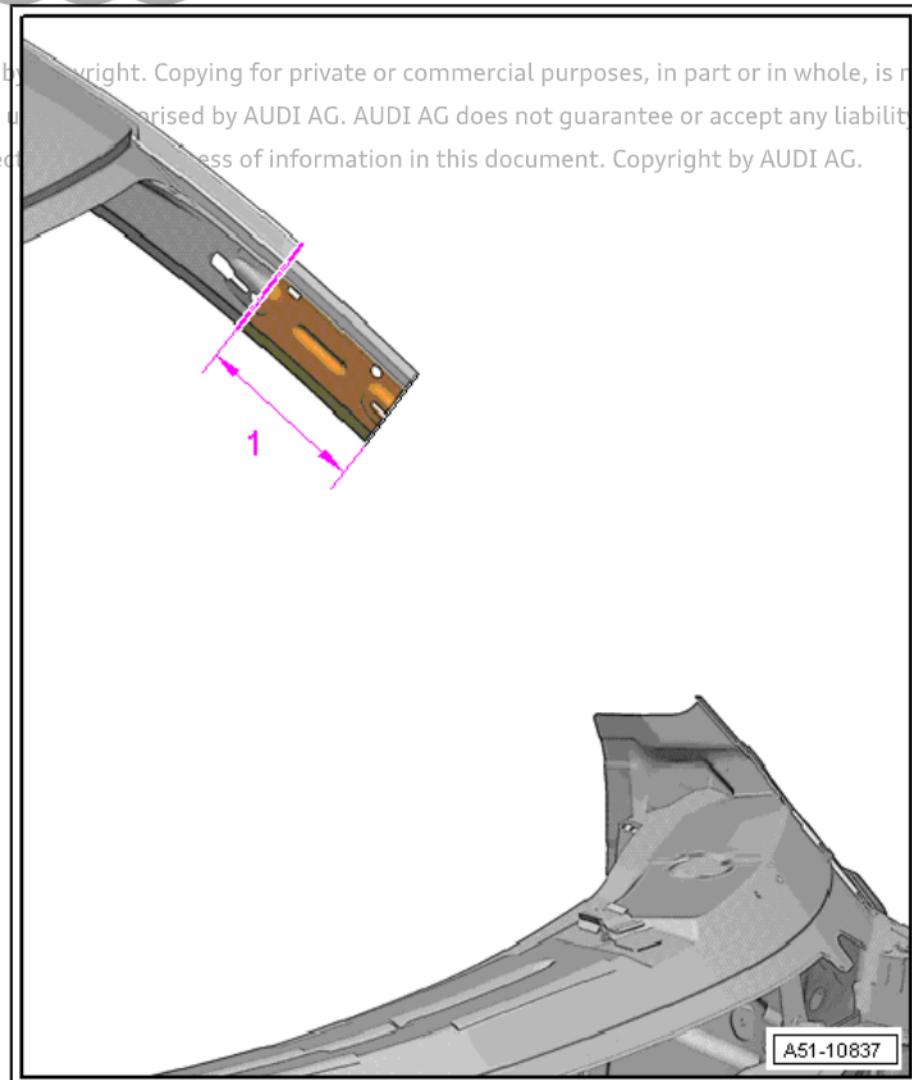


- Remove remaining material using compact angle grinder .



Protected by copyright.
permitted unless autho
with respect to the correctness of information in this document. Copyright by AUDI AG.

A51-10934

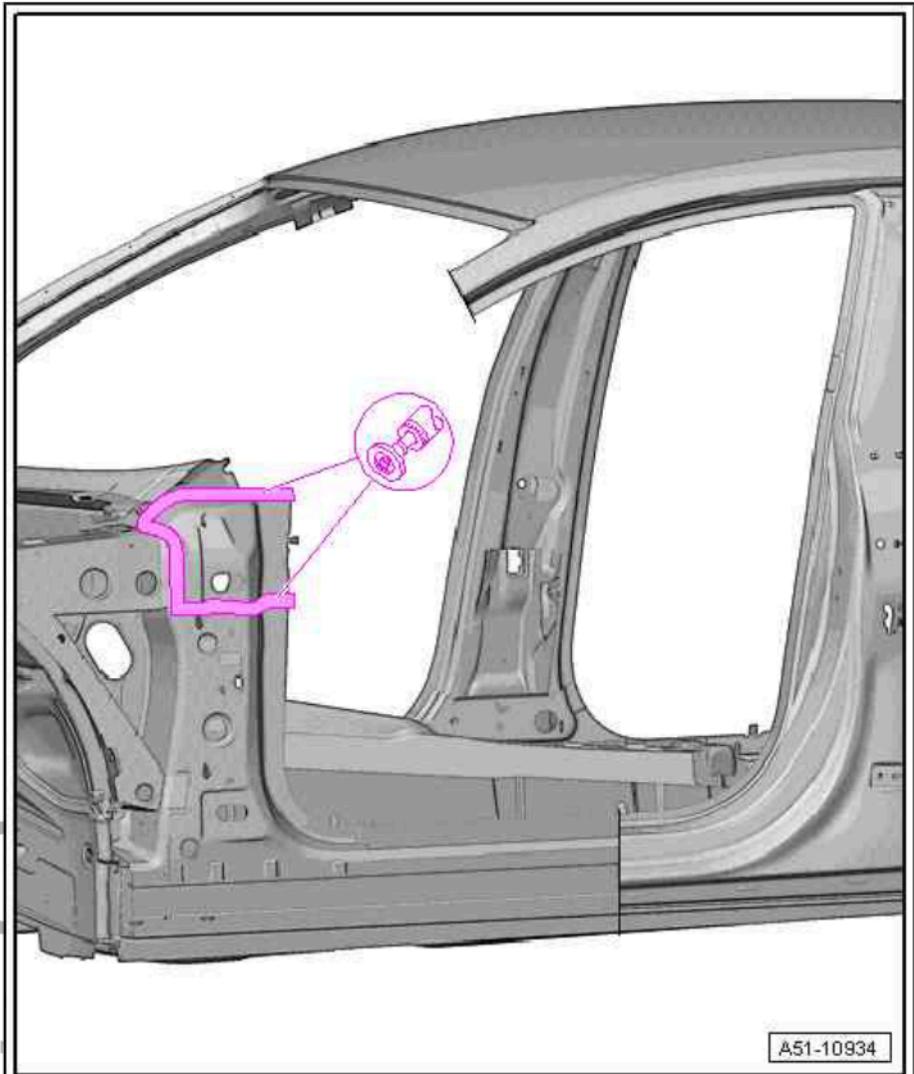

Replacement part

Lower inner A-pillar


Upper inner A-pillar

Inner A-pillar cover plate

Filler foam - D 506 KD1 A3-


Preparing new part

- Separating cut -1- for inner A-pillar part section; separating cut -2- for backing plate (important: keep to dimension -a = 120 mm-).
- Transfer separating cut for inner A-pillar reinforcement to new part and cut to size using body saw .

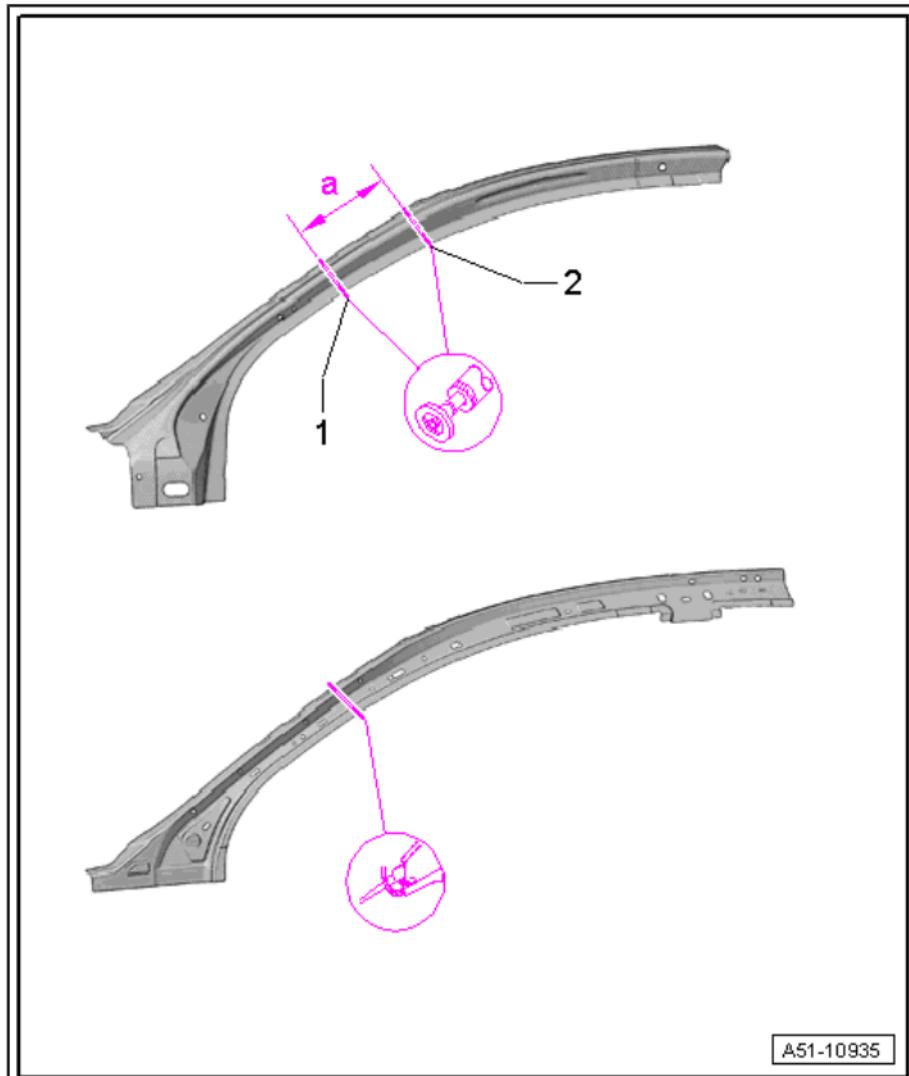

- Drill holes for SG plug weld seam, 8 mm Ø using drill .
- Grind off area of separating cut for SG continuous weld seam using compact angle grinder .
- Prepare reinforcement plate for inner A-pillar -120 mm- using compact angle grinder .
© AUDI AG. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

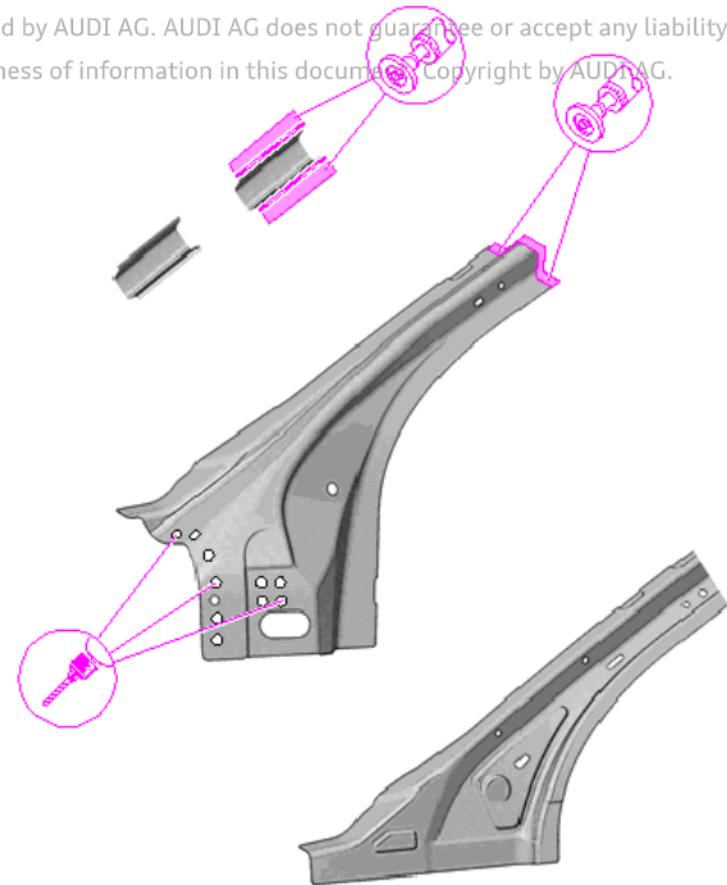

A51-10936



Note


Due to the different types of steel and panel thicknesses employed, one of the resistance spot welding units listed in this manual and approved by Audi must be used to ensure correct results when spot welding.

Welding in

- Weld in inner A-pillar using shielded arc welding equipment : SG plug weld seam.
- Weld in inner A-pillar at separating cut from inside to outside using shielded arc welding equipment : SG continuous seam.




Protected by copyright.
Photocopying or further distribution
is prohibited without the
prior written consent of the
copyright owner.

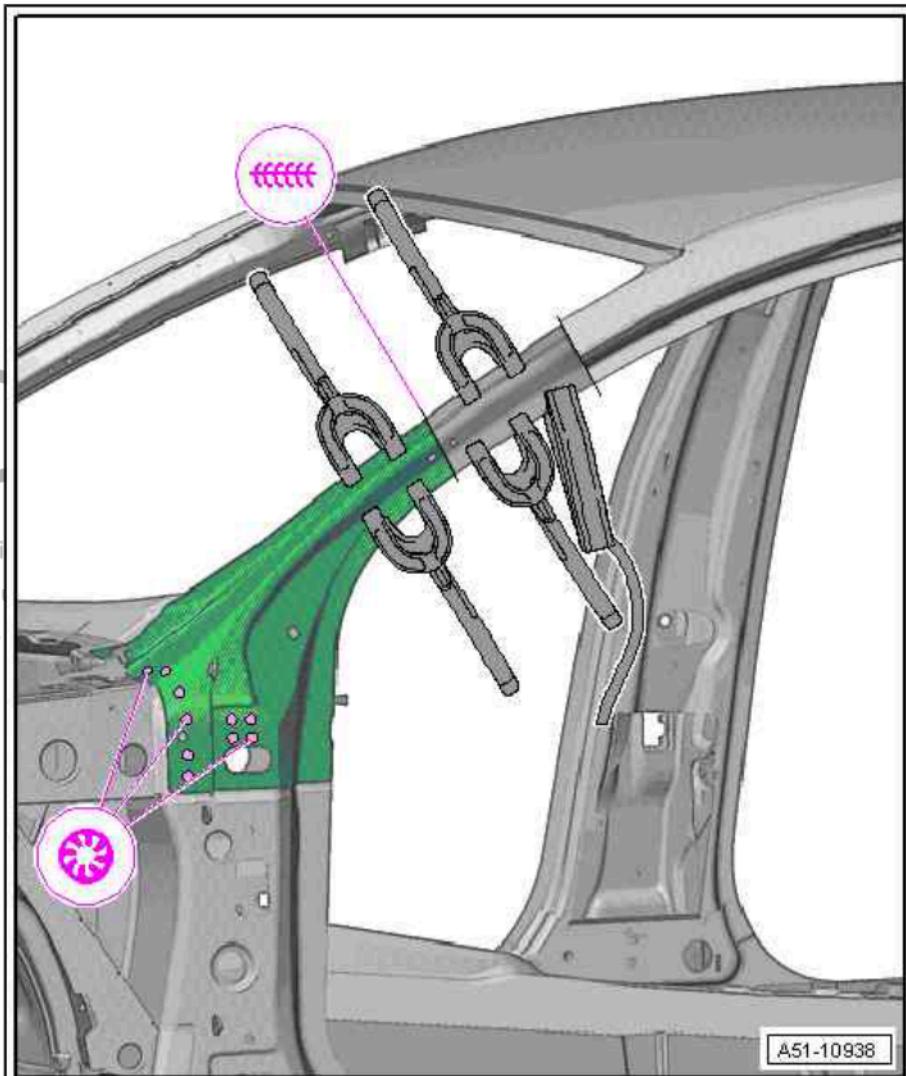

View from inside

- Weld in base surface and side surface of inner A-pillar with spot welds spaced at 25 mm using resistance spot welder : RP spot weld seam.

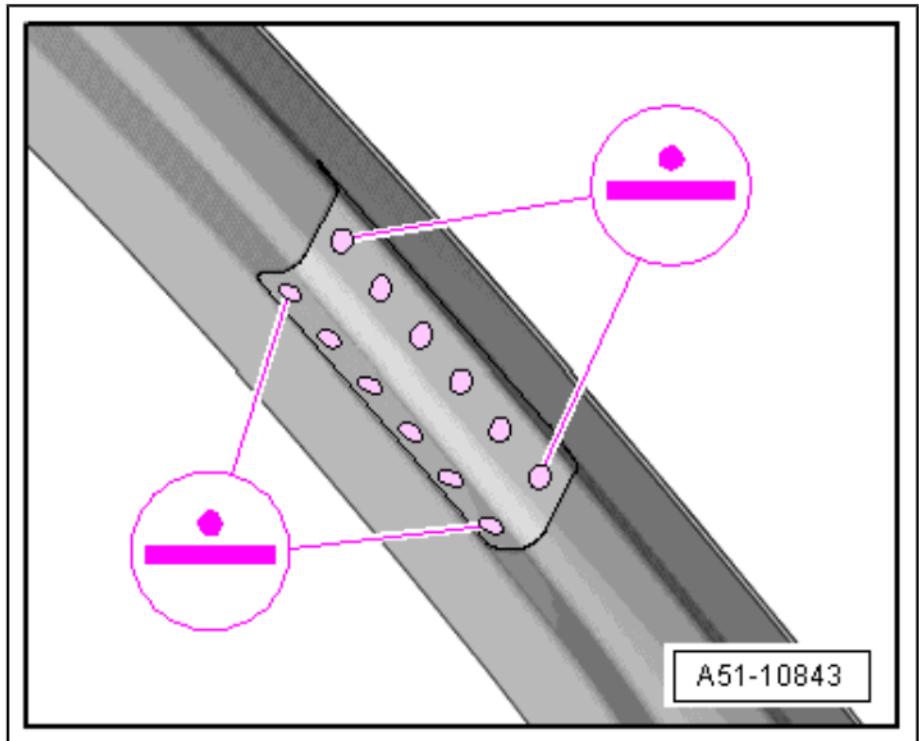


- Weld in lower cover plate for inner A-pillar using shielded arc welding equipment : SG continuous seam (staggered - with gaps).
- Weld in at separating cut using shielded arc welding equipment : SG continuous seam.
- Make 30 - 40 mm weld seam in area of inner and outer separating cuts at edges of each flange using shielded arc welding equipment : SG continuous seam.




Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.



Protected by copyright. Copying
permitted unless authorised by
with respect to the correctness

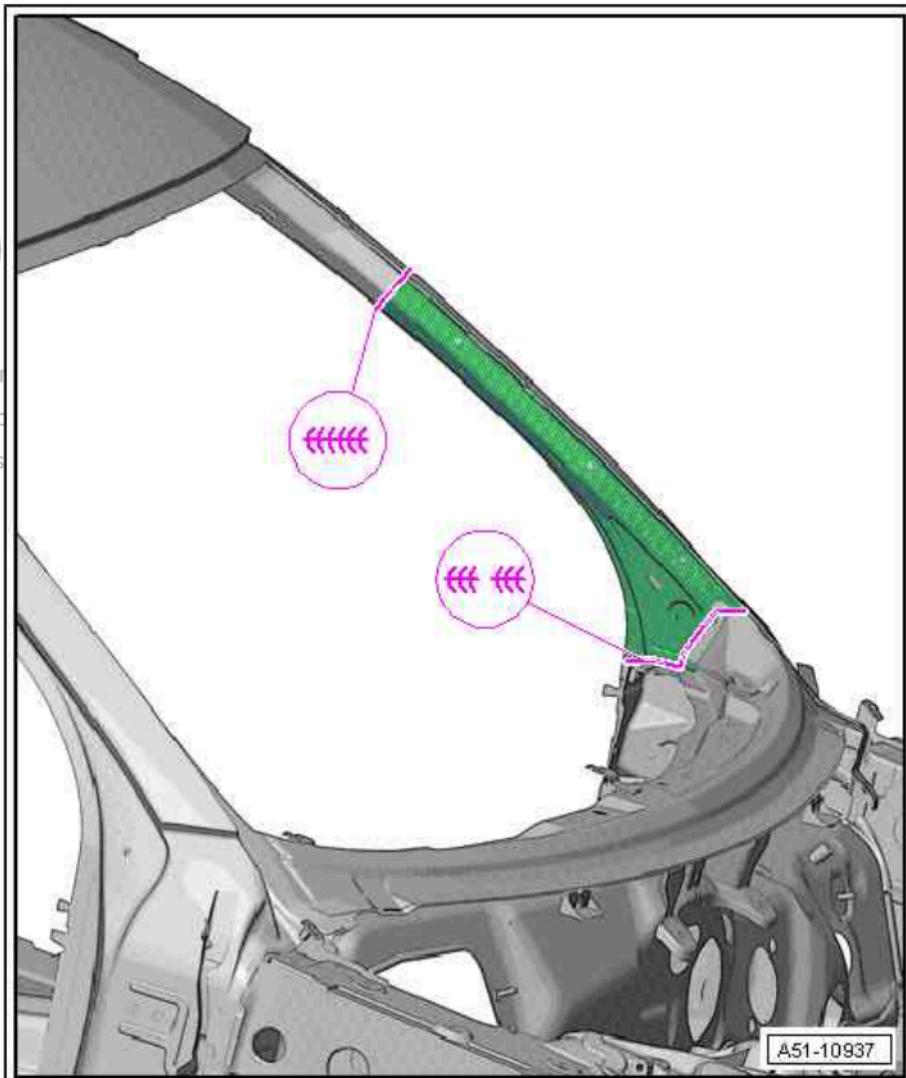

- Weld in inner A-pillar using shielded arc welding equipment :
SG plug weld seam.

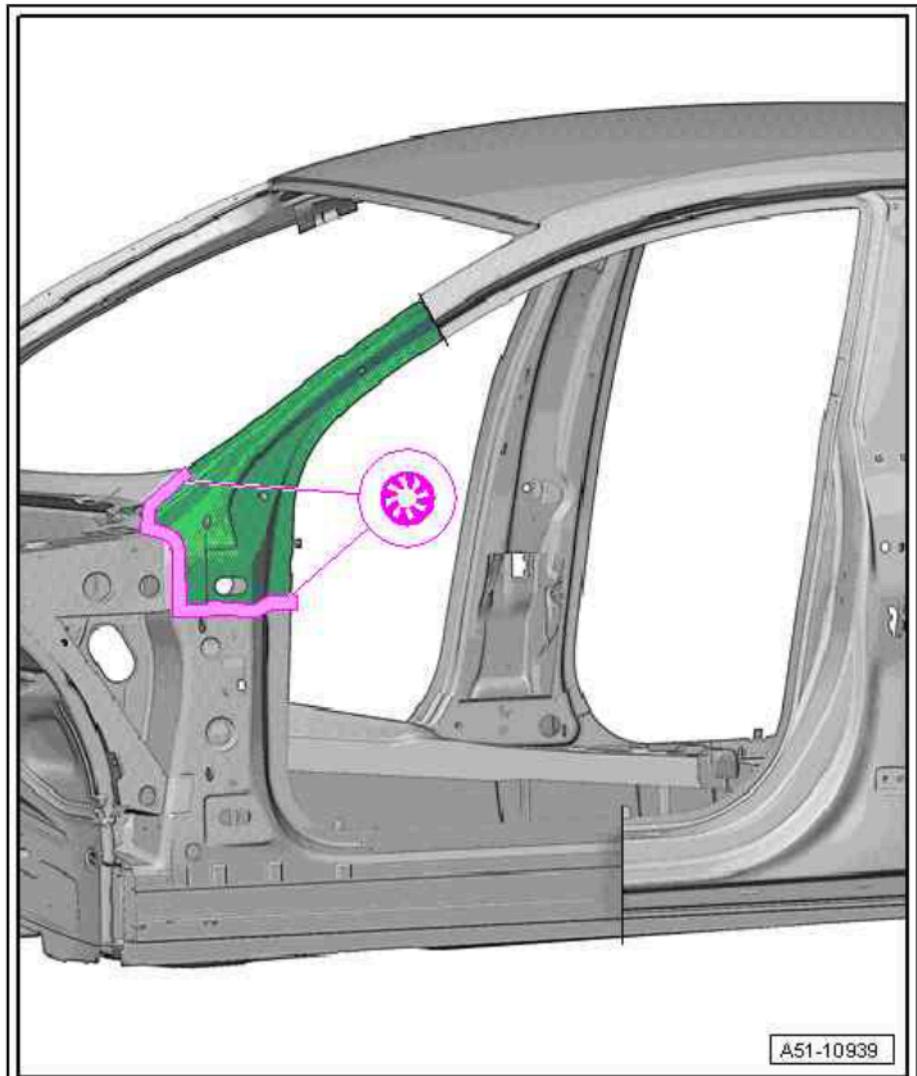

- Welding in outer A-pillar [⇒ page 253](#)
- Welding in intermediate piece [⇒ page 61](#)



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

RO: 51 38 55 50

16 Lower inner A-pillar - Partial renewal

1 - Inner side member

2 - Lower inner A-pillar

3 - Lower separating cut

Partial renewal

Partial renewal is possible with this separating cut.


Weld separating cut: SG continuous seam.

4 - Upper inner A-pillar

5 - Side panel



Protected by copy
permitted unless
with respect to the

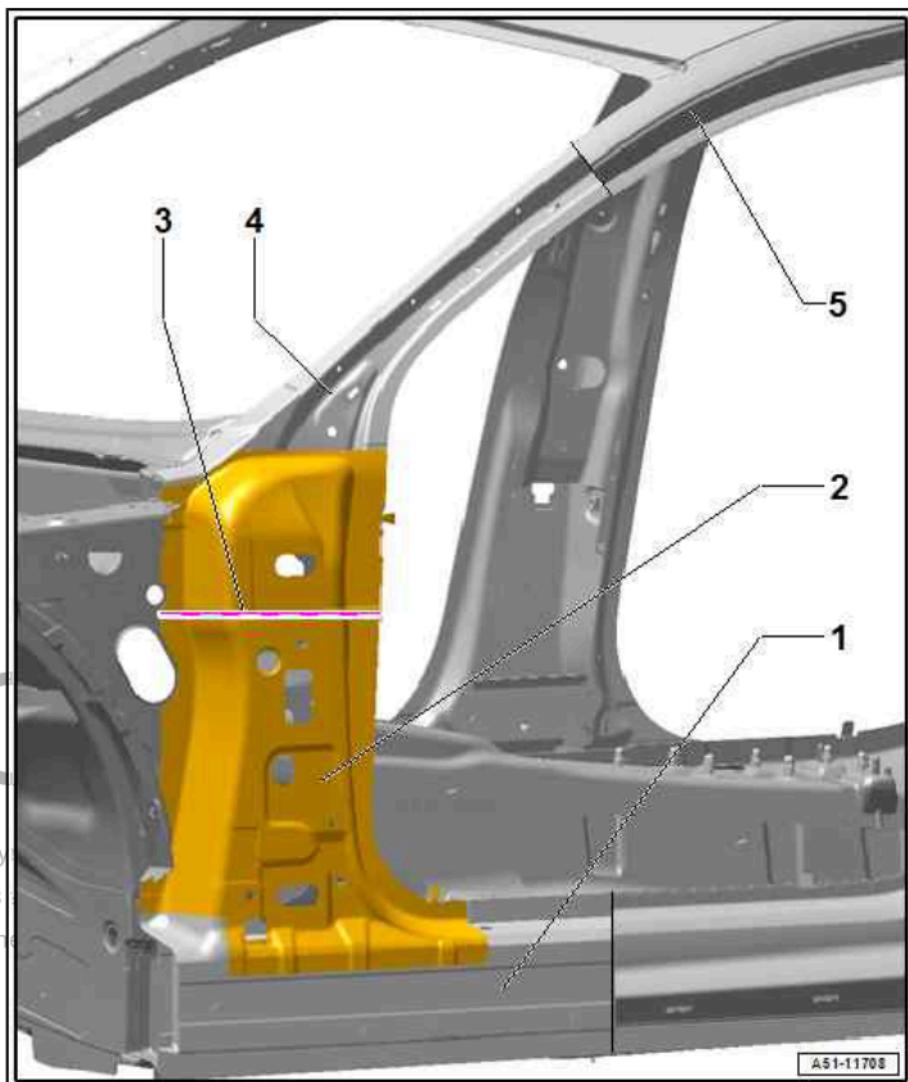

16.1 Notes for vehicles with hybrid drive

[⇒ page 5](#)

16.2 Tools

Special tools and workshop equipment required

- ◆ Resistance spot welder
- ◆ Shielded arc welding equipment
- ◆ Drill
- ◆ Compact angle grinder
- ◆ Body saw
- ◆ Spot weld breaker

Tools approved by AUDI AG must be used to ensure correct results when carrying out repair work [⇒ page 54](#).


16.3 Procedure

- Outer A-pillar cut out [⇒ page 253](#) .
- Wing mounting flange cut out [⇒ page 70](#)
- Upper inner A-pillar removed (partial renewal) [⇒ page 260](#)
- Intermediate piece removed [⇒ page 61](#)


Cutting locations

Permitted separating cuts on complete side panel [⇒ page 128](#) .

- Drill out original joint using spot weld breaker .

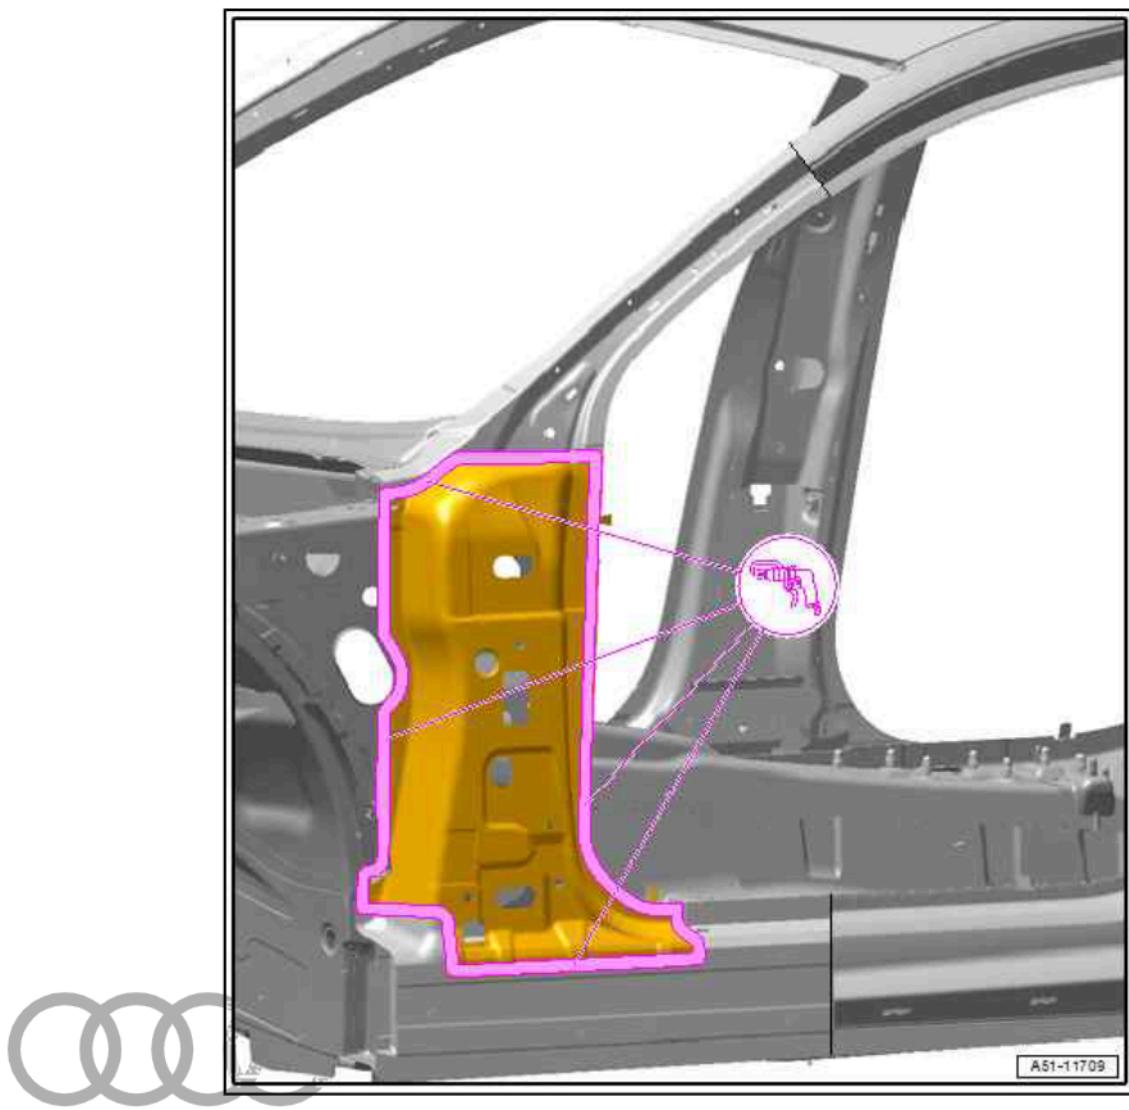

- Remove remaining material using compact angle grinder.
- Protected by copyright. Copying for private commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

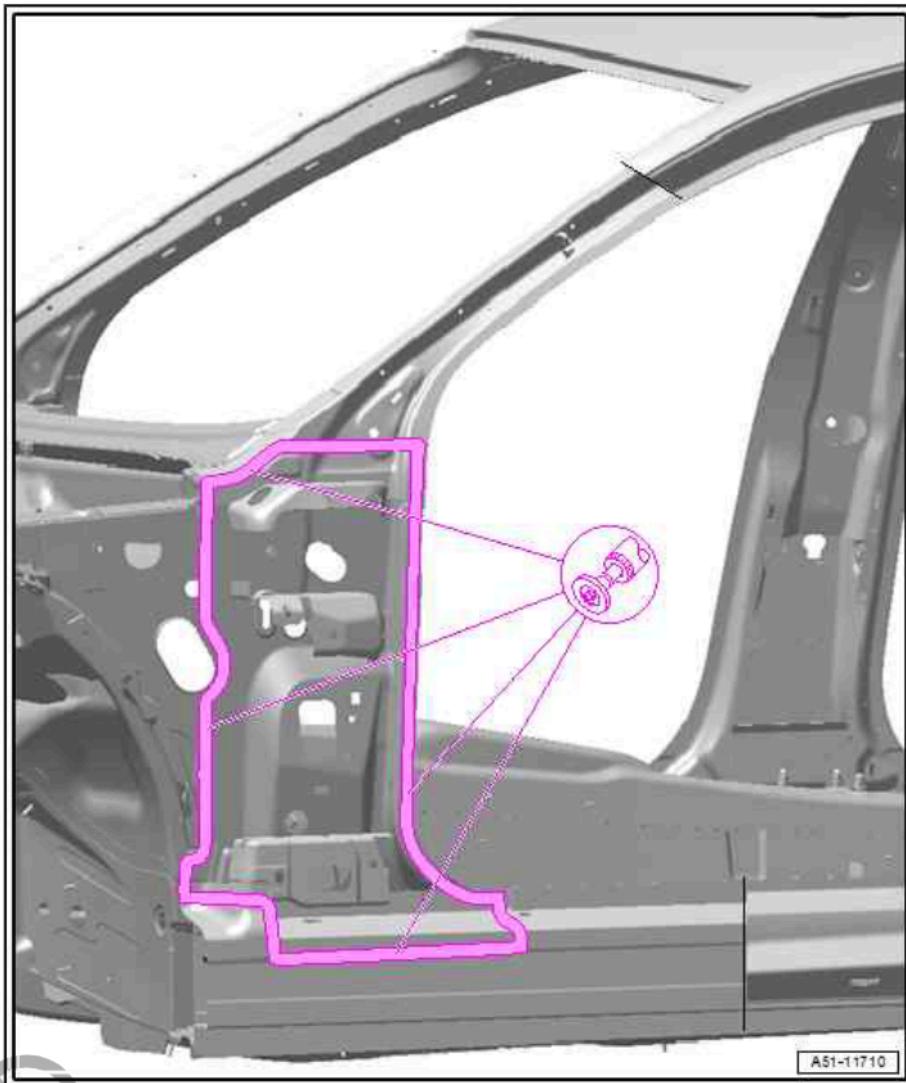

Replacement parts

Lower inner A-pillar


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability

- Drill holes for SG plug weld seam, 8 mm Ø using drill.

with respect to the correctness of information in this document. Copyright by AUDI AG.



Protected by copyright. Copying for private or commercial purposes is
permitted unless authorised by AUDI AG. AUDI AG does not accept
any responsibility with respect to the correctness of information in this document.

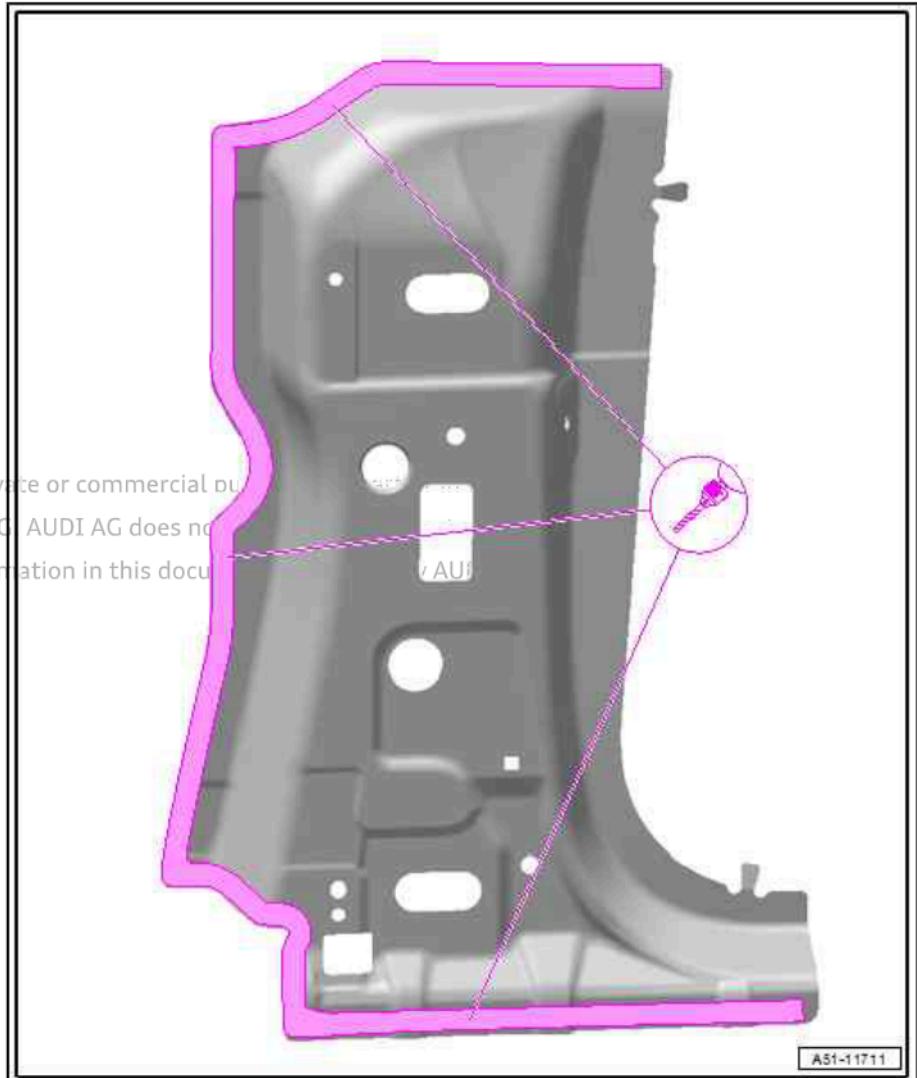


Note

*Due to the different types of steel and panel thicknesses em-
ployed, one of the resistance spot welding units listed in this
manual and approved by Audi must be used to ensure correct
results when spot welding.*

Welding in

- Weld in lower inner A-pillar using shielded arc welding equipment : SG plug weld seam.
- Weld in lower inner A-pillar using resistance spot welder : RP spot weld seam.

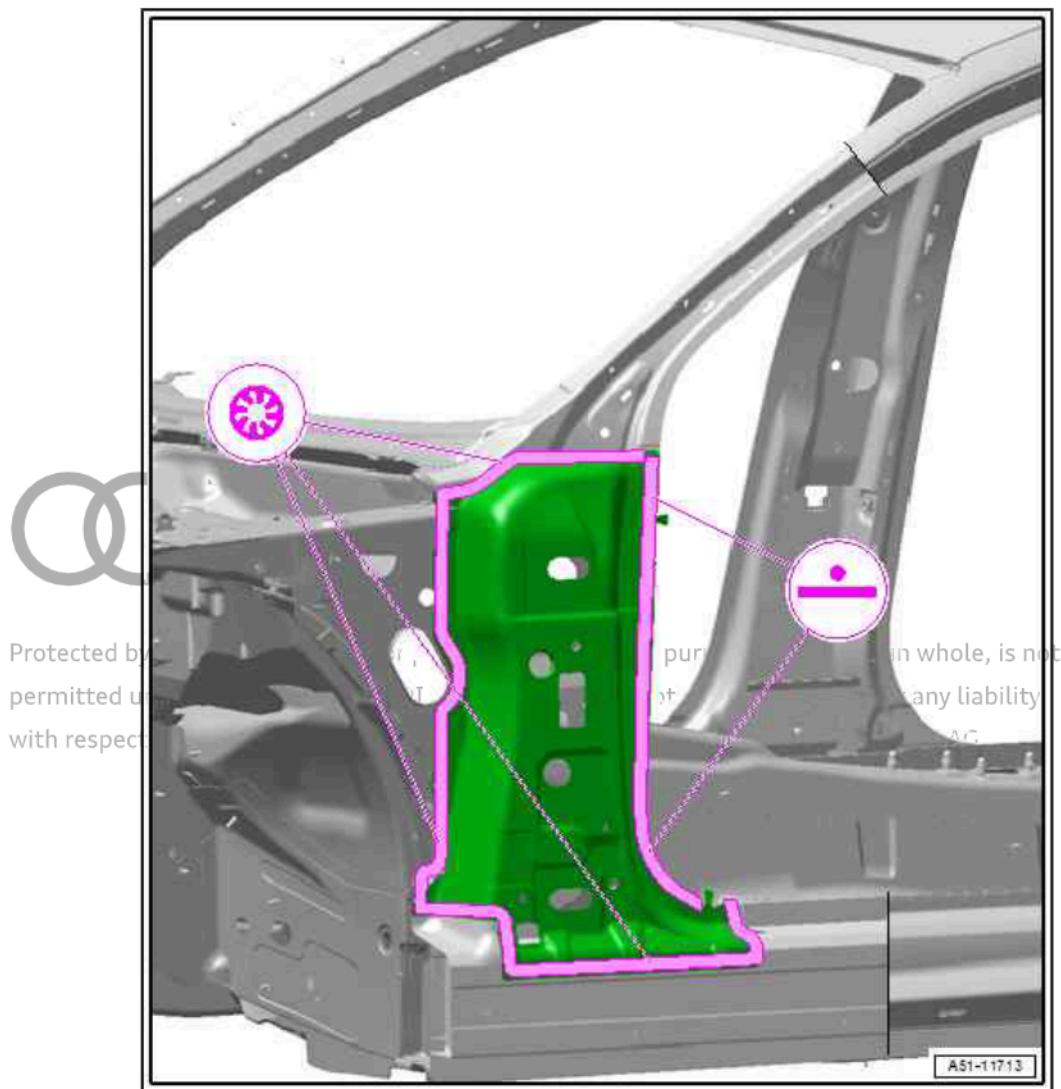

- Weld in outer A-pillar [page 253](#).
- Welding in wing mounting flange [page 70](#)
- Welding in upper inner A-pillar (partial renewal) [page 260](#)
- Welding in intermediate piece [page 61](#)

RO: 51 41 55 50


17 Outer B-pillar - Renewal

(Saloon and Avant identical)

- 1 - B-pillar
- Outer B-pillar
- 2 - Upper separating cut
- 3 - Lower separating cut
- Partial renewal
Partial renewal is possible with this separating cut.
- 4 - Separating cut in side member (rear)
- 5 - Rear side member
- 6 - Laser weld seam
- 7 - Front side member
- 8 - Separating cut in side member (front)



Protected by copyright. Copying
permitted unless authorised by Au-
di AG.
with respect to the correctness of

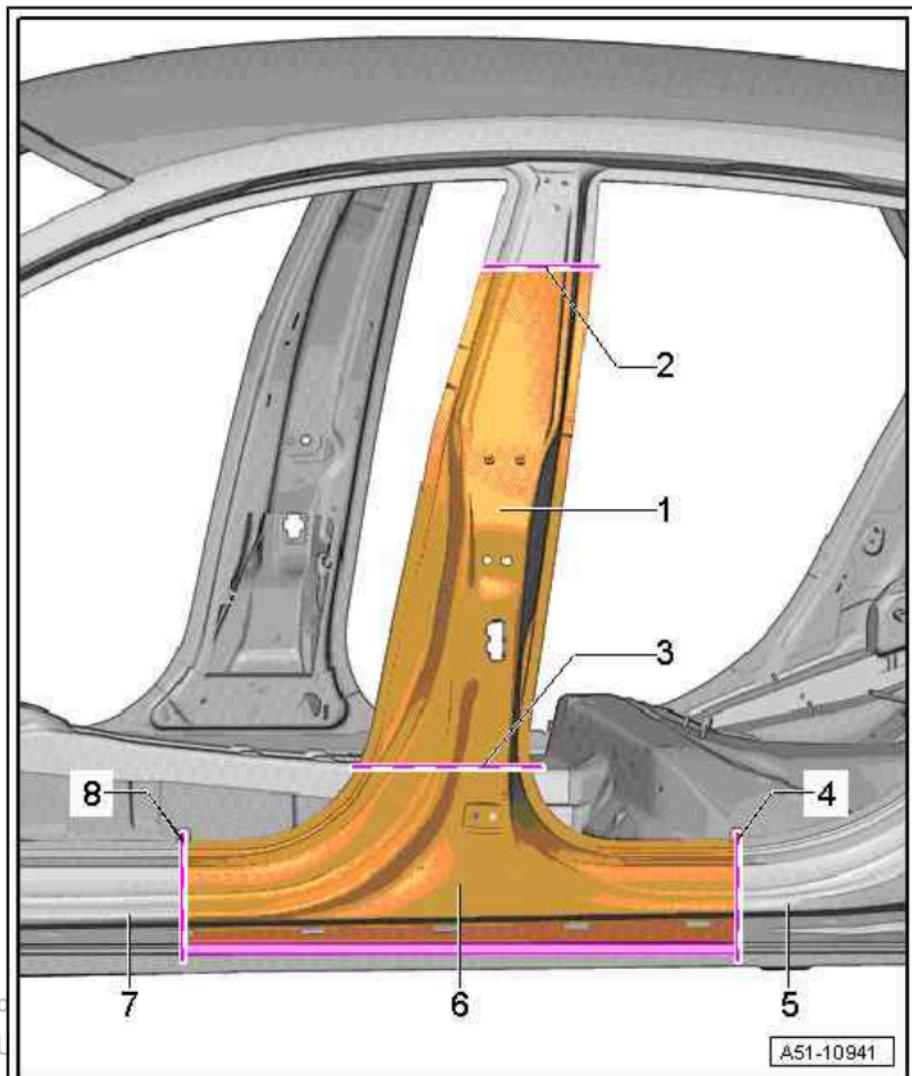

17.1 Notes for vehicles with hybrid drive

[⇒ page 5](#)

17.2 Tools

Special tools and workshop equipment required

- ◆ Resistance spot welder
- ◆ Shielded arc welding equipment
- ◆ Compact angle grinder
- ◆ Body saw
- ◆ Spot weld breaker

Tools approved by AUDI AG must be used to ensure correct re-
sults when carrying out repair work [⇒ page 54](#).

17.3 Procedure


Cutting locations

Permitted separating cuts on complete side panel [⇒ page 128](#).



Note


- ◆ Part section repair is possible using separating cut -3-.
- ◆ Note the replacement part dimensions when making the separating cut at the rear side member -4-.
- Drill out original joint using spot weld breaker .
- Make separating cut -2- as shown using body saw .
- Mark off separating cuts -4- and -8- according to degree of damage and make cuts using body saw .
- Separate laser weld -6- using compact angle grinder .

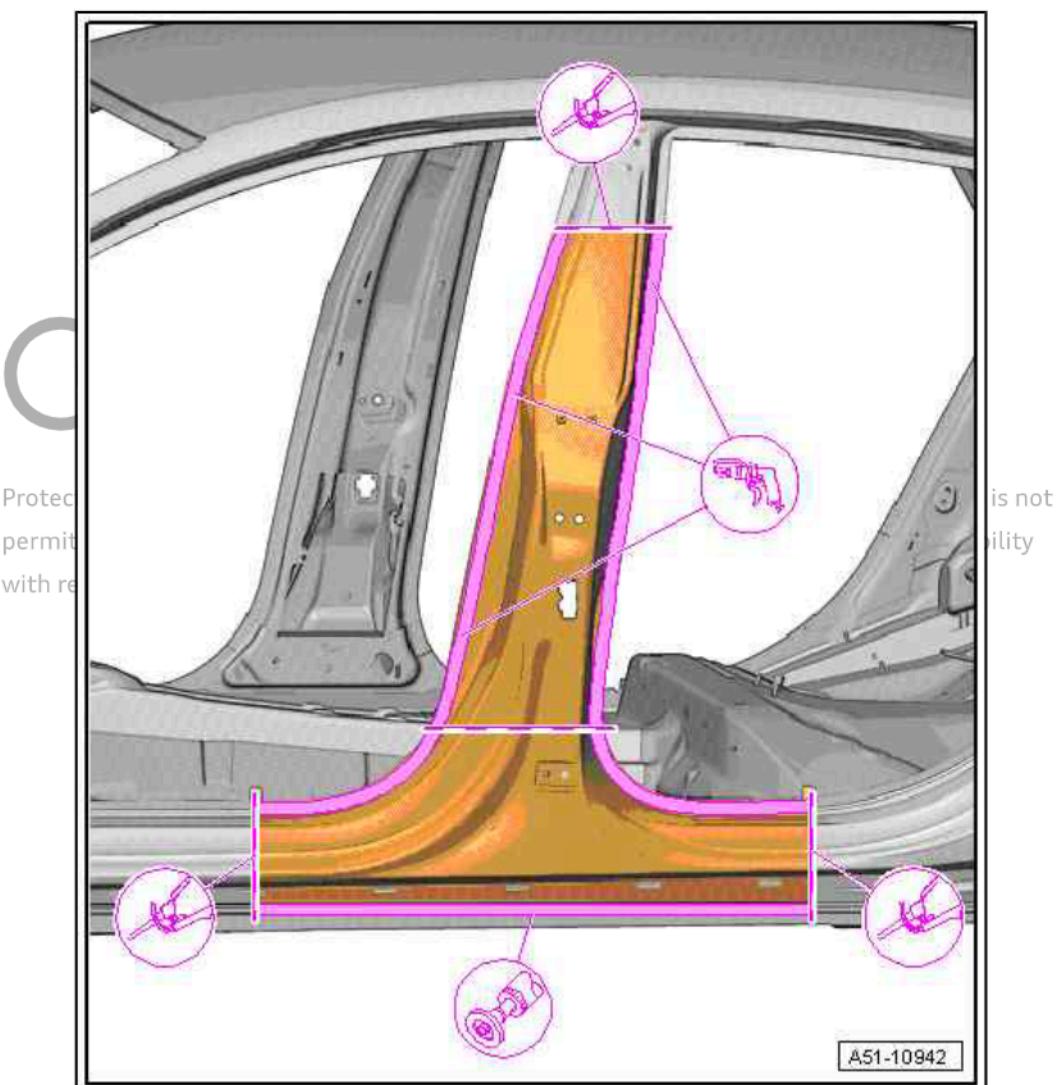

- Remove remaining material using compact angle grinder .



Protected by copyright. Copying and
permitted unless authorised by Audi.
with respect to the correctness of

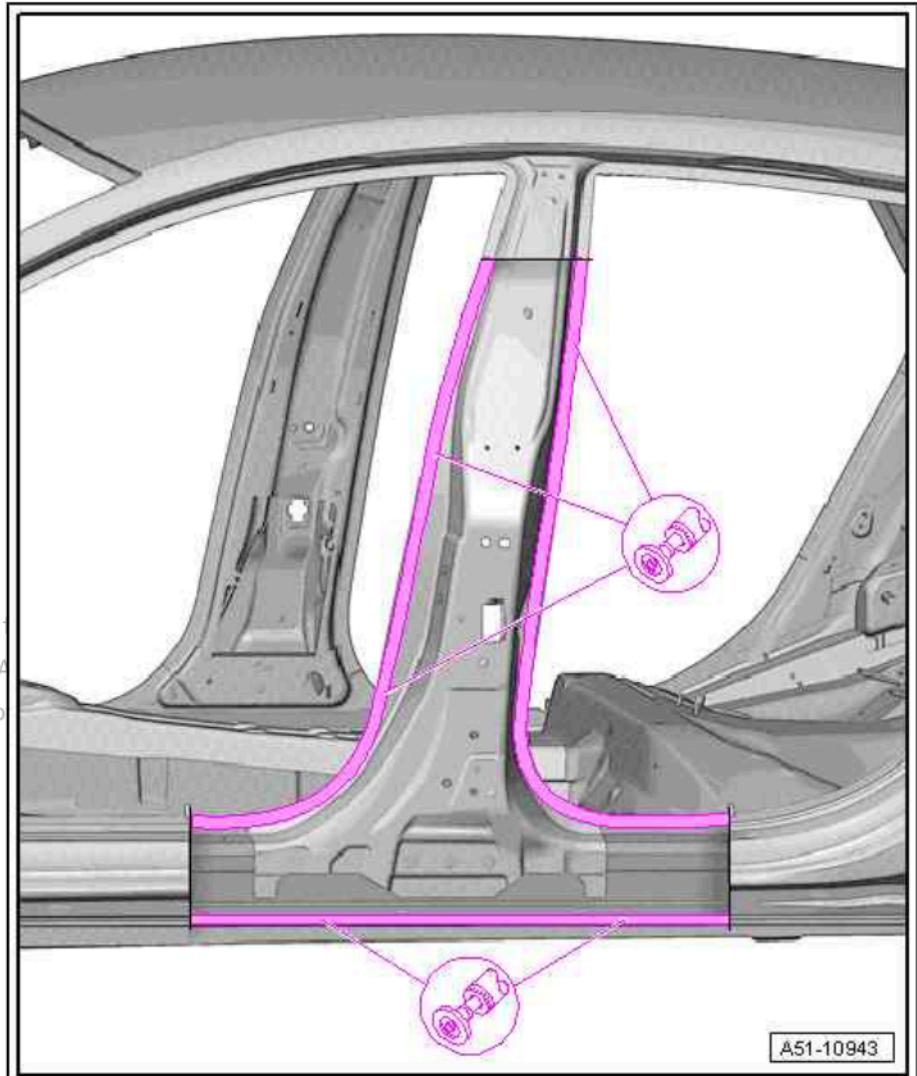


Replacement part

- ◆ B-pillar

Preparing new part

- Transfer separating cuts to new part and cut to size using body saw .

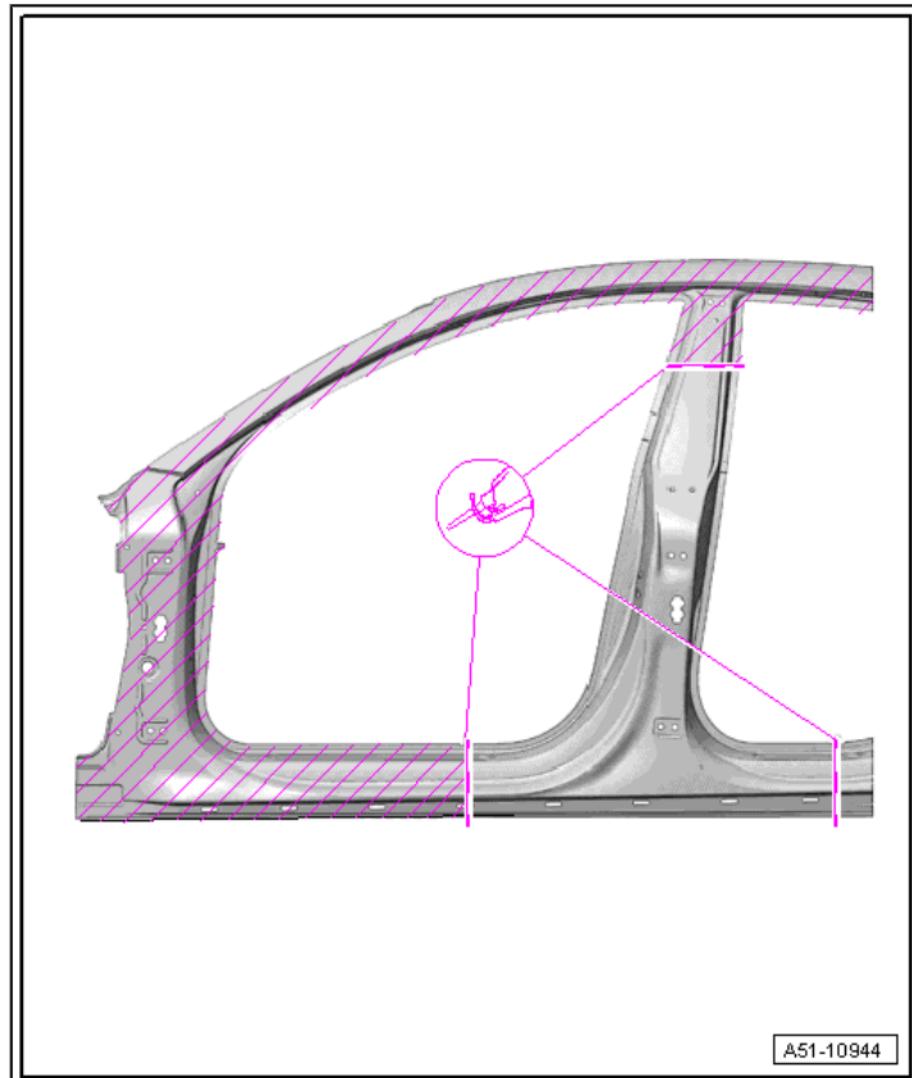


 Note

Due to the different types of steel and panel thicknesses employed, one of the resistance spot welding units listed in this manual and approved by Audi must be used to ensure correct results when spot welding.

Welding in


- With no load on vehicle, match up new part and fix in position on portal gauge.
copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.
- Check fit relative to bolt-on parts.
- Weld in B-pillar using resistance spot welder : RP spot weld seam.
- Weld in B-pillar using shielded arc welding equipment : SG continuous seam (staggered - with gaps) in place of laser weld.

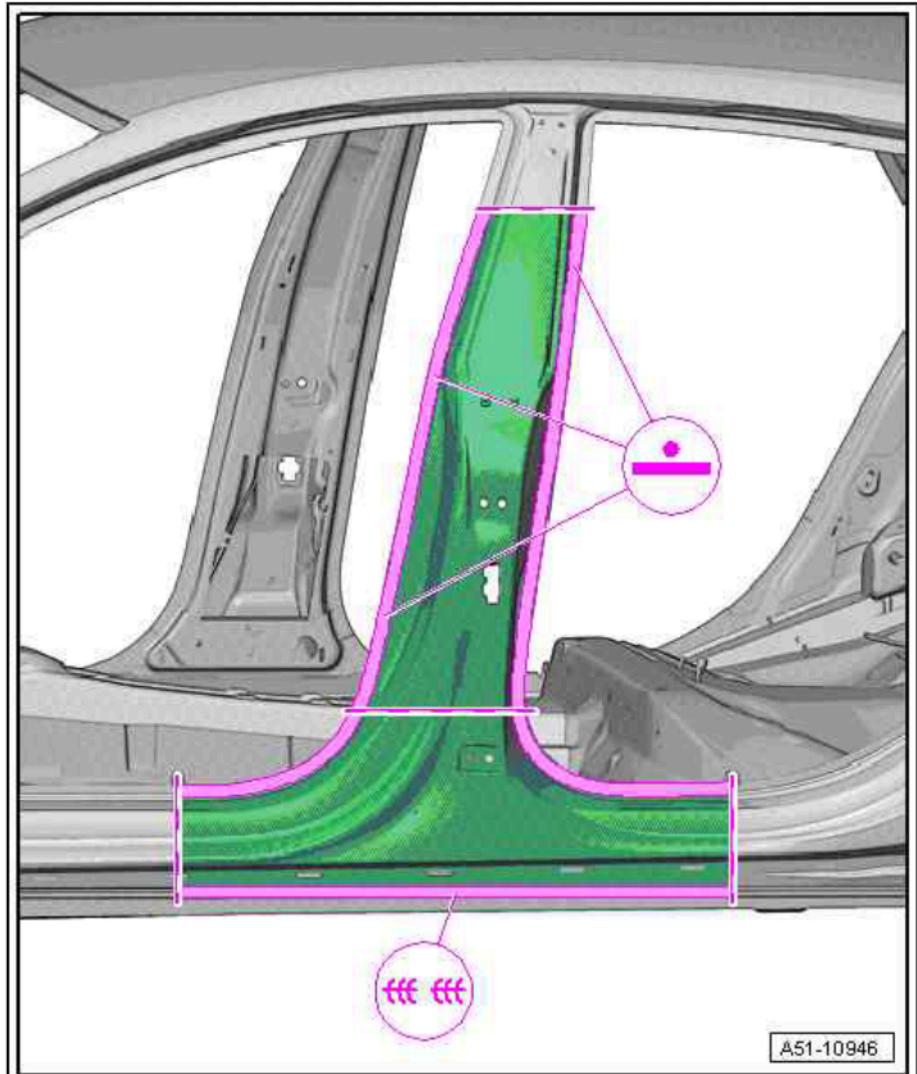

- Weld at separating cuts using shielded arc welding equipment : SG continuous seam.



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

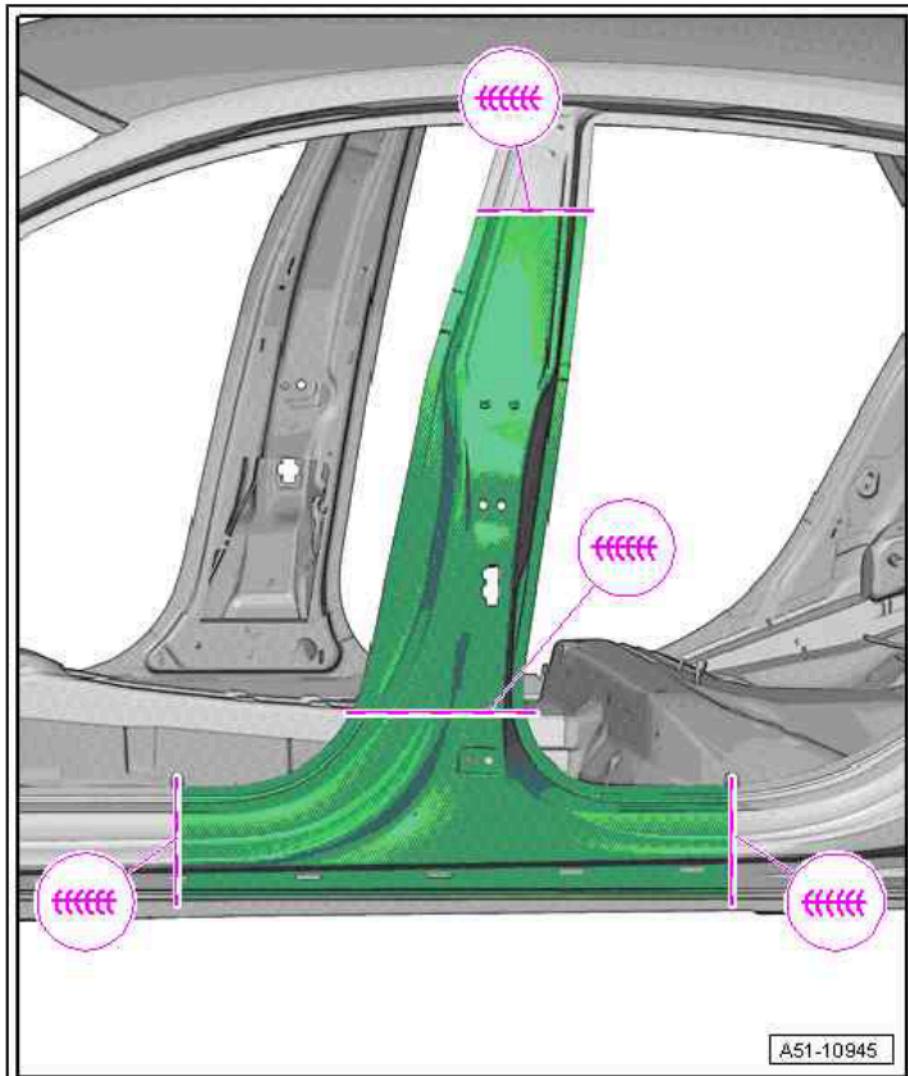

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

RO: 51 42 55 50


18 Inner B-pillar - Renewal

(Saloon and Avant identical)


- 1 - B-pillar
- 2 - Upper separating cut
- Outer B-pillar
- 3 - Separating cut in side member (front)
- 4 - Laser weld seam
- 5 - Separating cut in side member (rear)



Protected by copyright. Copying
permitted unless authorised by
with respect to the correctness

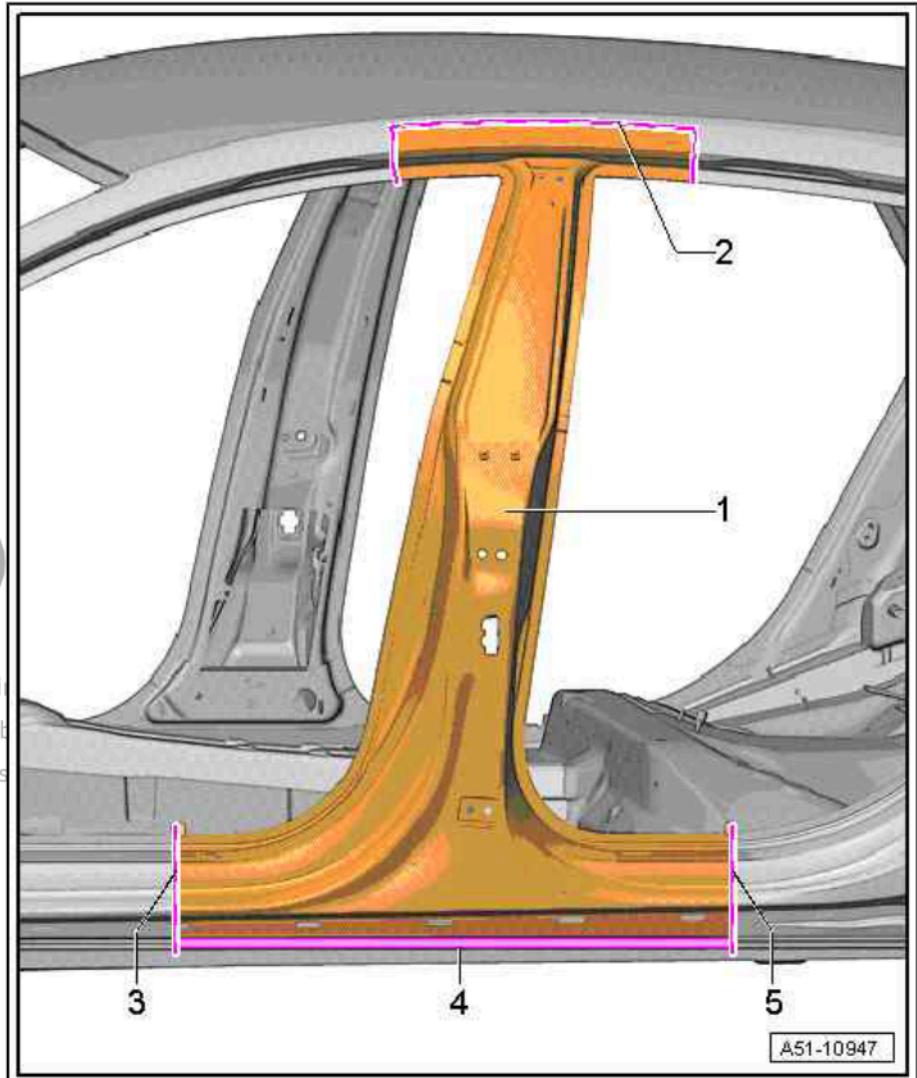

- 1 - Front roof side member
- 2 - Inner B-pillar
- 3 - Outer front side member
- 4 - Rear roof side member
- 5 - Outer rear side member

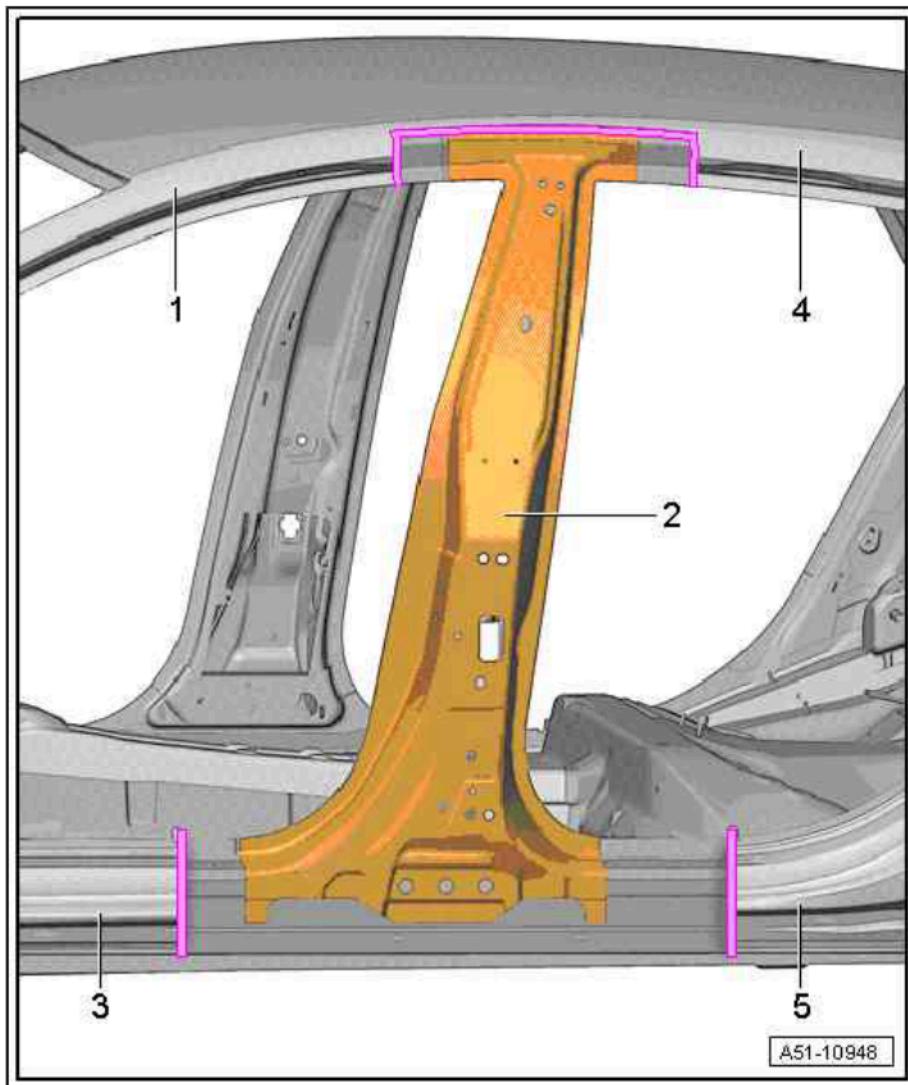

18.1 Notes for vehicles with hybrid drive

[⇒ page 5](#)

18.2 Tools

Special tools and workshop equipment required

- ◆ Resistance spot welder
- ◆ Shielded arc welding equipment
- ◆ Drill
- ◆ Compact angle grinder
- ◆ Body saw
- ◆ Spot weld breaker

Tools approved by AUDI AG must be used to ensure correct results when carrying out repair work [⇒ page 54](#).

18.3 Procedure

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not


permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability

Permitted separating cuts on complete side panel [⇒ page 128](#). Copyright by AUDI AG.

- Make separating cut at outer side member as shown using body saw .
- Make separating cut in roof side member, maintaining distance -a- from plasmatron weld seam.

Dimension -a- = 10 mm

- Separate original joint using spot weld breaker .

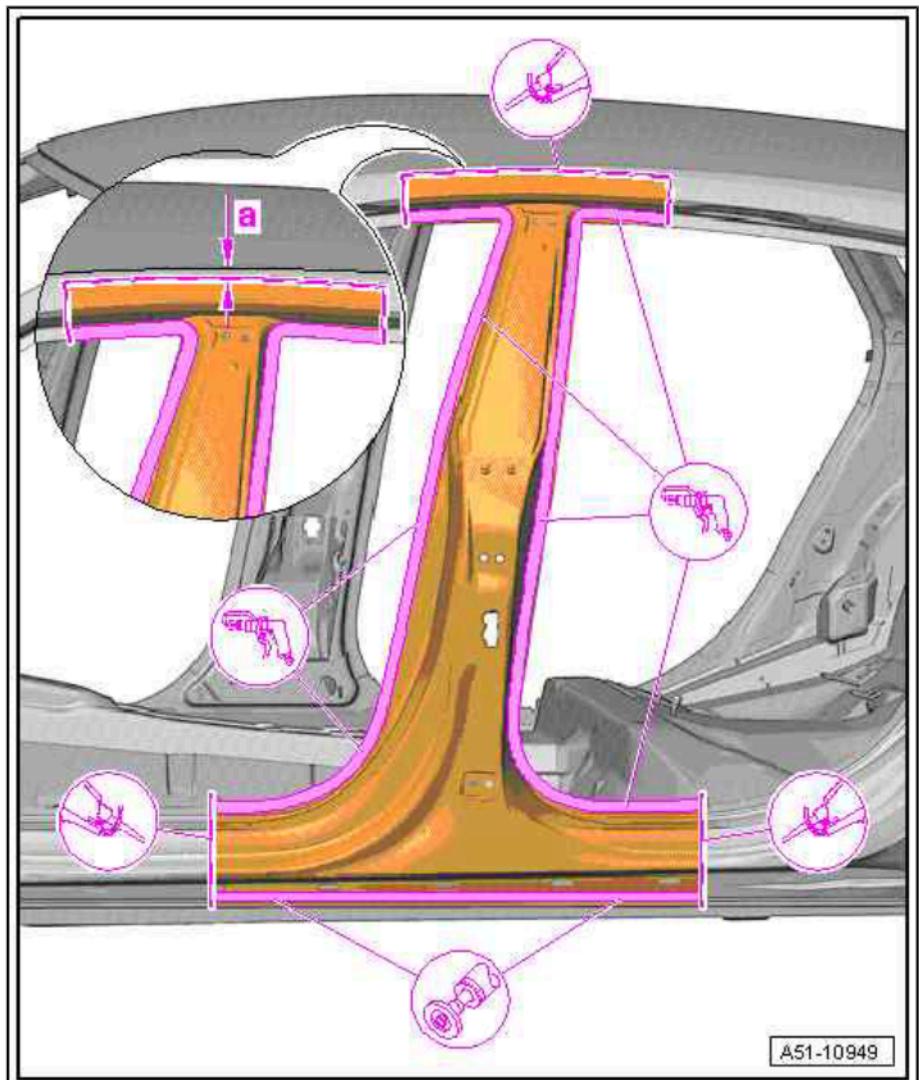


- Roof reinforcement must be shortened for welding.




Protect
permit
with re


s not
lity

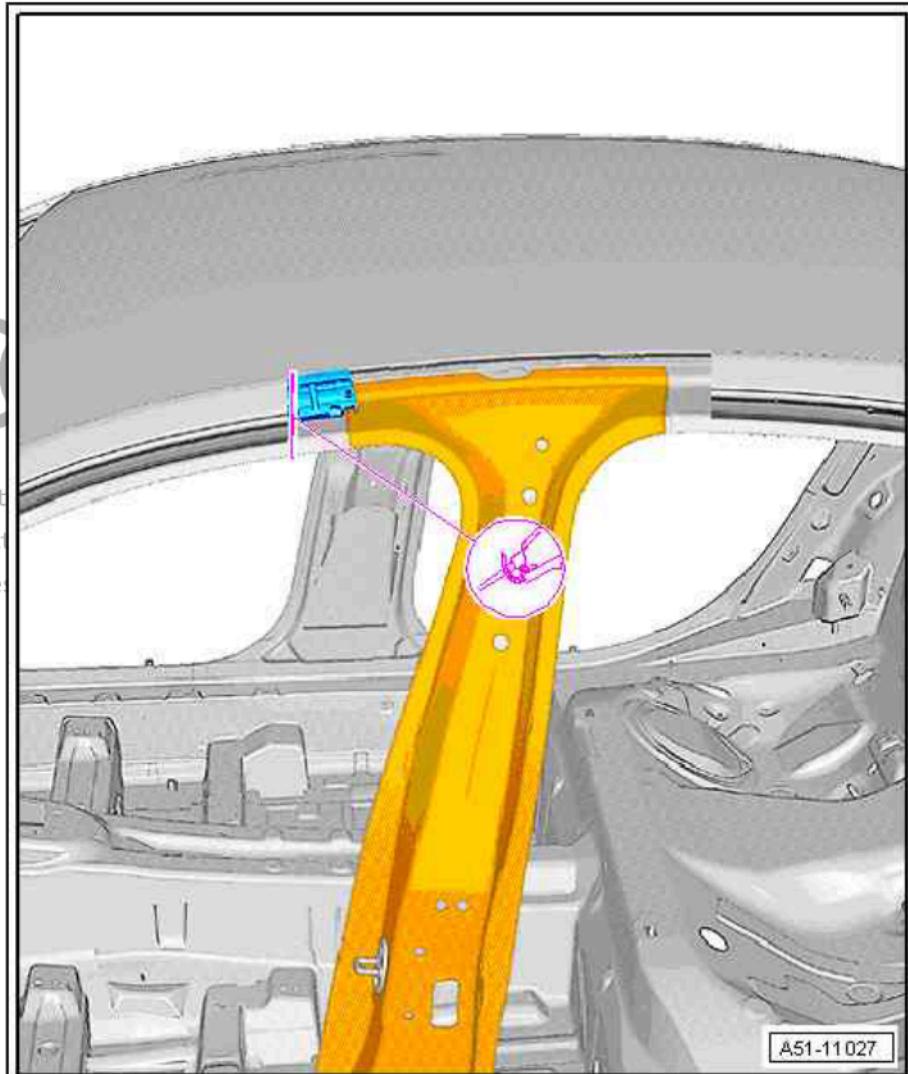

- Roughly cut out inner B-pillar using body saw .
- Separate original joint using spot weld breaker .

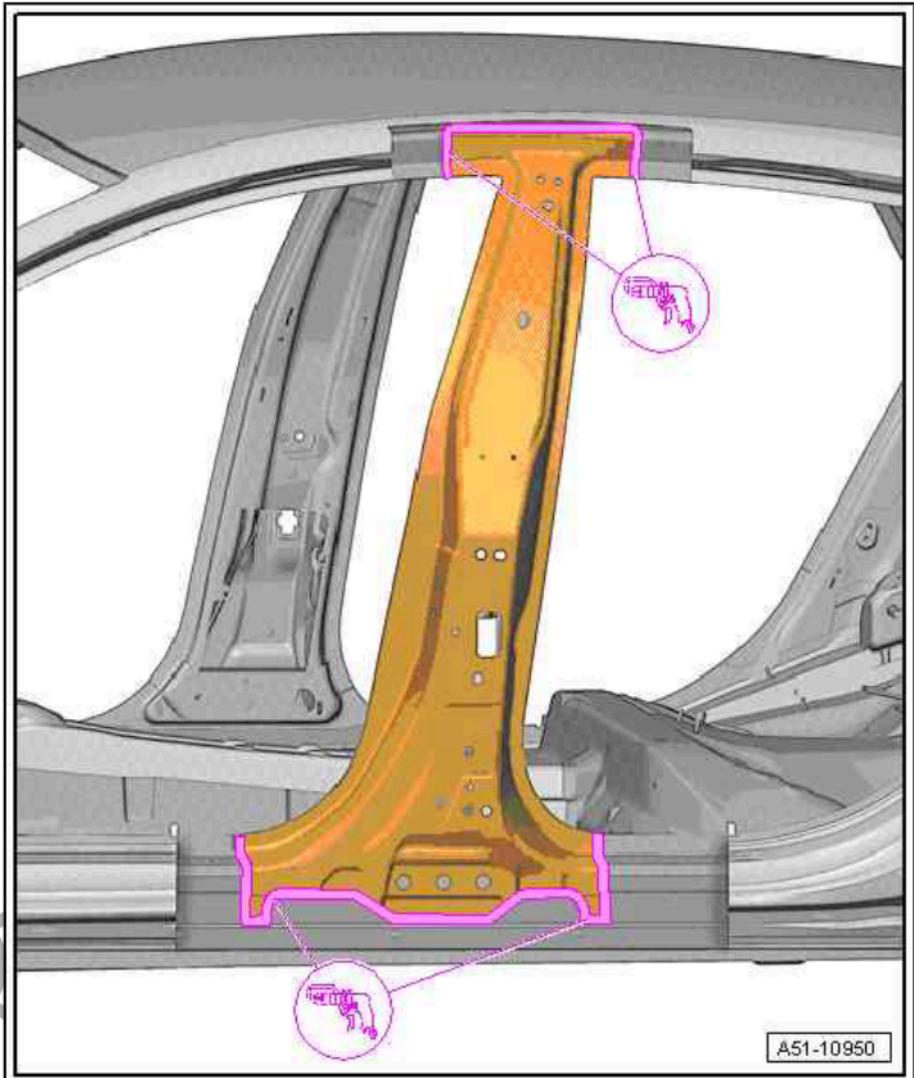


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability
– Drill out original joint using **spot weld breaker**.
with respect to the correctness of information in this document. Copyright by AUDI AG.

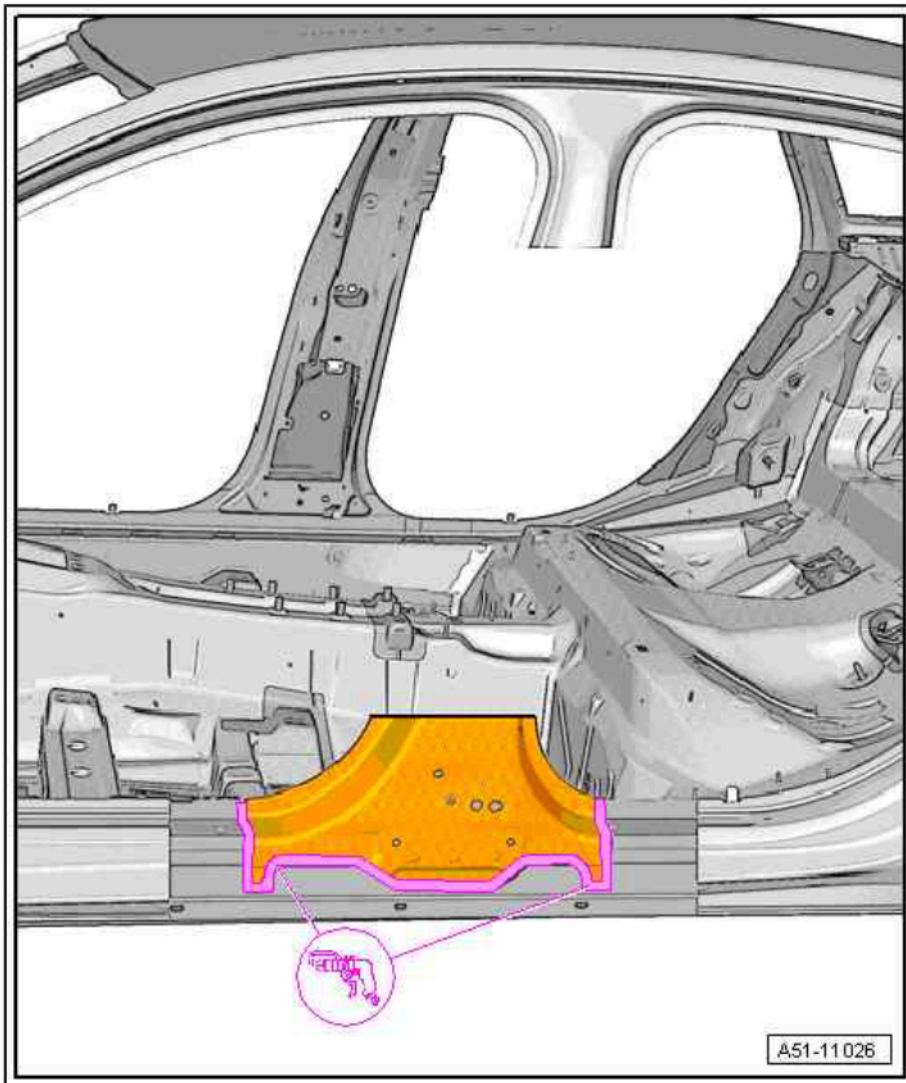

- Grind areas around separating cuts and original joint down to bare metal on inside and outside.



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

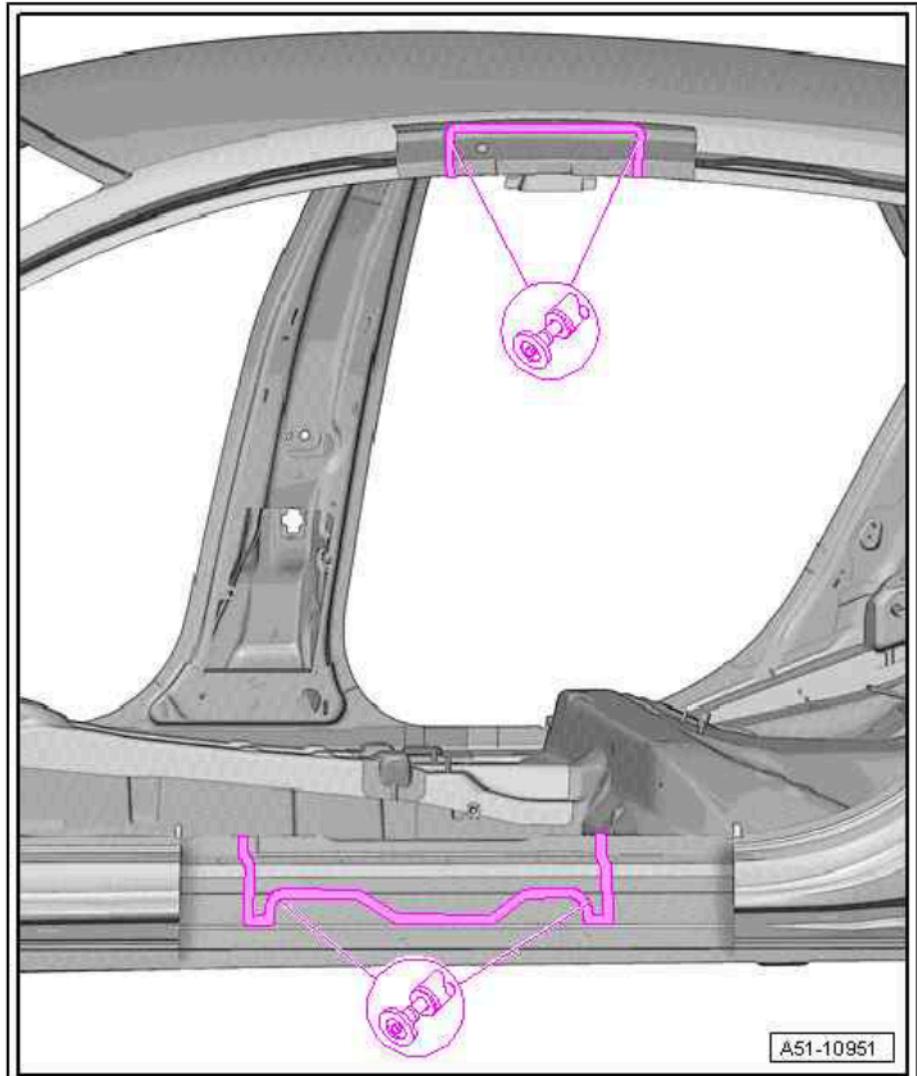

A51-10951


Replacement parts

- ◆ Inner B-pillar
- ◆ B-pillar reinforcement
- ◆ Closure plate

Preparing new parts

- Drill holes for SG plug weld seam, 8 mm Ø using drill .

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

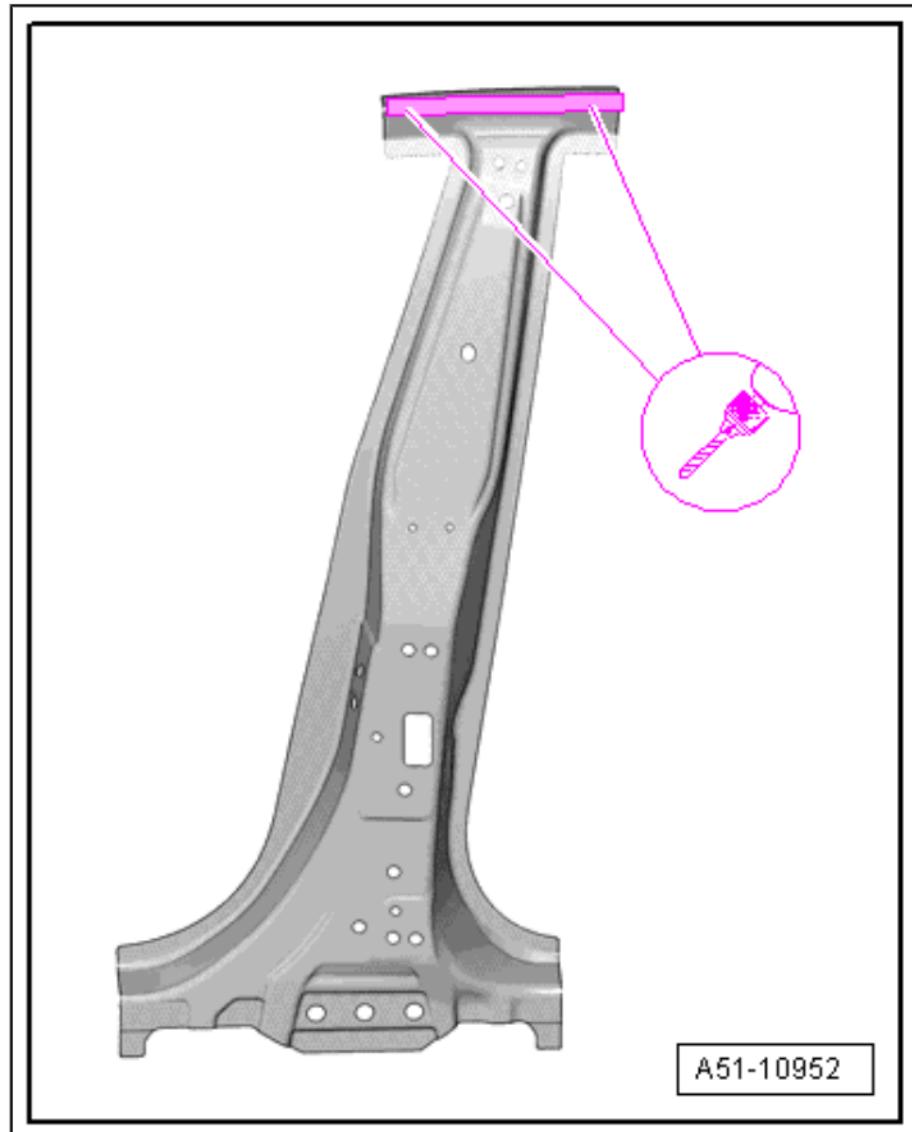

 Note

Due to the different types of steel and panel thicknesses employed, one of the resistance spot welding units listed in this manual and approved by Audi must be used to ensure correct results when spot welding.

Welding in

- With vehicle standing on alignment bracket set supplement - VAS 6667- , match up inner B-pillar and fix in position
- Weld in inner B-pillar using shielded arc welding equipment : SG plug weld seam.
- Weld in inner B-pillar using shielded arc welding equipment : SG continuous seam (staggered - with gaps).

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not


VAS 6667- , match up inner B-pillar and fix in position

AUDI AG does not guarantee or accept any liability


in connection with the use of this document. Copyright by AUDI AG.



Protected by
copyright.
permitted until
with respect to

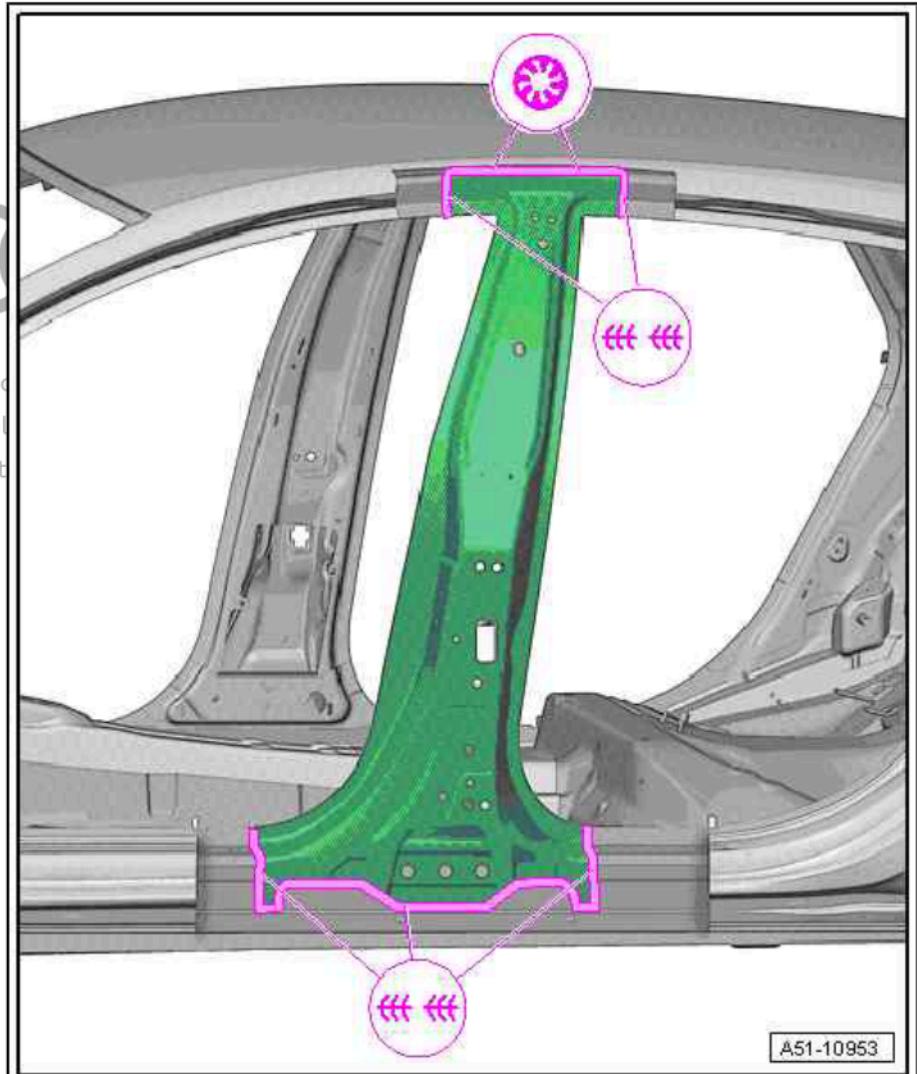

- Weld in B-pillar using shielded arc welding equipment : SG plug weld seam.
- Weld in B-pillar using shielded arc welding equipment : SG continuous seam (staggered - with gaps).
- Weld in B-pillar using resistance spot welder : RP spot weld seam.

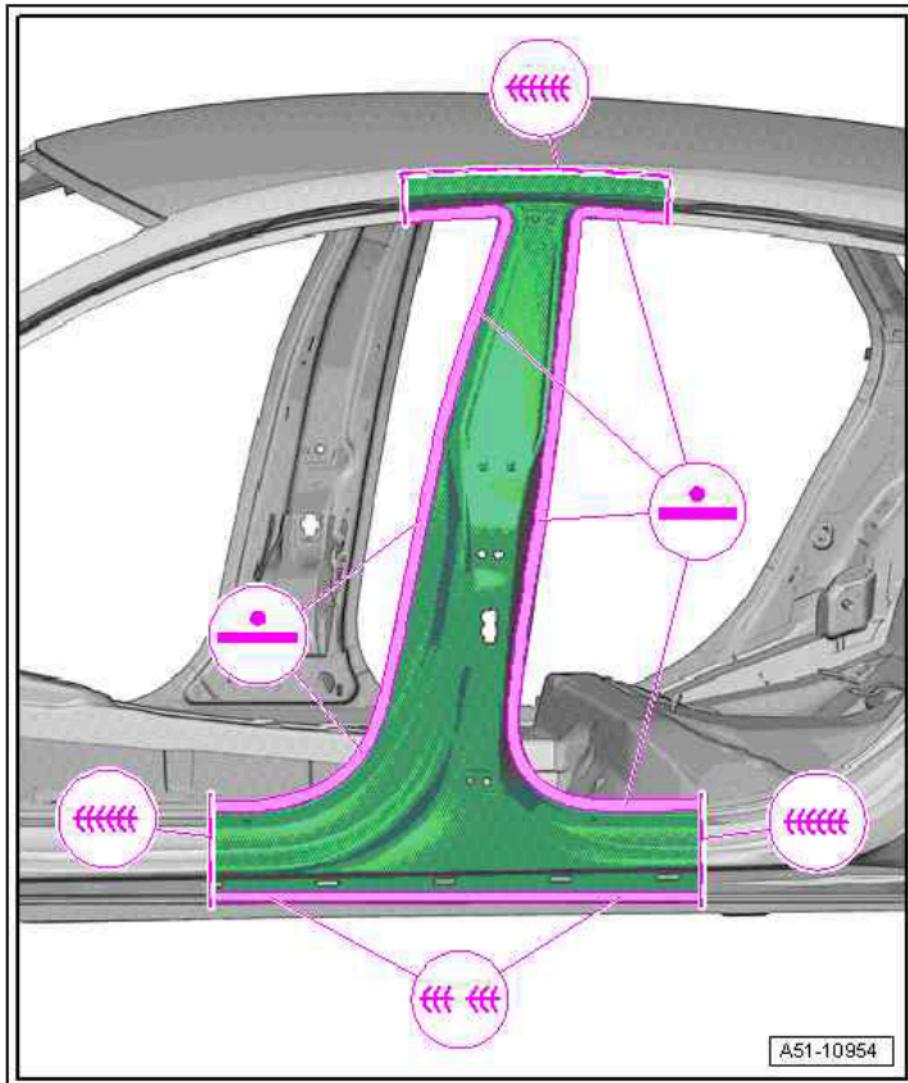


- Weld in inner B-pillar using shielded arc welding equipment :
SG plug weld seam.



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.



Protected by copyright. Copy
permitted unless authorised
with respect to the correctness of information in this document. Copyright by AUDI AG.

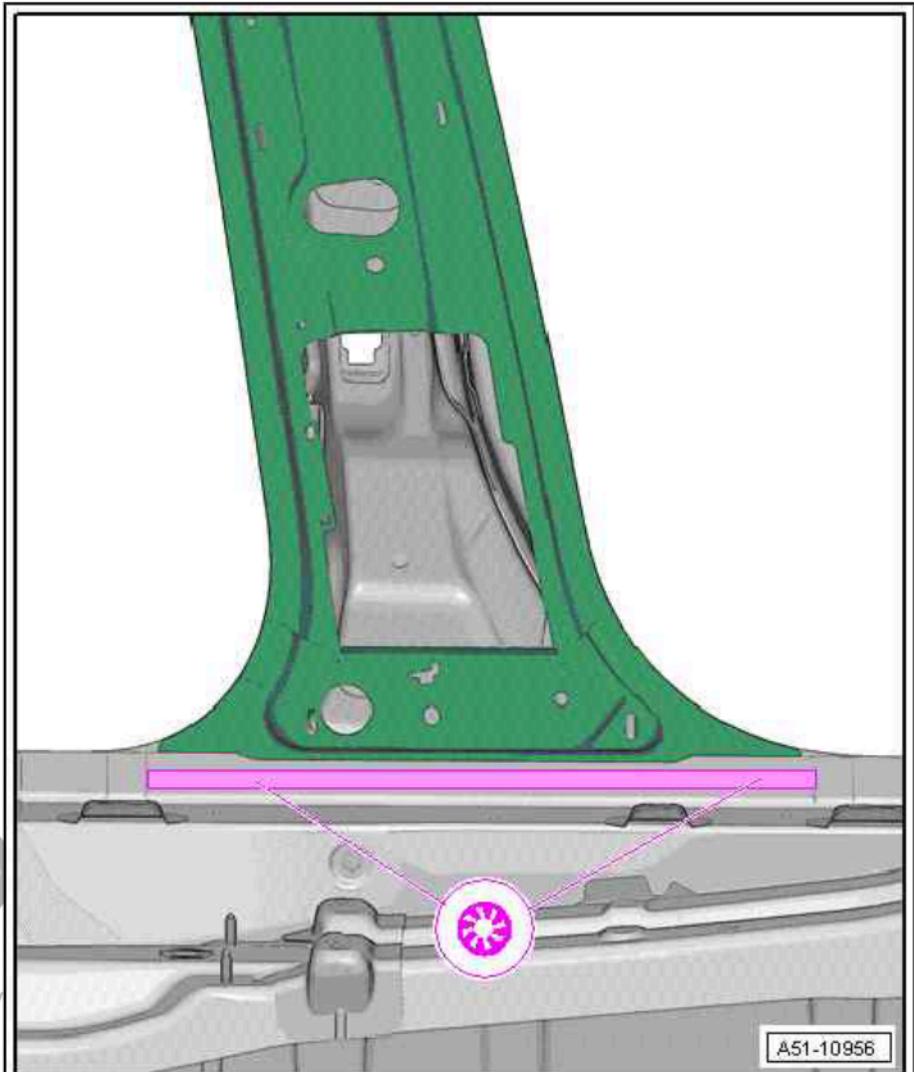

RO: 51 45 55 00

19 Outer side member - Renewal

(Saloon and Avant identical)

- 1 - Outer side member
- 2 - Separating cut in B-pillar
- 3 - Separating cut in side member (rear)

Partial renewal

Partial renewal is possible with this separating cut.

- 4 - Separating cut at wheel arch

- 5 - Moulded foam insert

- 6 - Separating cut in A-pillar


- 7 - Separating cut in side member (front)

Partial renewal

Partial renewal is possible with this separating cut.

Make separating cut according to extent of damage permitted unless a

with respect to the

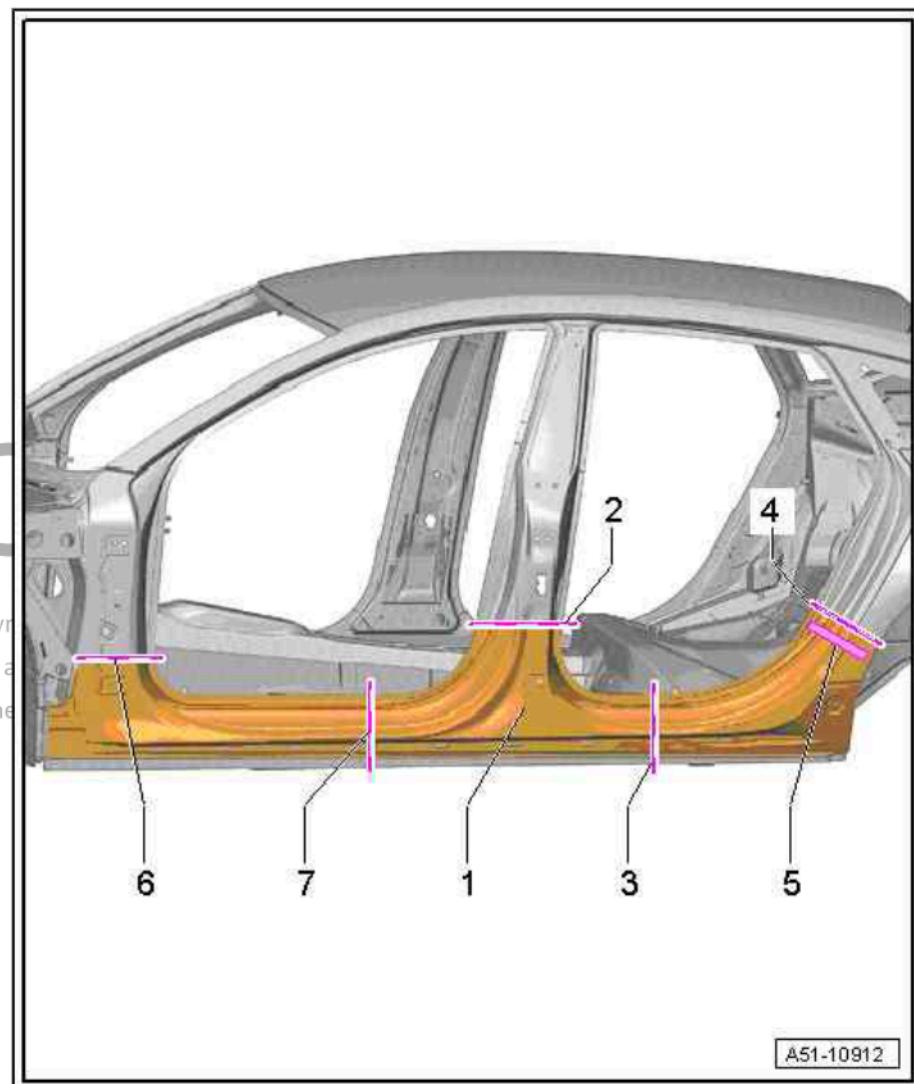

A51-10912

19.1 Notes for vehicles with hybrid drive

[⇒ page 5](#)

19.2 Tools

Special tools and workshop equipment required

- ◆ Resistance spot welder
- ◆ Shielded arc welding equipment
- ◆ Compact angle grinder
- ◆ Body saw
- ◆ Spot weld breaker

Tools approved by AUDI AG must be used to ensure correct results when carrying out repair work [⇒ page 54](#).

19.3 Procedure

Cutting locations


Permitted separating cuts on complete side panel [⇒ page 128](#).



Note


Note the replacement part dimensions when making the separating cuts -2-, -3- and -4-.

- Mark off separating cuts according to degree of damage and make the cuts using body saw .
- Drill out original joint using spot weld breaker .

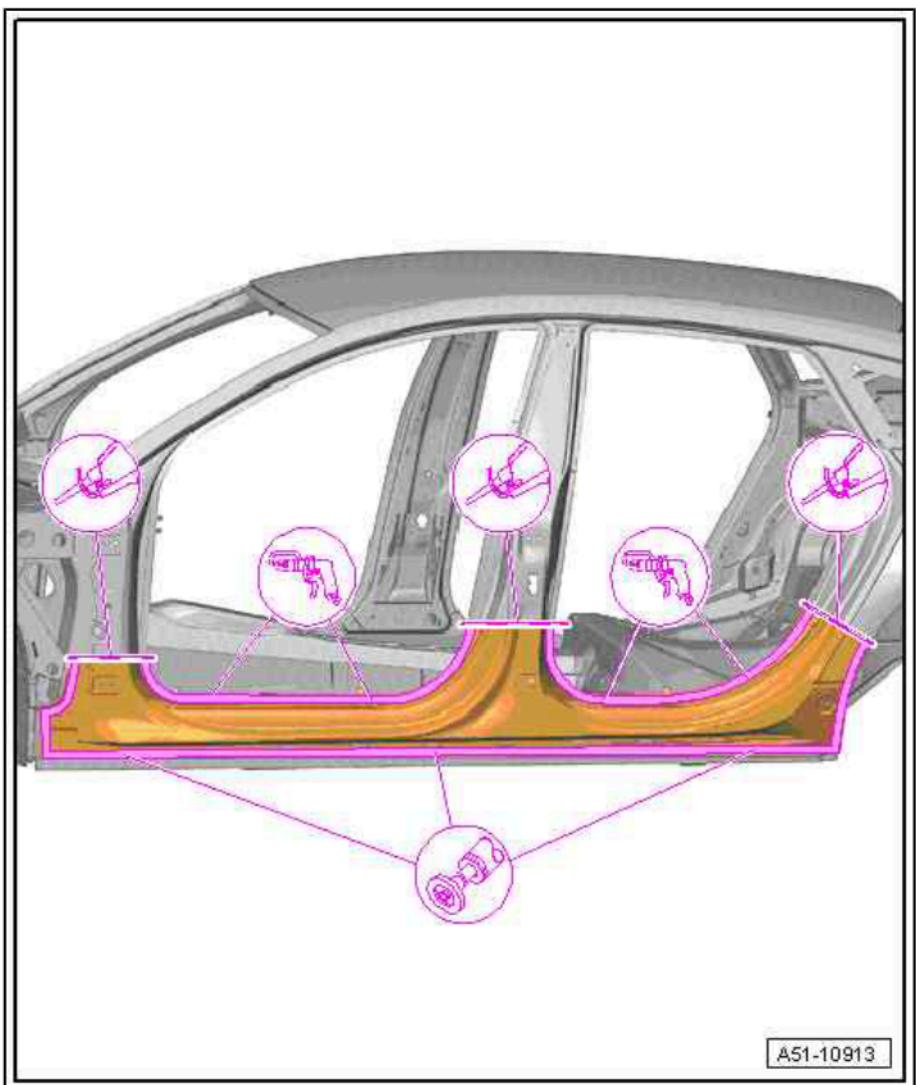

- Remove remaining material using compact angle grinder .

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

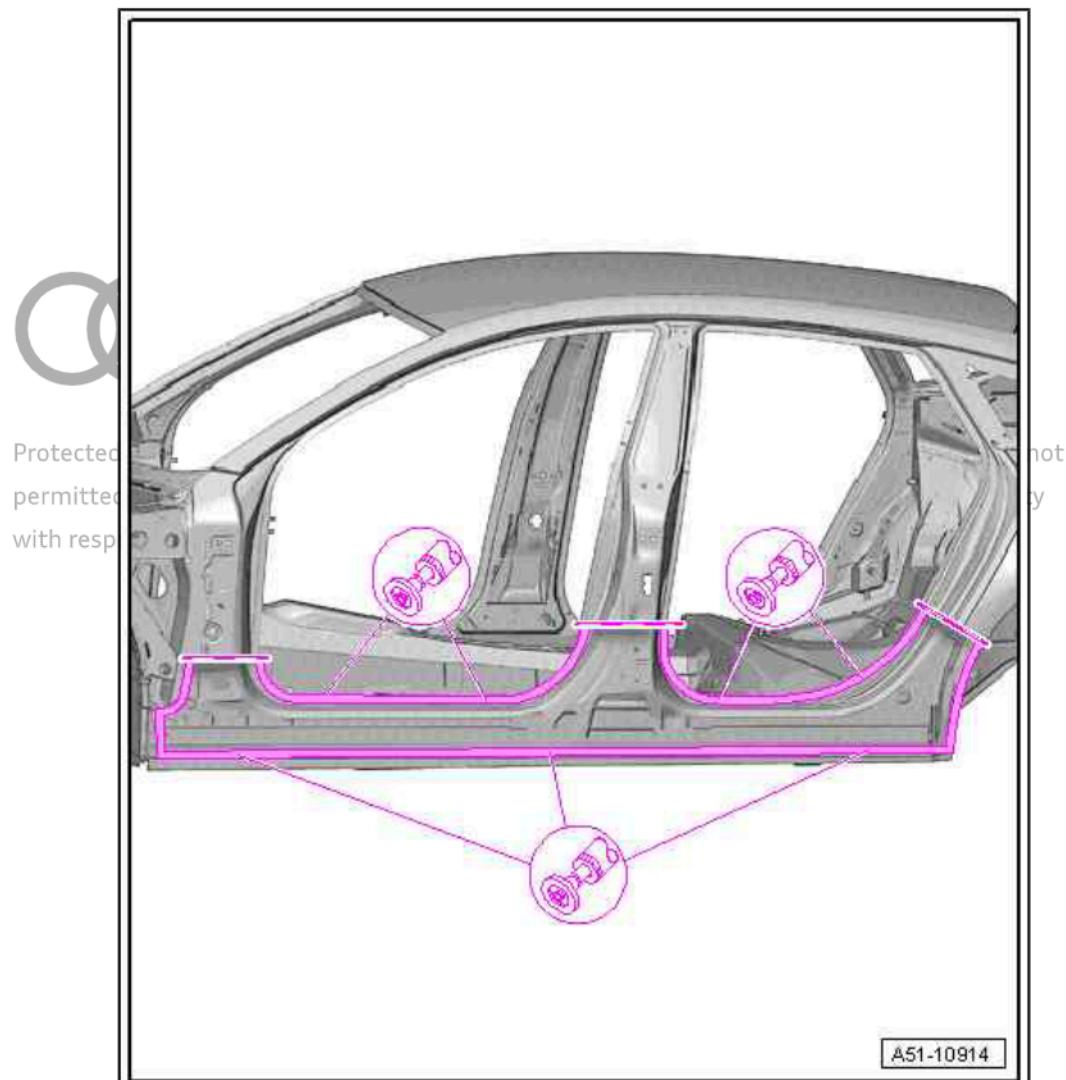

Replacement part


- ◆ Outer side member

Preparing new part

- Transfer separating cuts to new part and cut to size using body saw .



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

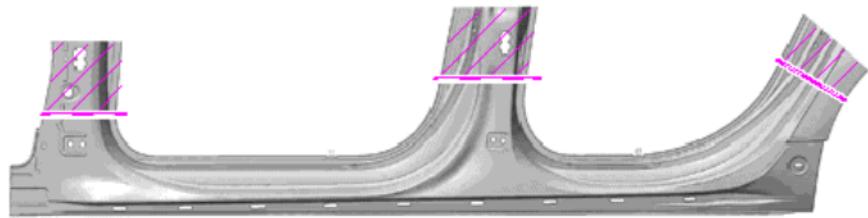

A51-10915



Note


Due to the different types of steel and panel thicknesses employed, one of the resistance spot welding units listed in this manual and approved by Audi must be used to ensure correct results when spot welding.

Welding in


- Match up and fix new part in position.
- Check fit relative to bolt-on parts.
- Butt weld separating cuts using shielded arc welding equipment : SG continuous seam.



Protected by copy
permitted unless
with respect to th

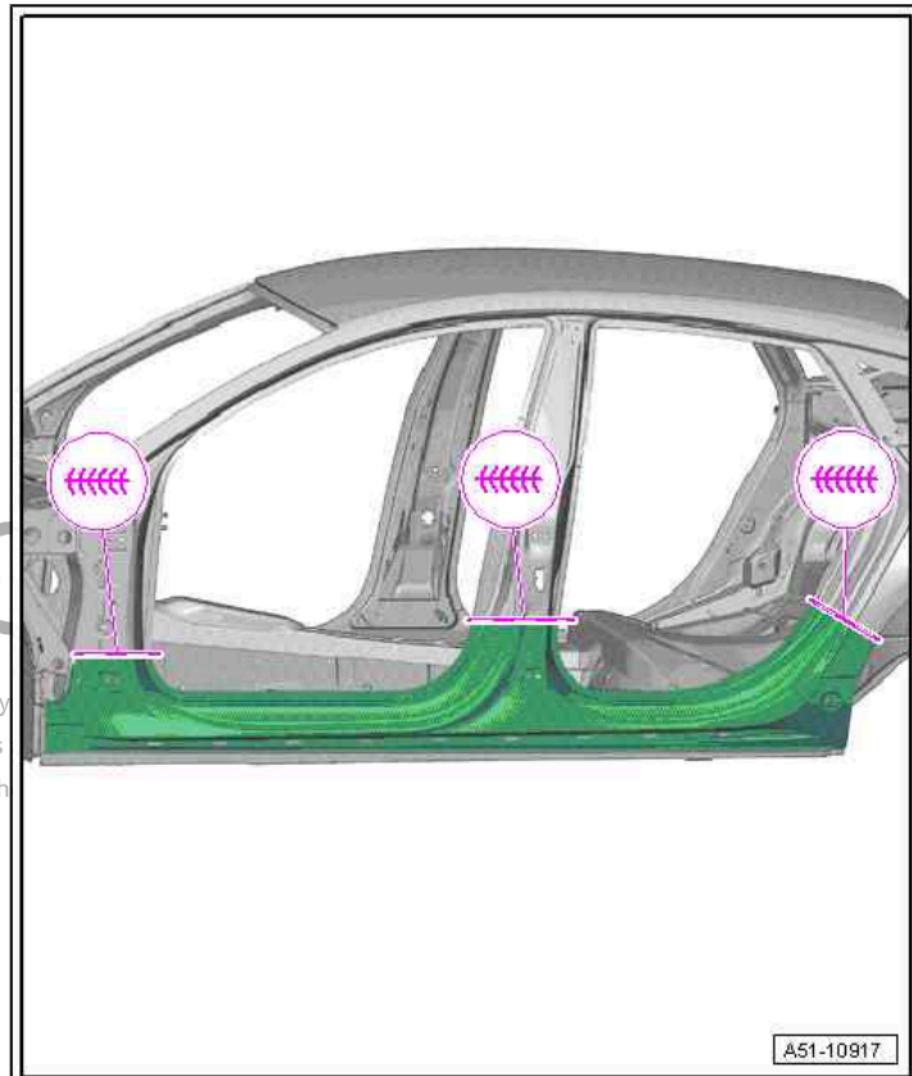

- Weld in side member using resistance spot welder : RP spot weld seam.
- Weld in side member using shielded arc welding equipment : SG continuous seam (staggered - with gaps) in place of laser weld.
- Weld in side member using shielded arc welding equipment : SG plug weld seam.

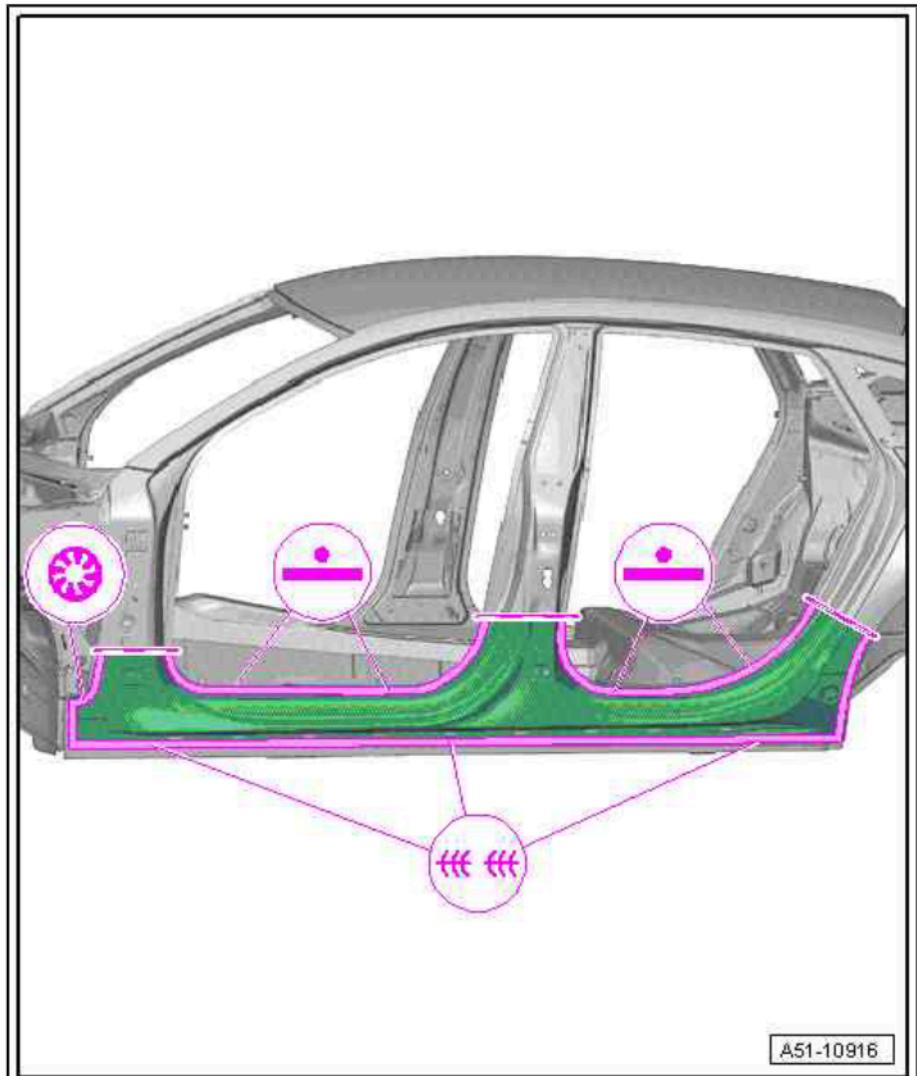

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.



RO: 51 47 55 50

20 Inner side member - Renewal

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted without the written permission of AUDI AG.

1 - Inner A-pillar reinforcement

2 - Inner side member

3 - Rear wheel housing

4 - Separating cut

Partial renewal

Partial renewal is possible with this separating cut.

5 - Separating cut

Partial renewal


Partial renewal is possible with this separating cut.

6 - Separating cut

Partial renewal

Partial renewal is possible with this separating cut.

7 - Laser weld seam

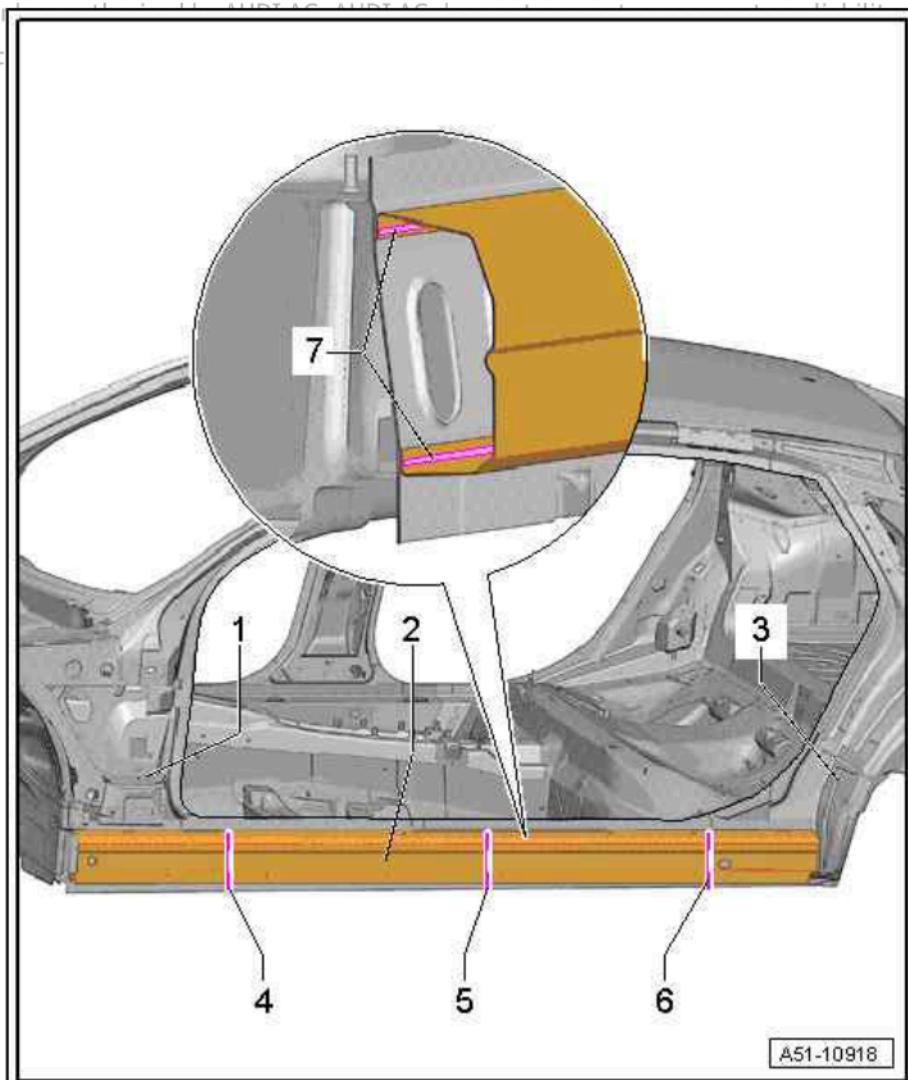

A51-10918

20.1 Notes for vehicles with hybrid drive

[⇒ page 5](#)

20.2 Tools

Special tools and workshop equipment required

- ◆ Shielded arc welding equipment
- ◆ Compact angle grinder
- ◆ Body saw
- ◆ Spot weld breaker

Tools approved by AUDI AG must be used to ensure correct results when carrying out repair work [⇒ page 54](#).

20.3 Procedure

- Outer side member removed [⇒ page 294](#)


- Side panel removed (Avant) [⇒ page 370](#)
- Side panel removed (Saloon) [⇒ page 362](#)
- Outer A-pillar removed [⇒ page 253](#)

Cutting locations

- Make separating cuts according to extent of damage using body saw .
- Make upper separating cut on side member using body saw .




Protected by copy
permitted unless
with respect to the

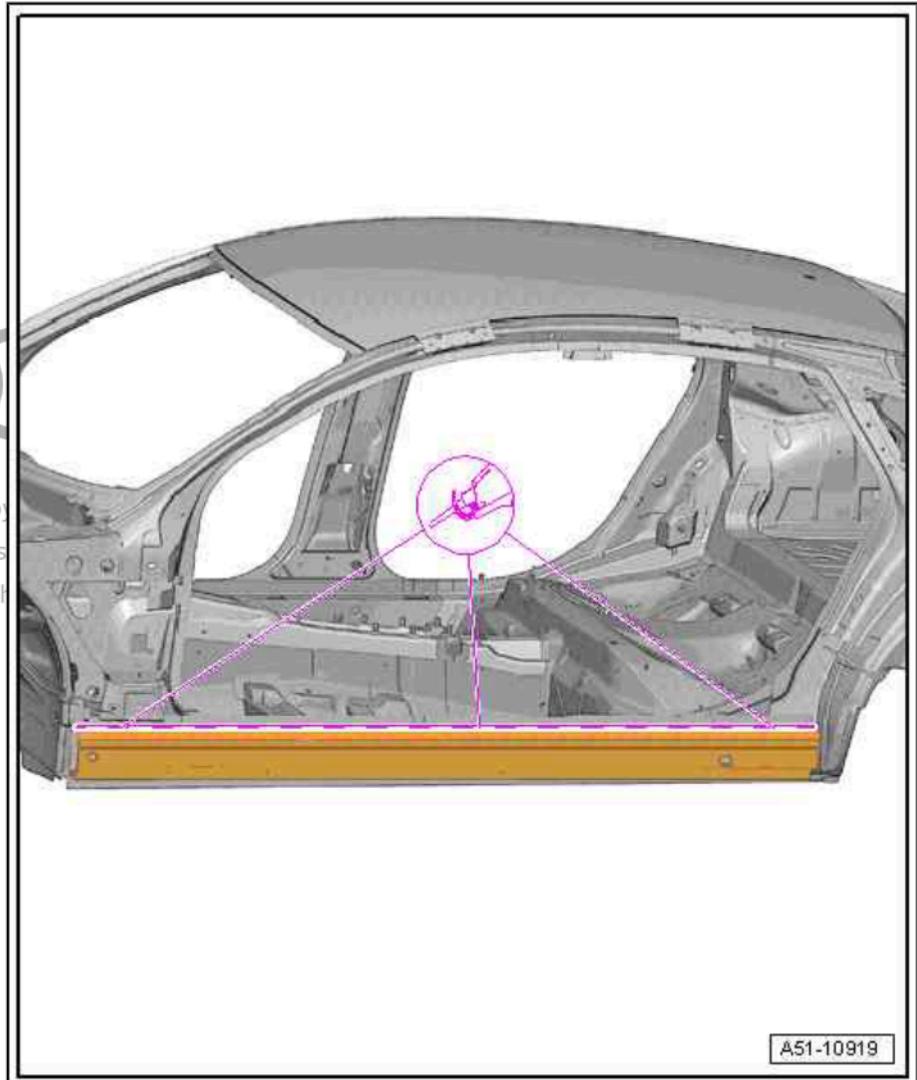

A51-10919

- Make lower separating cut on side member using body saw .

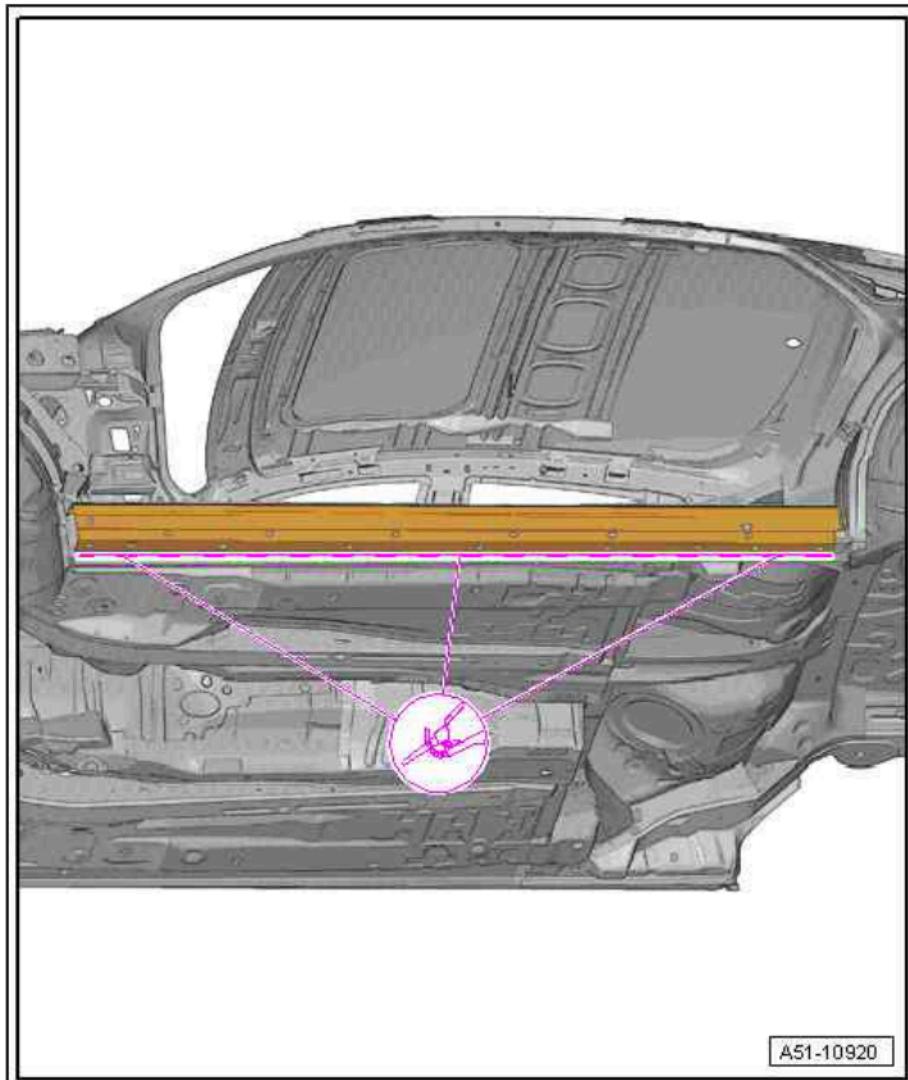


A51-10920

- Remove remaining material using compact angle grinder .



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

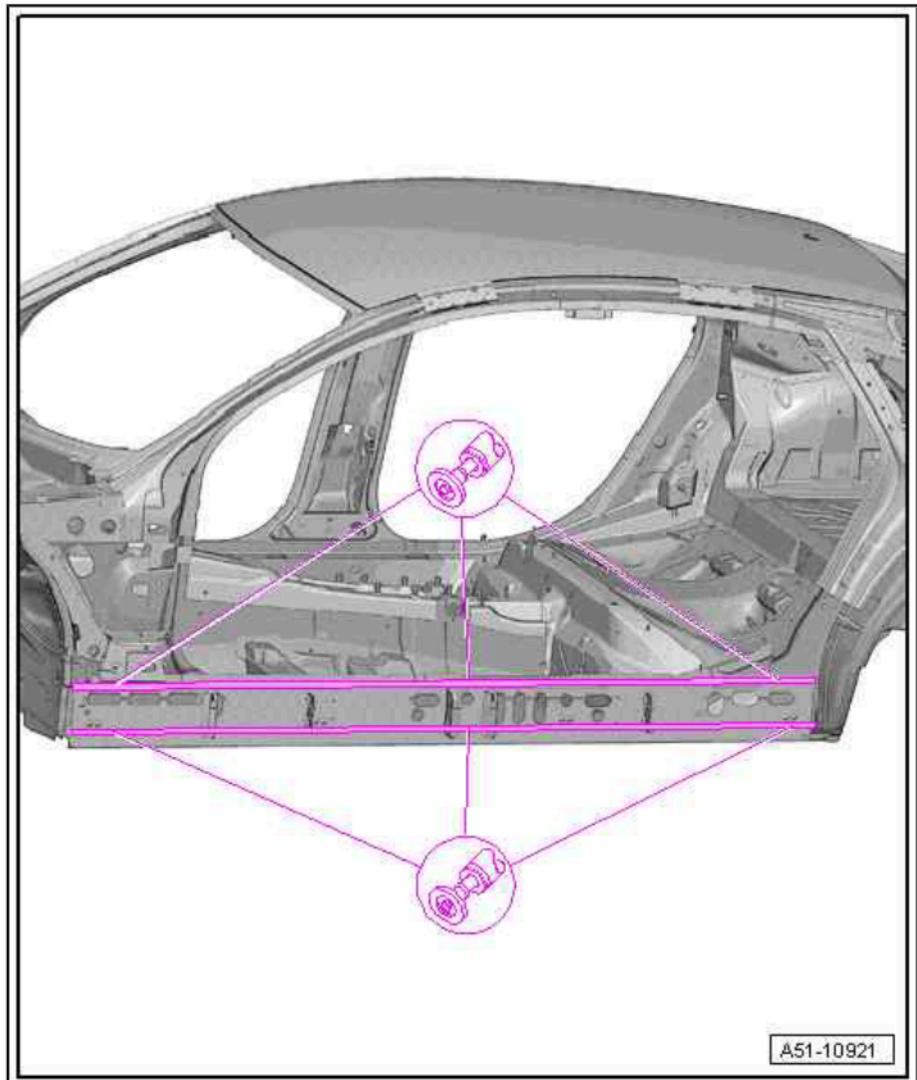

Replacement part

- ◆ Inner side member



Note


Due to the different types of steel and panel thicknesses employed, one of the resistance spot welding units listed in this manual and approved by Audi must be used to ensure correct results when spot welding.

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability


– Weld in side member with fillet weld at inner side member reinforcement using shielded arc welding equipment : SG continuous seam (staggered - with gaps).



Protected by copyright. Cop
permitted unless authorise
with respect to the correctr

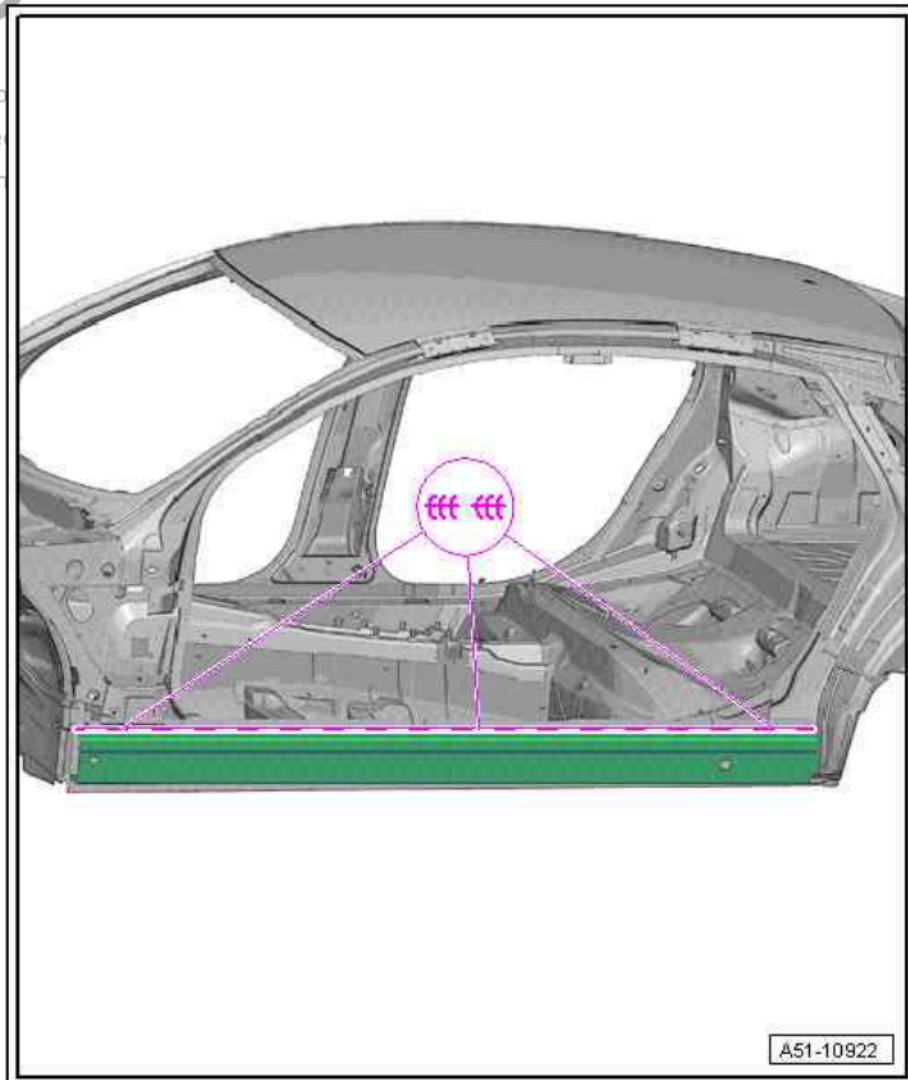

- Weld in side member with fillet weld at inner side member re-inforcement using shielded arc welding equipment : SG continuous seam (staggered - with gaps).

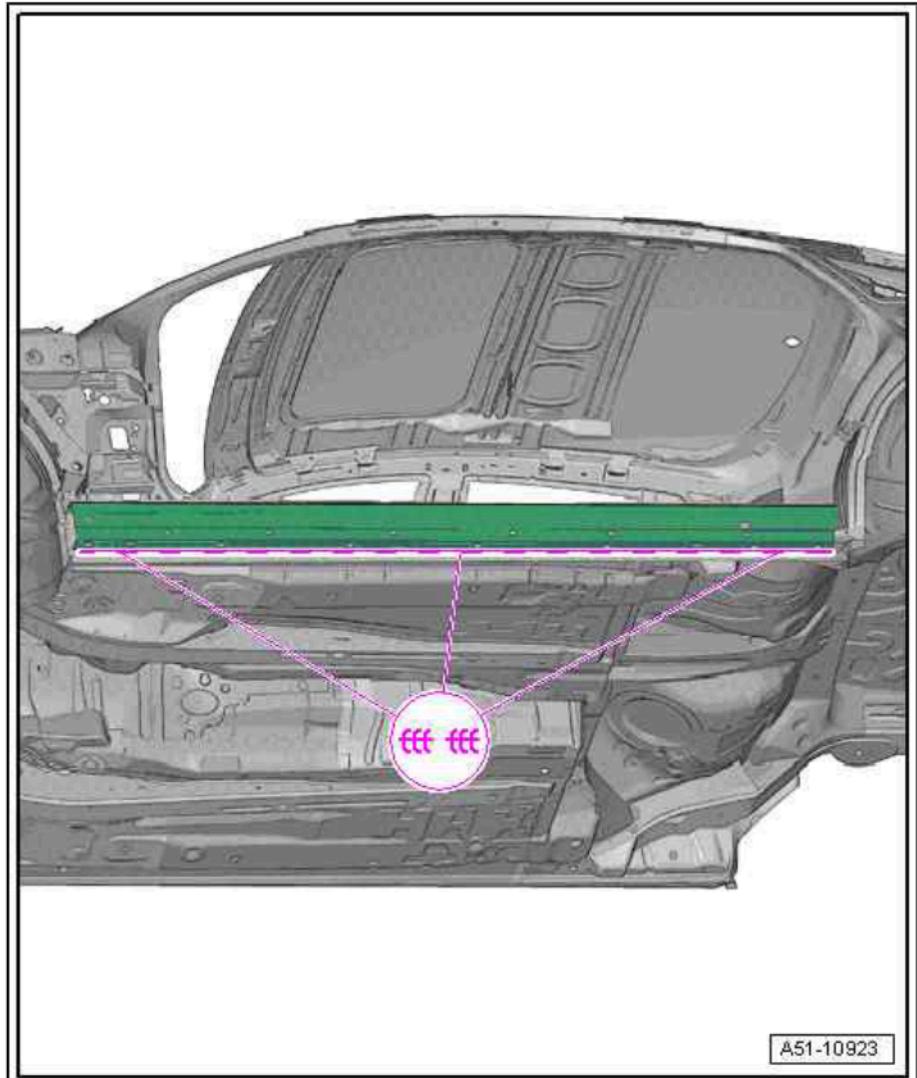

A51-10923

- Welding in outer side member [⇒ page 294](#)
- Welding in side panel (Saloon) [⇒ page 362](#)
- Welding in side panel (Avant) [⇒ page 370](#)
- Welding in outer A-pillar [⇒ page 253](#)
- Welding in inner A-pillar [⇒ page 260](#)



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

RO: 51 47 55 50

21 Inner side member - Renewal (Avant)

1 - Inner A-pillar reinforcement

2 - Inner side member

3 - Rear wheel housing

4 - Separating cut

Partial renewal

Partial renewal is possible with this separating cut.

5 - Separating cut

Partial renewal


Partial renewal is possible with this separating cut.

6 - Separating cut

Partial renewal

Partial renewal is possible with this separating cut.

7 - Laser weld seam

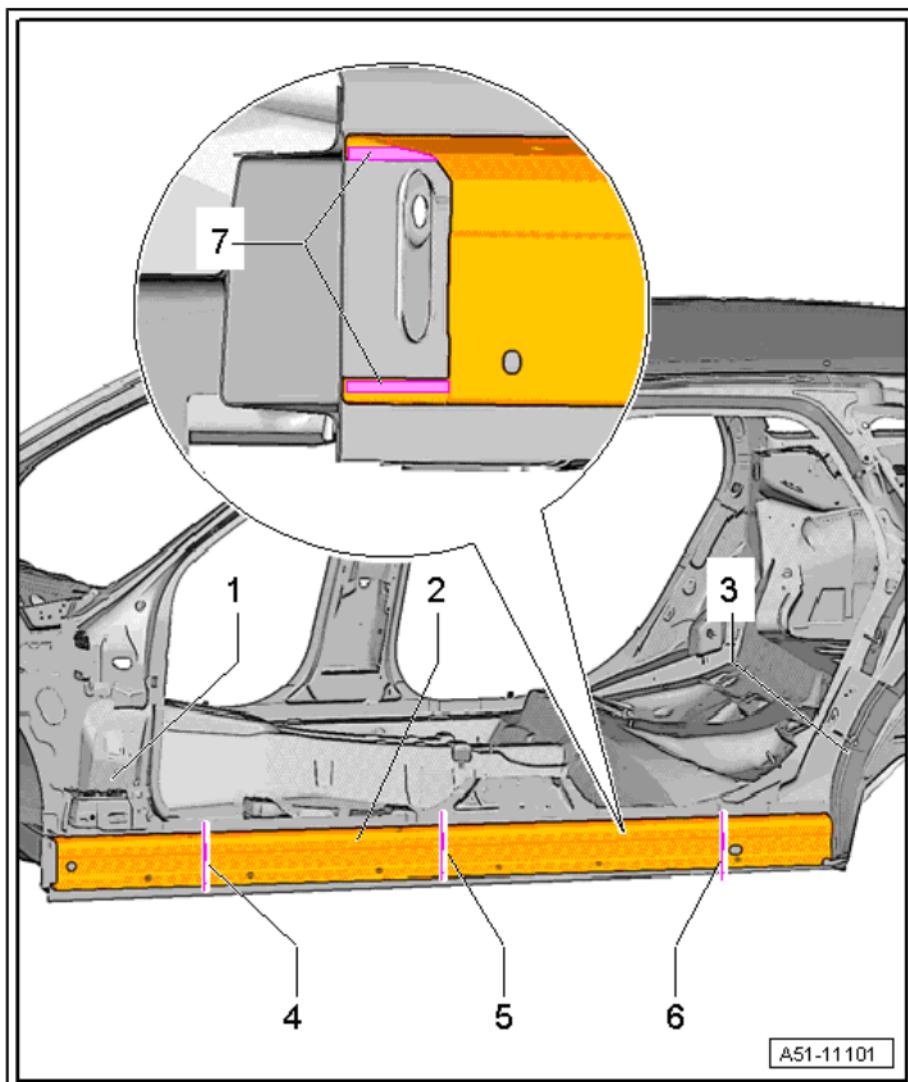

A51-11101

21.1 Notes for vehicles with hybrid drive

[⇒ page 5](#)

21.2 Tools

Special tools and workshop equipment required

◆ Shielded arc welding equipment

◆ Compact angle grinder

◆ Body saw Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability

◆ Spot weld breaker with respect to the correctness of information in this document. Copyright by AUDI AG.

Tools approved by AUDI AG must be used to ensure correct results when carrying out repair work [⇒ page 54](#).

21.3 Procedure


- Outer side member removed [⇒ page 294](#)

- Side panel removed (Avant) ➡ [page 370](#)
- Side panel removed (Saloon) ➡ [page 362](#)
- Outer A-pillar removed ➡ [page 253](#)


Cutting locations

- Make separating cuts according to extent of damage using body saw .
- Make upper separating cut on side member using body saw .

Protected by copyright. Copying, distribution, or
permitted unless authori
with respect to the corre

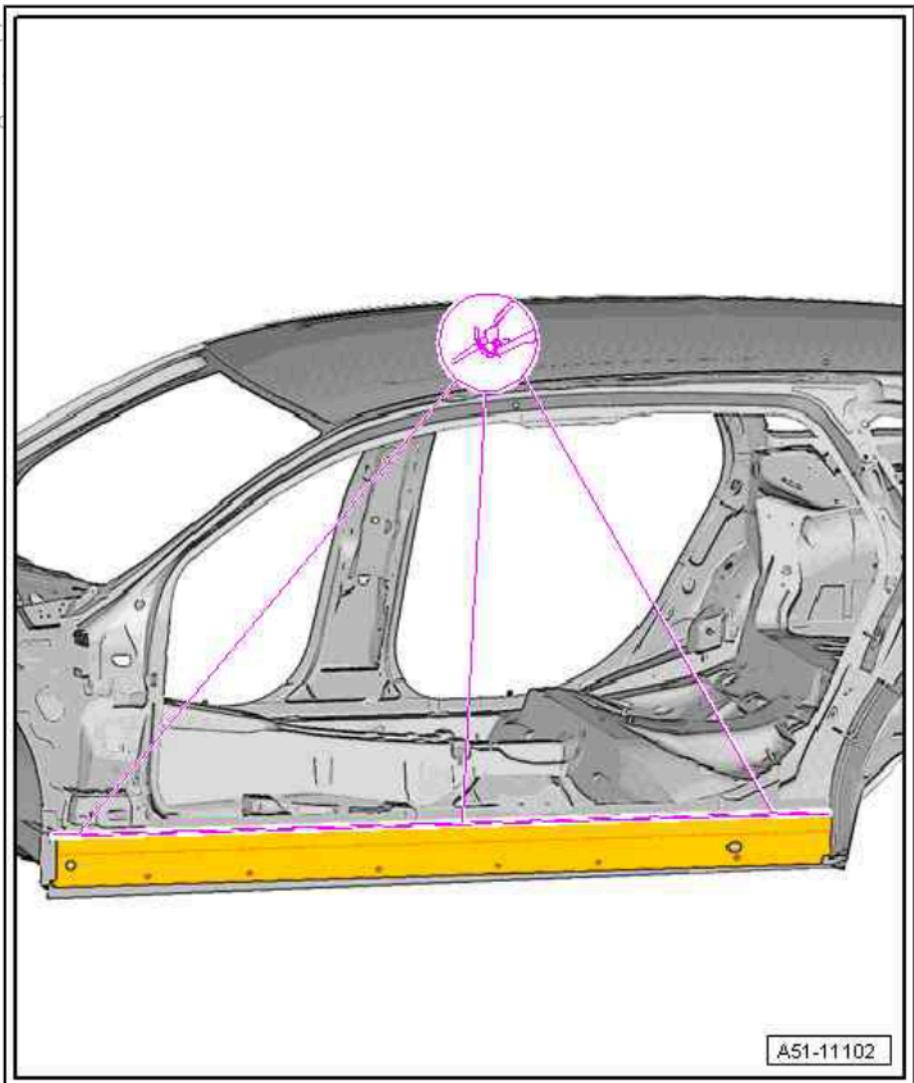


- Make lower separating cut on side member using body saw .

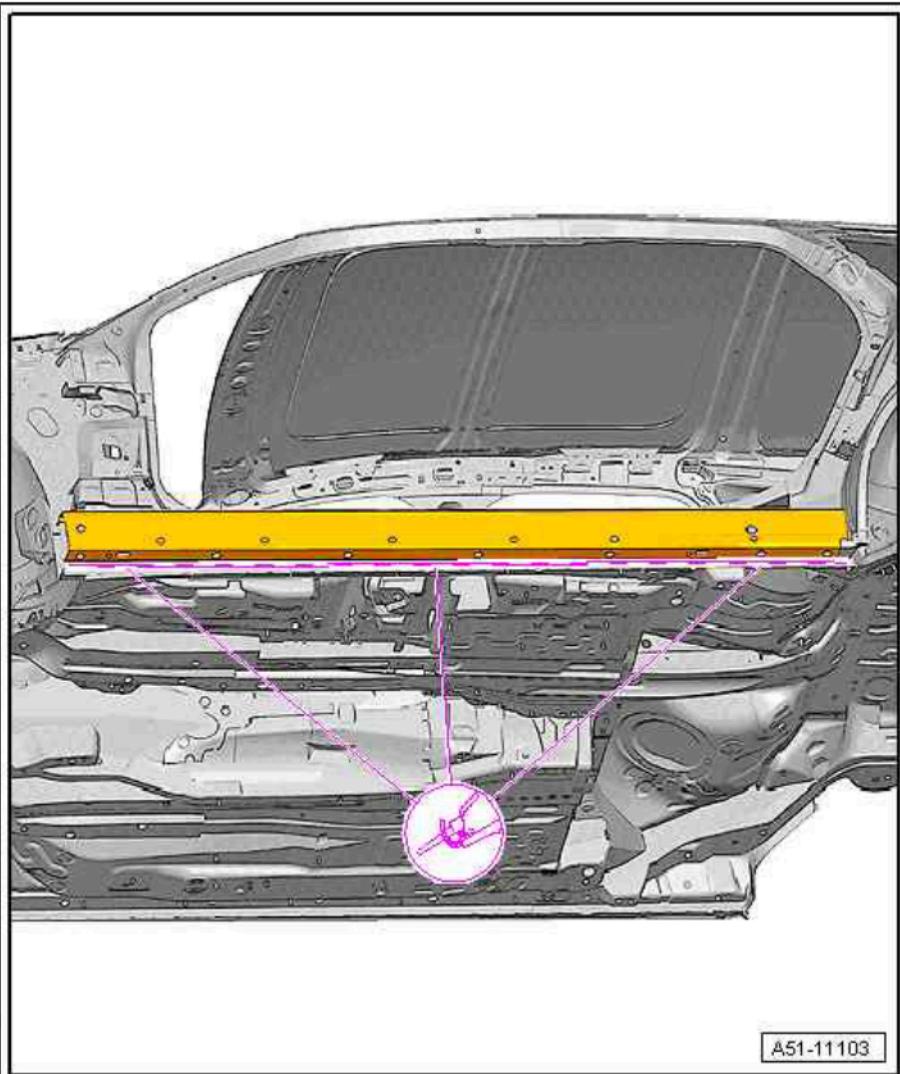

A51-11103

- Remove remaining material using compact angle grinder .

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

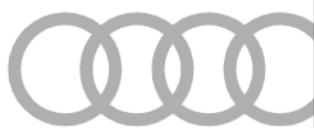

Protected by copyright. Copy
permitted unless authorise

A51-11104

with respect to the correctness of information in this document. Copyright by AUDI AG.
Replacement part

- ◆ Inner side member




Note

*Due to the different types of steel and panel thicknesses em-
ployed, one of the resistance spot welding units listed in this
manual and approved by Audi must be used to ensure correct
results when spot welding.*


Welding in

- Weld in side member with fillet weld at inner side member re-inforcement using shielded arc welding equipment : SG continuous seam (staggered - with gaps).

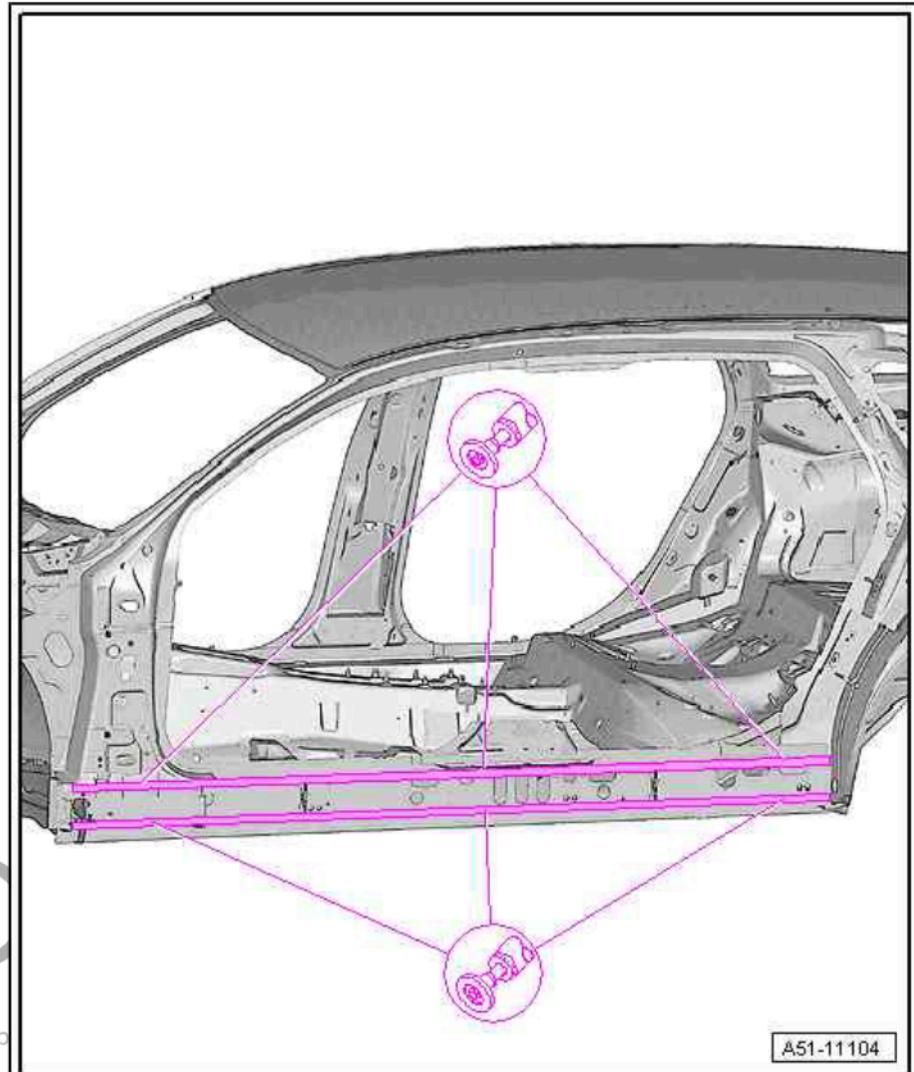





Protected by copyright. Copying
permitted unless authorised by
with respect to the correctness

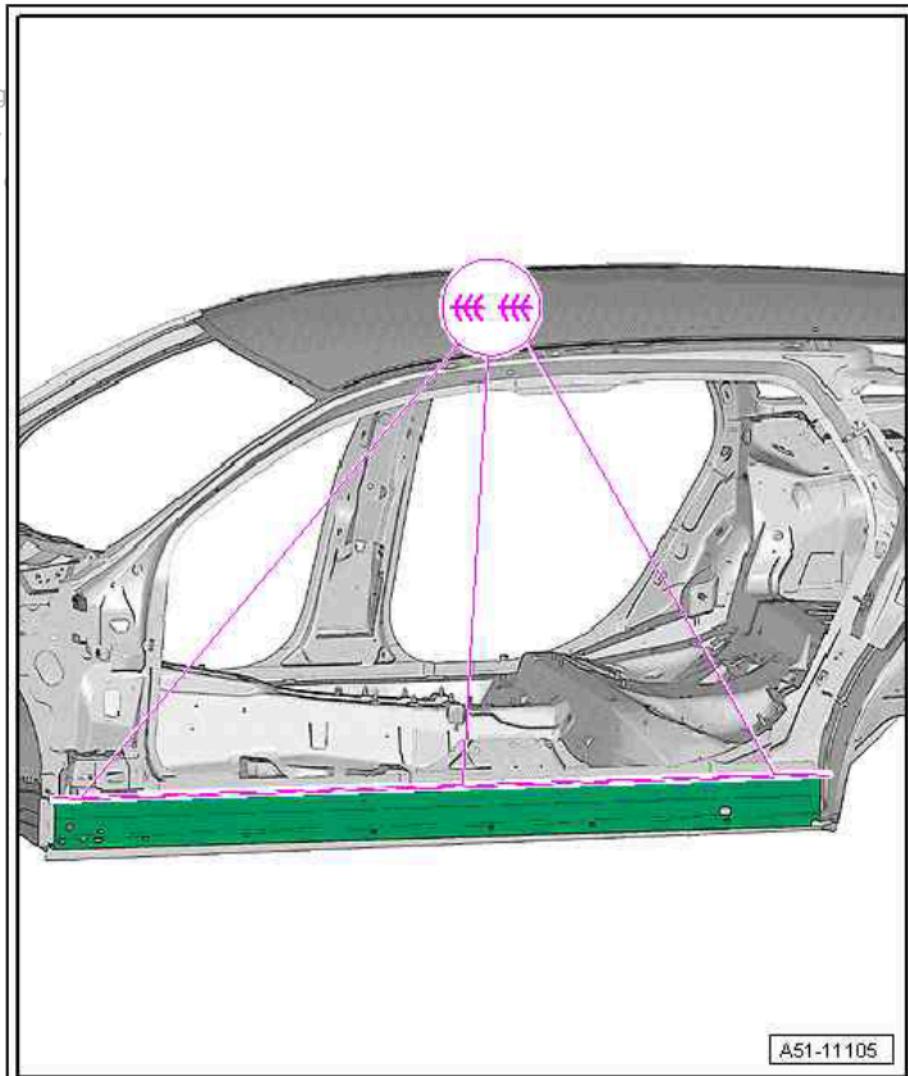

- Weld in side member with fillet weld at inner side member reinforcement using shielded arc welding equipment : SG continuous seam (staggered - with gaps).

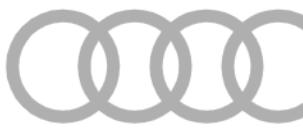

Protected by copyright. Copying, distribution, or
permitted unless authorised by the publisher
with respect to the correctness of the information.

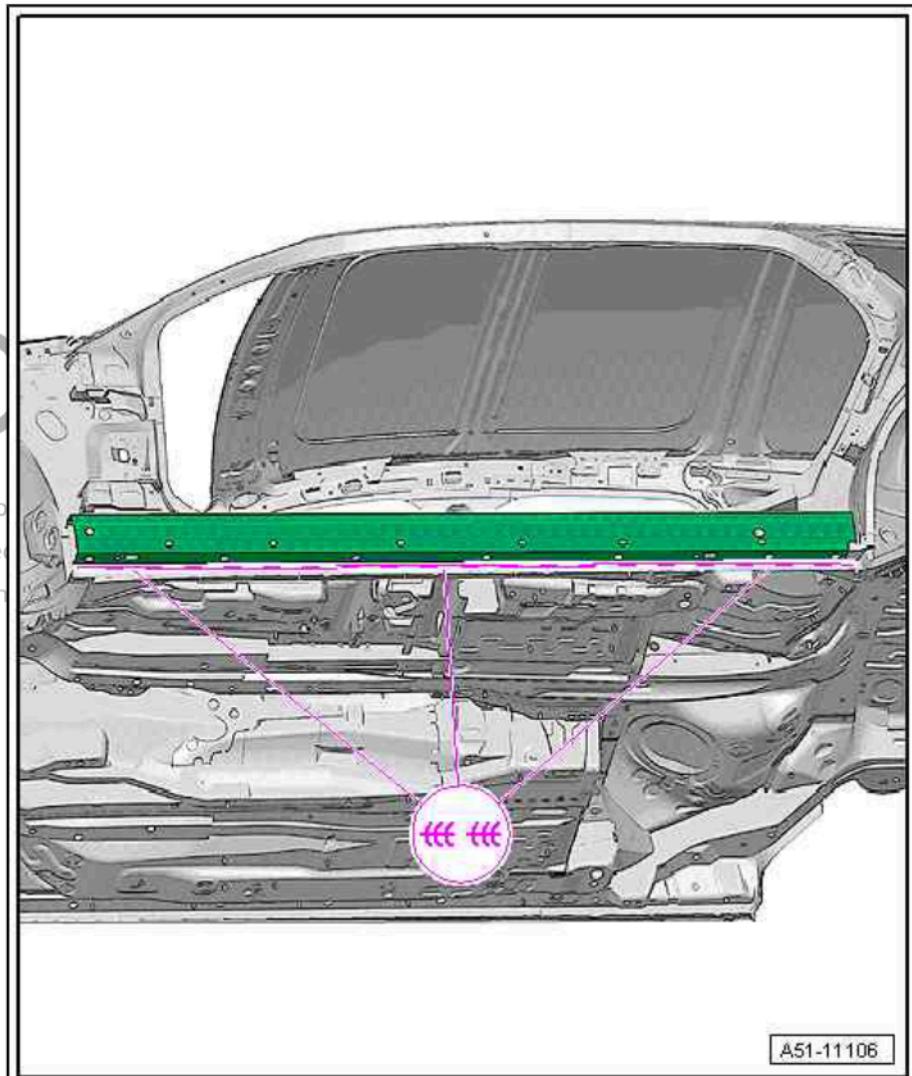

- Welding in outer side member [⇒ page 294](#)
- Welding in side panel [⇒ page 370](#)
- Welding in outer A-pillar [⇒ page 253](#)
- Welding in inner A-pillar [⇒ page 260](#)

RO: 51 47 55 50

22 Inner side member reinforcement - Renewal

(Saloon and Avant identical)

1 - Inner A-pillar reinforcement


2 - Rear longitudinal member

3 - Inner side member rein-
forcement



Protected by copyright
permitted unless aut
with respect to the co

A51-10924

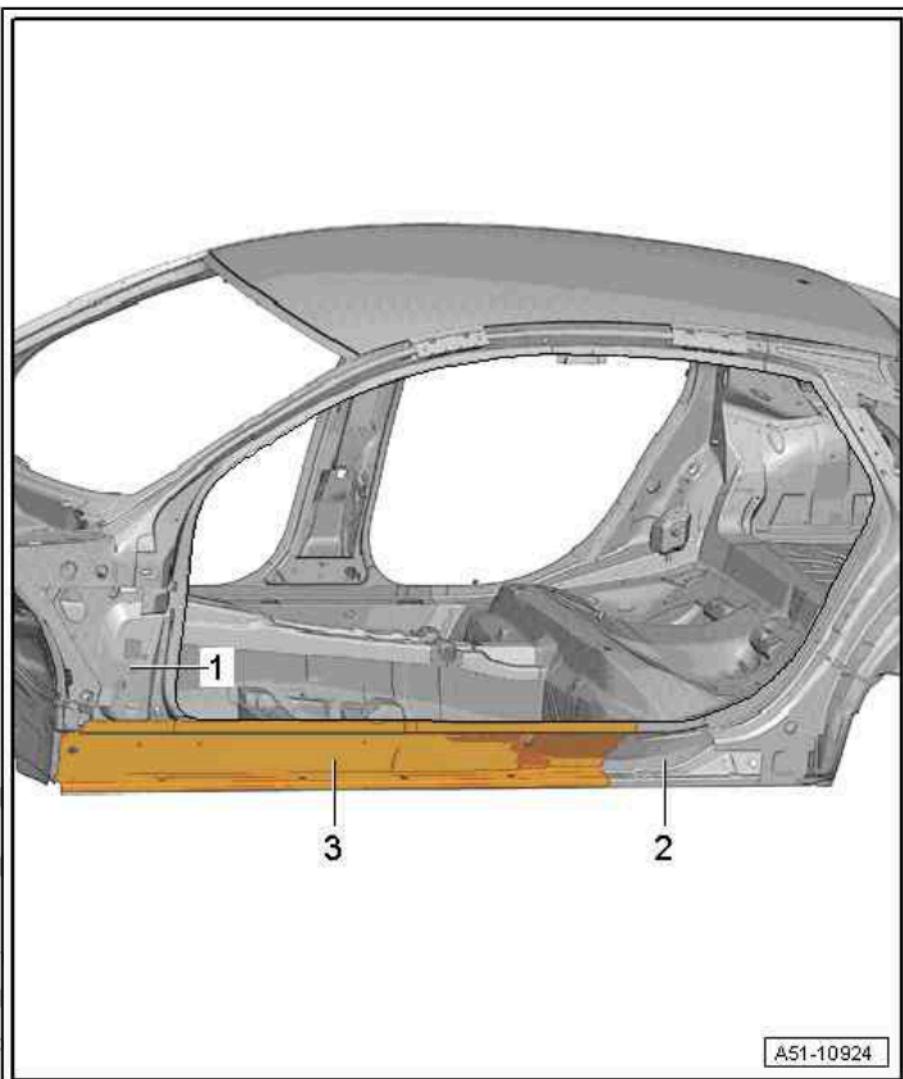

22.1 Notes for vehicles with hybrid drive

[⇒ page 5](#)

22.2 Tools

Special tools and workshop equipment required

- ◆ Resistance spot welder
- ◆ Shielded arc welding equipment
- ◆ Drill
- ◆ Compact angle grinder
- ◆ Body saw
- ◆ Spot weld breaker

Tools approved by AUDI AG must be used to ensure correct results when carrying out repair work [⇒ page 54](#).

22.3 Procedure

- Outer side member removed [⇒ page 294](#)
- Side panel removed (Avant) [⇒ page 370](#)
- Side panel removed (Saloon) [⇒ page 362](#)
- Outer A-pillar removed [⇒ page 253](#)




Note


The inner side member reinforcement consists of ultra-high-strength hot-formed steel.

Cutting locations


- Separate original joint using spot weld breaker .

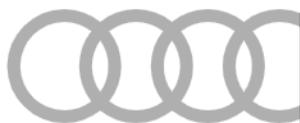

Protected by copyright. Co
permitted unless authoris
with respect to the correct

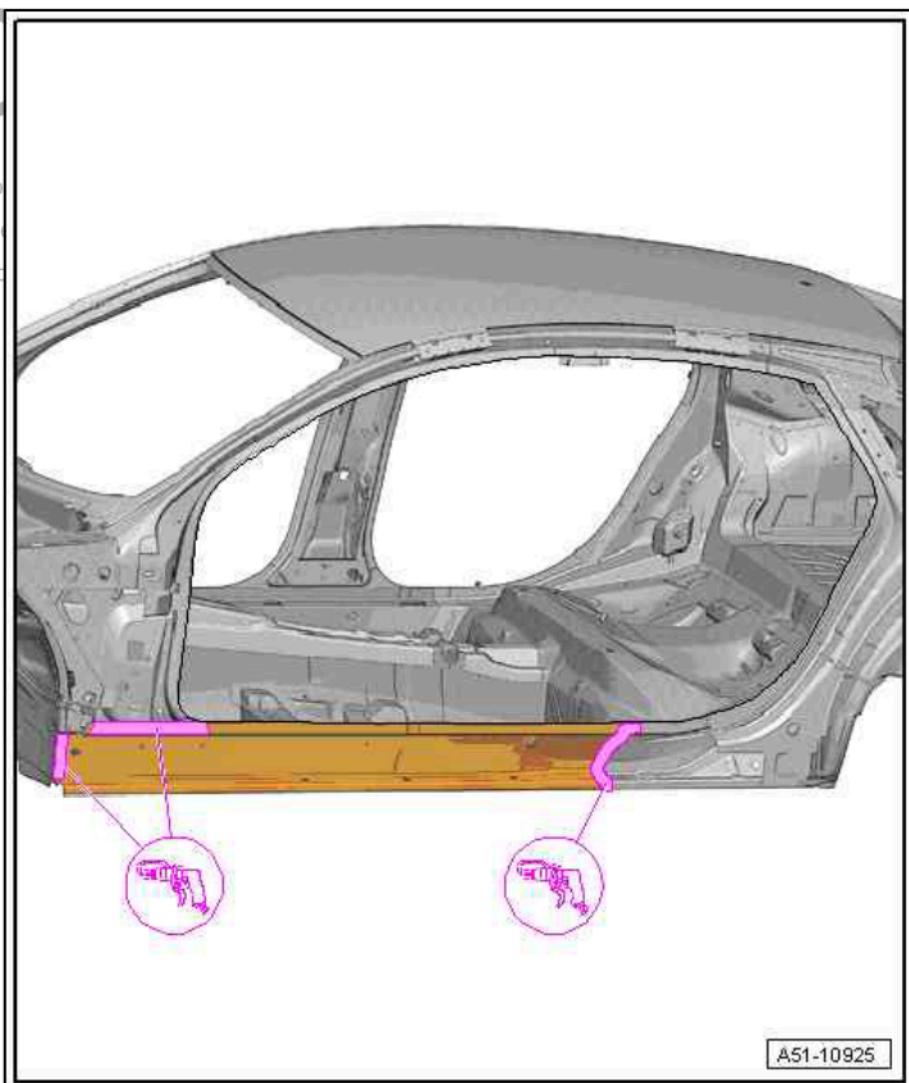


- Separate original joint at inside of floor panel using spot weld breaker .

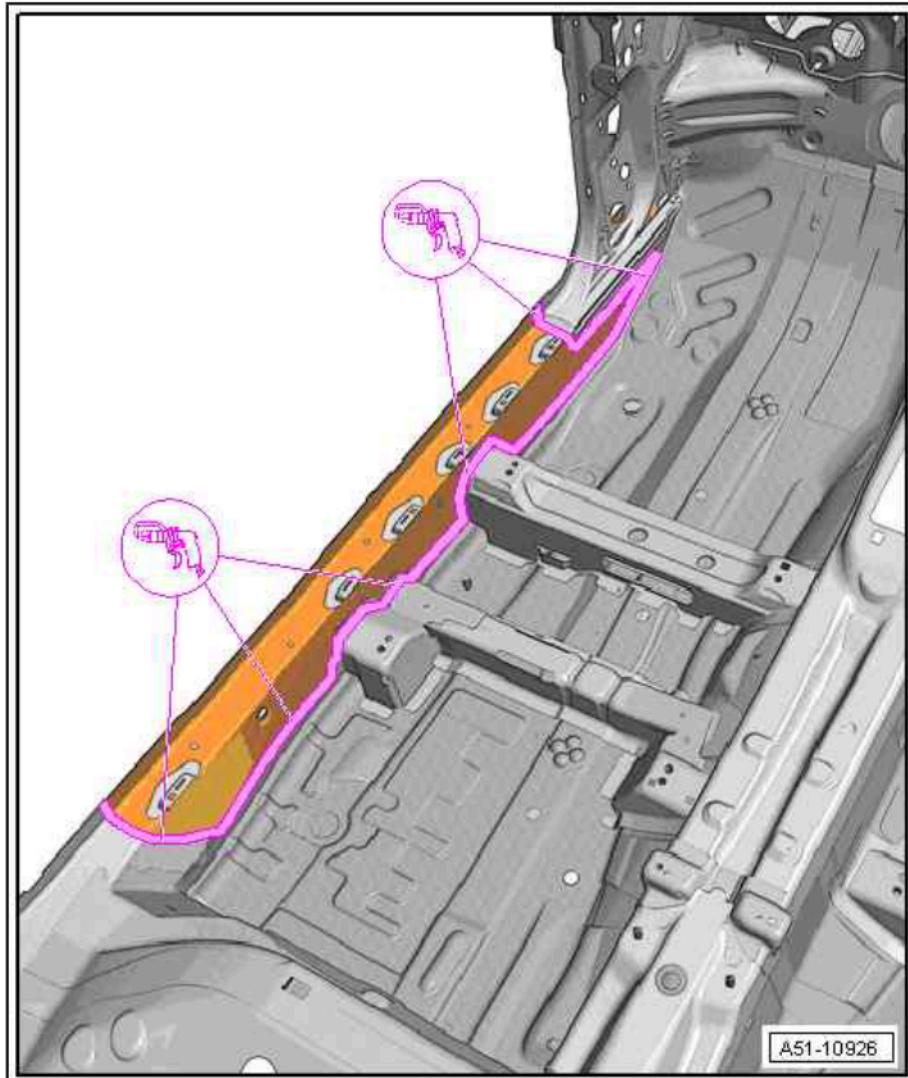


- Remove remaining material using compact angle grinder .



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

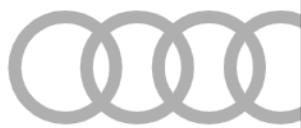

Protected by copyright. Copying, distribution, or
permitted unless authorised by the publisher
with respect to the correct use of the material.

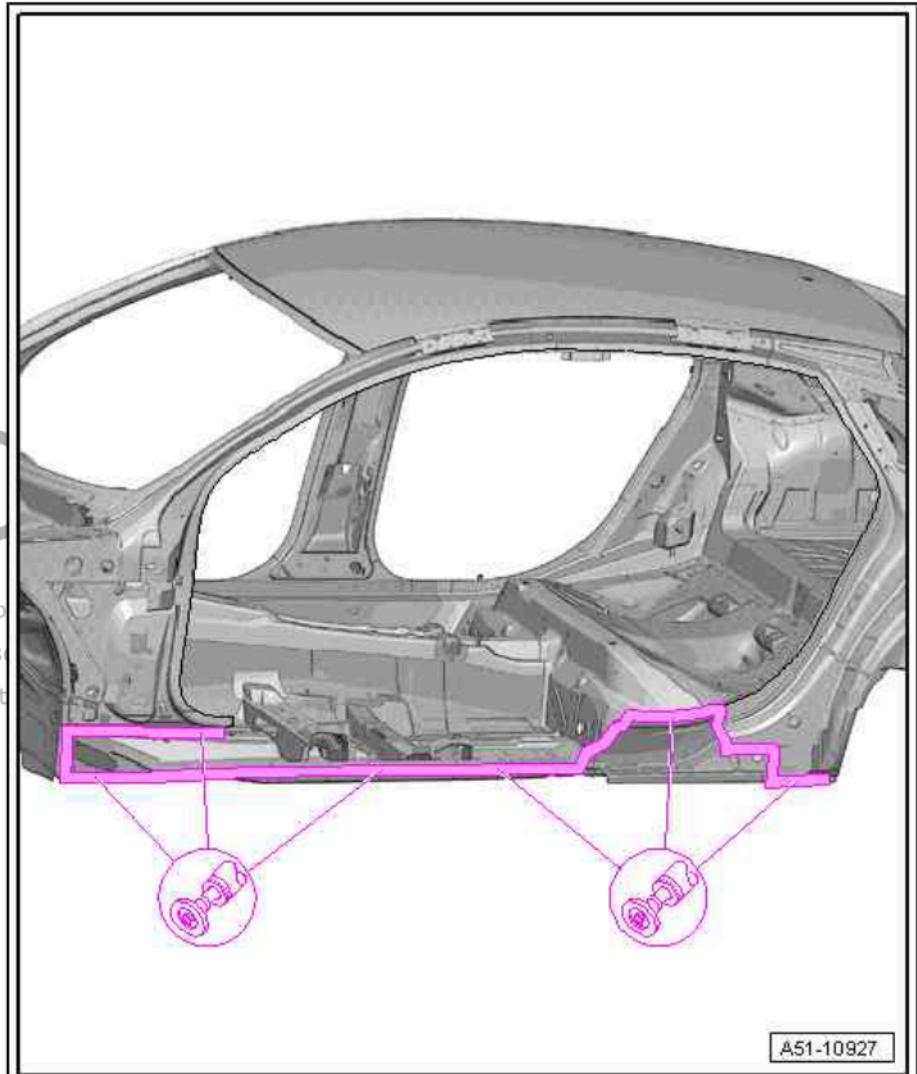

Replacement part


- ◆ Inner side member reinforcement

Welding in


- Weld in inner side member reinforcement using shielded arc welding equipment : SG plug weld seam.



Protected by copyright. Copying is
permitted unless authorised by A
with respect to the correctness o

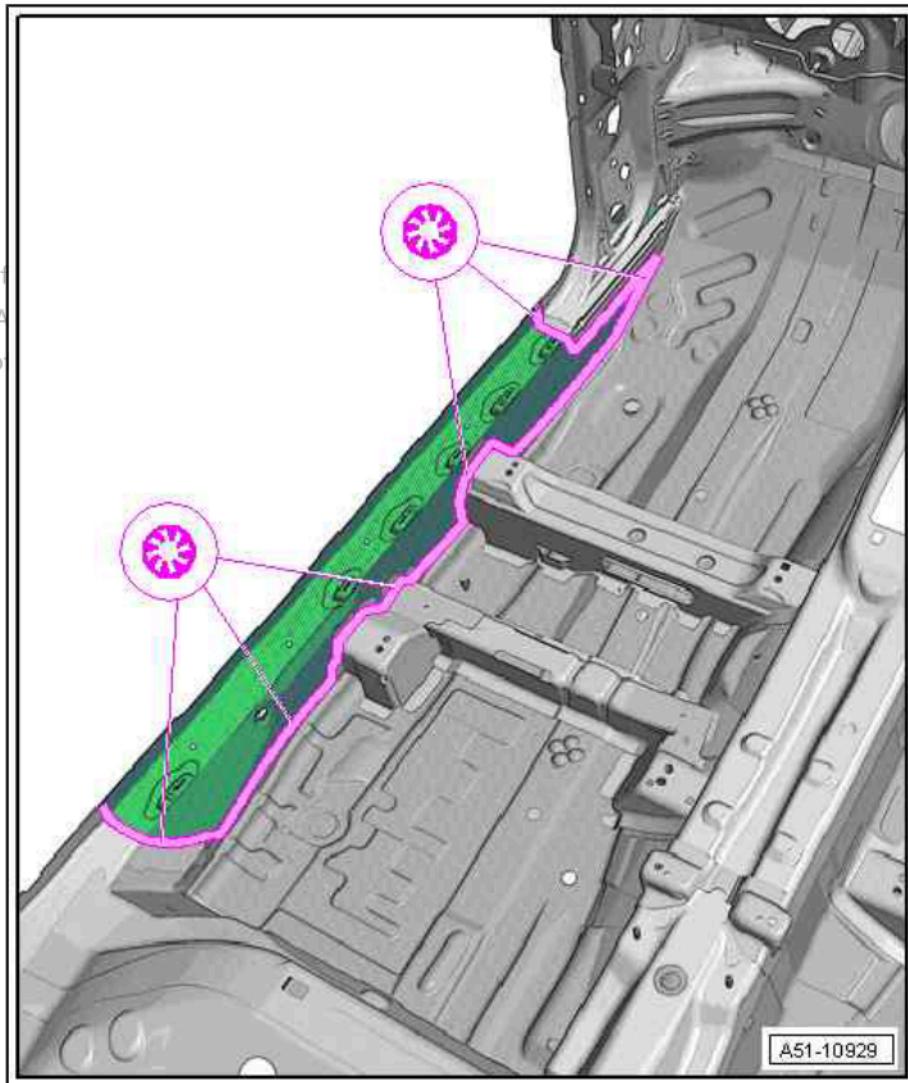

- Weld in inner side member reinforcement using shielded arc welding equipment : SG continuous seam (staggered - with gaps).

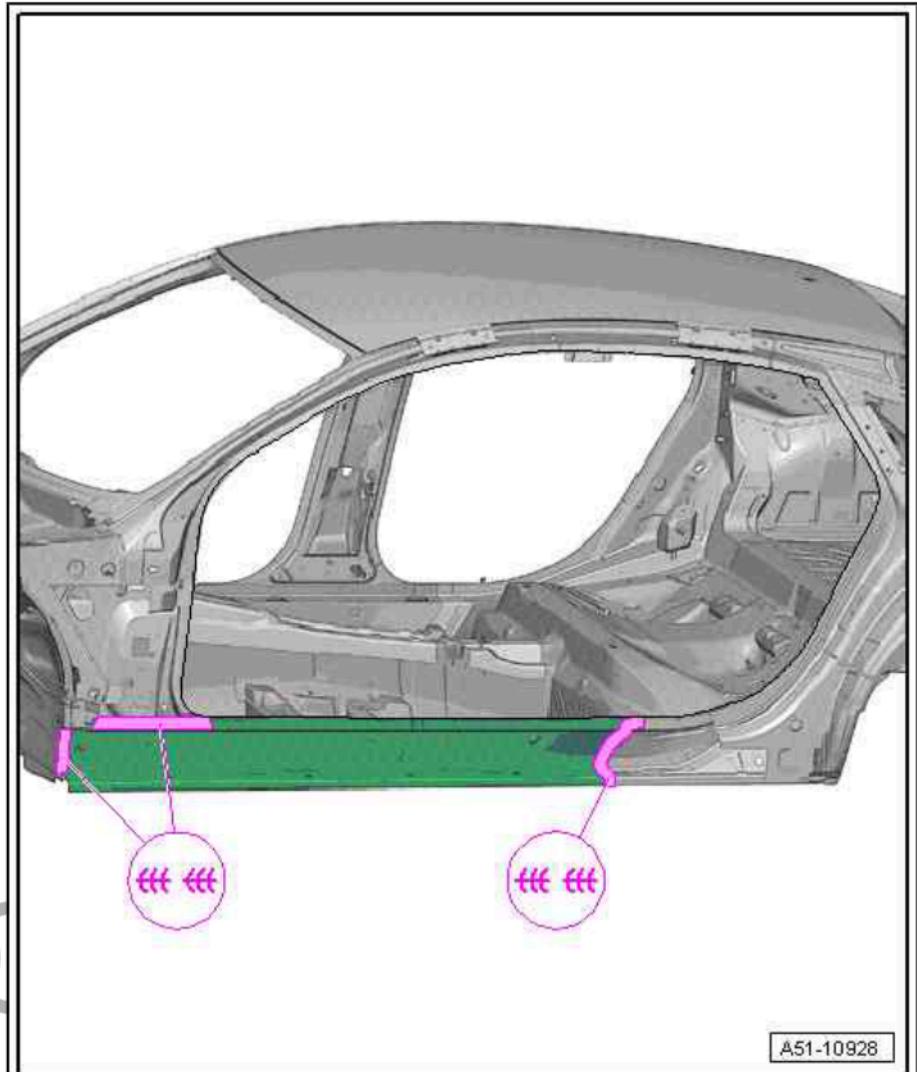

A51-10928

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability

- Welding in outer side member [⇒ page 294](#)
- Welding in side panel (Saloon) [⇒ page 362](#)
- Welding in side panel (Avant) [⇒ page 370](#)
- Weld in outer A-pillar [⇒ page 253](#) .
- Welding in inner A-pillar [⇒ page 260](#)

RO: 51 87 55 00


23 Centre seat cross member - Renewal

Saloon and Avant identical

- 1 - Floor panel
- 2 - Seat cross member
- 3 - Reinforcement for seat cross member (outer)
- 4 - Reinforcement for seat cross member (inner)



Protected by copyright.
Photocopying or otherwise
utilisation of this document
is only permitted unless au-

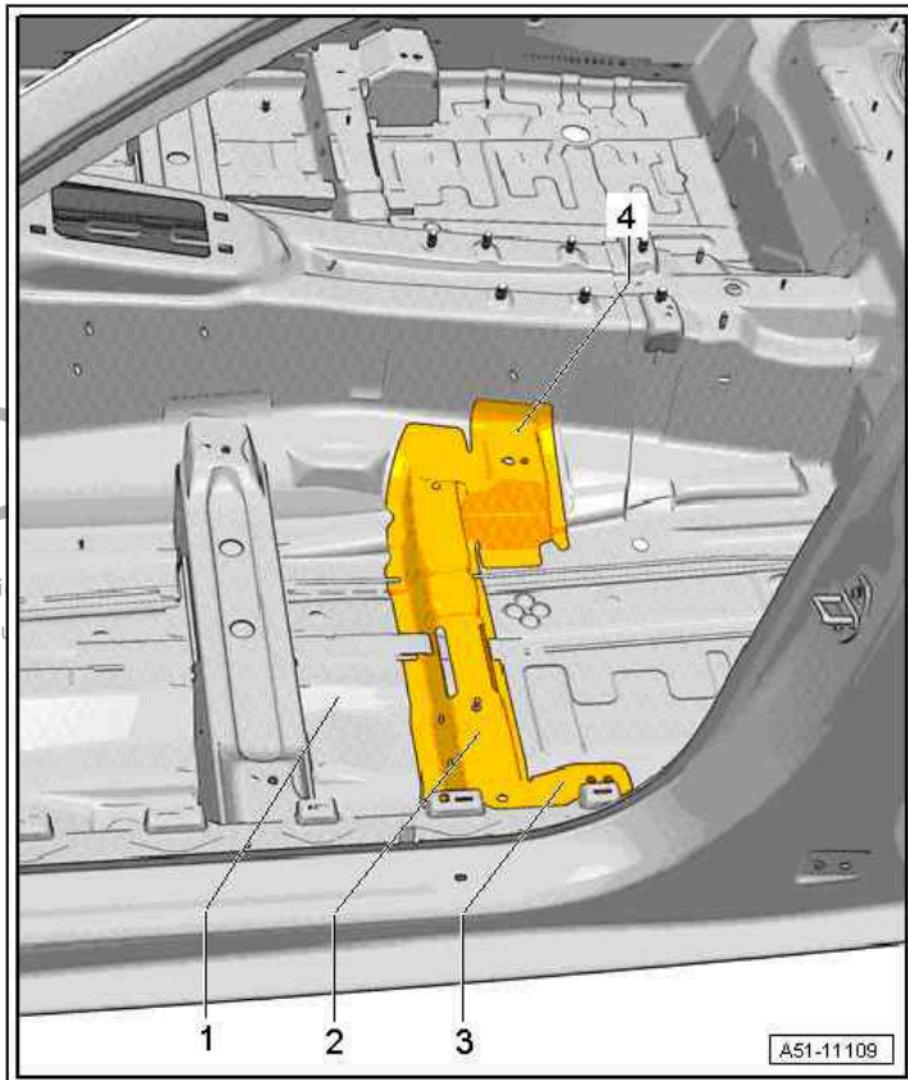

23.1 Notes for vehicles with hybrid drive

[⇒ page 5](#)

23.2 Tools

Special tools and workshop equipment required

- ◆ Resistance spot welder
- ◆ Shielded arc welding equipment
- ◆ Drill
- ◆ Body saw
- ◆ Spot weld breaker

Tools approved by AUDI AG must be used to ensure correct results when carrying out repair work [⇒ page 54](#).

23.3 Procedure

Cutting locations


- Separate original joint between inner seat cross member and floor panel using spot weld breaker .




Protected by copyright. Copying
permitted unless authorised by
with respect to the correctness




- Separate original joint between seat cross member and floor panel using spot weld breaker .

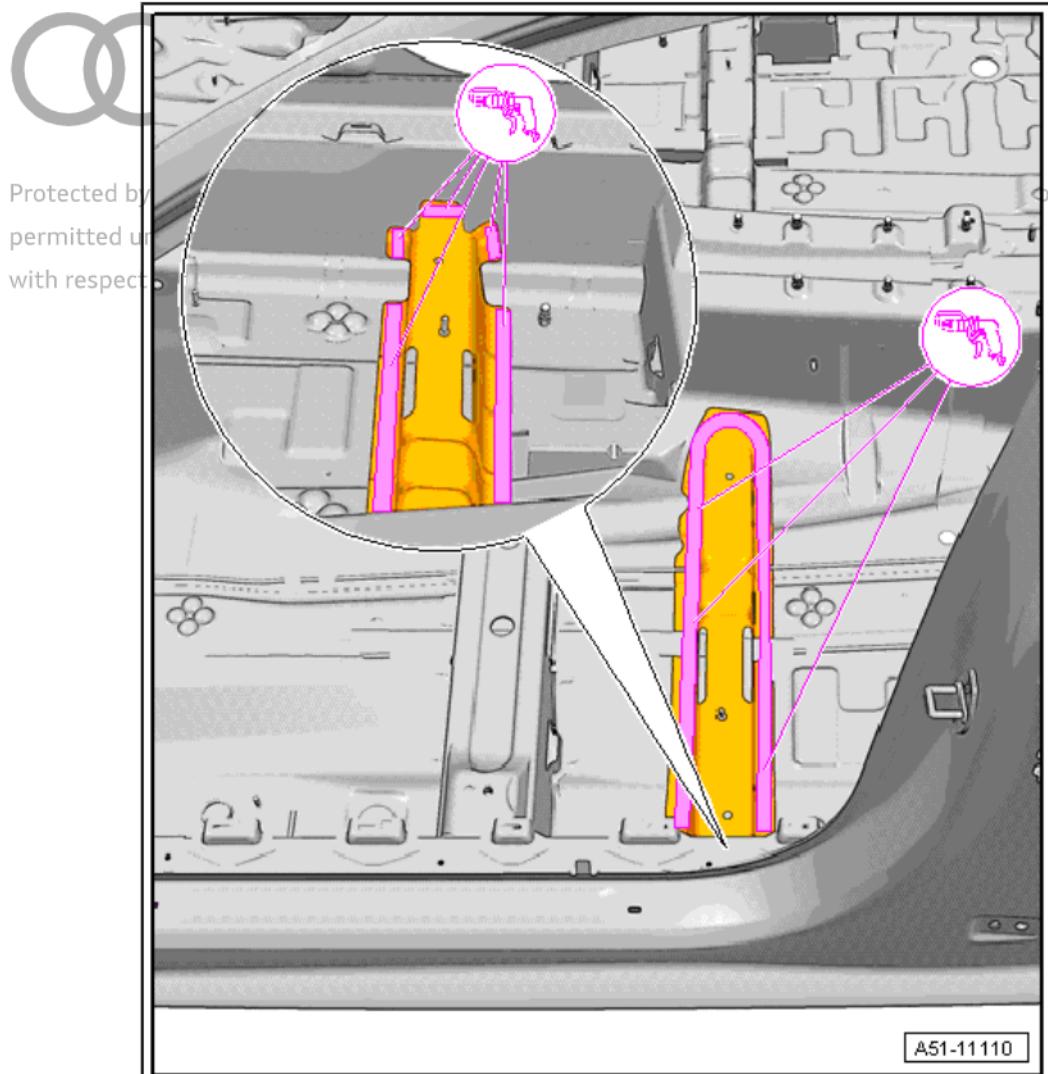

- Remove remaining material using compact angle grinder .

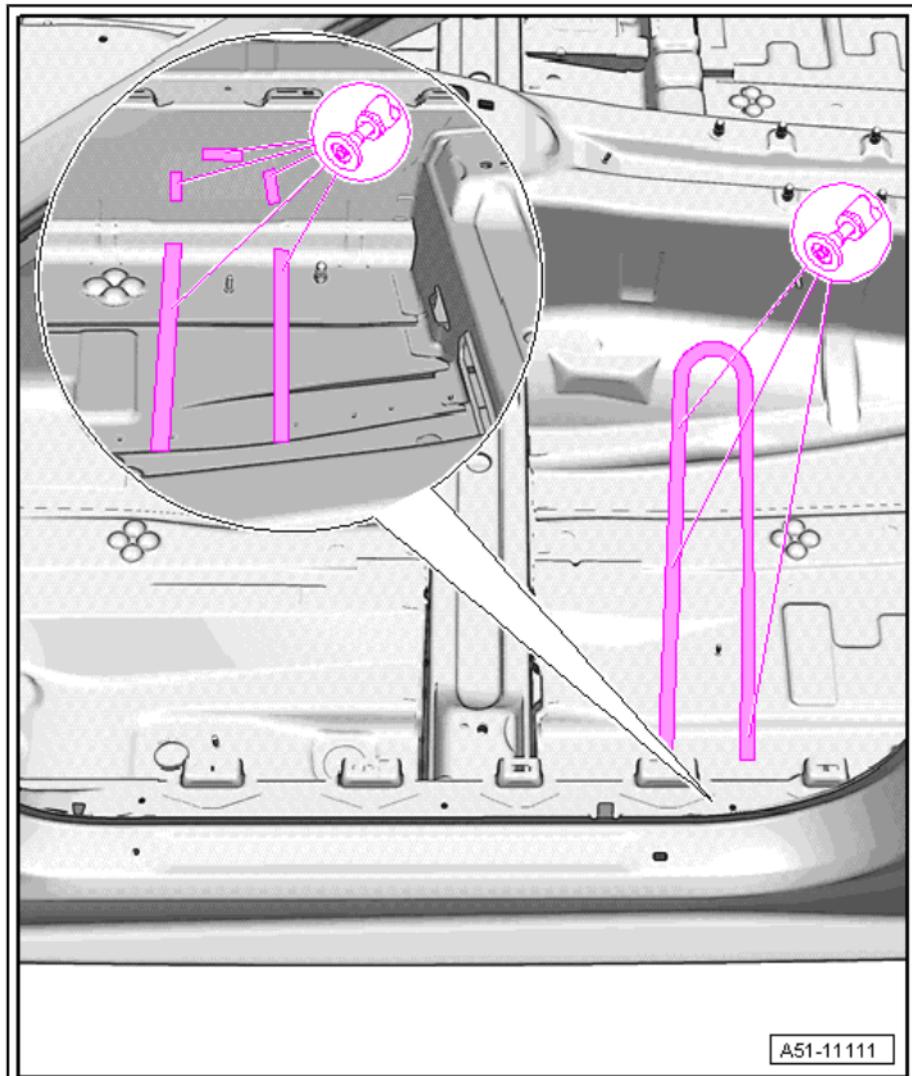

Preparing new part. Copying for private or commercial purposes, in part or in whole, is not permitted.
Drill holes for SG plug weld seam, 8 mm Ø using drill. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

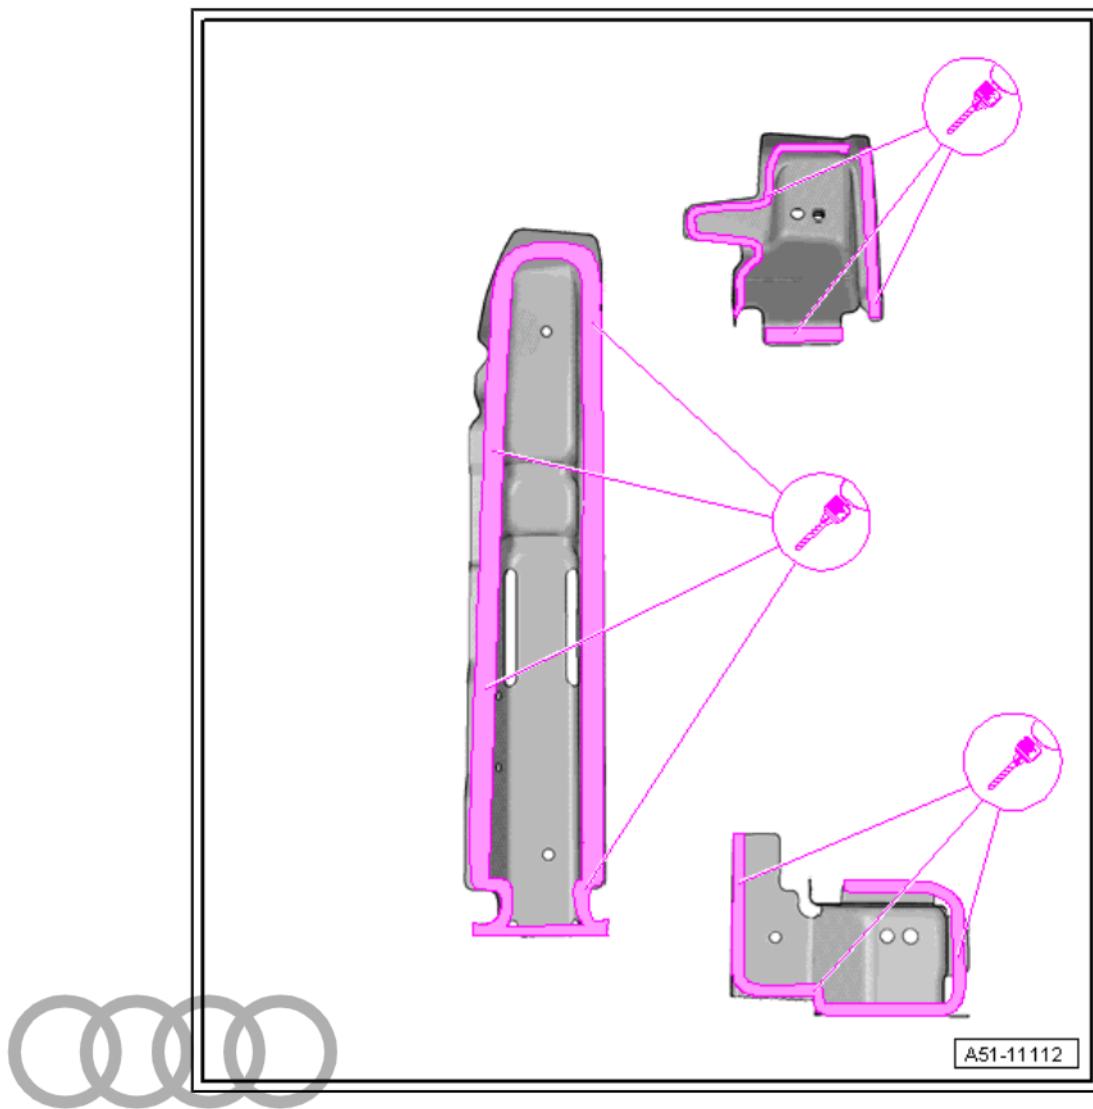


Welding in

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability

- Match up new parts and fix in position.
- Weld in seat cross member using shielded arc welding equipment : SG plug weld seam.




Protected by copyright. Copying
permitted unless authorised by AU
with respect to the correctness of

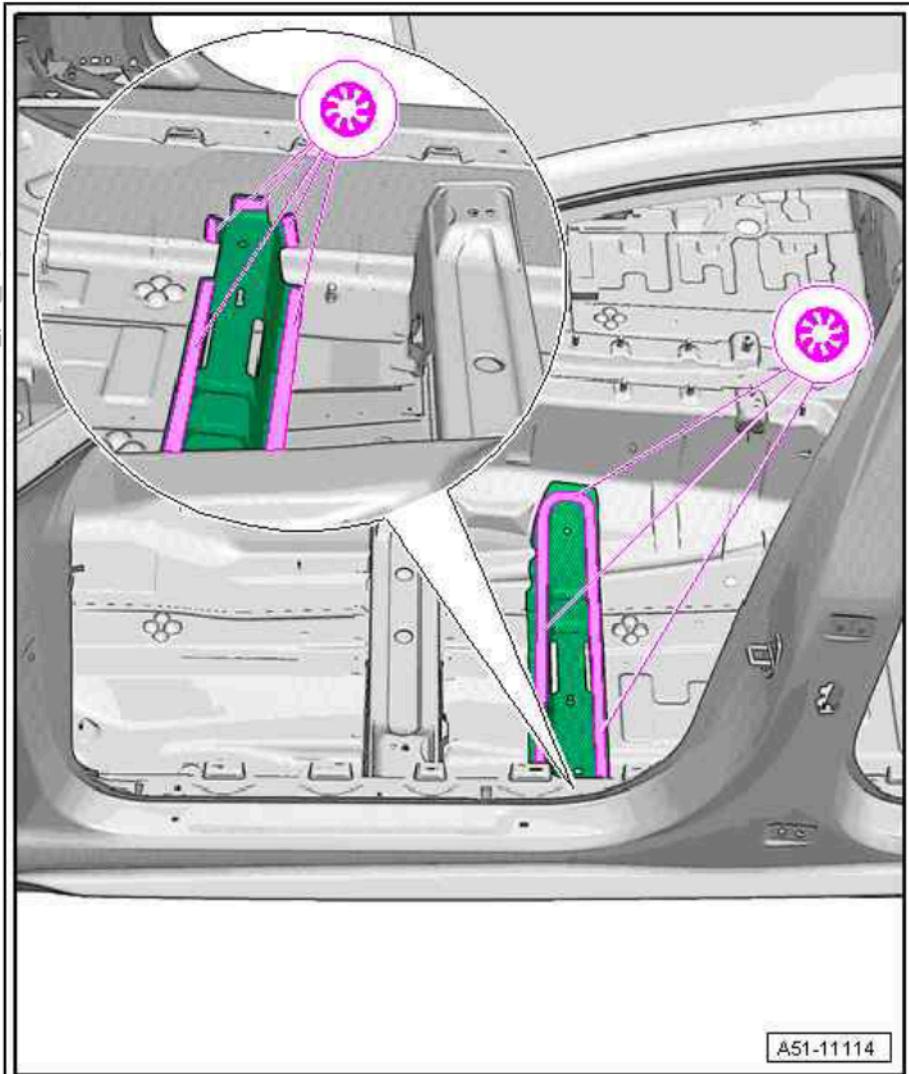

- Weld in reinforcement for seat cross member using shielded arc welding equipment : SG plug weld seam.



Protected by copyright. Copying
permitted unless authorised by Au
with respect to the correctness of

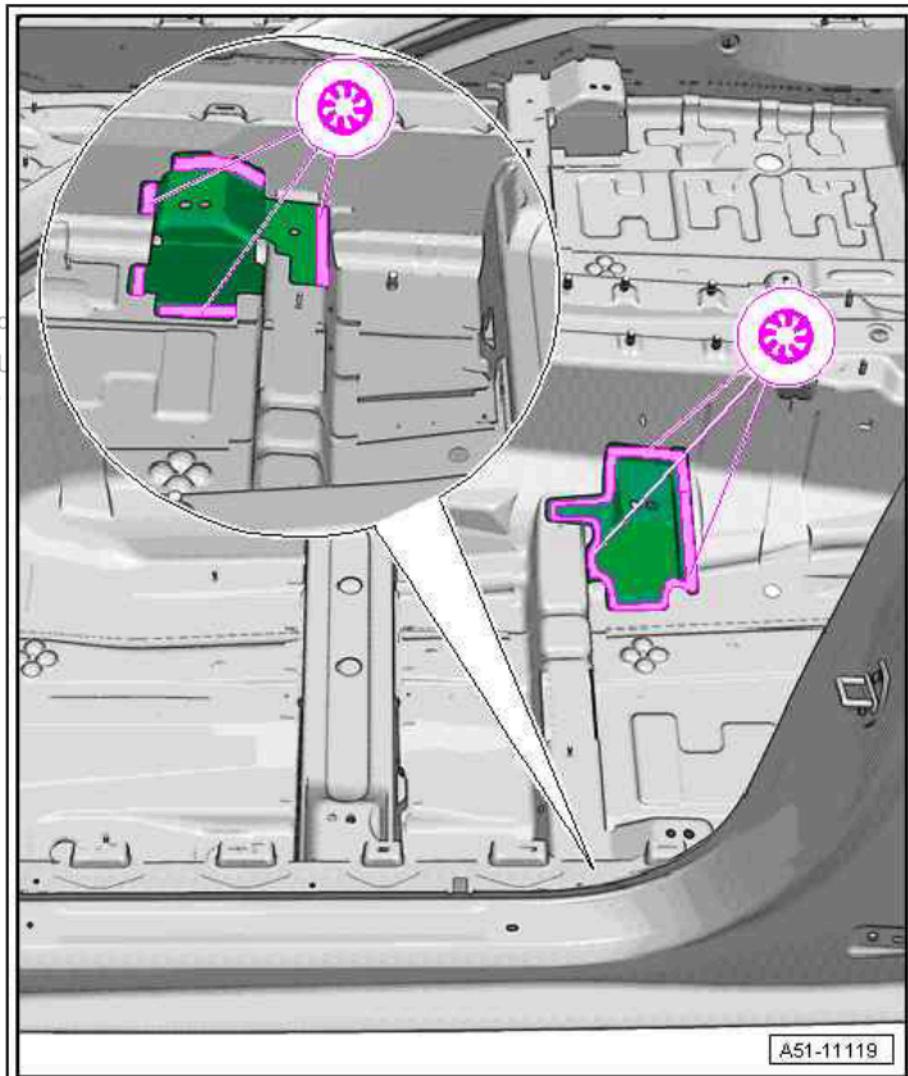


RO: 51 87 55 00

24 Seat cross member - Renewal

Saloon and Avant identical

- 1 - Floor panel
- 2 - Seat cross member
- 3 - Centre seat cross member

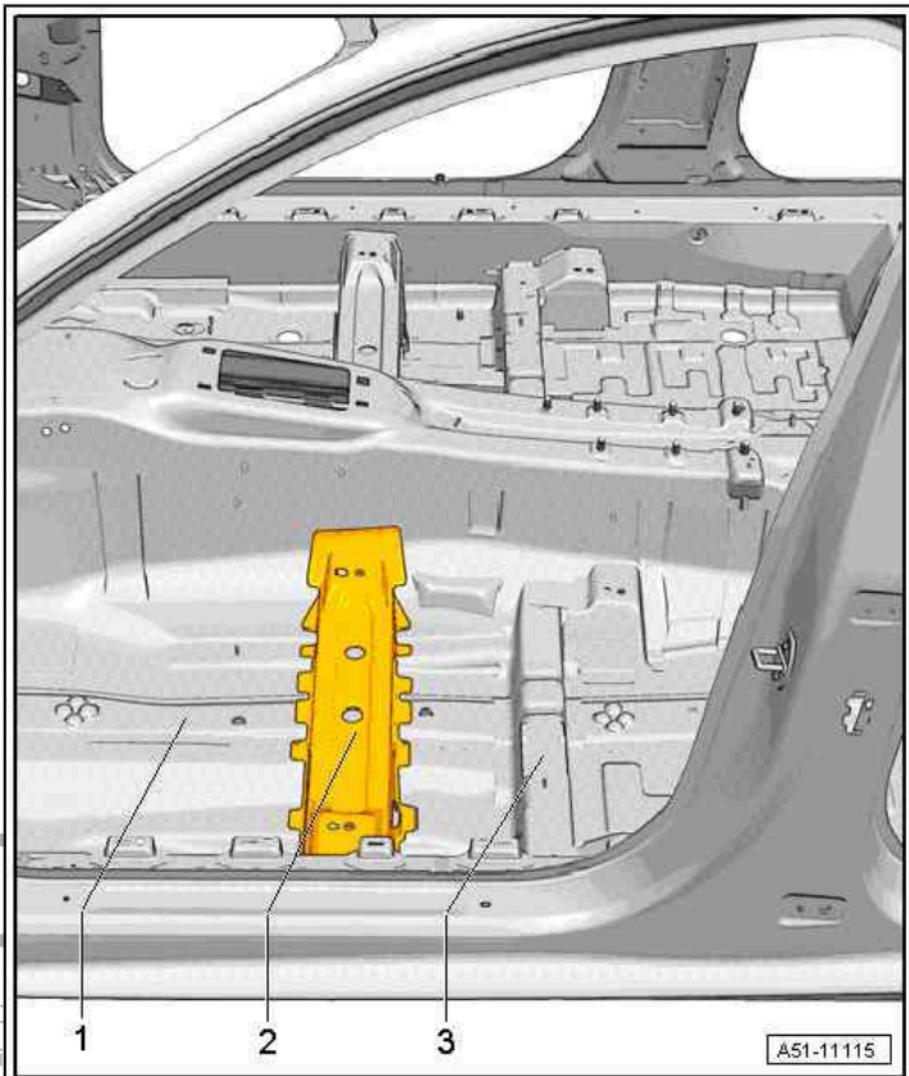

24.1 Notes for vehicles with hybrid drive

[⇒ page 5](#)

24.2 Tools

Special tools and workshop equipment required

- ◆ Resistance spot welder
- ◆ Shielded arc welding equipment
- ◆ Drill
- ◆ Body saw
- ◆ Spot weld breaker

Tools approved by AUDI AG must be used to ensure correct results when carrying out repair work [⇒ page 54](#).


24.3 Procedure




Cutting locations

- Separate original joint between inner seat cross member and floor panel using spot weld breaker.

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to third party rights of utilization in respect of information contained within this document.

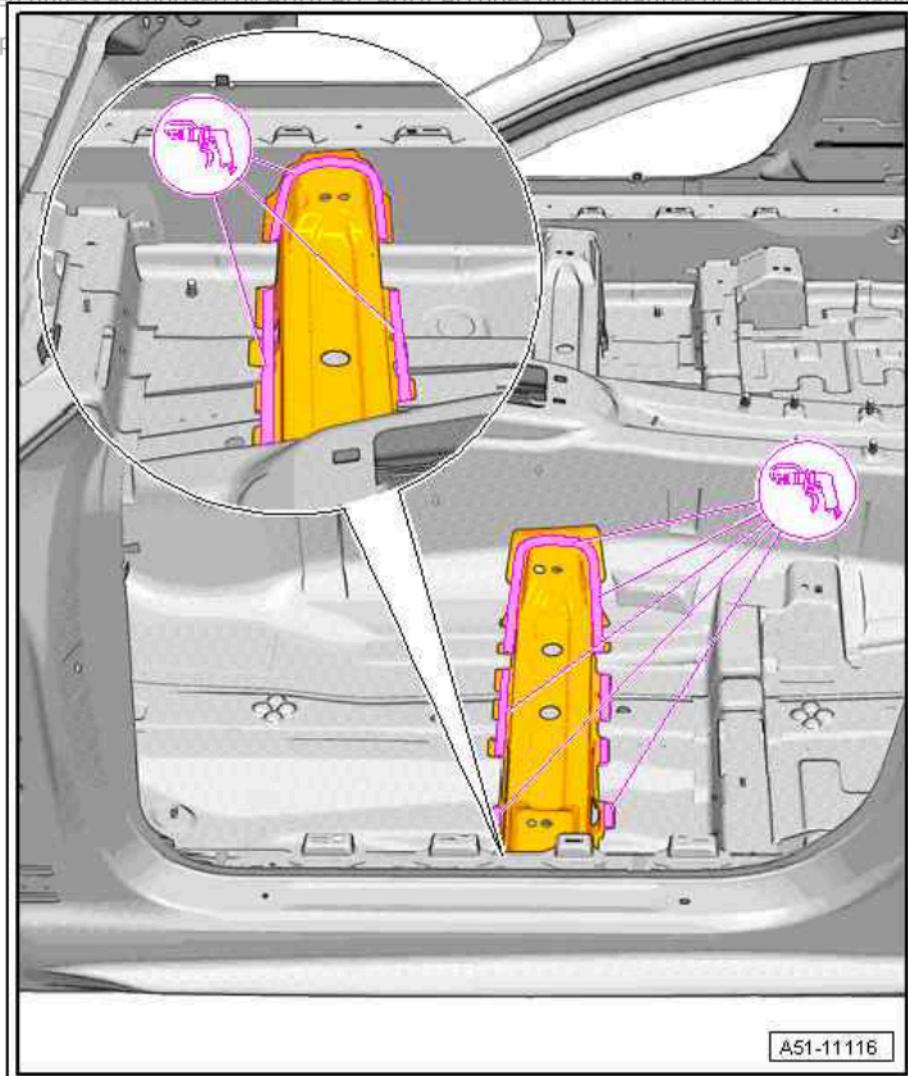

- Remove remaining material using compact angle grinder .

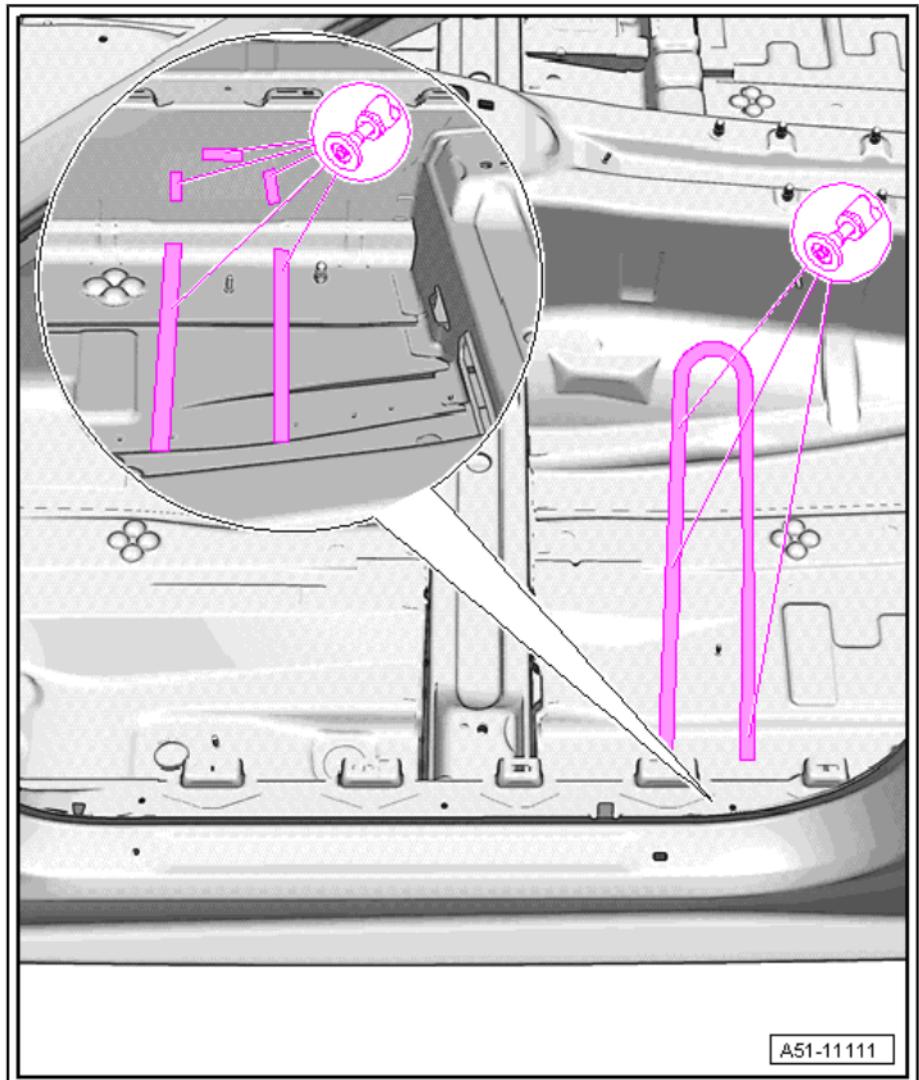

Replacement part

- ◆ **Seat cross member**


Preparing new part

- Drill holes for SG plug weld seam, 8 mm Ø using drill .

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

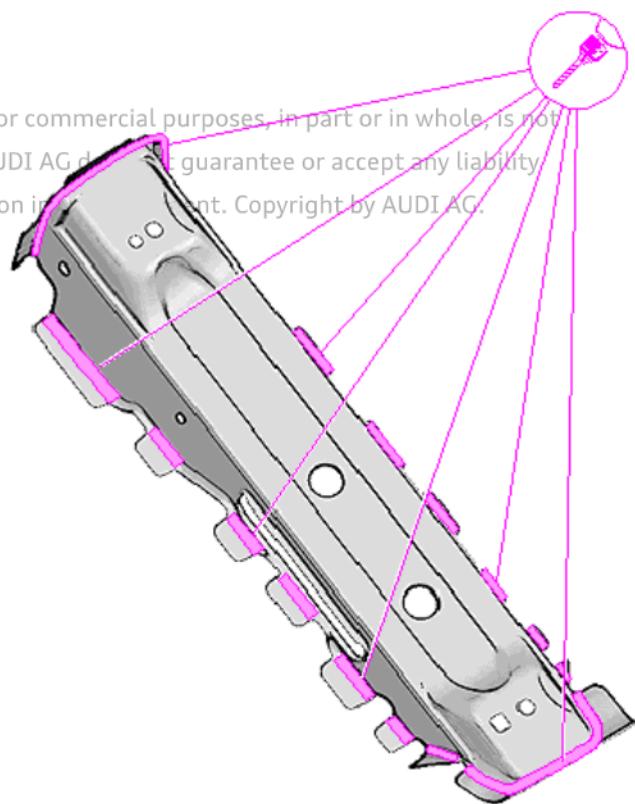


A51-11117

Welding in

- Match up new parts and fix in position.
- Weld in seat cross member using shielded arc welding equipment : SG plug weld seam.



Protected by copy
permitted unless a
with respect to the

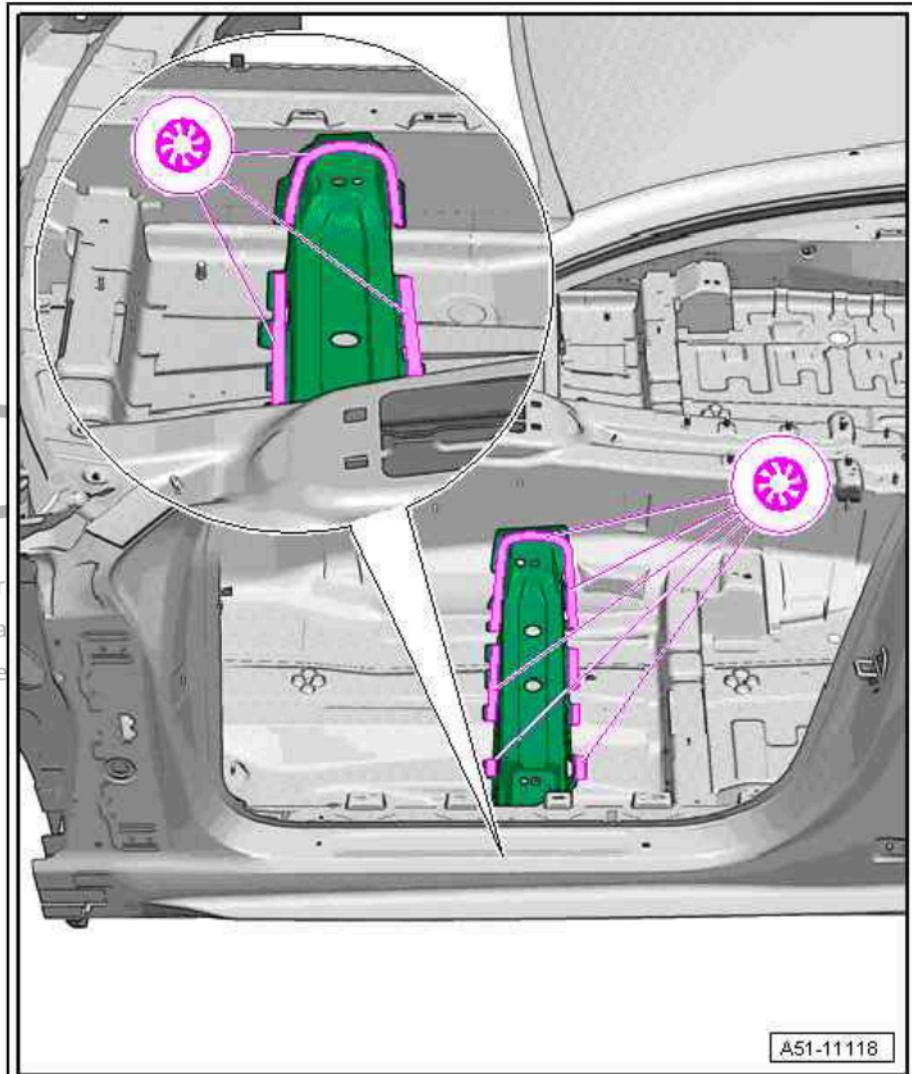

53 – Body - rear


1 Permitted separating cuts on complete side panel



Note

- ◆ Use only welding equipment approved by AUDI AG.
- ◆ SG continuous weld seams are approved for the separating cuts shown in the illustration.

Separating cuts (Saloon)

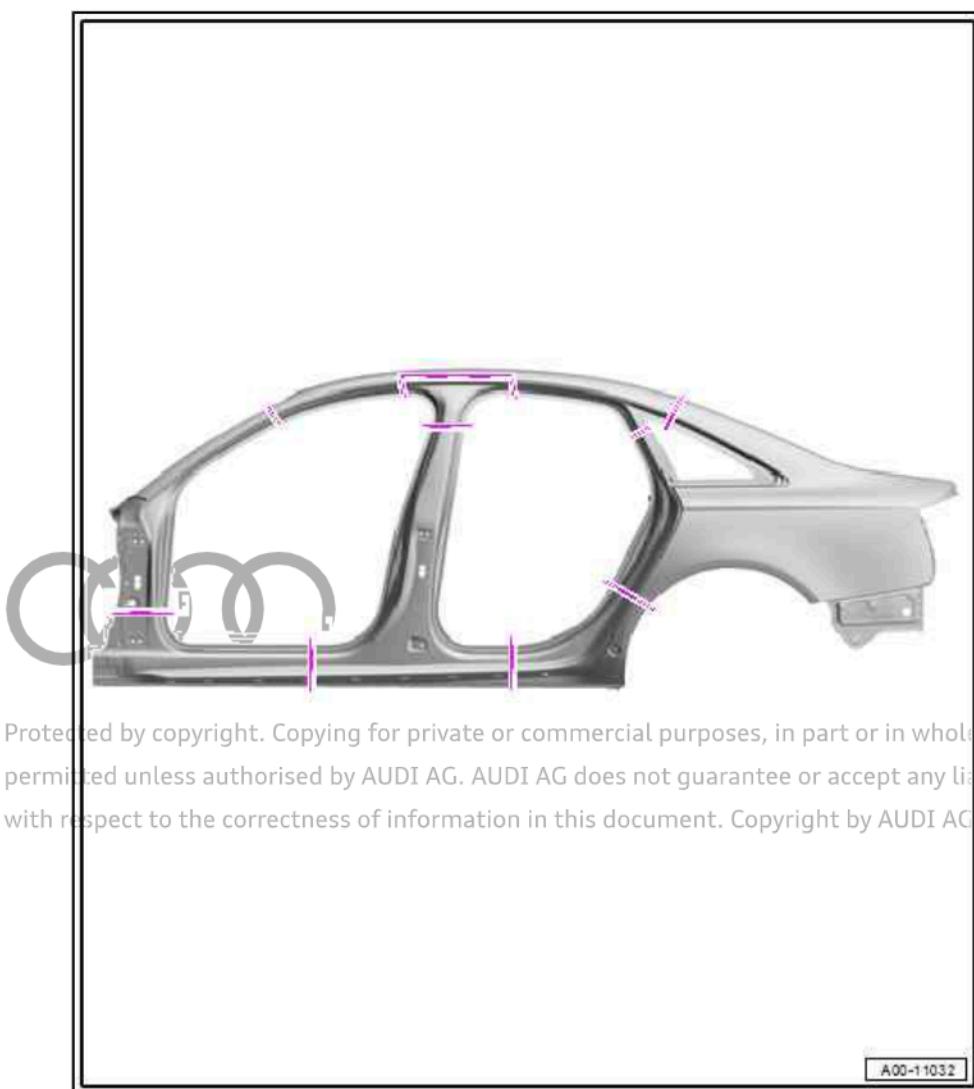


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

A00-11032

Separating cuts (Avant)



Protected by copyright. Copying for private commercial purposes, in part or in whole, is
permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability
with respect to the correctness of the information in this document. Copyright by

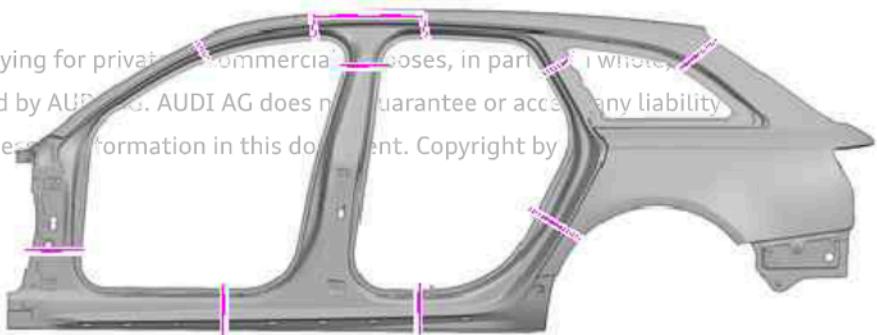

A00-11031

RO: 53 16 55 02

2 Rear upper cross panel - Renewal

1 - Rear upper cross panel

2 - Lower cross panel

3 - Rear cross panel separating cut




Note



Partial renewal is possible by separating cuts illustrated.

Protected by copyright.
permitted unless
with respect to

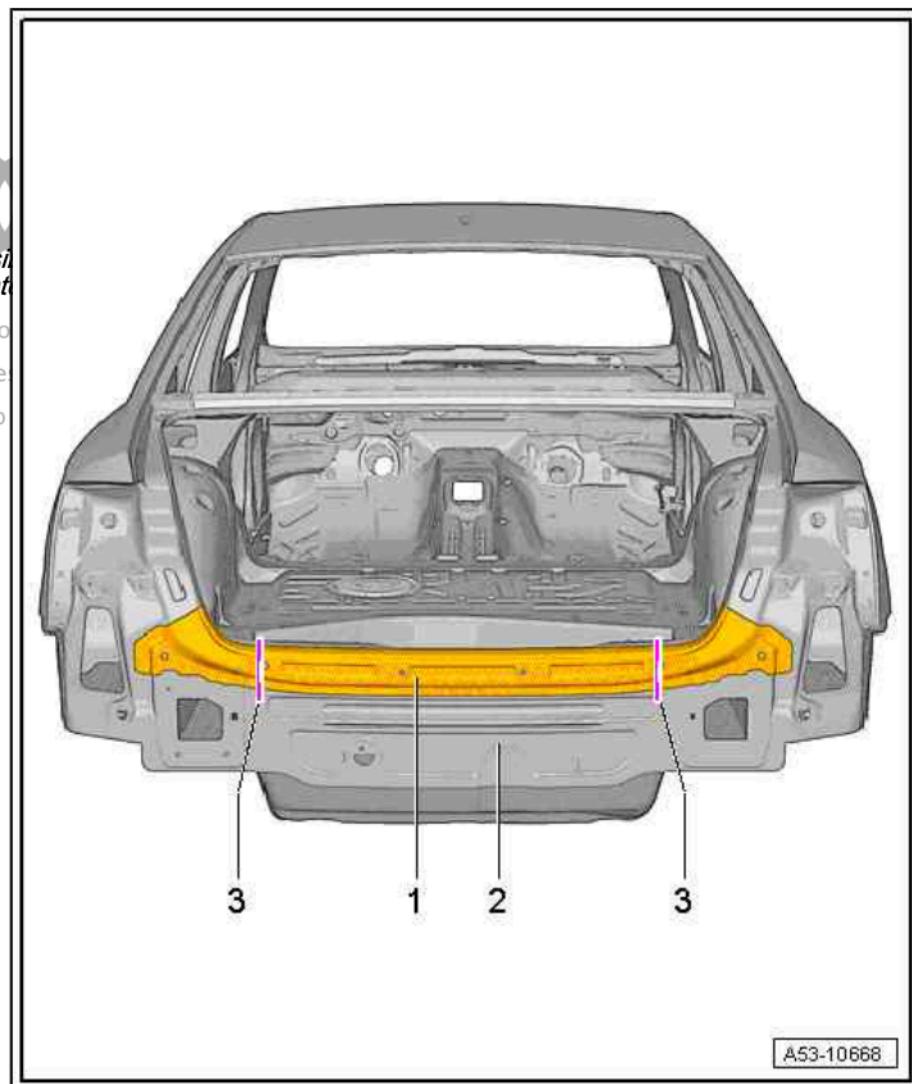

A53-10668

2.1 Notes for vehicles with hybrid drive

[⇒ page 5](#)

2.2 Tools

Special tools and workshop equipment required



- ◆ Resistance spot welder
- ◆ Drill
- ◆ Compact angle grinder
- ◆ Spot weld breaker

Tools approved by AUDI AG must be used to ensure correct results when carrying out repair work [⇒ page 54](#).

2.3 Procedure

Cutting locations

- Separate original joint using spot weld breaker .

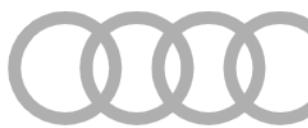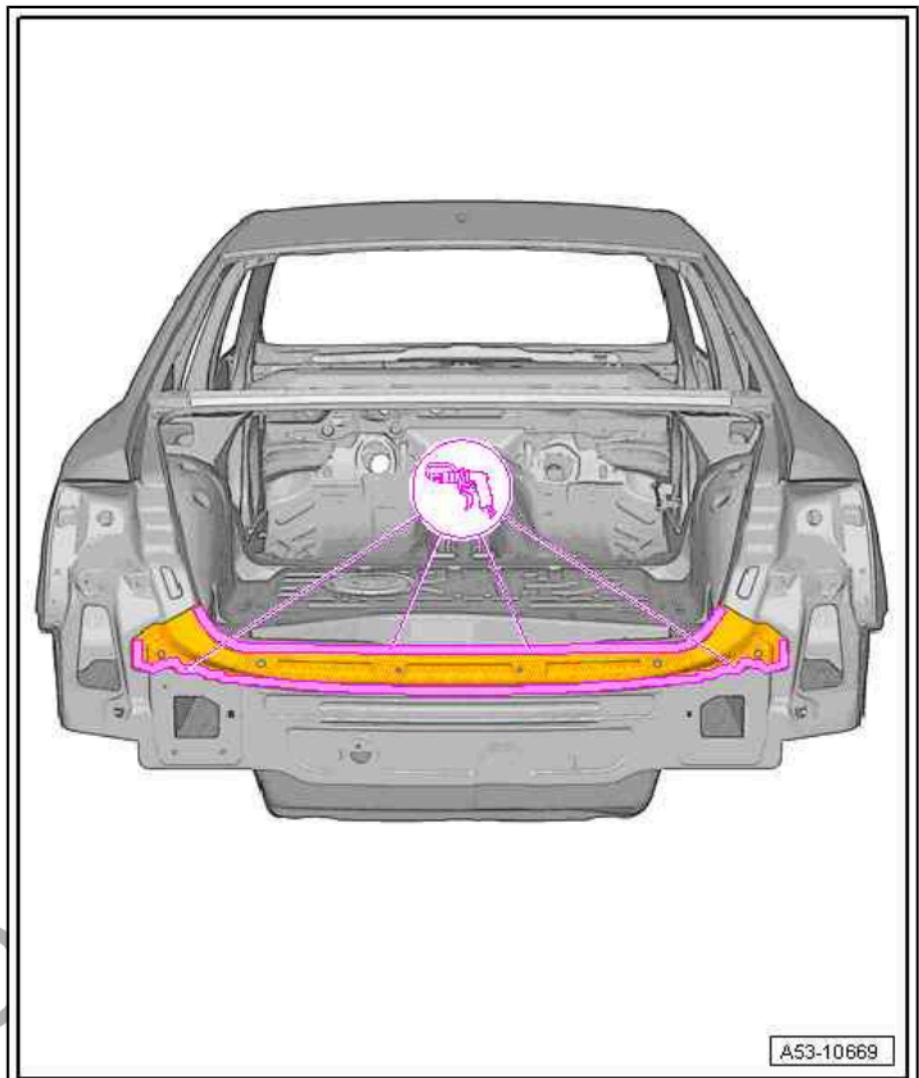


A53-10669

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not

- permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.



Protected by copyright. Copying
permitted unless authorised by A
with respect to the correctness o

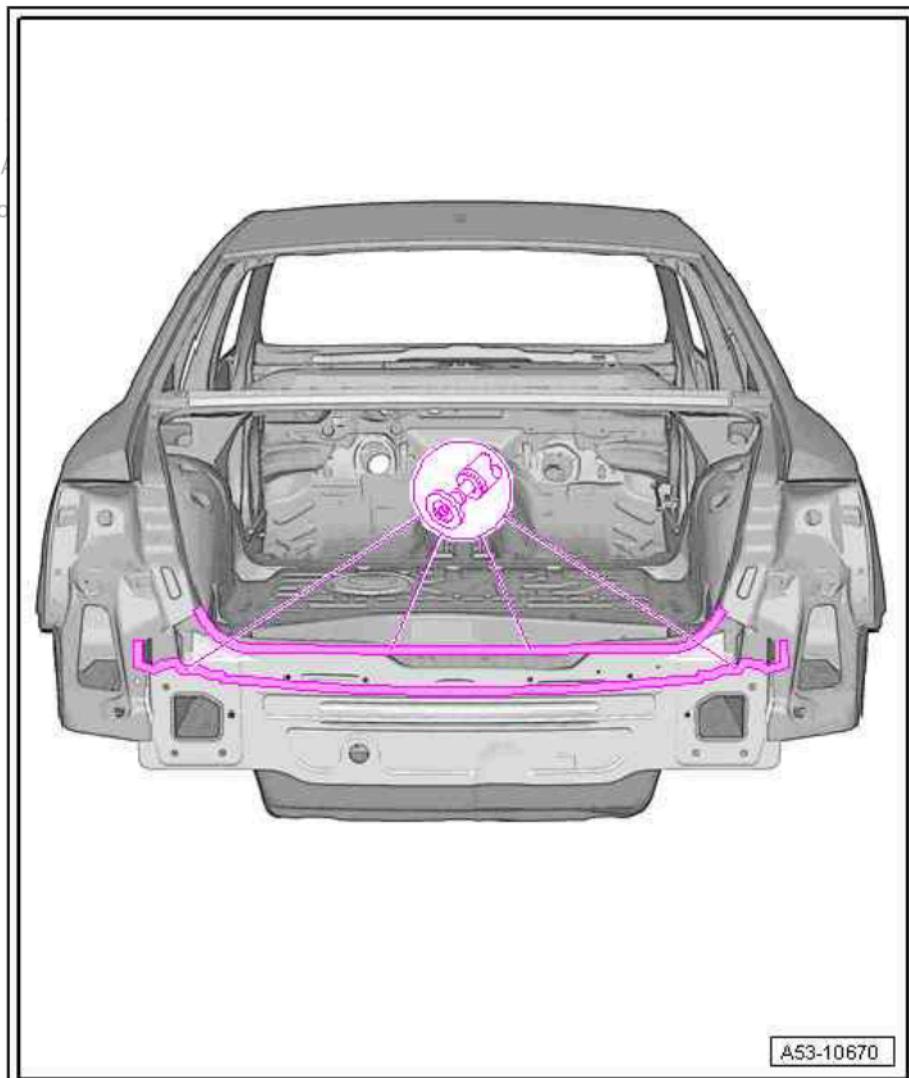

Replacement part

- ◆ Rear upper cross panel




Note


*Due to the different types of steel and panel thicknesses em-
ployed, one of the resistance spot welding units listed in this
manual and approved by Audi must be used to ensure correct
results when spot welding.*

Welding in

- Weld in cross panel using resistance spot welder : RP spot weld seam.

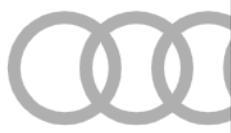

Protected by copyright
permitted unless au
with respect to the c

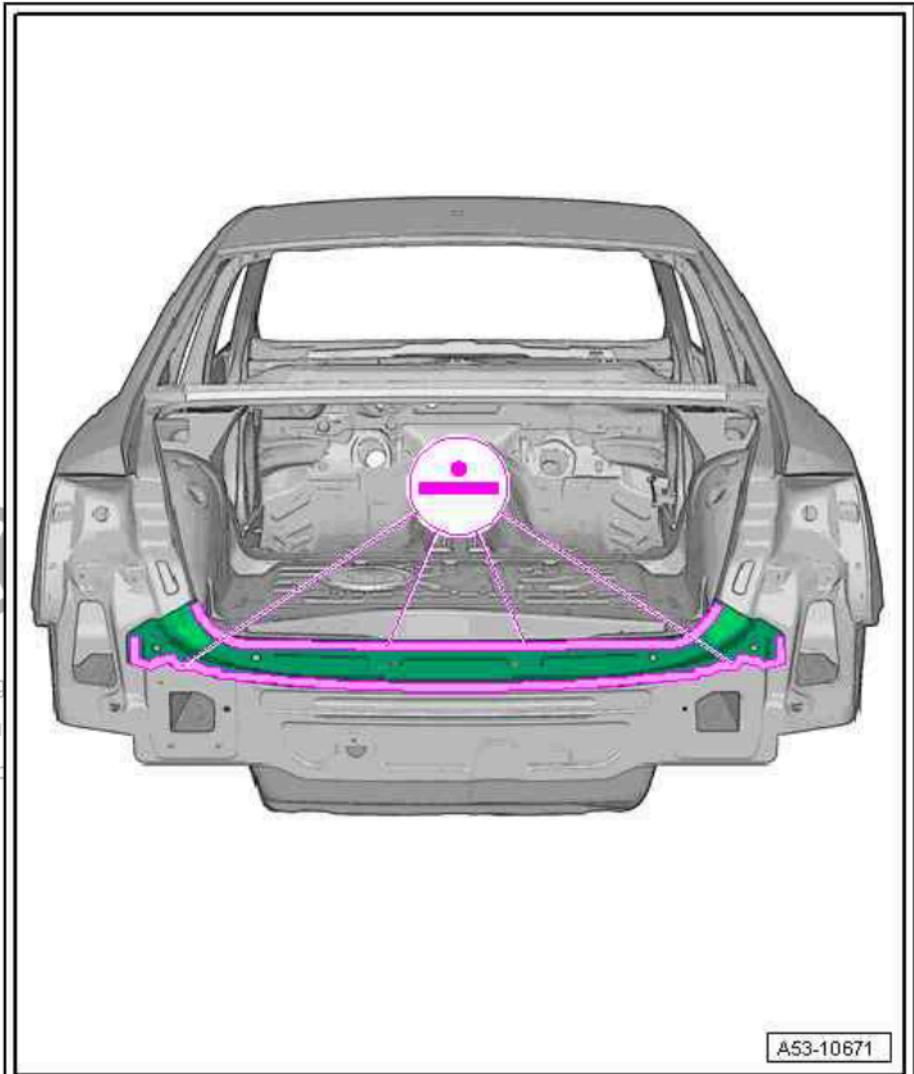

RO: 53 09 55 50

3 Rear cross panel - Renewal

1 - Tail light mounting (left and right)


2 - Cross panel

3 - Separating cuts in cross panel



Note

Partial renewal is possible by separating cuts illustrated.

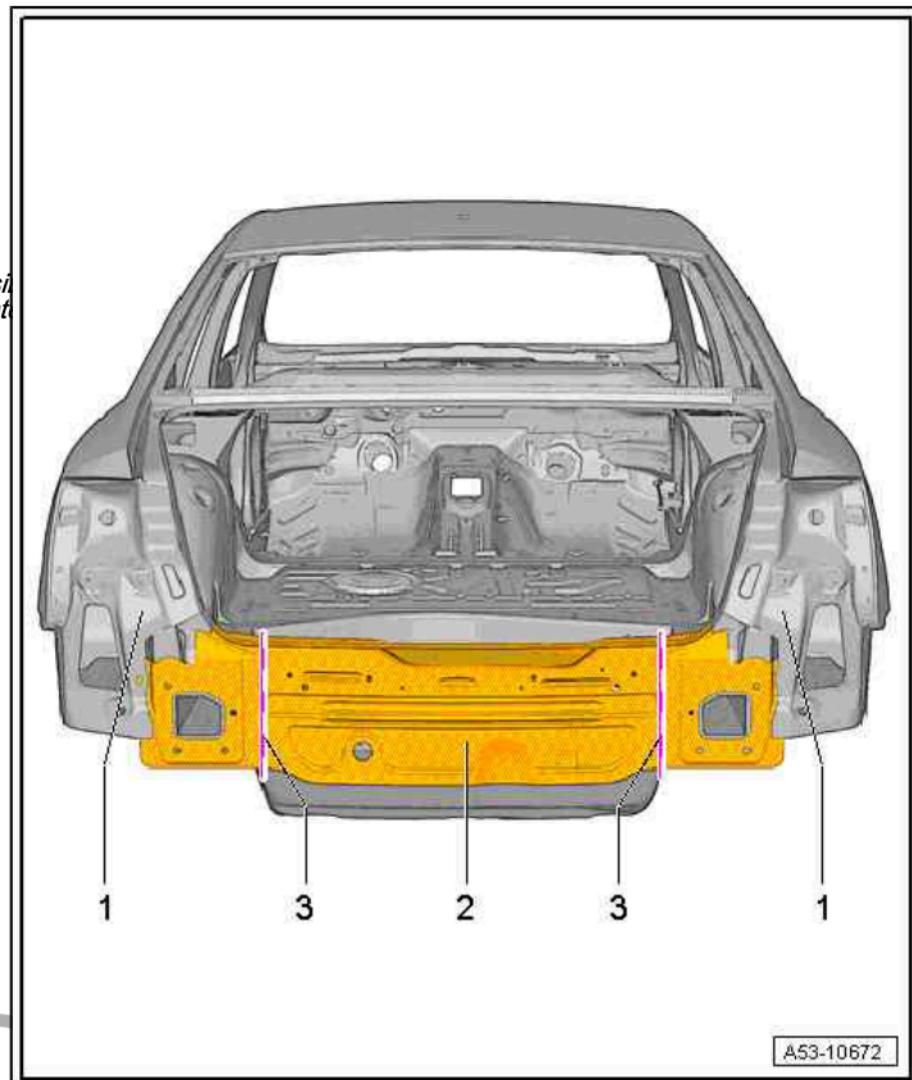

3.1 Notes for vehicles with hybrid drive

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability

3.2 Tools
With respect to the correctness of information in this document. Copyright by AUDI AG.

Special tools and workshop equipment required

- ◆ Resistance spot welder
- ◆ Drill
- ◆ Compact angle grinder
- ◆ Spot weld breaker

Tools approved by AUDI AG must be used to ensure correct results when carrying out repair work [⇒ page 54](#).

3.3 Procedure


- Upper cross panel removed [⇒ page 332](#)

Cutting locations


- Separate original joint using spot weld breaker .



Protected by copyright. Copying
permitted unless authorised by
with respect to the correctness

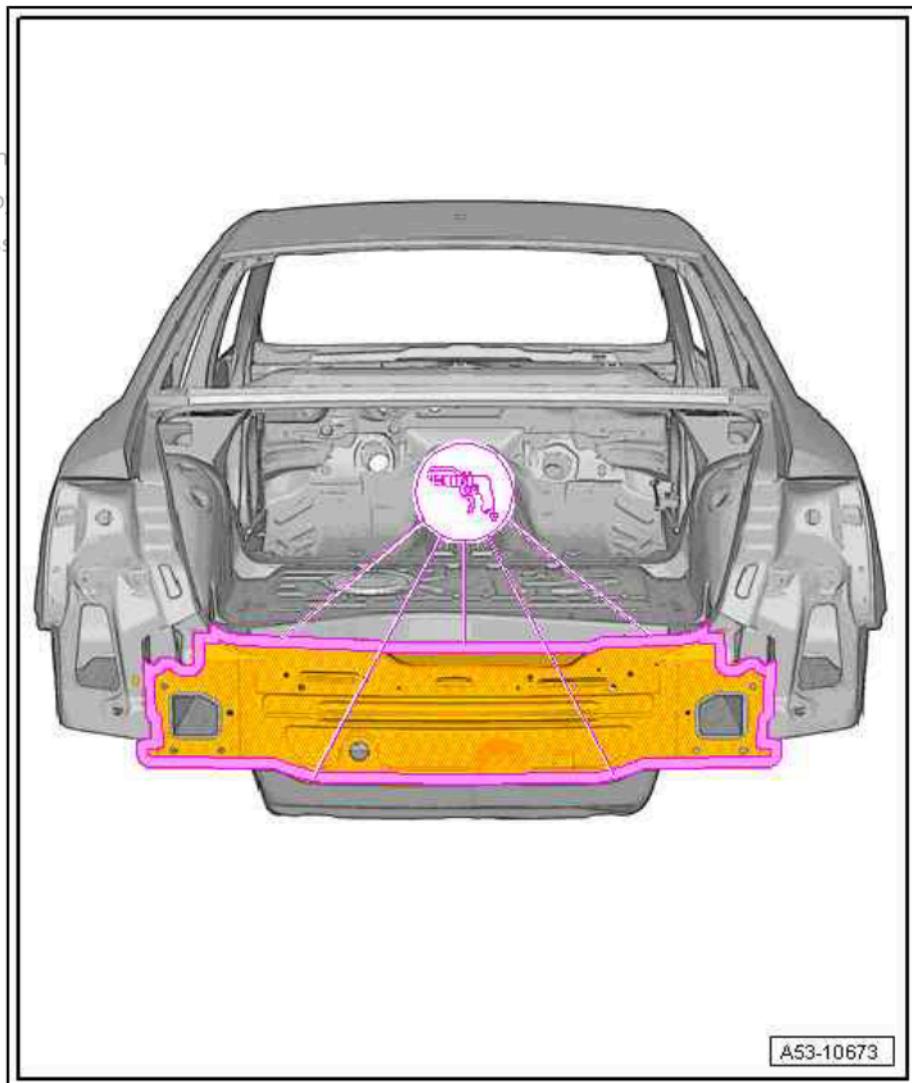

- Remove remaining material using compact angle grinder .

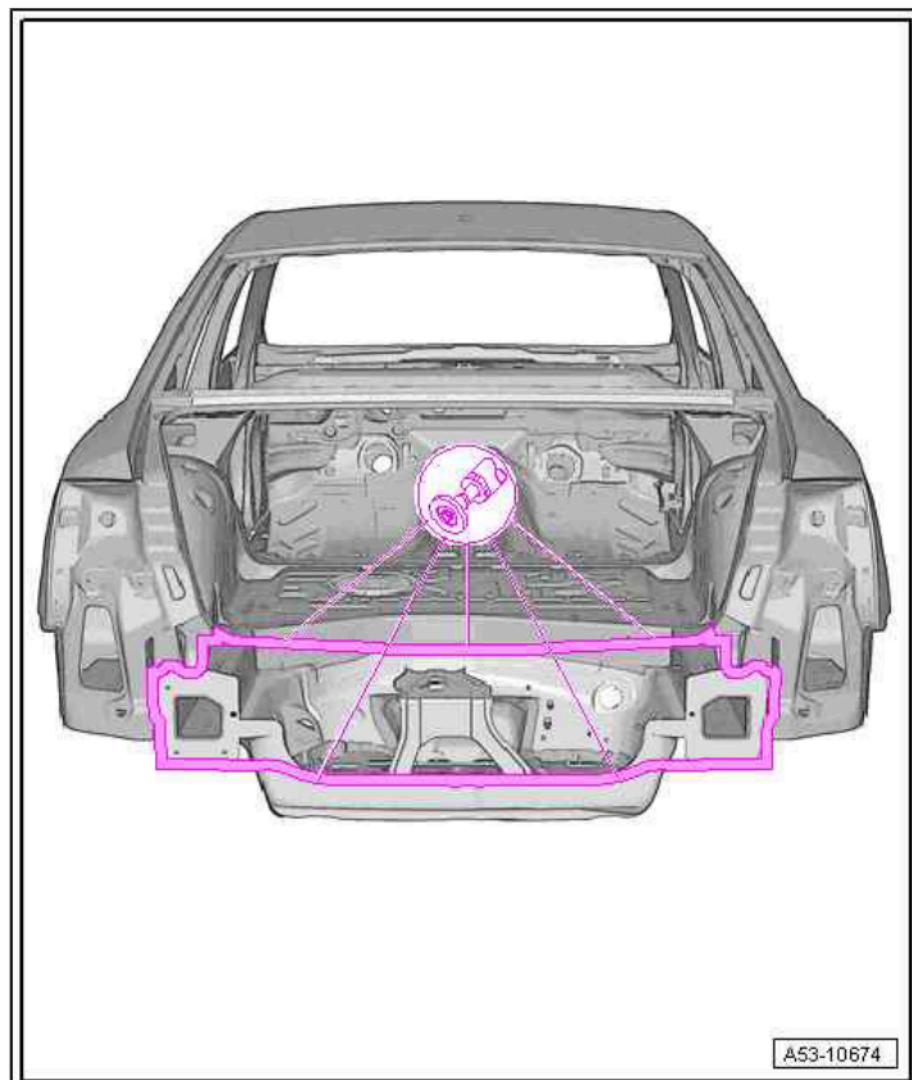

Replacement part

- ◆ Rear cross panel




Note

Due to the different types of steel and panel thicknesses employed, one of the resistance spot welding units listed in this manual and approved by Audi must be used to ensure correct results when spot welding.

Welding in

- Weld in cross panel using resistance spot welder : RP spot weld seam.
- Weld in new part at tail light mountings using shielded arc welding equipment : SG plug weld seam.

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

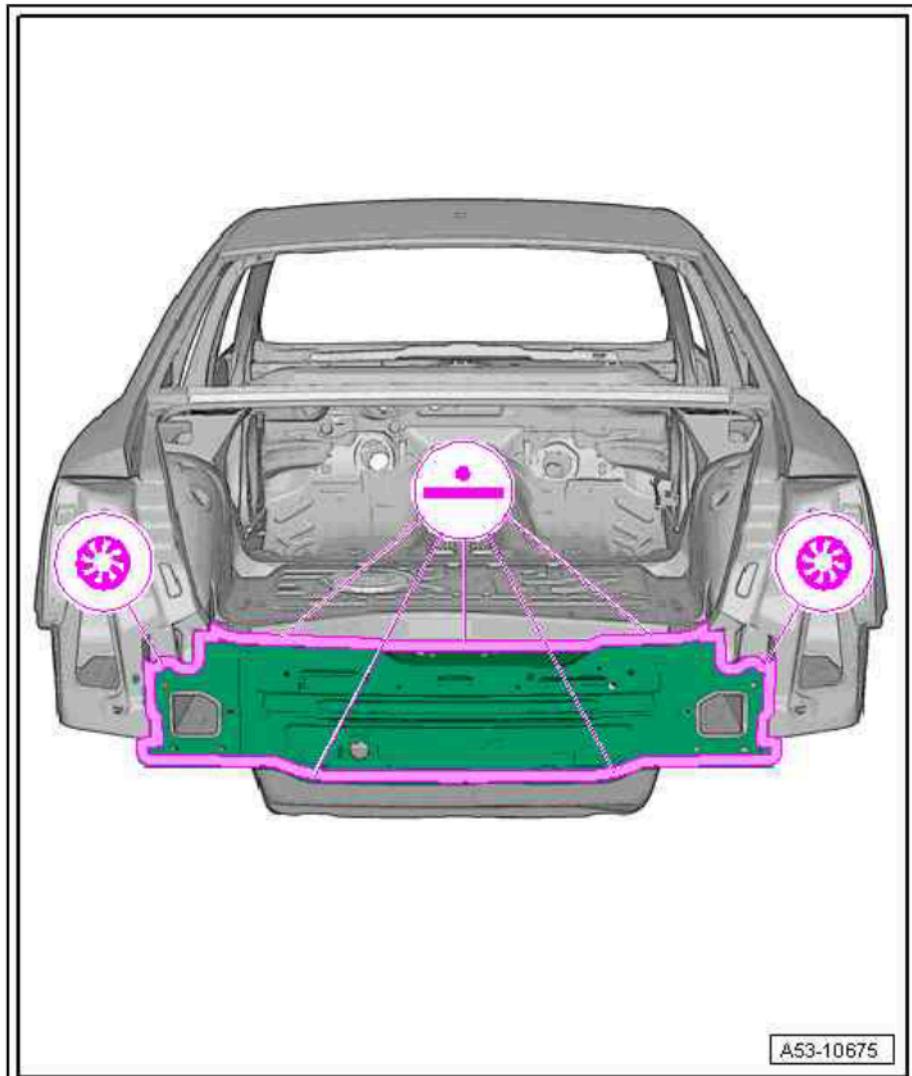

- Welding in rear upper cross panel [⇒ page 332](#)



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

RO: 53 09 55 50

4 Rear cross panel - Renewal (Avant)

- 1 - Tail light mounting (left and right)
- 2 - Cross panel
- 3 - Spare wheel well
- 4 - Rear cross panel separating cut




Note

Partial renewal is possible by separating cuts illustrated.



Protected by copyright. Copying permitted unless authorised with respect to the correct

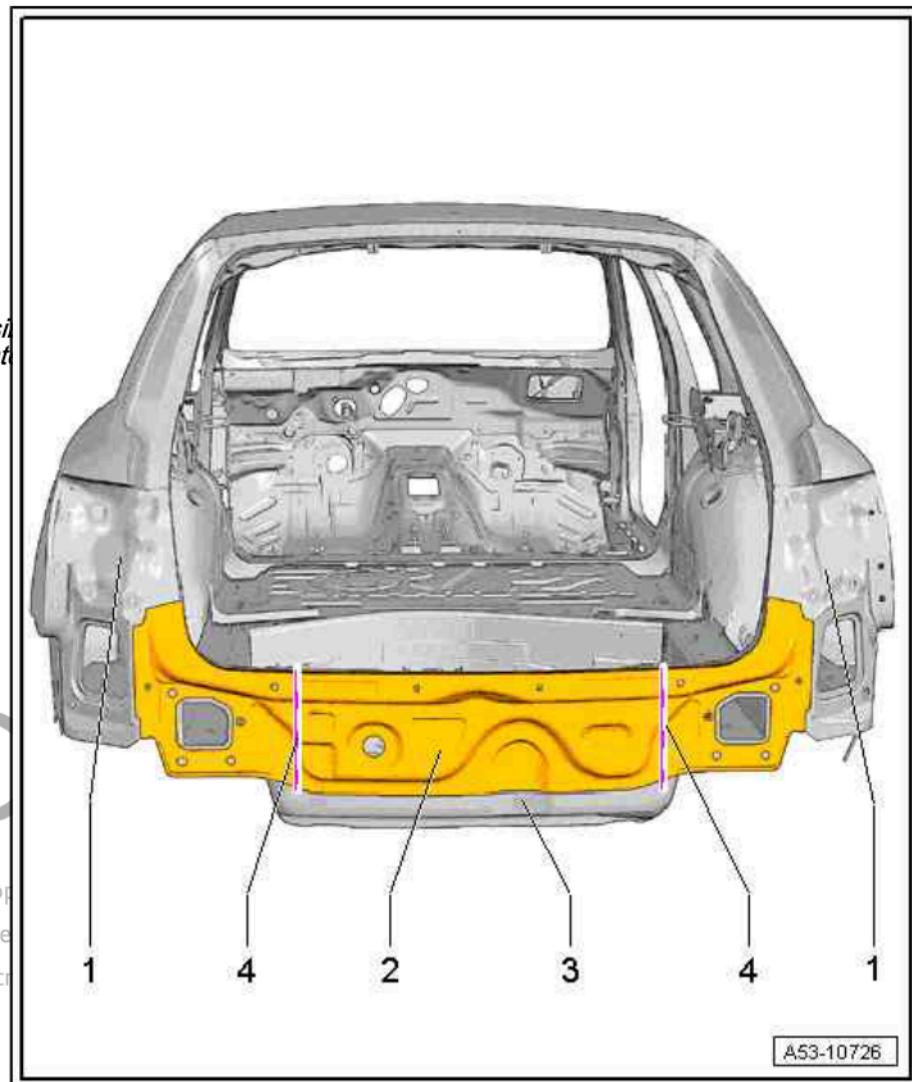

A53-10726

4.1 Notes for vehicles with hybrid drive

[⇒ page 5](#)

4.2 Tools

Special tools and workshop equipment required

- ◆ Resistance spot welder
- ◆ Drill
- ◆ Compact angle grinder
- ◆ Spot weld breaker

Tools approved by AUDI AG must be used to ensure correct results when carrying out repair work [⇒ page 54](#).

4.3 Procedure


- Upper cross panel removed [⇒ page 332](#)



Cutting locations

- Separate original joint using spot weld breaker .

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

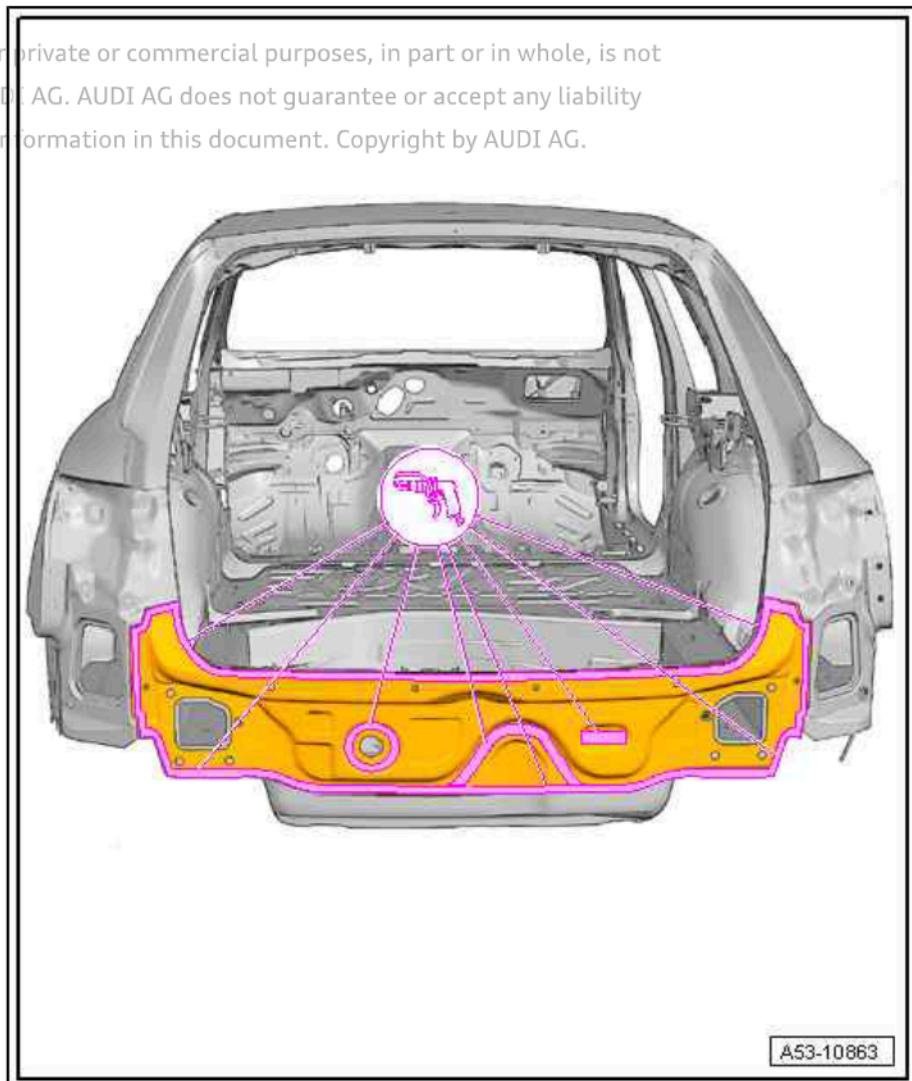


A53-10863

- Remove remaining material using compact angle grinder .



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

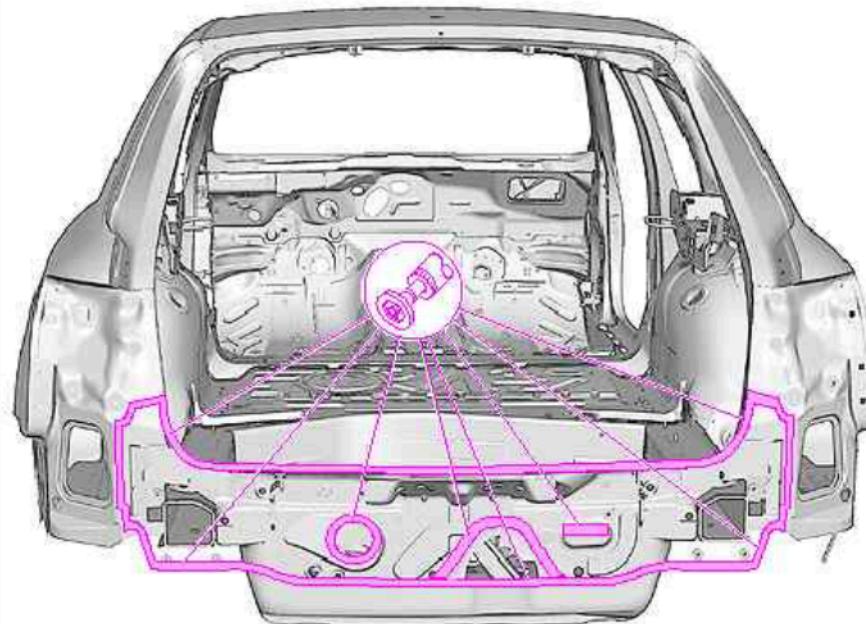

A53-10864

Replacement part

- ◆ Rear cross panel



Note


Due to the different types of steel and panel thicknesses employed, one of the resistance spot welding units listed in this manual and approved by Audi must be used to ensure correct results when spot welding.

Welding in

- Weld in cross panel using resistance spot welder : RP spot weld seam.



Protected by copyright. Copying
permitted unless authorised by
with respect to the correctness of the

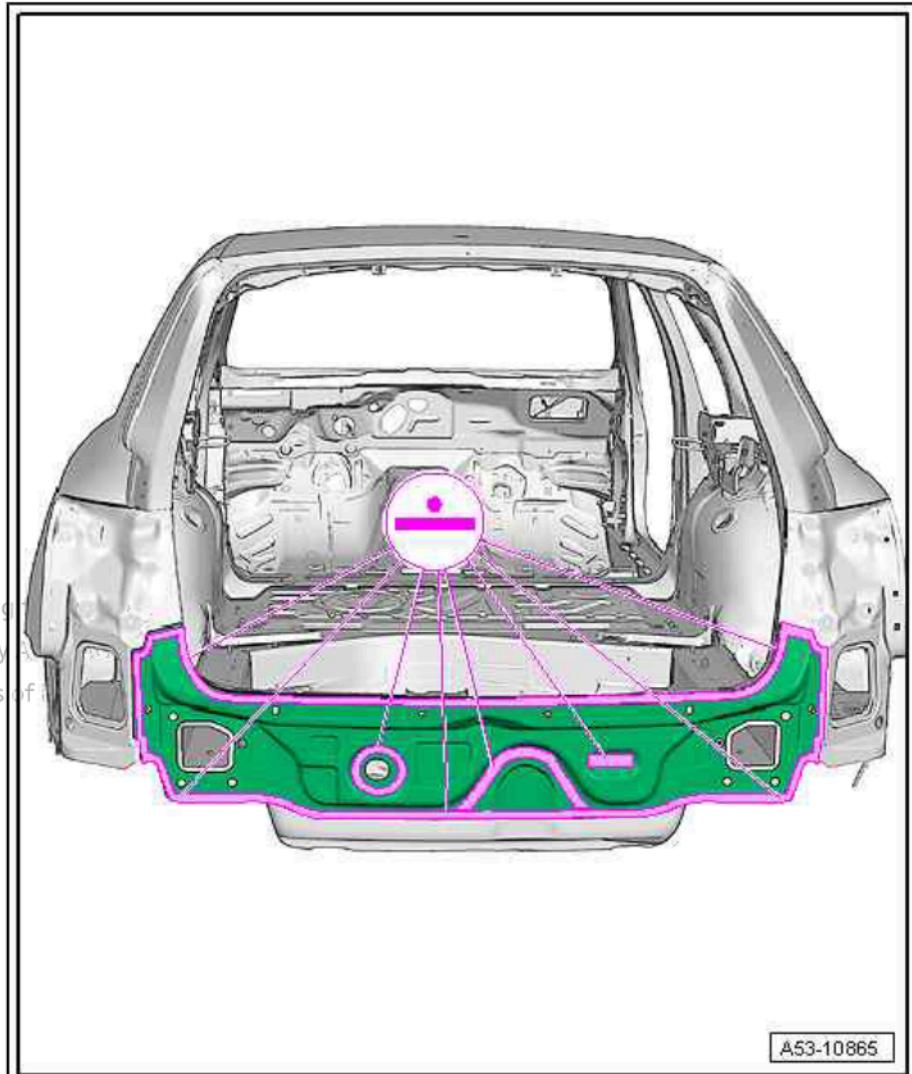


- Weld in upper cross panel [⇒ page 332](#).

RO: 53 09 55 50

5 Cross panel - Renewal (Avant)

1 - Tail light mounting (left and right)
2 - Cross panel reinforcement
3 - Spare wheel well

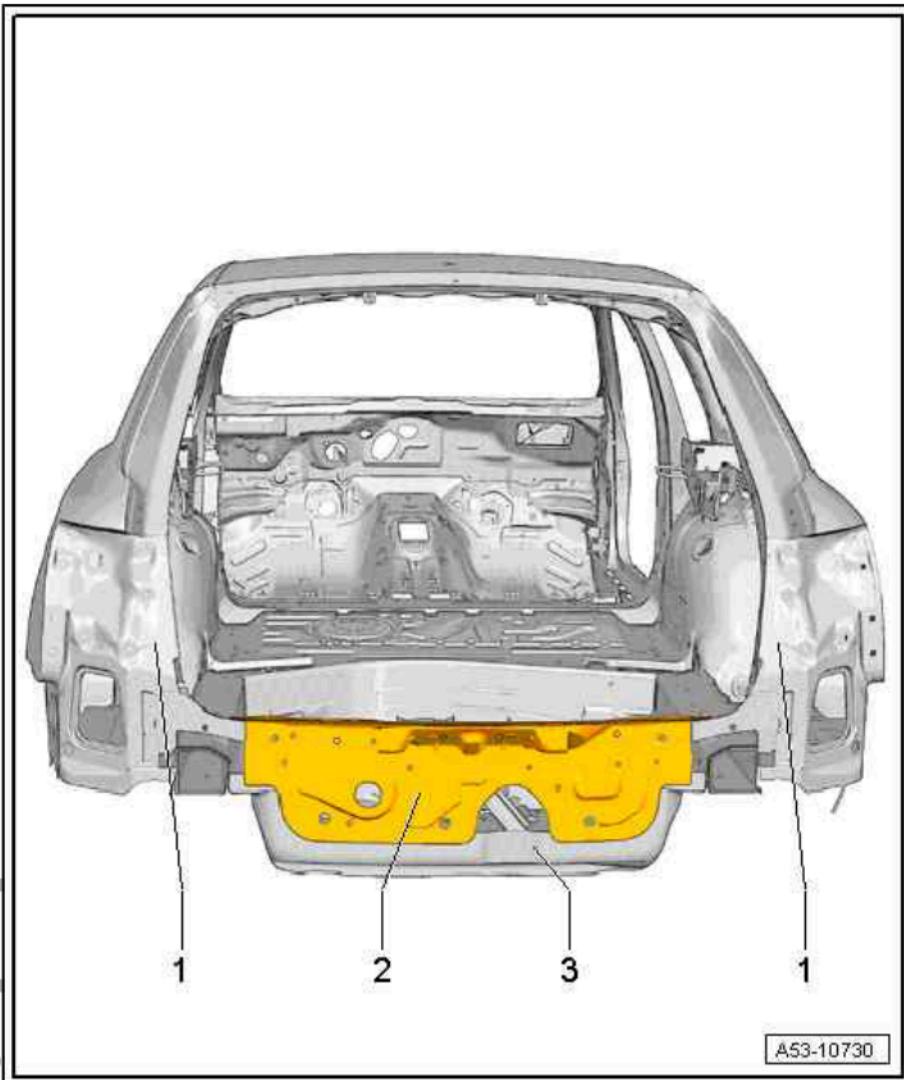

A53-10730

Protected b

permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability
with respect to the correctness of information in this document. Copyright by AUDI AG.

5.1 Notes for vehicles with hybrid drive

[⇒ page 5](#)

5.2 Tools

Special tools and workshop equipment required

- ◆ Resistance spot welder
- ◆ Drill
- ◆ Compact angle grinder
- ◆ Spot weld breaker

Tools approved by AUDI AG must be used to ensure correct results when carrying out repair work [⇒ page 54](#).

5.3 Procedure


- Upper cross panel removed [⇒ page 332](#)

Cutting locations


- Separate original joint using spot weld breaker .



Protected by copyright.
Copying and further distribution
is prohibited without the
prior written consent of AUDI AG.
with respect to the

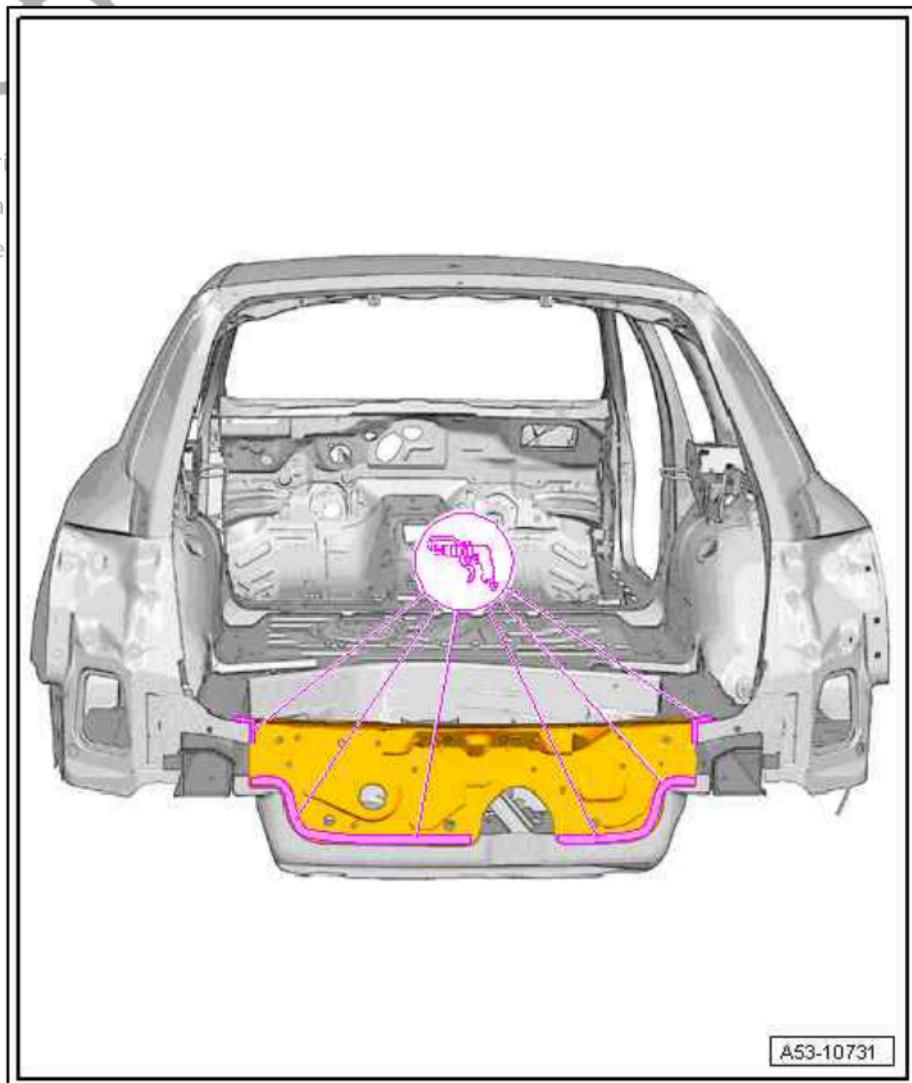

- Remove remaining material using compact angle grinder .

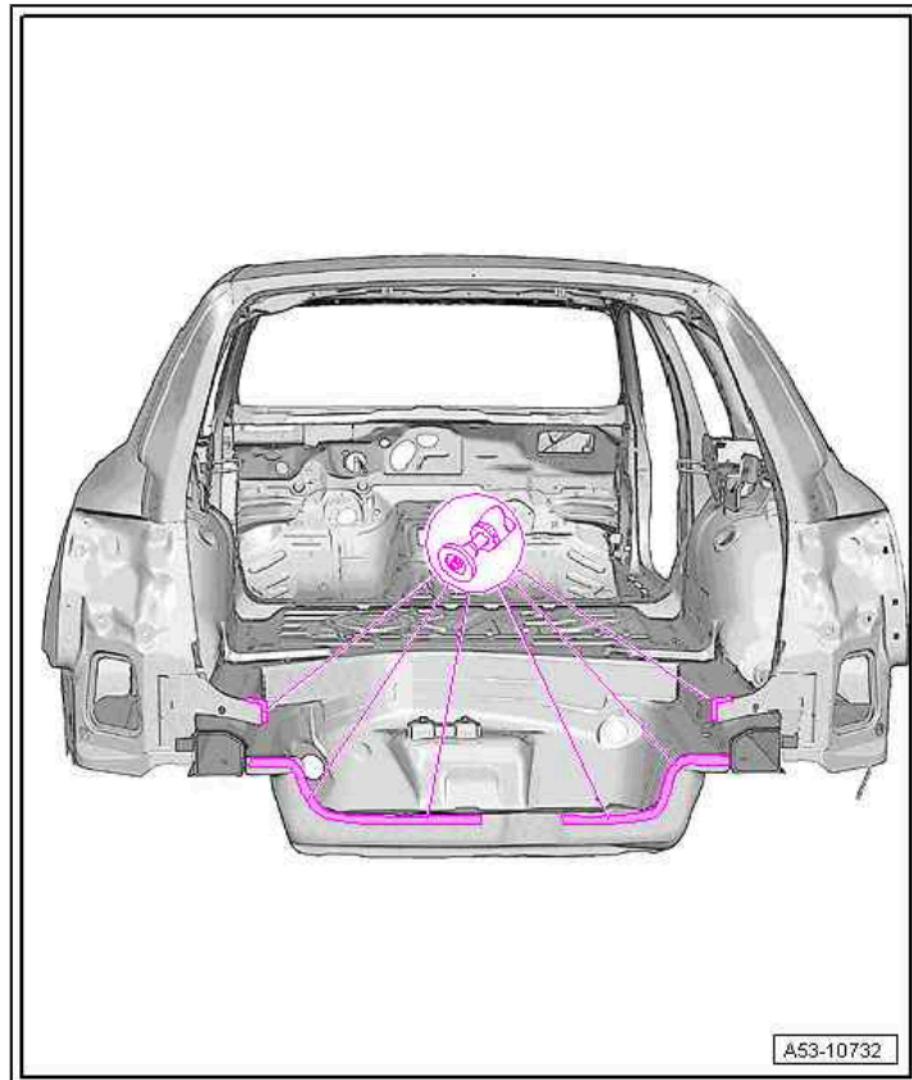

Replacement part

- ◆ Rear cross panel



Note

Due to the different types of steel and panel thicknesses employed, one of the resistance spot welding units listed in this manual and approved by Audi must be used to ensure correct results when spot welding.

Welding in


- Weld in cross panel using resistance spot welder : RP spot weld seam.



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.



Protected by
permitted un
with respect to

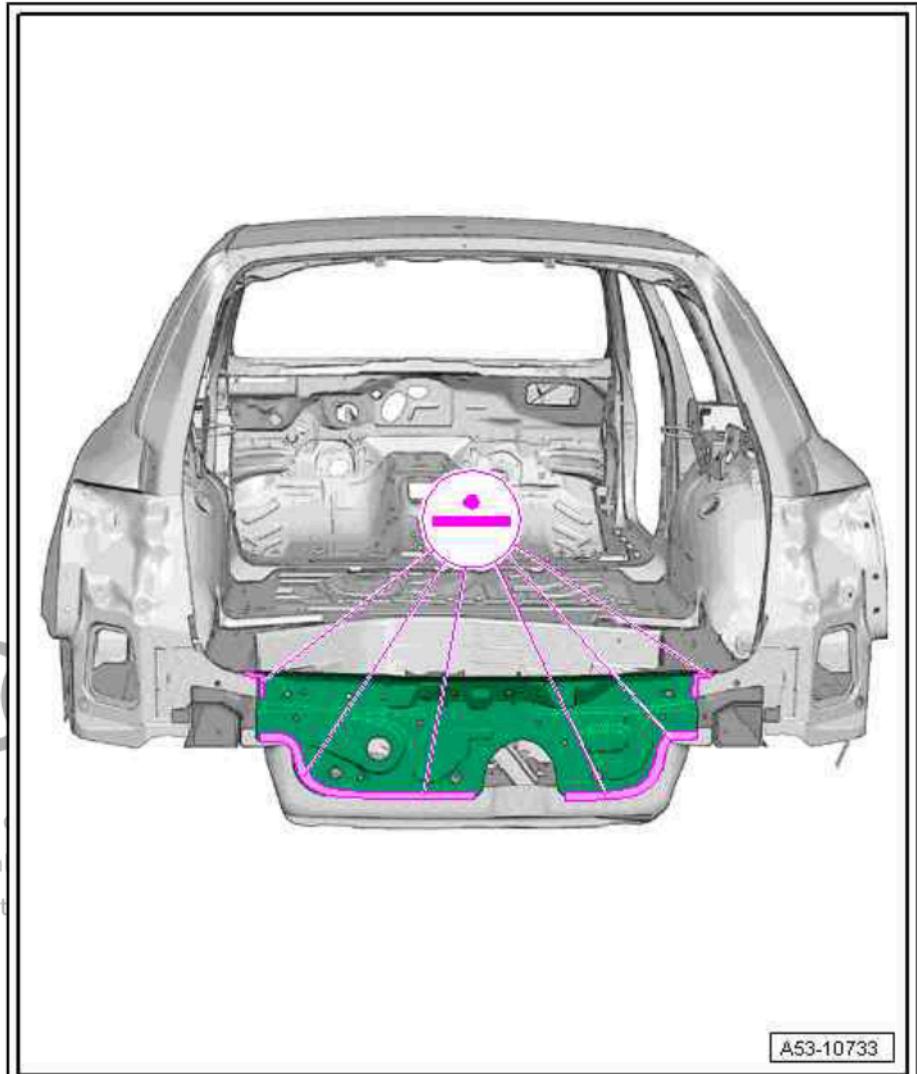

A53-10733

- Weld in upper cross panel [⇒ page 340](#) .

RO: 53 48 55 52

6 Rear longitudinal member - Partial renewal (Avant)

1 - Longitudinal member (part section), right-side (modern high-strength steel)


2 - Longitudinal member (part section), left-side

3 - Joint in metal blank

4 - Longitudinal member (ultra-high-strength hot-formed steel)



Protected by copyright. Copying, distribution, or
permitted unless author
with respect to the corre

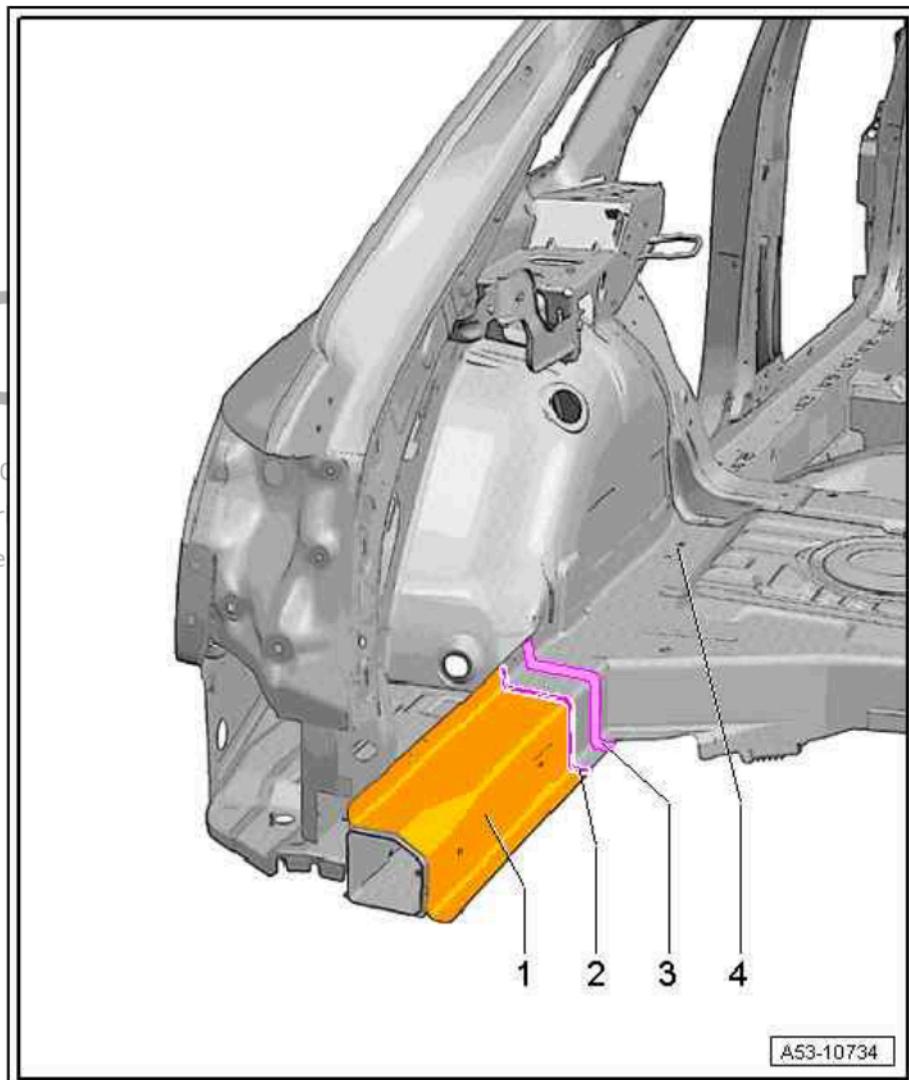

6.1 Notes for vehicles with hybrid drive

[⇒ page 5](#)

6.2 Tools

Special tools and workshop equipment required

- ◆ Shielded arc welding equipment
- ◆ Drill
- ◆ Compact angle grinder
- ◆ Body saw
- ◆ Spot weld breaker

Tools approved by AUDI AG must be used to ensure correct results when carrying out repair work [⇒ page 54](#).

6.3 Procedure


- Cross panel removed [⇒ page 344](#)
- Mounting plate removed [⇒ page 336](#)
- Luggage compartment floor removed [⇒ page 395](#)

Cutting locations

- Mark separating cut -1- as per dimension -a- and cut out.

Protected by copyright. Copying, publishing, storing in a retrieval system or otherwise using the content without written permission of AUDI AG is prohibited.
Upper inner reinforcement -b- must be cut through guarantee or accept any liability
with respect to Cut out longitudinal member (part section) using compact angle grinder .

- Separate original joint using spot weld breaker .

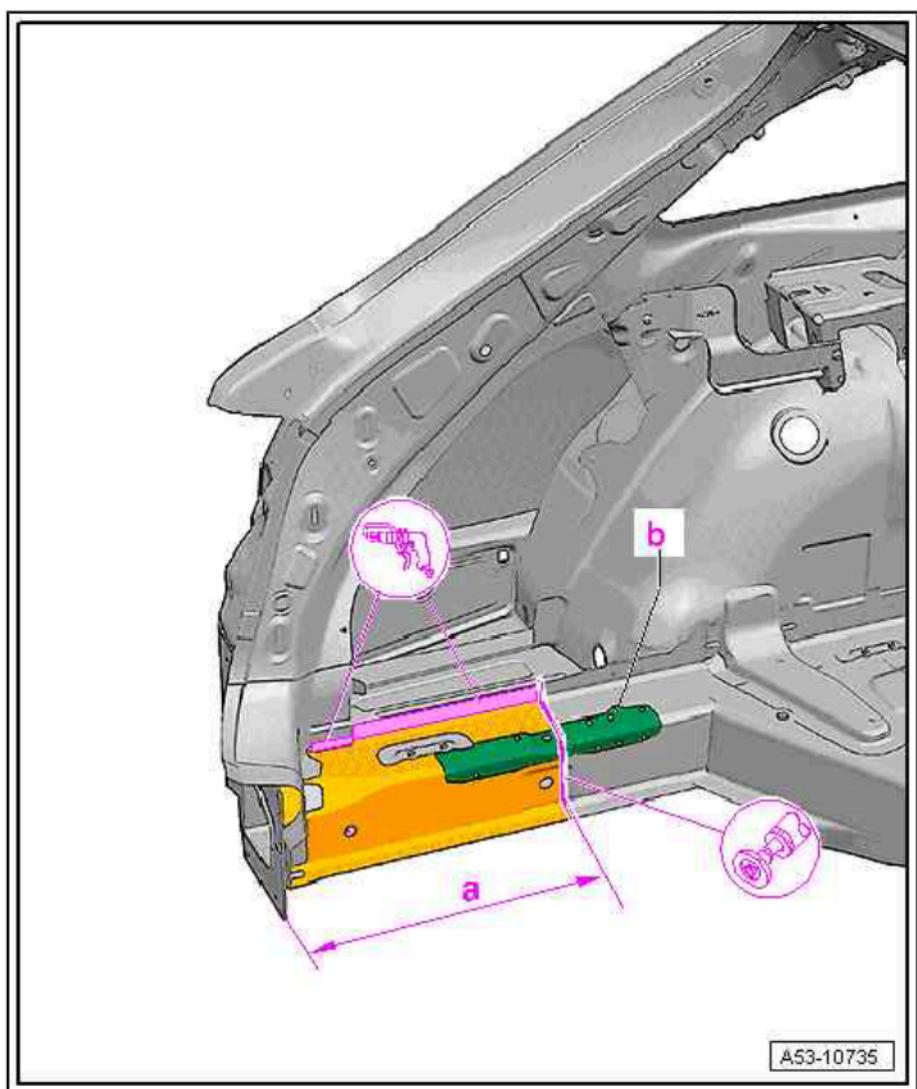


- Mark separating cut -1- as per dimension -a- and cut out.


Dimension -a- = 347 mm

- Cut out longitudinal member (part section) using compact angle grinder .

Protected by
permitted u
with respect

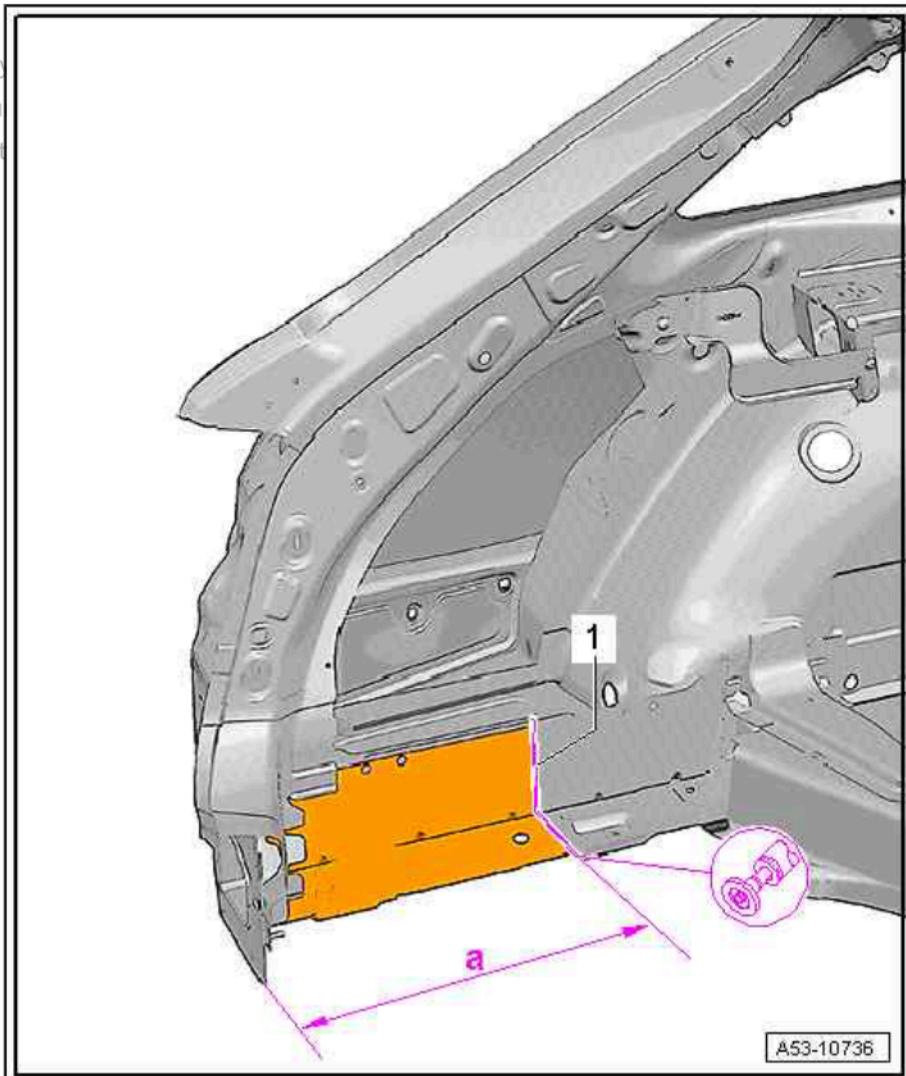

- Remove remaining material using compact angle grinder .

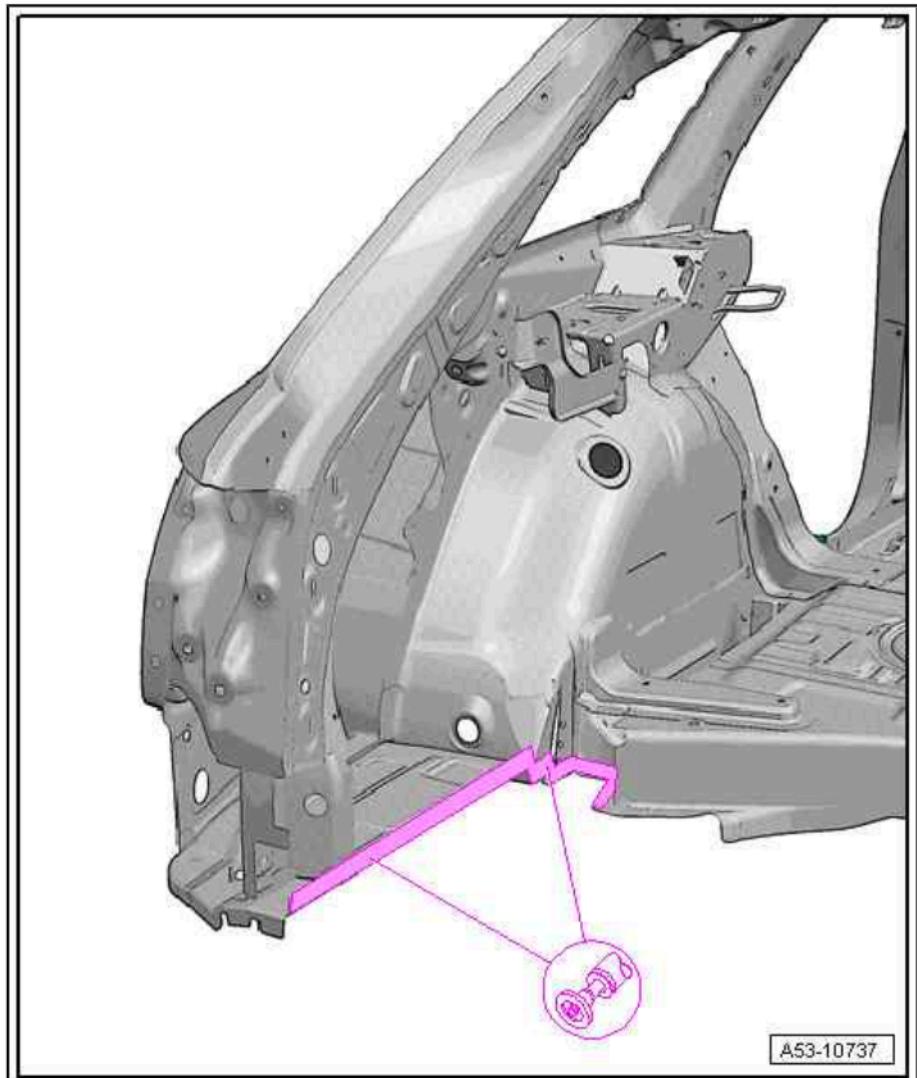

A53-10737

Replacement part


- ◆ Longitudinal member
- Transfer separating cut to new part and cut to size using body saw .



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

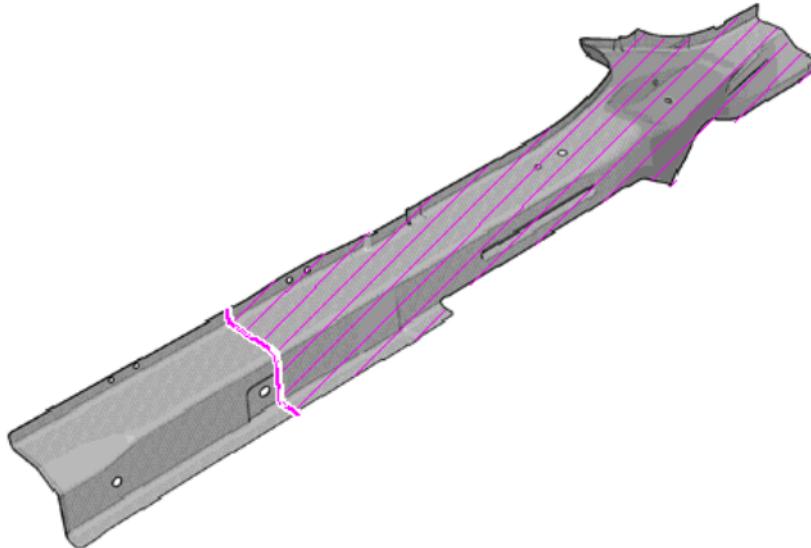

A53-10678


- Match up longitudinal member with vehicle positioned on alignment bracket set supplement - VAS 6667- and fix in place.

Note

Due to the different types of steel and panel thicknesses employed, one of the resistance spot welding units listed in this manual and approved by Audi must be used to ensure correct results when spot welding.

Welding in


- Butt weld longitudinal member using shielded arc welding equipment : SG continuous seam.

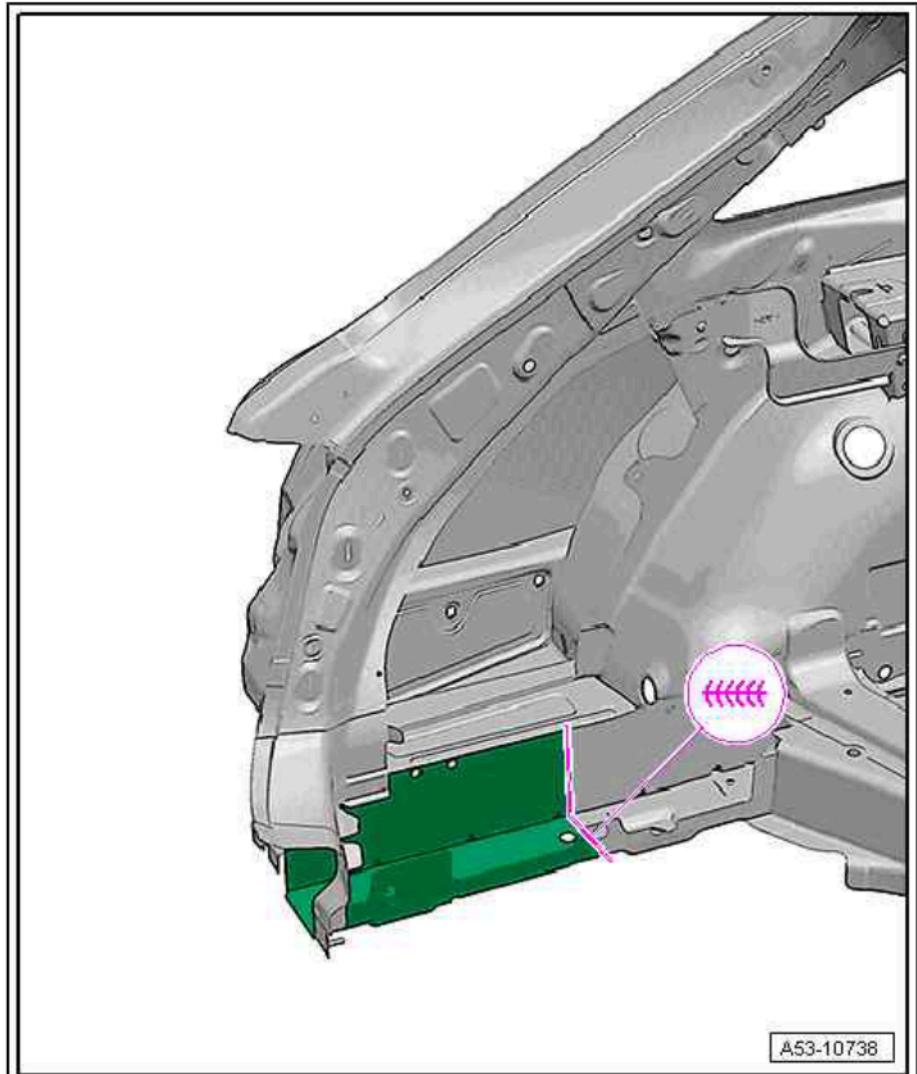

- Butt weld longitudinal member using shielded arc welding equipment : SG continuous seam.
- Weld in longitudinal member using resistance spot welder : RP spot weld seam.



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

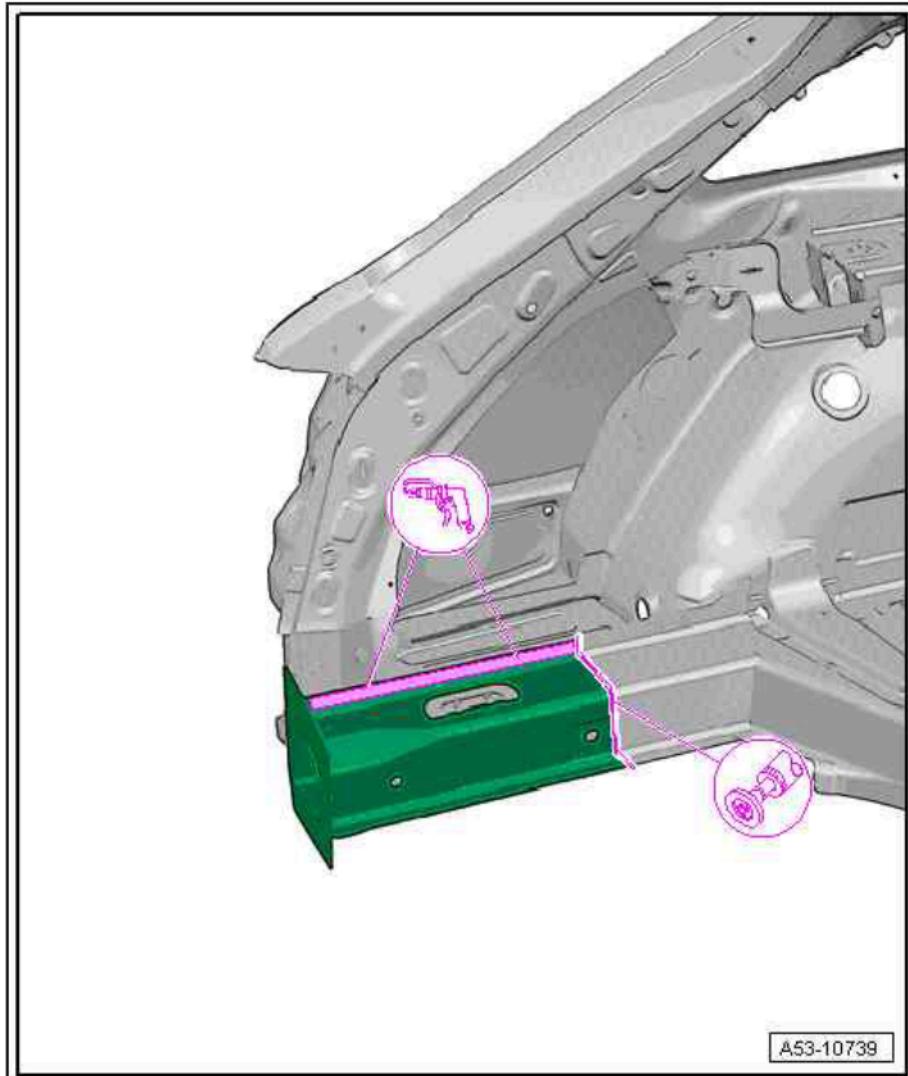

- Welding in cross panel [⇒ page 344](#)
- Welding in mounting plate [⇒ page 336](#)
- Welding in luggage compartment floor [⇒ page 395](#)



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

RO: 53 48 55 52

7 Rear longitudinal member - Partial renewal

1 - Longitudinal member (part section), right-side (modern high-strength steel)


2 - Longitudinal member (part section), left-side

3 - Joint in metal blank

4 - Longitudinal member (ultra-high-strength hot-formed steel)



Protected by copyright. Copying
permitted unless authorised by
with respect to the correctness

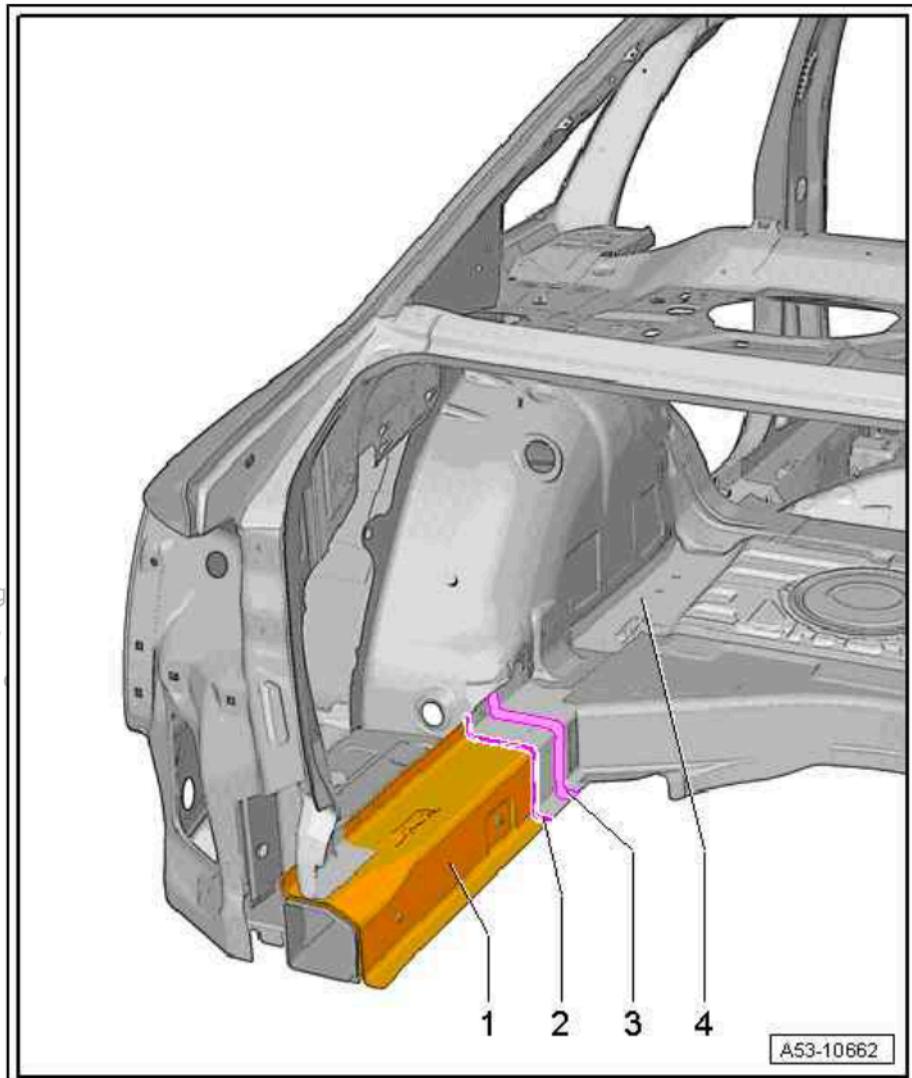

7.1 Notes for vehicles with hybrid drive

[⇒ page 5](#)

7.2 Tools

Special tools and workshop equipment required

- ◆ Shielded arc welding equipment
- ◆ Drill
- ◆ Compact angle grinder
- ◆ Body saw
- ◆ Spot weld breaker

Tools approved by AUDI AG must be used to ensure correct results when carrying out repair work [⇒ page 54](#).

7.3 Procedure


- Rear upper cross panel removed [⇒ page 332](#)
- Cross panel removed [⇒ page 336](#)
- Spare wheel well removed [⇒ page 395](#)

Cutting locations

- Mark separating cut -1- as per dimension -a- and cut out.

Dimension -a- = 347 mm

- Upper inner reinforcement -b- must be cut through.
- Cut out longitudinal member (part section) using compact angle grinder .
- Separate original joint using spot weld breaker .

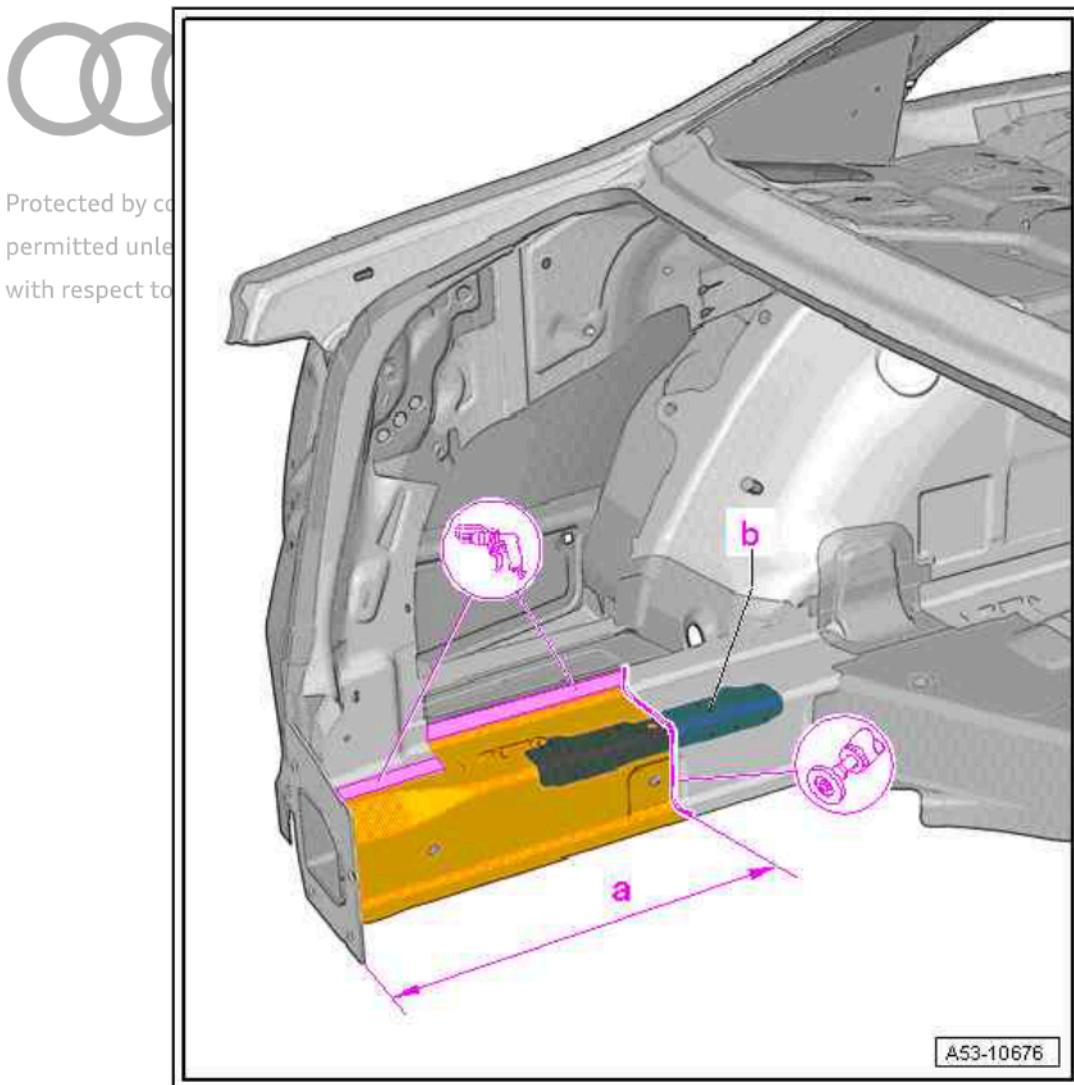


- Mark separating cut -1- as per dimension -a- and cut out.

Dimension -a- = 347 mm

- Cut out longitudinal member (part section) using compact angle grinder .



Protected by copyright. Copy
permitted unless authorise
with respect to the correctr

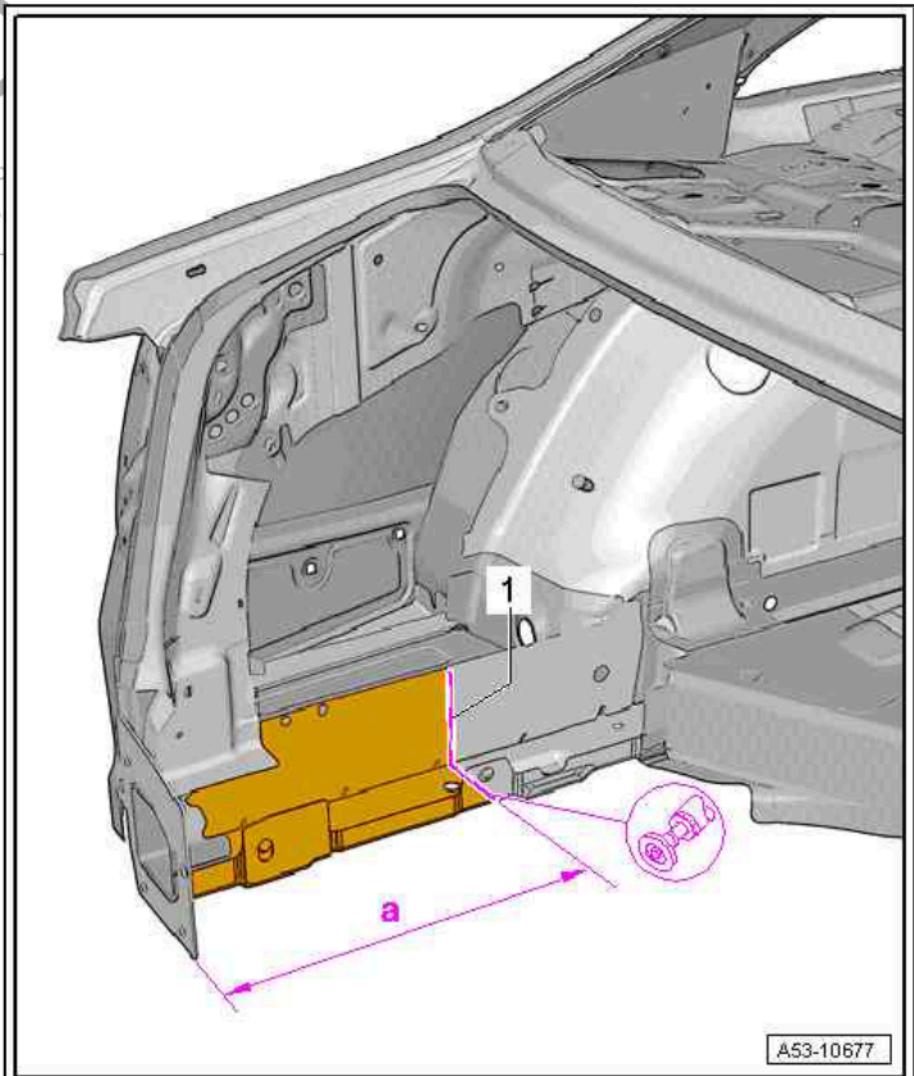


- Remove remaining material using compact angle grinder .



Protected by copyright. Copying
permitted unless authorised by A
with respect to the correctness o

A53-10665

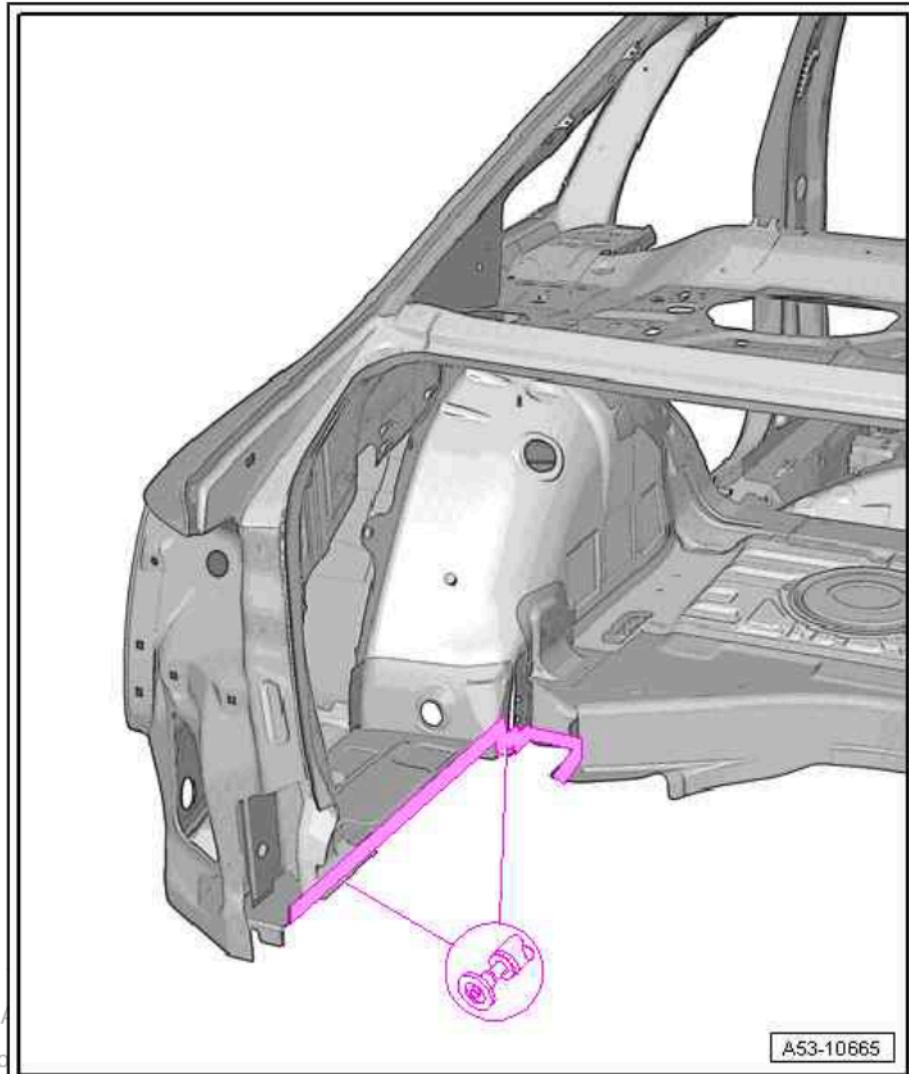


Replacement part

- ◆ Longitudinal member
- Transfer separating cut to new part and cut to size using body saw .



Protected by copyright. Copying for private or commercial purposes, in whole or in part, is not permitted unless authorised by AUDI AG. AUDI AG does not accept any liability with respect to the correctness of information provided. © AUDI AG.

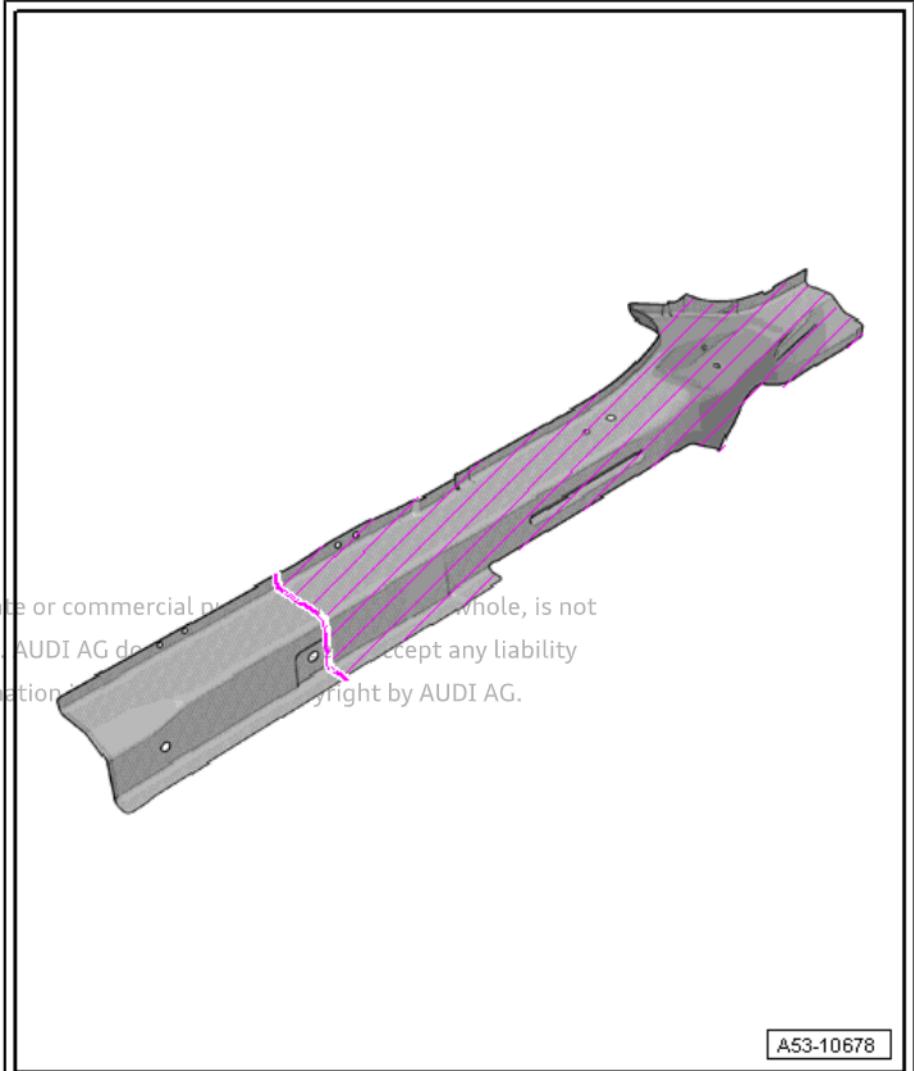

A53-10678

- Match up longitudinal member with vehicle positioned on alignment bracket set supplement - VAS 6667- and fix in place.



Note


Due to the different types of steel and panel thicknesses employed, one of the resistance spot welding units listed in this manual and approved by Audi must be used to ensure correct results when spot welding.

Welding in

- Butt weld longitudinal member using shielded arc welding equipment : SG continuous seam.




Protected by copyright. Copying, publishing, editing and any other unauthorized use of this material is expressly prohibited unless authorized in writing by the publisher. All rights reserved.
© 2018 FCA Italy S.p.A. and/or its affiliated companies. All rights reserved.
FCA Italy S.p.A. reserves the right to cancel any unauthorized use of this material.

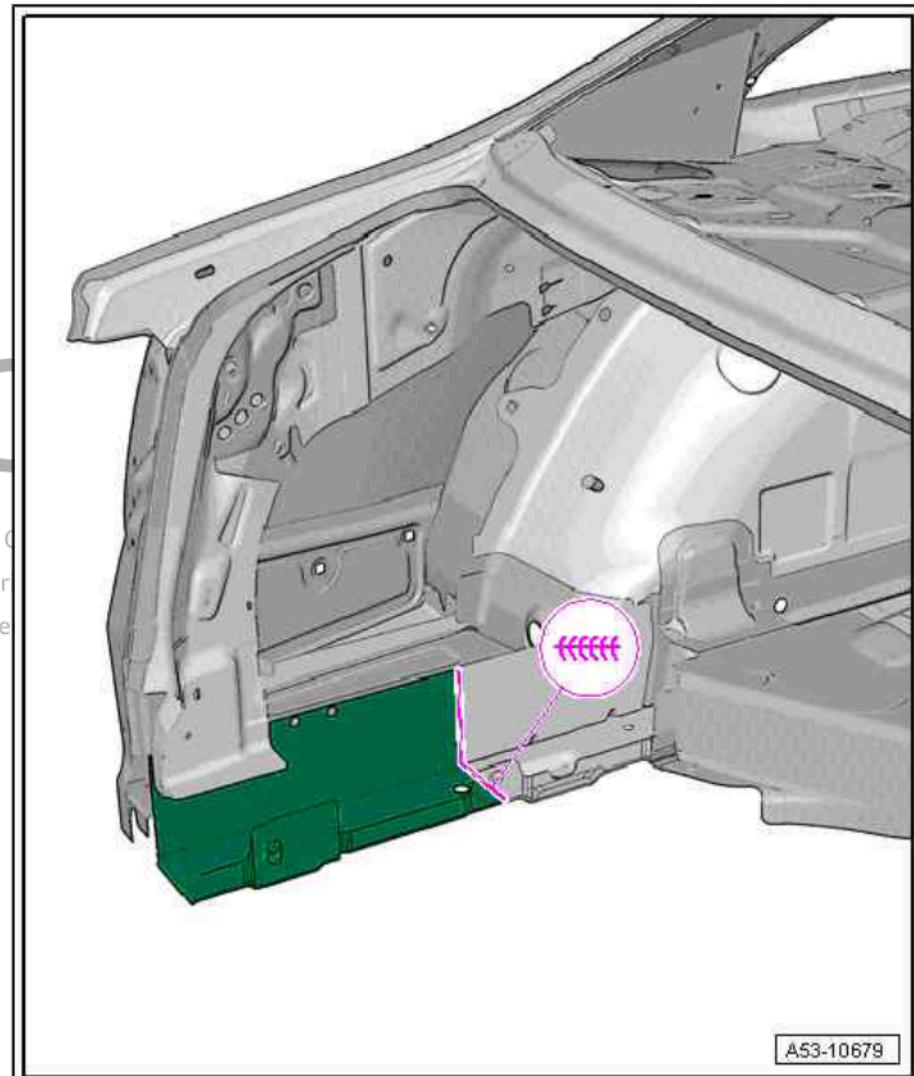

- Butt weld longitudinal member using shielded arc welding equipment : SG continuous seam.
- Weld in longitudinal member using resistance spot welder : RP spot weld seam.



Protected by copyright.
permitted unless author
with respect to the corre

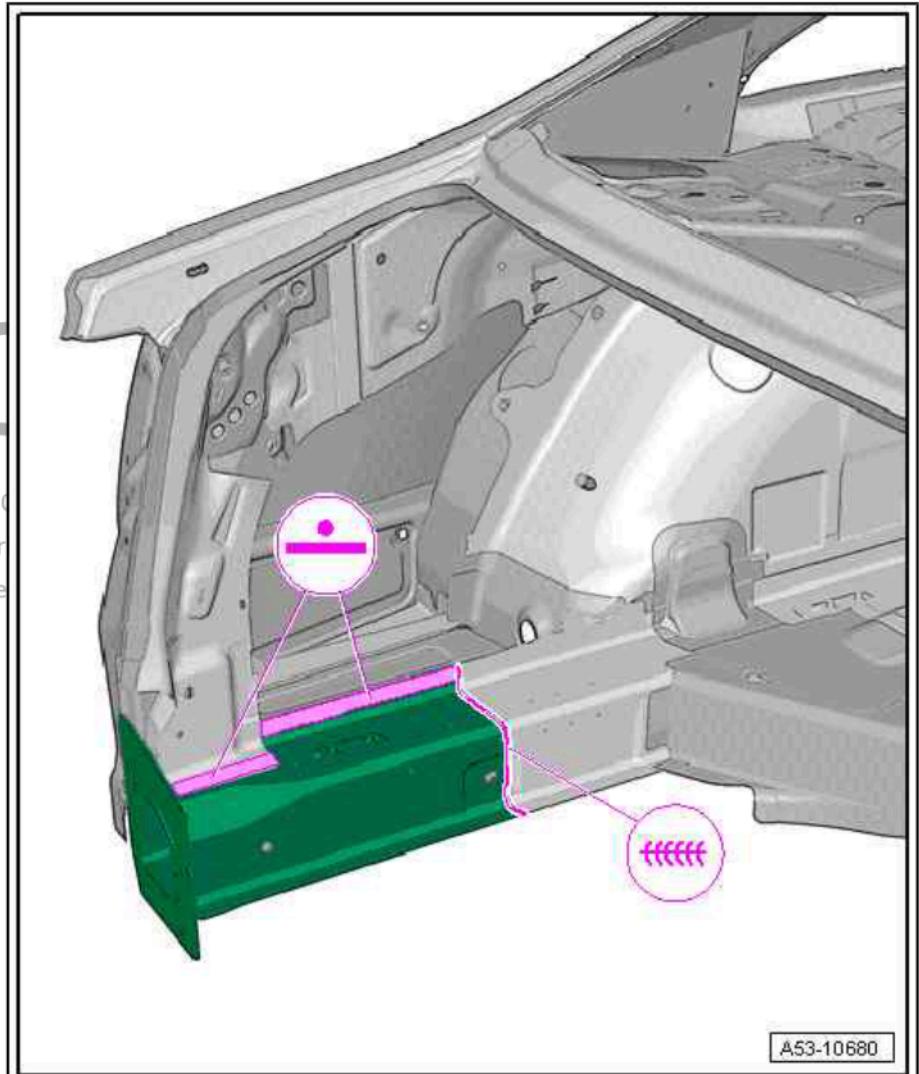


- Welding in rear upper cross panel [⇒ page 332](#)
- Welding in cross panel [⇒ page 336](#)
- Welding in spare wheel well [⇒ page 395](#)

RO: 53 55 55 00

8 Side panel - Renewal

Includes rain channel and tail light mounting

- 1 - Side panel
- 2 - Separating cut in C-pillar
- 3 - Separating cut in D-pillar
- 4 - Bonded area
- 5 - Moulded foam insert
- 6 - Separating cut in side member
- 7 - Tail light mounting

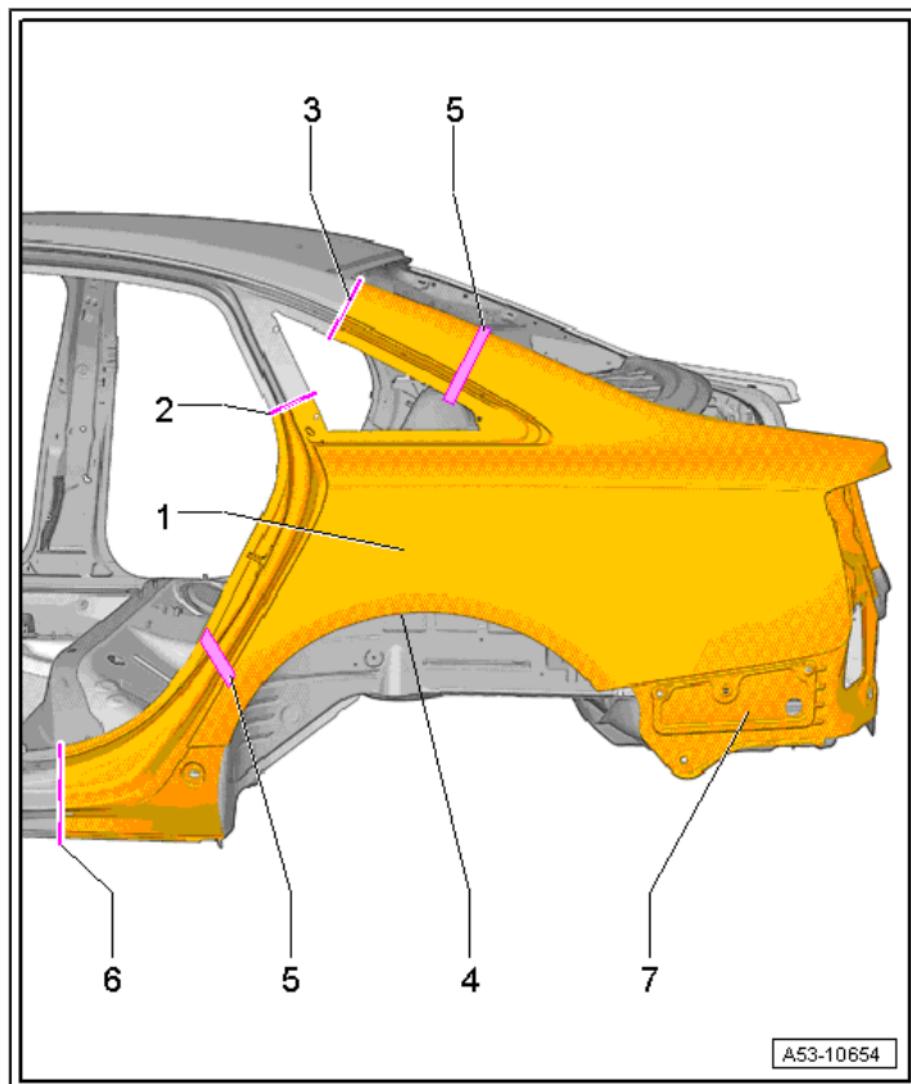

8.1 Notes for vehicles with hybrid drive

[→ page 5](#)



8.2 Tools

Special tools and workshop equipment required

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

- ◆ Resistance spot welder
- ◆ Shielded arc welding equipment
- ◆ Drill
- ◆ Compact angle grinder
- ◆ Body saw
- ◆ Spot weld breaker
- ◆ Pneumatic glue gun

Tools approved by AUDI AG must be used to ensure correct results when carrying out repair work [⇒ page 54](#).

8.3 Procedure

Cutting locations


Permitted separating cuts on complete side panel [⇒ page 128](#).



Note


Partial renewal is possible with the separating cuts illustrated.

- Separate original joint using spot weld breaker .
- Grind through outer edge at wheel arch using compact angle grinder .
- Make separating cuts as shown using body saw .

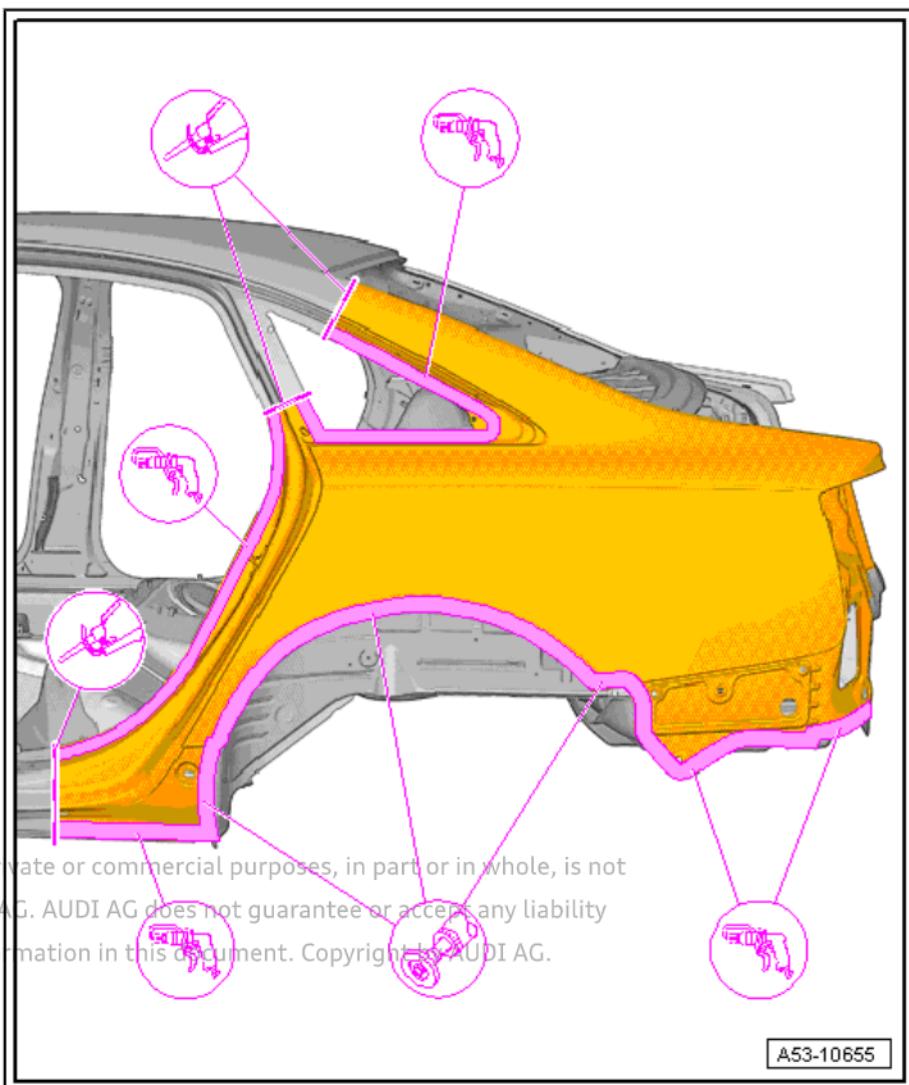


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

- Make separating cuts as shown using body saw .
- Separate original joint using spot weld breaker .

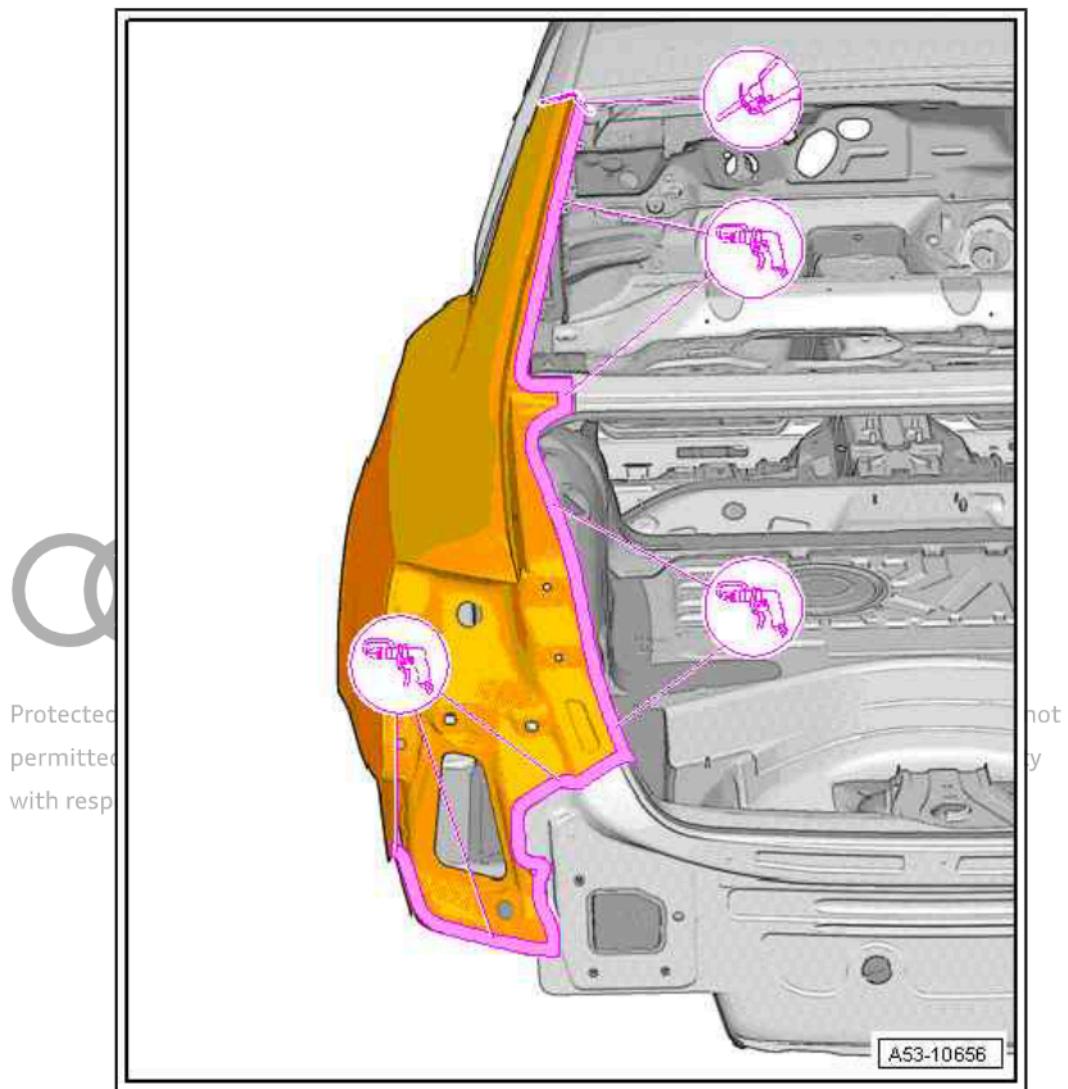

- Remove remaining adhesive completely and sand bonding surfaces down to bare metal.
- Clean bonding area with cleaning solution - D 009 401 04- (it must be free of dust and grease).
- Clean flange area with cleaning solution - D 009 401 04- (it must be free of dust and grease).

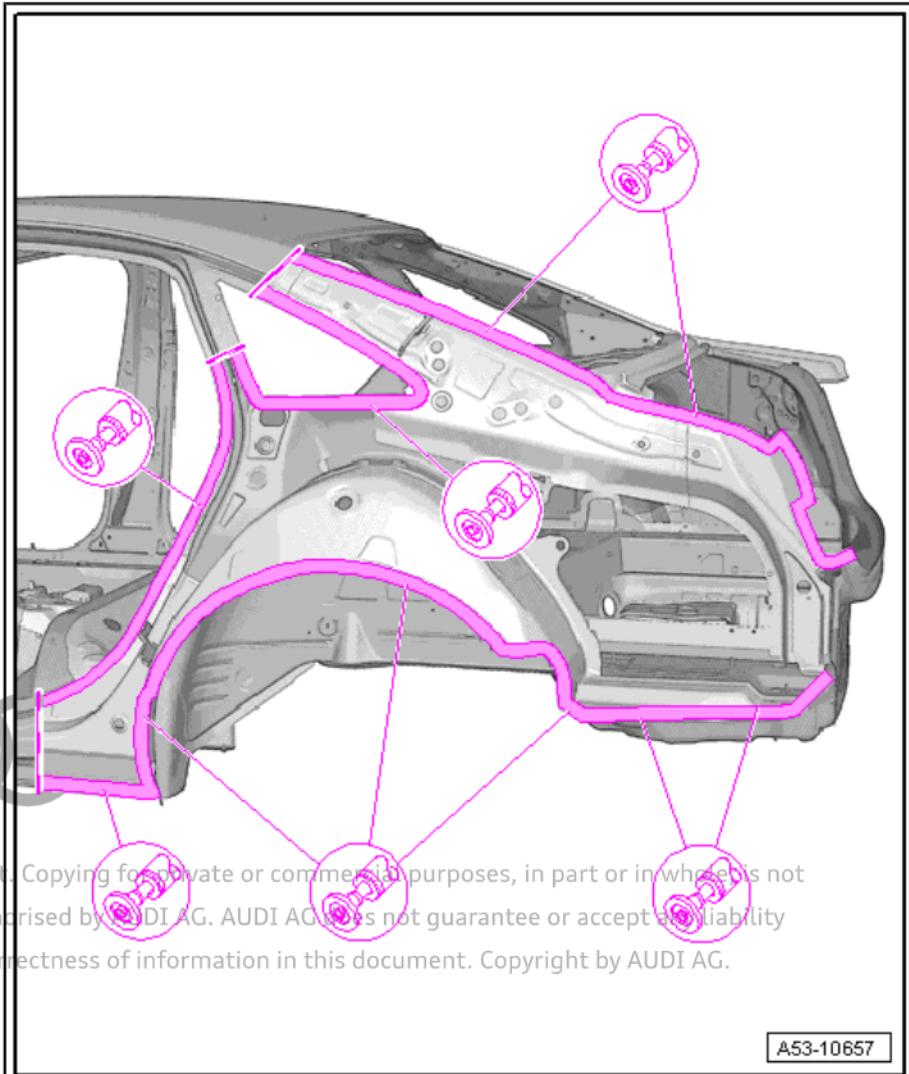

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.


A53-10657

Replacement parts

- ◆ Side panel
- ◆ Moulded foam inserts
- ◆ Cleaning solution - D 009 401 04-
- ◆ 2-component epoxy adhesive - DA 001 730 A2- , 1 set of cartridges

Preparing new part

- Transfer separating cut to new part and cut off hatched area using body saw .
- Drill holes for SG plug weld seam using drill .
- Clean bonding area with cleaning solution - D 009 401 04- (it must be free of dust and grease).
- Grind down bonding surface (on body side of joint) to bare metal.
- Clean beaded flange with cleaning solution - D 009 401 04- (it must be free of dust and grease).

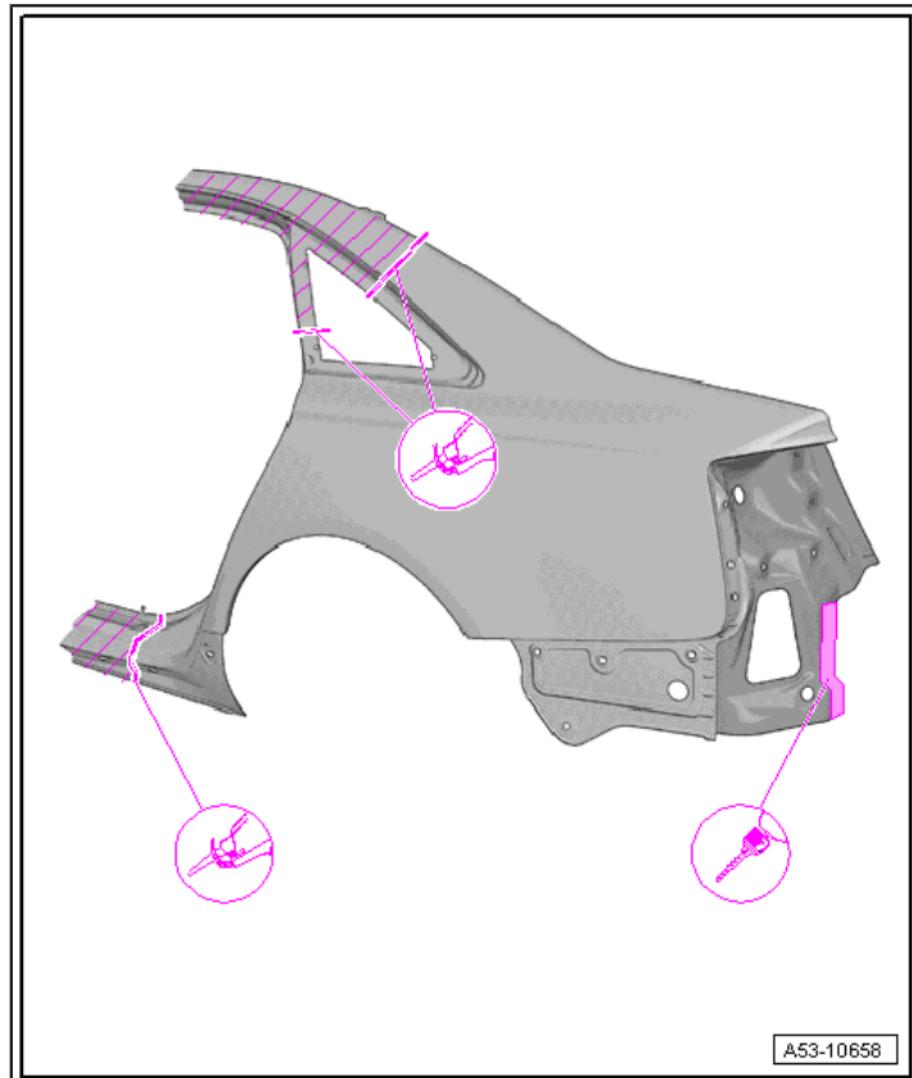


A53-10658

Fit moulded foam inserts -a-.



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

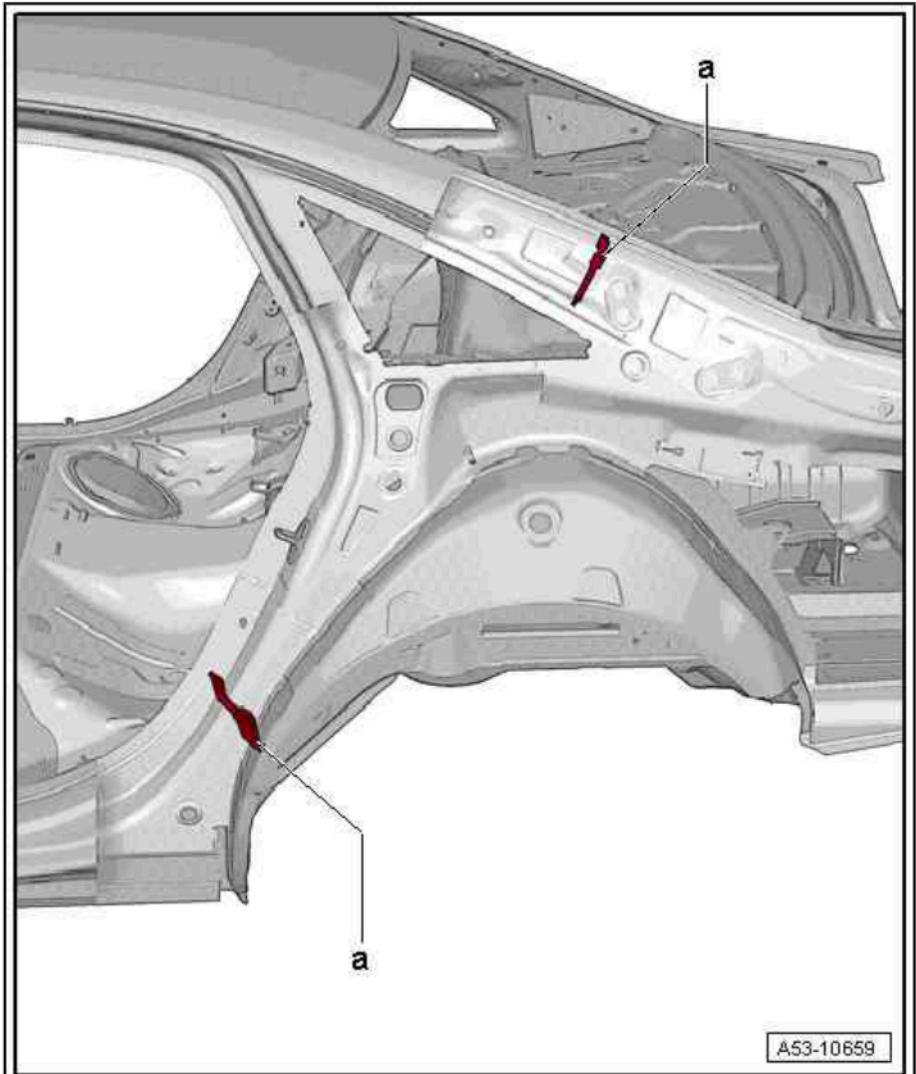

A53-10659



- Match up side panel on portal gauge and fix in position.

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not


Note allowed unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability

with respect to the correctness of information in this document. Copyright by AUDI AG.

Due to the different types of steel and panel thicknesses employed, one of the resistance spot welding units listed in this manual and approved by Audi must be used to ensure correct results when spot welding.

Welding in

- Weld in at separating cuts using shielded arc welding equipment : SG continuous seam.
- Weld in side panel using resistance spot welder : RP spot weld seam.
- Apply 2-component epoxy adhesive - DA 001 730 A2- to side panel and flange area on wheel housing using pneumatic glue gun - V.A.G 2005 B- .

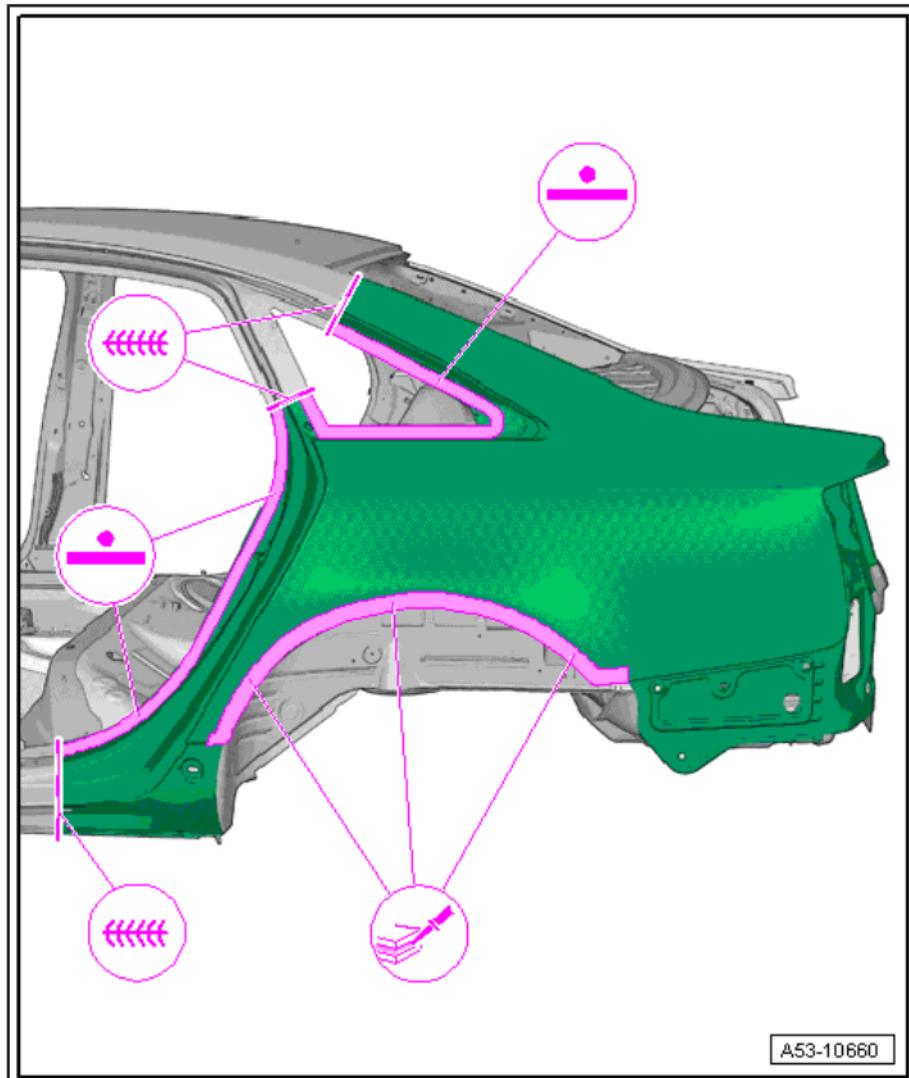


- Weld in at separating cuts using shielded arc welding equipment : SG continuous seam.
- Weld in side panel using resistance spot welder : RP spot weld seam.
- Weld in side panel using shielded arc welding equipment : SG plug weld seam.



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.



Protected by copyright. Copying,
permitted unless authori
with respect to the corre

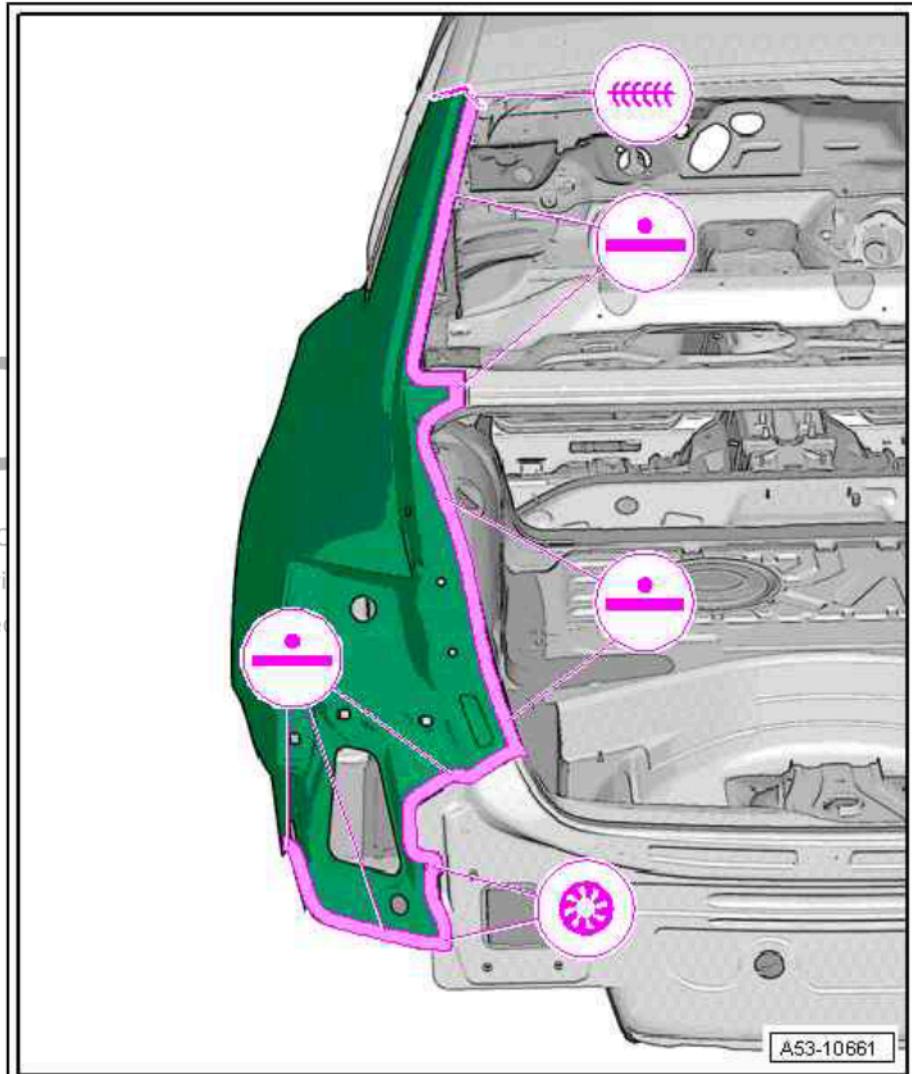

RO: 53 55 55 00


9 Side panel - Renewal (Avant)

Includes rain channel and tail light mounting

- 1 - Side panel
- 2 - Separating cut in C-pillar
- 3 - Separating cut in D-pillar
- 4 - Bonded area
- 5 - Moulded foam insert
- 6 - Separating cut in side member
- 7 - Tail light mounting



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

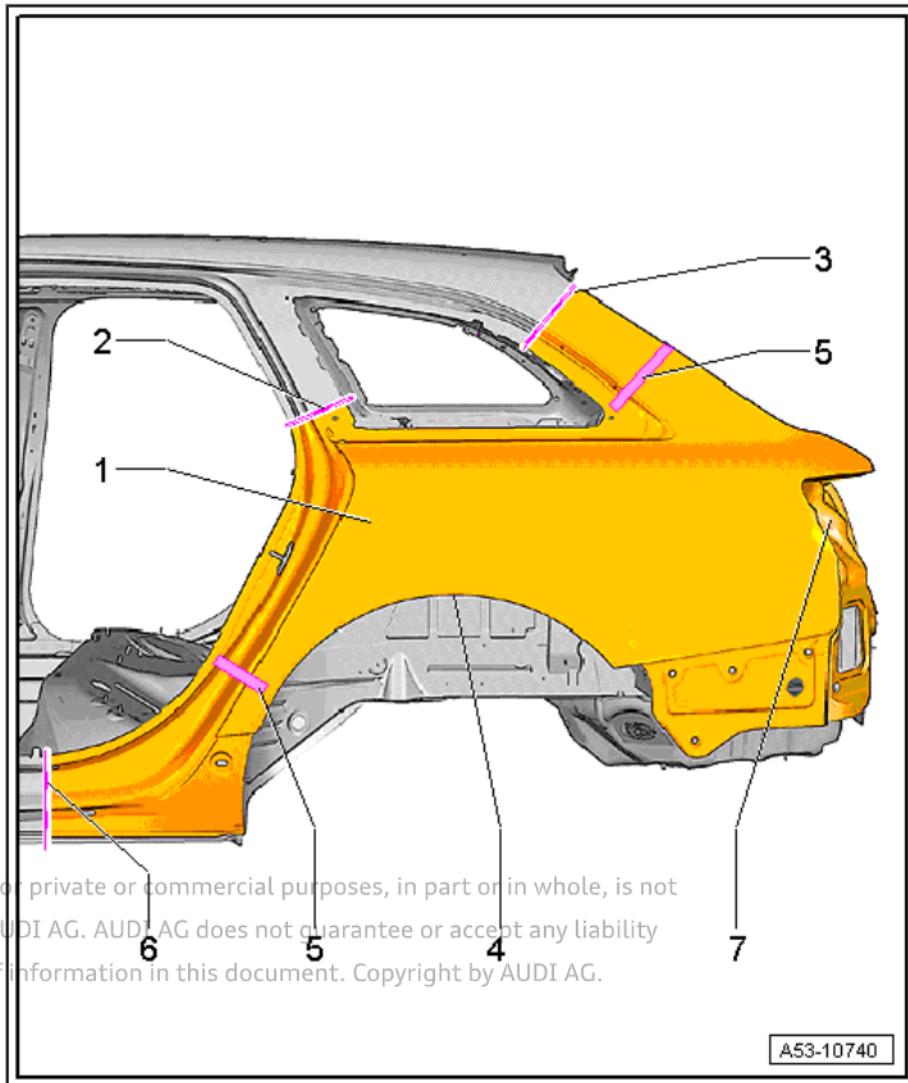

9.1 Notes for vehicles with hybrid drive

[⇒ page 5](#)

9.2 Tools

Special tools and workshop equipment required

- ◆ Resistance spot welder
- ◆ Shielded arc welding equipment
- ◆ Drill
- ◆ Compact angle grinder
- ◆ Body saw
- ◆ Spot weld breaker
- ◆ Pneumatic glue gun

Tools approved by AUDI AG must be used to ensure correct results when carrying out repair work [⇒ page 54](#).

9.3 Procedure

- Cross panel (part section) removed [⇒ page 332](#)


Cutting locations
Permitted separating cuts on complete side panel [⇒ page 128](#).
Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.



Note

Partial renewal is possible with the separating cuts illustrated.

- Separate original joint using spot weld breaker .
- Grind through outer edge at wheel arch using compact angle grinder .
- Make separating cuts as shown using body saw .
- Separate laser weld -1- using compact angle grinder .

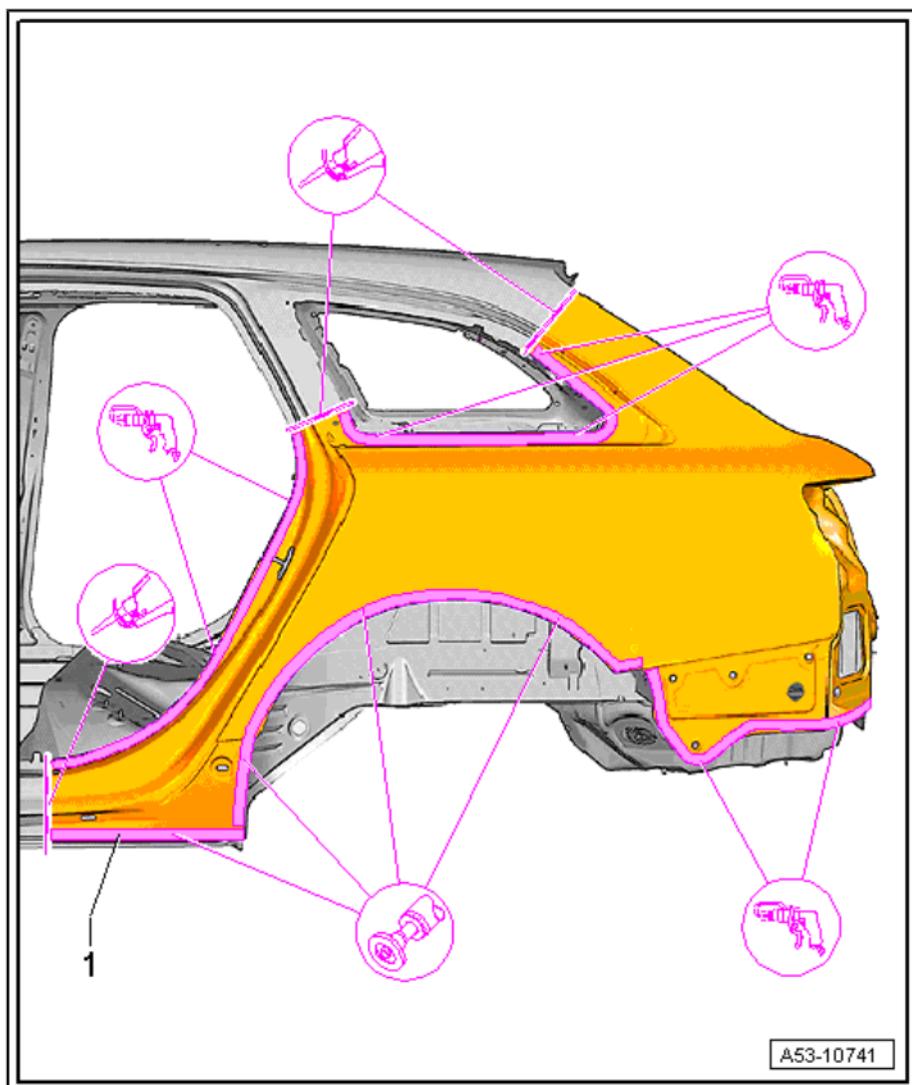


- Make separating cuts as shown using body saw .

- Separate original joint using spot weld breaker .




Protected by copyright.
permitted unless autho
with respect to the corre

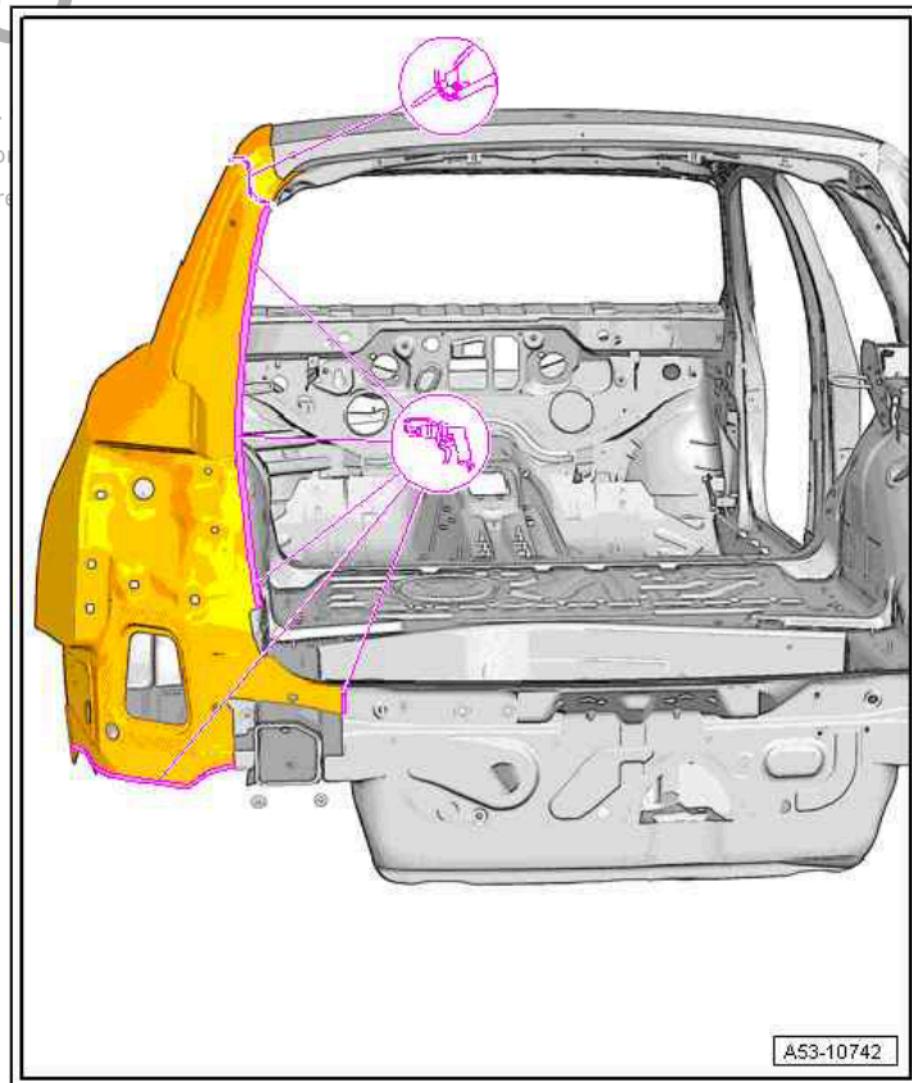

- Remove remaining adhesive completely and sand bonding surfaces down to bare metal.
- Clean bonding area with cleaning solution - D 009 401 04- (it must be free of dust and grease).
- Clean flange area with cleaning solution - D 009 401 04- (it must be free of dust and grease).



Protected by copyright.
Duplication or communication
not permitted unless authorised
by the copyright holder.
With respect to the content:
© Volkswagen Group AG 2018

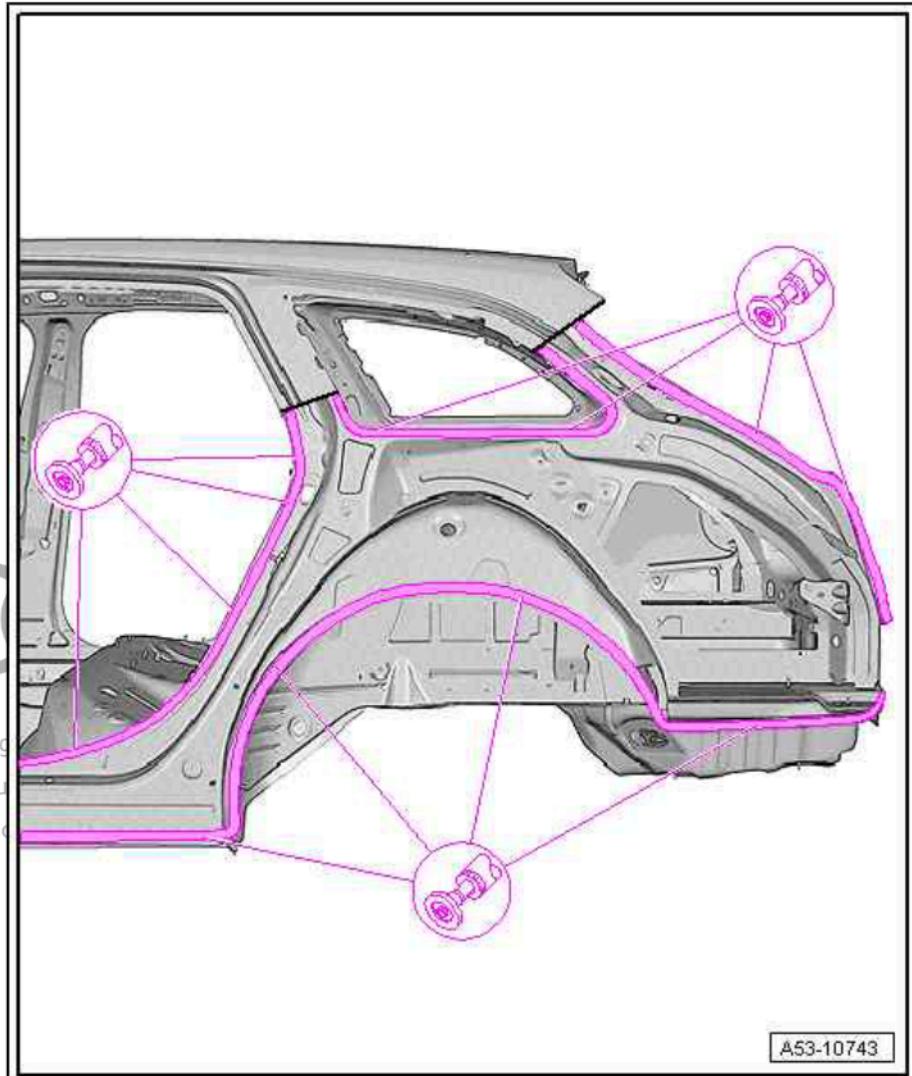


A53-10743

Replacement parts

- ◆ Side panel
- ◆ Moulded foam inserts
- ◆ Cleaning solution - D 009 401 04-
- ◆ 2-component epoxy adhesive - DA 001 730 A2- , 1 set of cartridges

Preparing new part


- Transfer separating cut to new part and cut off hatched area using body saw .
- Clean bonding area with cleaning solution - D 009 401 04- (it must be free of dust and grease).
- Grind down bonding surface (on body side of joint) to bare metal.
- Clean beaded flange with cleaning solution - D 009 401 04- (it must be free of dust and grease).

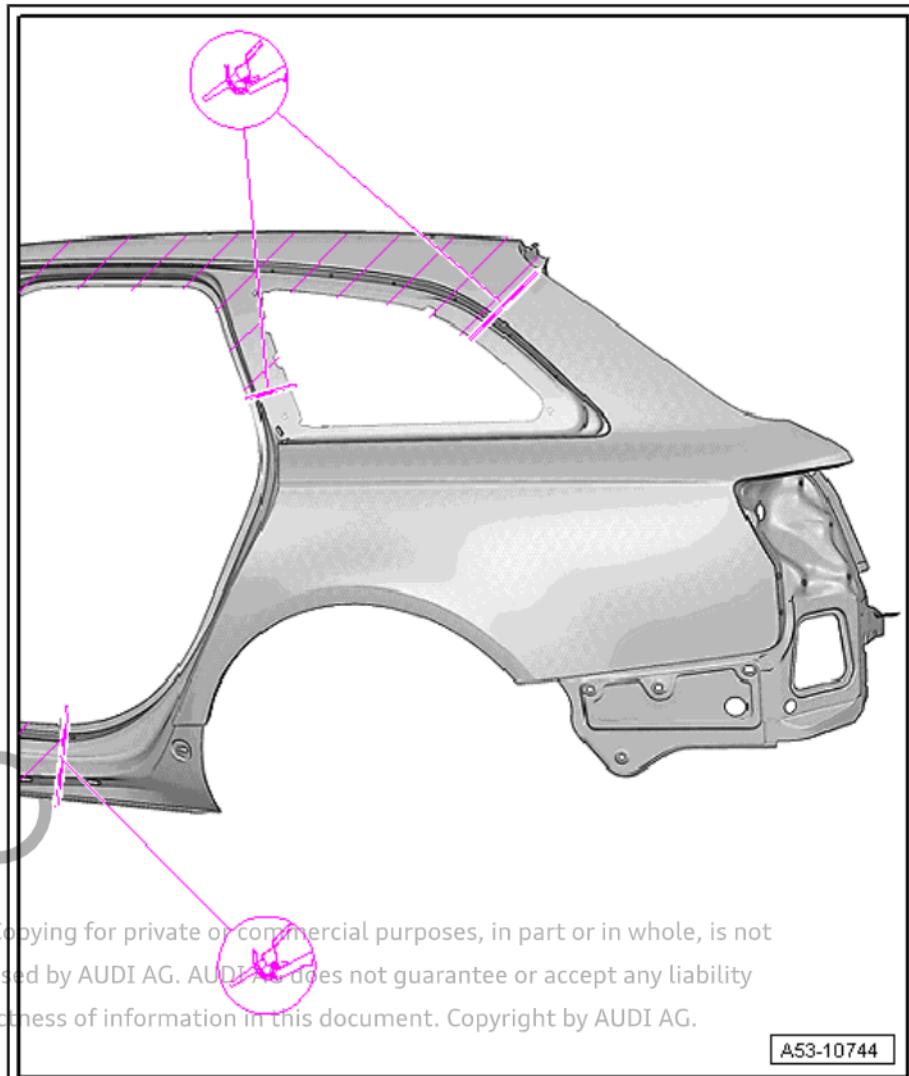


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

A53-10744

Fit moulded foam inserts -a-.

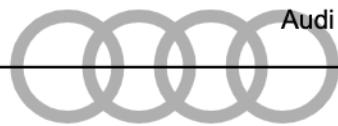

Protected by copyright
permitted unless aut
with respect to the co

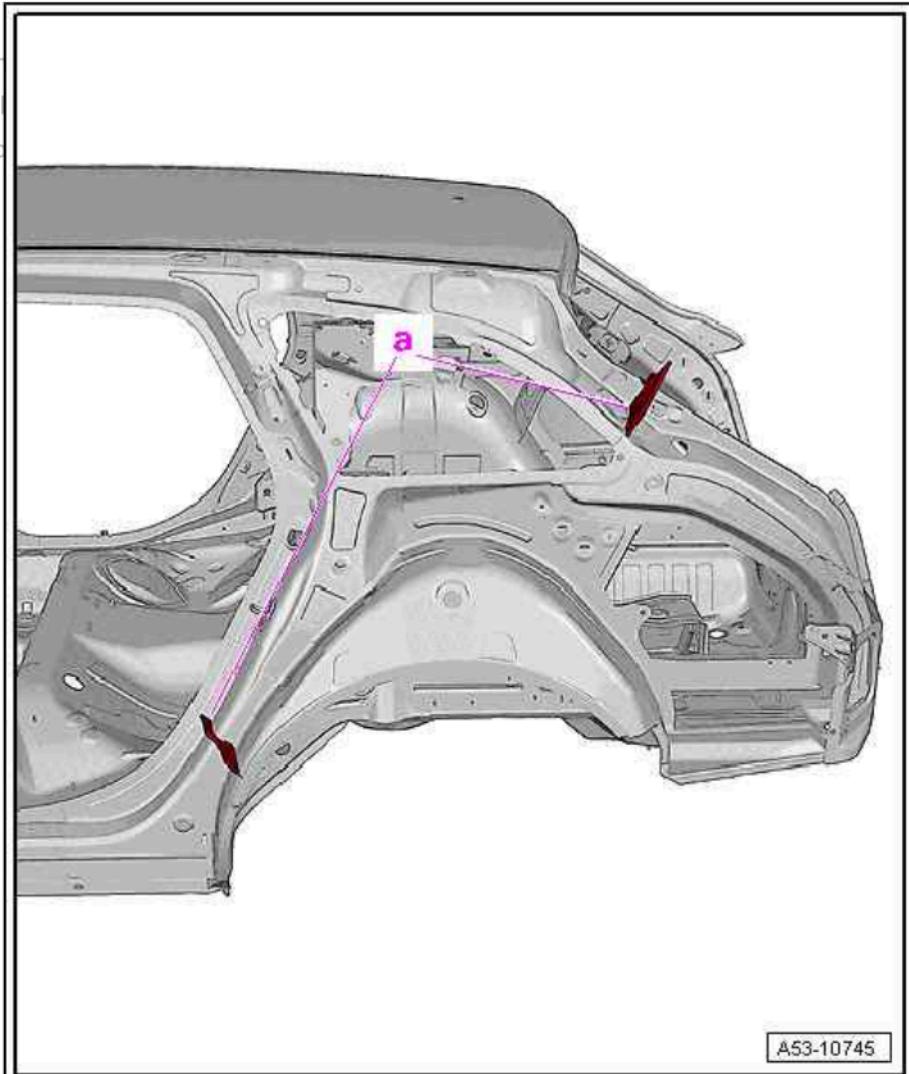

A53-10745

- Match up side panel on portal gauge and fix in position.




Note

Due to the different types of steel and panel thicknesses employed, one of the resistance spot welding units listed in this manual and approved by Audi must be used to ensure correct results when spot welding.

Welding in

- Weld in at separating cuts using shielded arc welding equipment : SG continuous seam.
- Weld in side panel using resistance spot welder : RP spot weld seam.
- Apply 2-component epoxy adhesive - DA 001 730 A2- to side panel and flange area on wheel housing using pneumatic glue gun - V.A.G 2005 B- .
- Weld in side member (part section) using shielded arc welding equipment : SG continuous seam (staggered - with gaps) in place of laser weld.

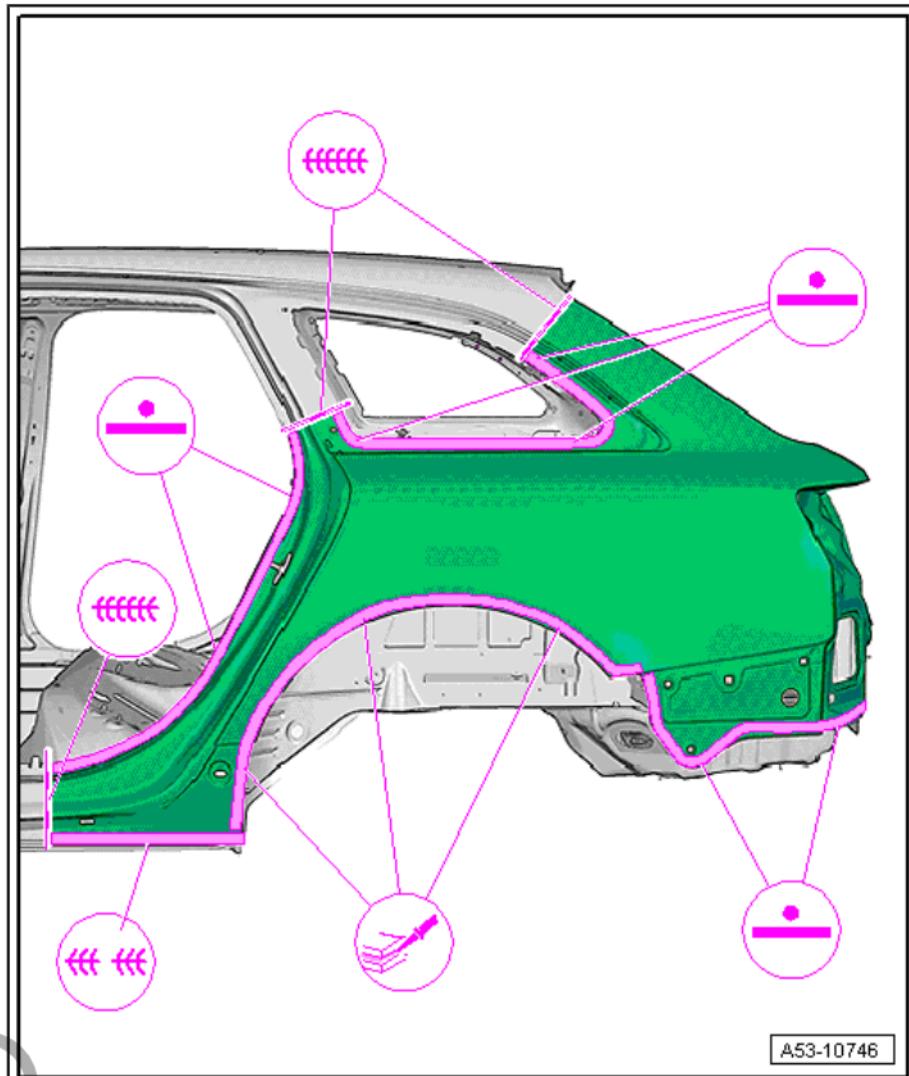


- Weld in at separating cuts using shielded arc welding equipment : SG continuous seam.

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability

- Weld in side panel using resistance spot welder : RP spot weld seam.

with respect to the correctness of information in this document. Copyright by AUDI AG.

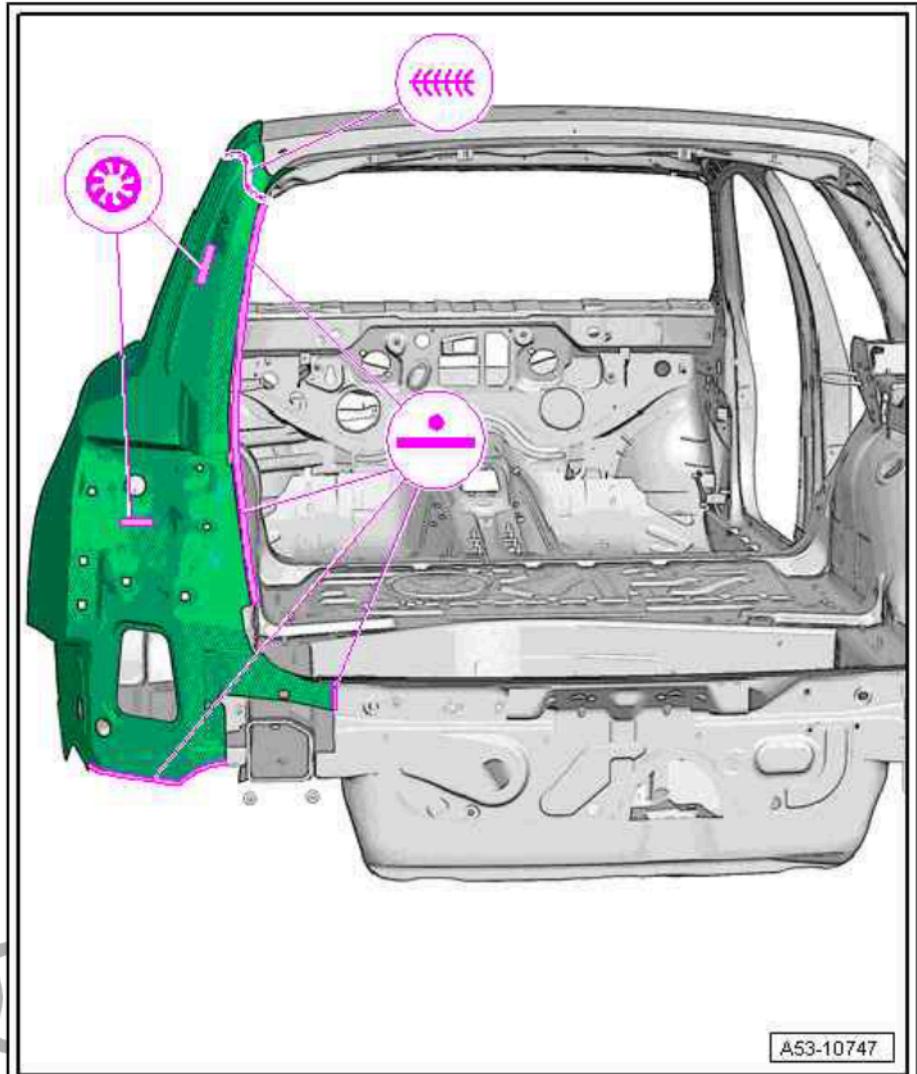

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not

- **Welding in cross panel (part section)** ➤ [page 340](#)
permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

RO: 53 69 55 52

10 C-pillar reinforcement - Renewal (Saloon and Avant identical)

1 - Lower C-pillar reinforcement

2 - Separating cut



Note

- ◆ Part section repair is using separating cut -2.
- ◆ Weld separating cut SG - continuous seam.

3 - Upper C-pillar reinforcement


4 - Wheel housing

5 - Separating cut



Note

- ◆ Part section repair is using separating cut -5.
- ◆ Weld separating cut SG - continuous seam.

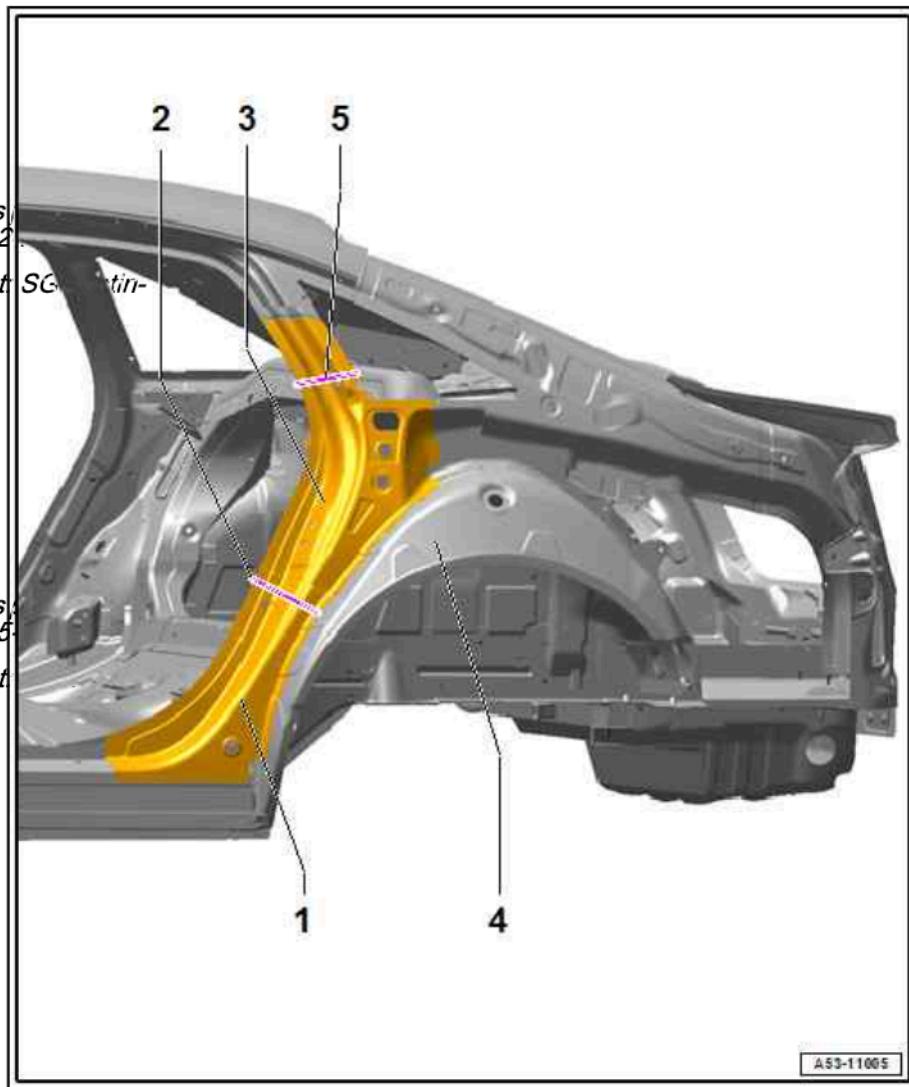

10.1 Notes for vehicles with hybrid drive

[⇒ page 5](#)

10.2 Tools



Special tools and workshop equipment required

- ◆ Resistance spot welder
Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.
- ◆ Shielded arc welding equipment
- ◆ Compact angle grinder
- ◆ Body saw
- ◆ Spot weld breaker


Tools approved by AUDI AG must be used to ensure correct results when carrying out repair work [⇒ page 54](#).

10.3 Procedure

- Side panel removed (Saloon) [⇒ page 362](#)
- Side panel removed (Avant) [⇒ page 362](#)

Cutting locations

- Separate original joint using spot weld breaker .

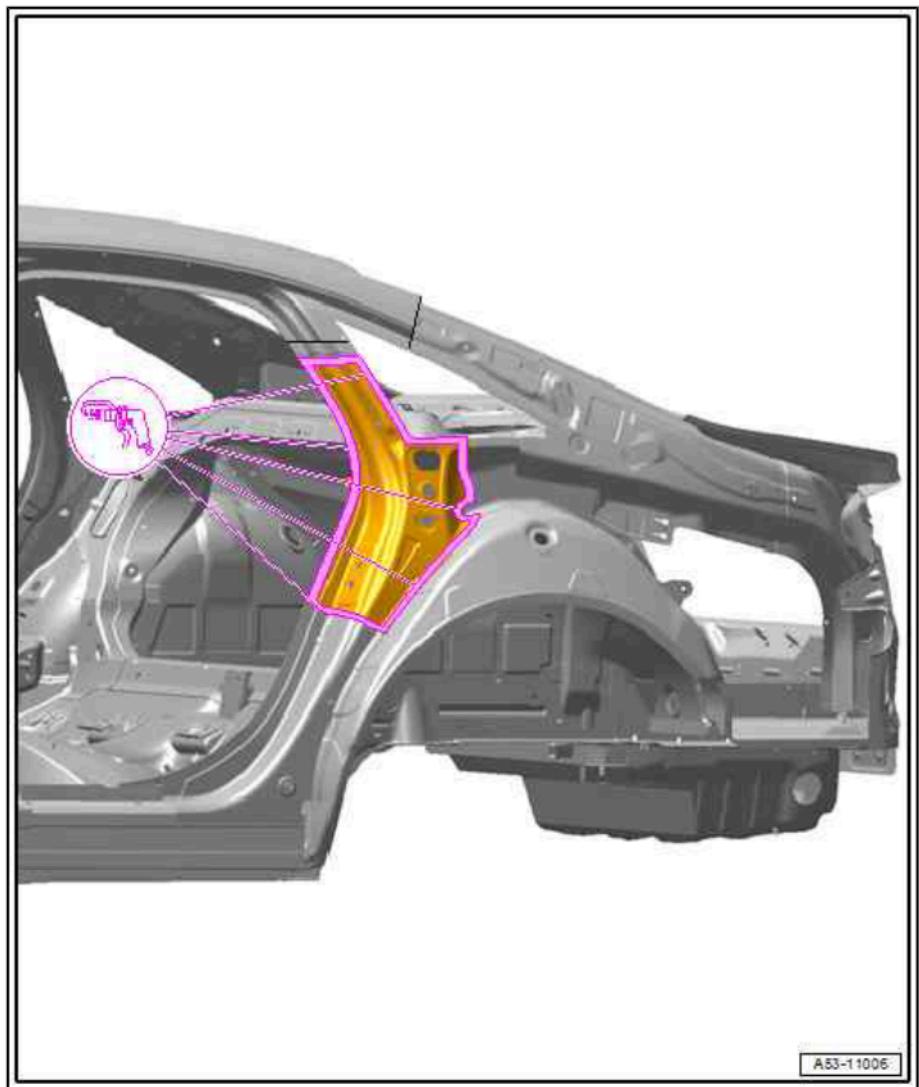


- Separate original joint using spot weld breaker .



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.




Protected by copyright. Copying, distribution, or
permitted unless authoris
with respect to the corre
document. Copyright

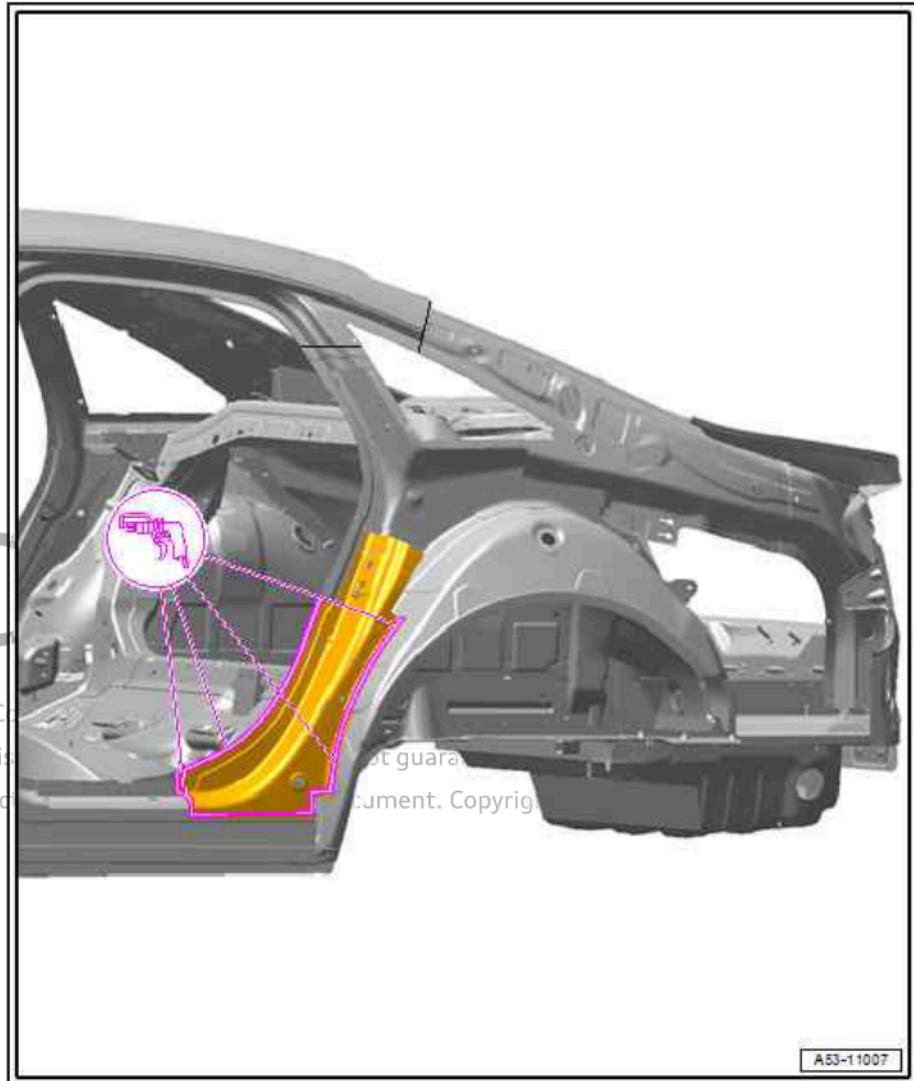

- Remove remaining material using compact angle grinder .



Protected by copyright. Copying, editing, translating and/or creating derivative works based on this document, in whole or in part, is not permitted unless authorised by AUDI AG. AUDI AG reserves the right at any time to prohibit such activity.

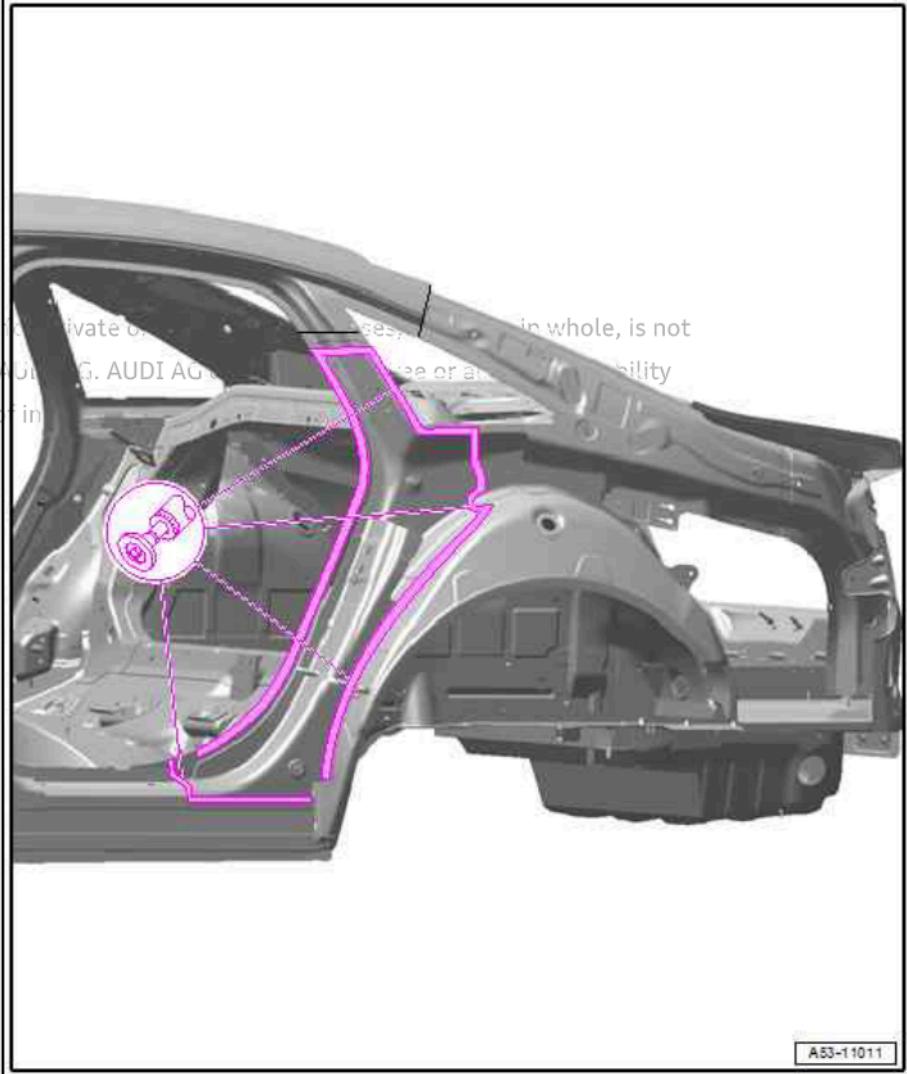

A63-11011

Replacement part

- ◆ Upper C-pillar reinforcement
- ◆ Lower C-pillar reinforcement

Preparing new part

- Drill holes for SG plug weld seam, 8 mm Ø using drill .



Protected by copyright. Copying or private communication, in part or in whole, is not permitted unless authorised by AUDI AG. All rights reserved. AUDI AG disclaims any liability with respect to the correctness of information in this document. Copyright by AUDI AG.


A53-11008

Note

Due to the different types of steel and panel thicknesses employed, one of the resistance spot welding units listed in this manual and approved by Audi must be used to ensure correct results when spot welding.


Welding in

- Weld in lower C-pillar reinforcement using shielded arc welding equipment : SG plug weld seam.
- Weld in lower C-pillar reinforcement using resistance spot welder : RP spot weld seam.

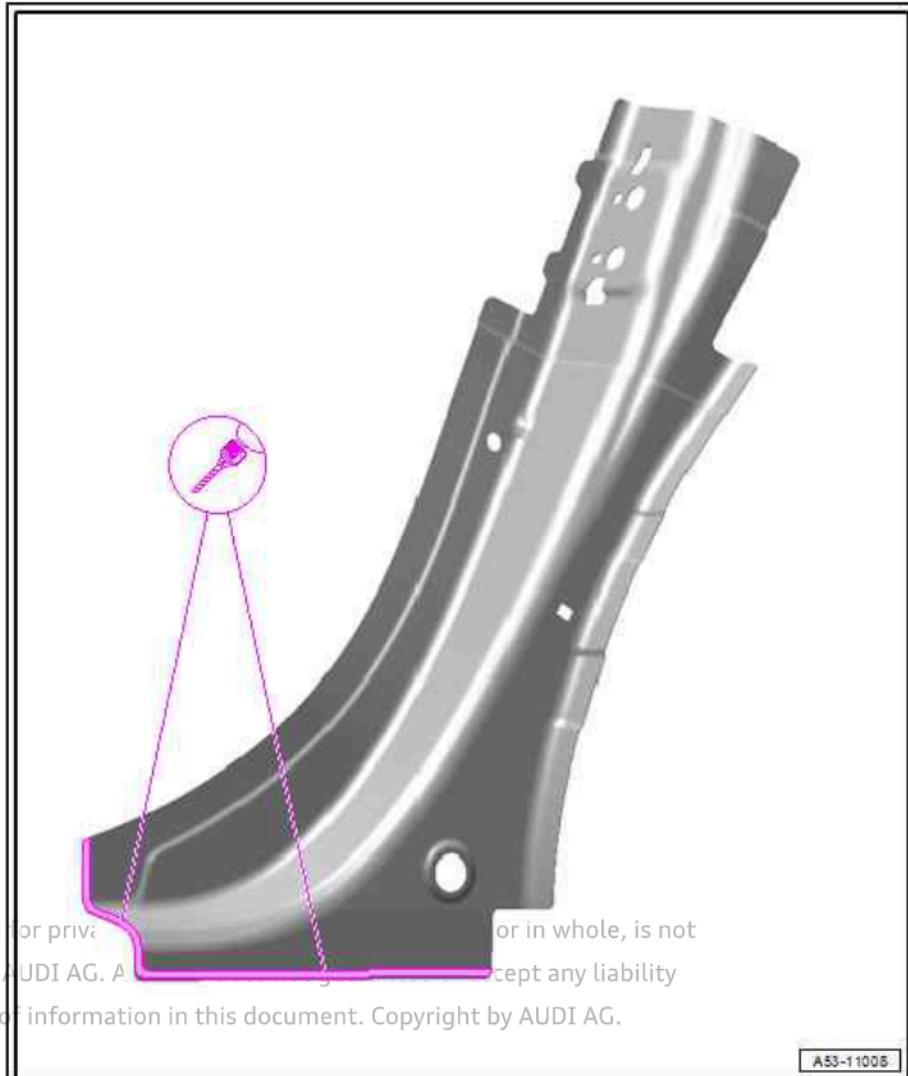




Protected by copyright. Copying for private or commercial purposes is
permitted unless authorised by AUDI AG. AUDI AG does not accept
any liability with respect to the correctness of information in this document.

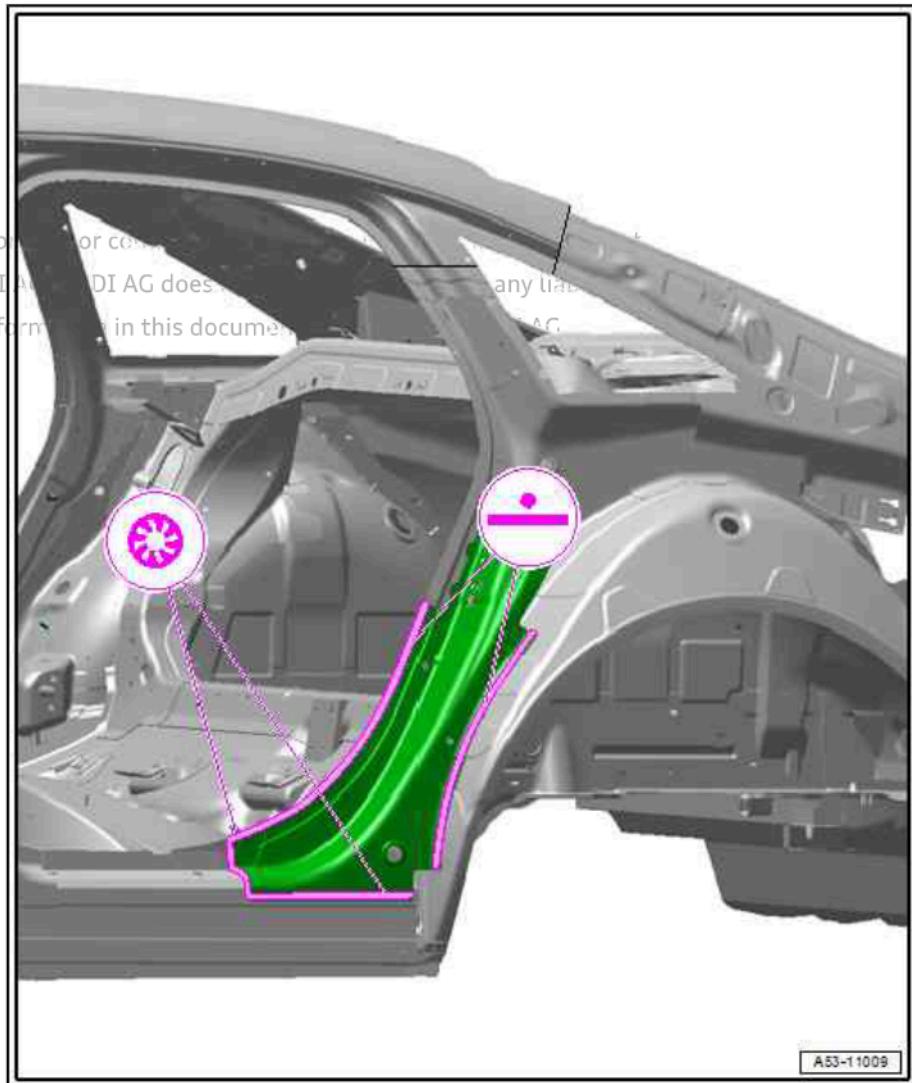

- Weld in upper C-pillar reinforcement using resistance spot welder : RP spot weld seam.

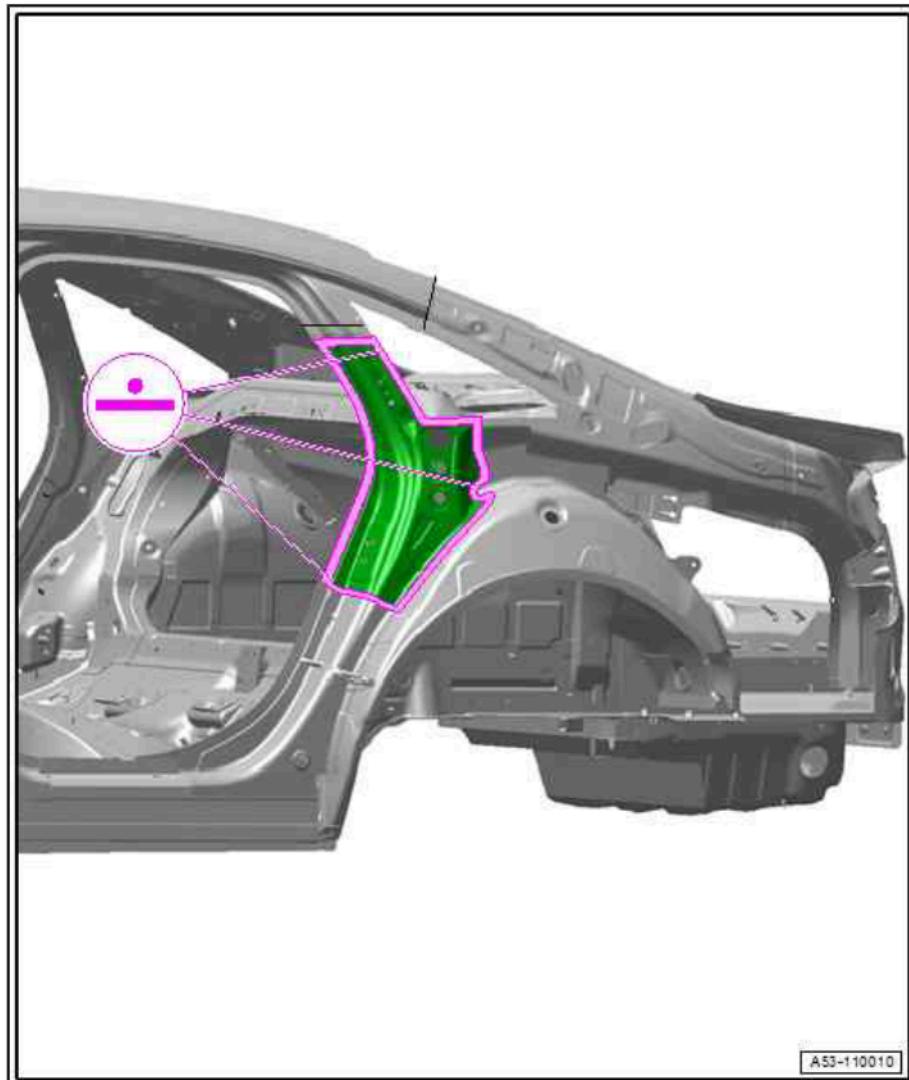

- Welding in side panel (Saloon) [⇒ page 362](#)
- Welding in side panel (Avant) [⇒ page 362](#)



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

RO: 53 69 55 52

11 Rear wheel housing - Partial renewal

1 - Side member


2 - Moulded foam insert

3 - Inner side panel

4 - Wheel housing

5 - D-pillar reinforcement

Replaced by co
permitted unle
with respect to

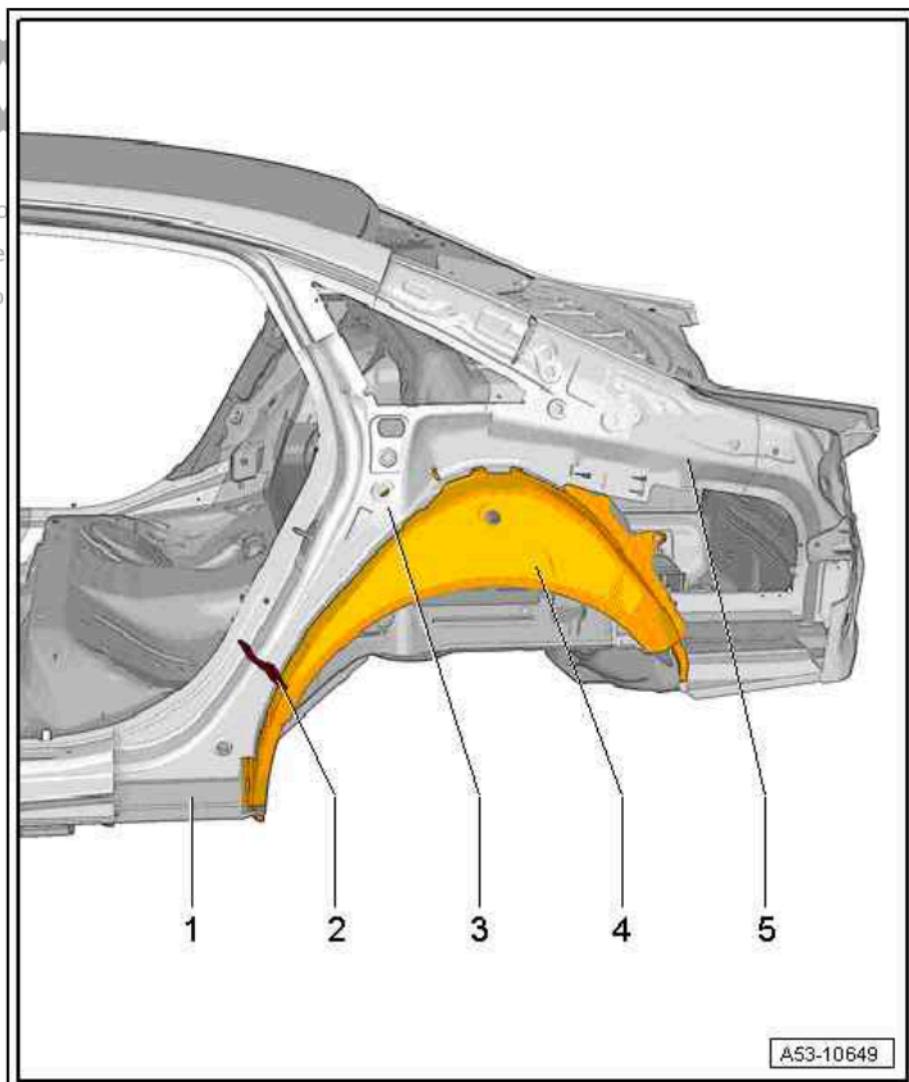

A53-10649

11.1 Notes for vehicles with hybrid drive

[⇒ page 5](#)

11.2 Tools

Special tools and workshop equipment required

- ◆ Resistance spot welder
- ◆ Shielded arc welding equipment
- ◆ Compact angle grinder
- ◆ Body saw
- ◆ Spot weld breaker

Tools approved by AUDI AG must be used to ensure correct results when carrying out repair work [⇒ page 54](#).

11.3 Procedure


- Side panel removed (Saloon) [⇒ page 362](#)
- Side panel removed (Avant) [⇒ page 362](#)

Cutting locations

- Make separating cuts as shown using body saw .
- Separate original joint using spot weld breaker .



Protected by
permitted under
with respect to

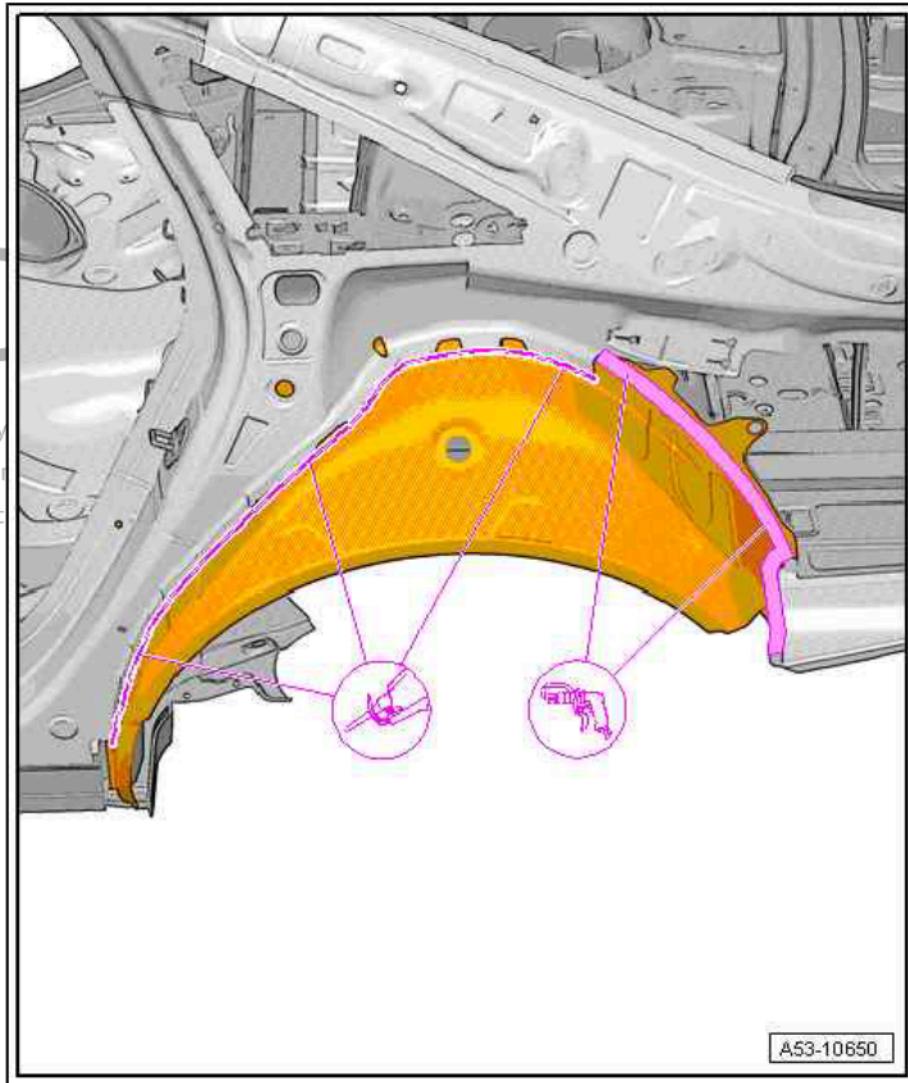


Replacement part

- ◆ Rear wheel housing liner

Preparing new part

- Step separating cut for joggle-join (on body side of joint).
- Transfer separating cut plus 10 mm for overlap to new part and cut off using body saw .

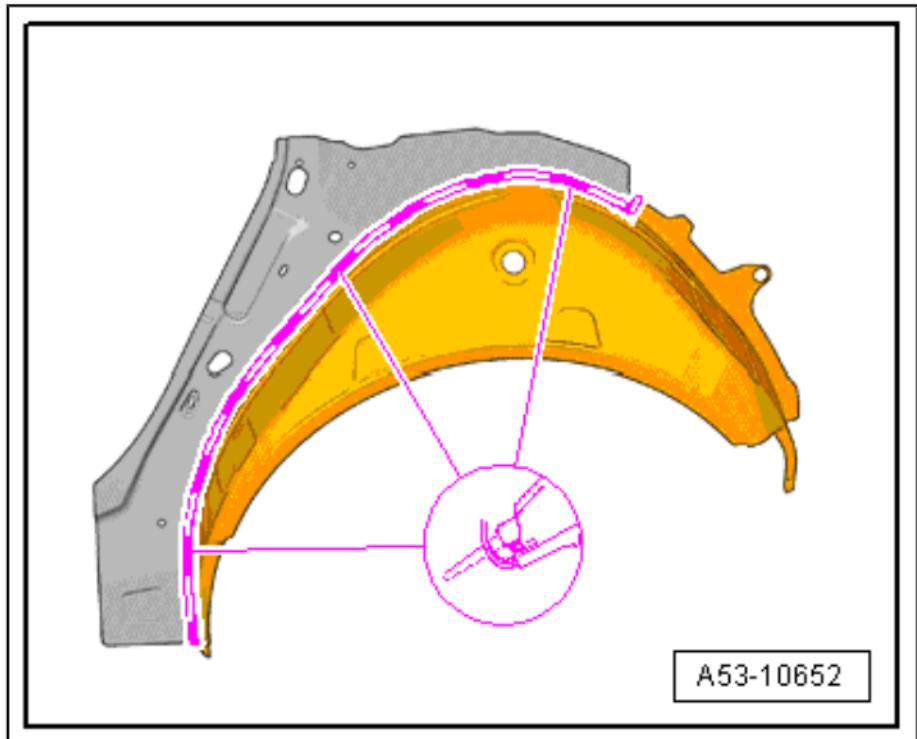

i Note

Due to the different types of steel and panel thicknesses employed, one of the resistance spot welding units listed in this manual and approved by Audi must be used to ensure correct results when spot welding.

Welding in


- Weld in wheel housing using shielded arc welding equipment : SG continuous seam (staggered - with gaps).
- Weld in remaining joint at wheel housing using resistance spot welder : RP spot weld seam.



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.




Protected by
permitted un
with respect

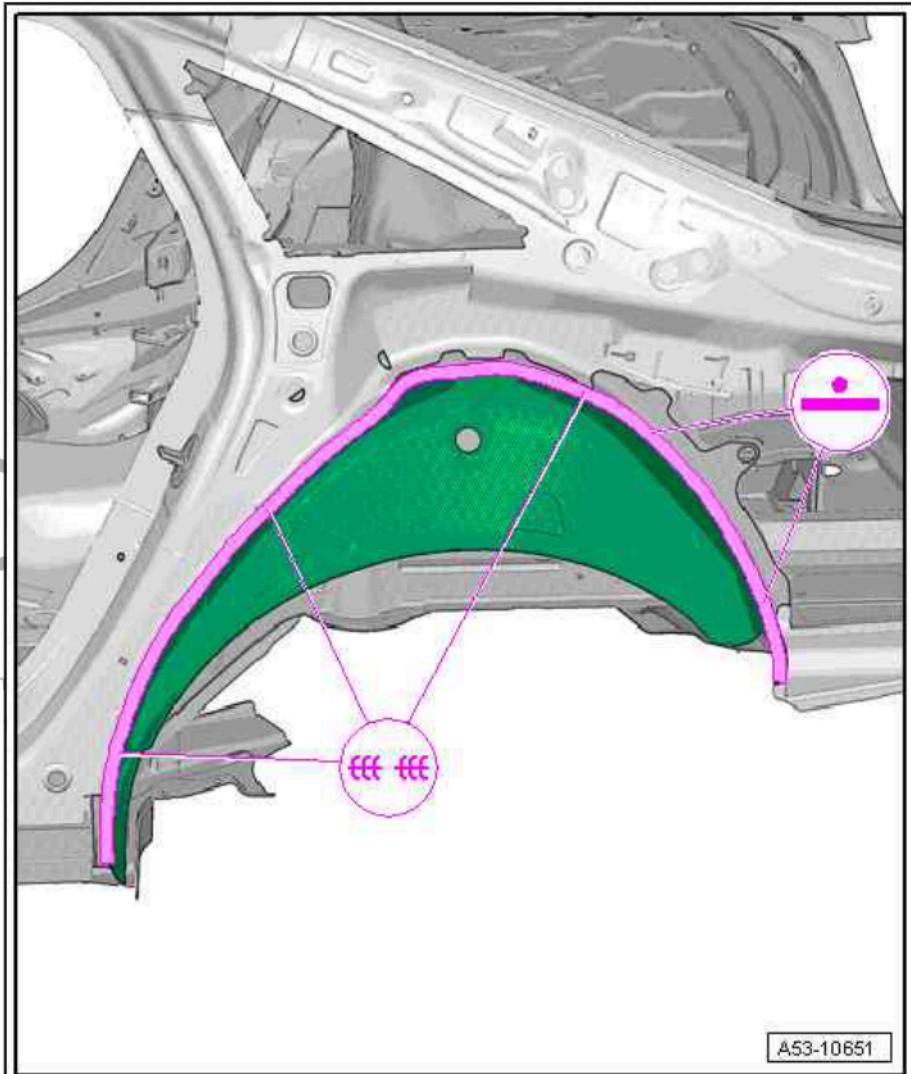

Fit moulded foam inserts -a-.



Protected by copyright. Copying
permitted unless authorised by
with respect to the correctness

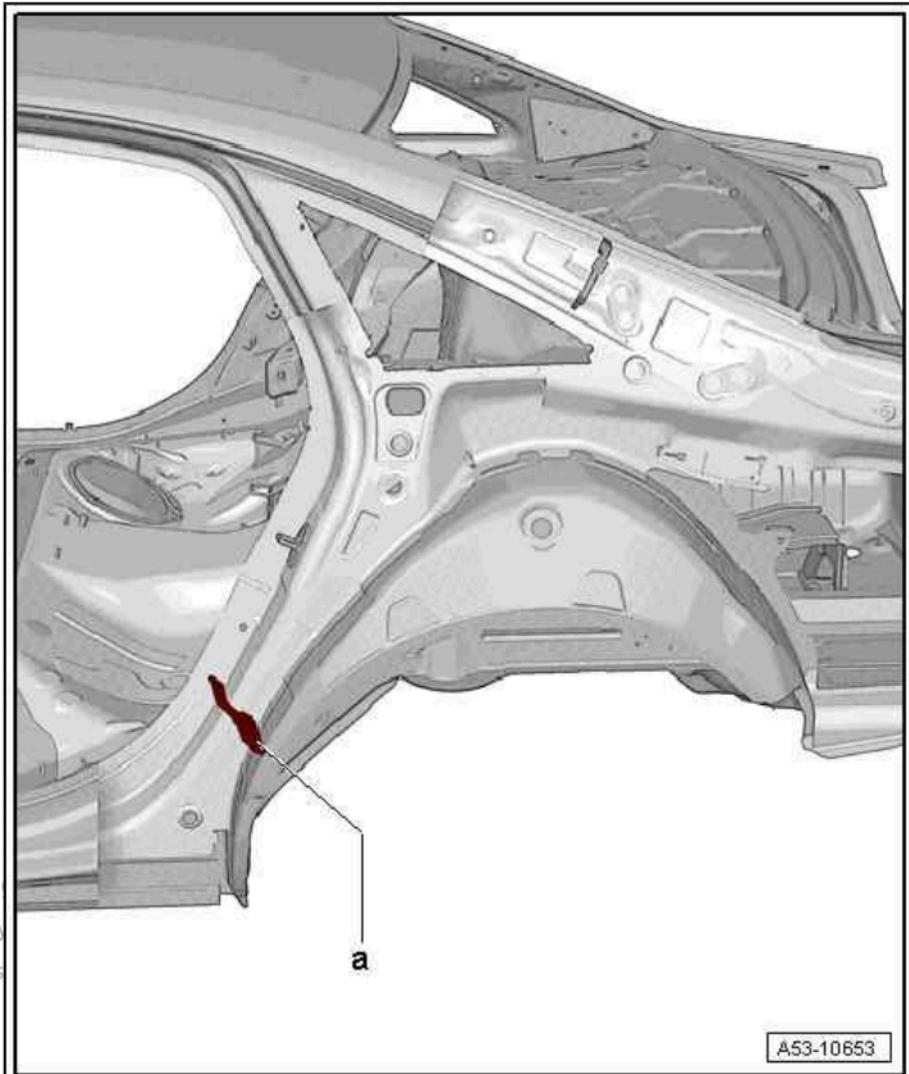

A53-10653

- Welding in side panel (Saloon) [⇒ page 362](#)
- Welding in side panel (Avant) [⇒ page 362](#)


RO: 53 69 55 52

12



Rear wheel housing - Partial renewal (Avant)

- Protected by copyright. Copying, editing, renting, lending or distribution
permitted unless authorised by the copyright owner.
with respect to the content of this document.
- 1 - Side member
 - 2 - Moulded foam insert
 - 3 - Inner side panel
 - 4 - Wheel housing
 - 5 - D-pillar reinforcement

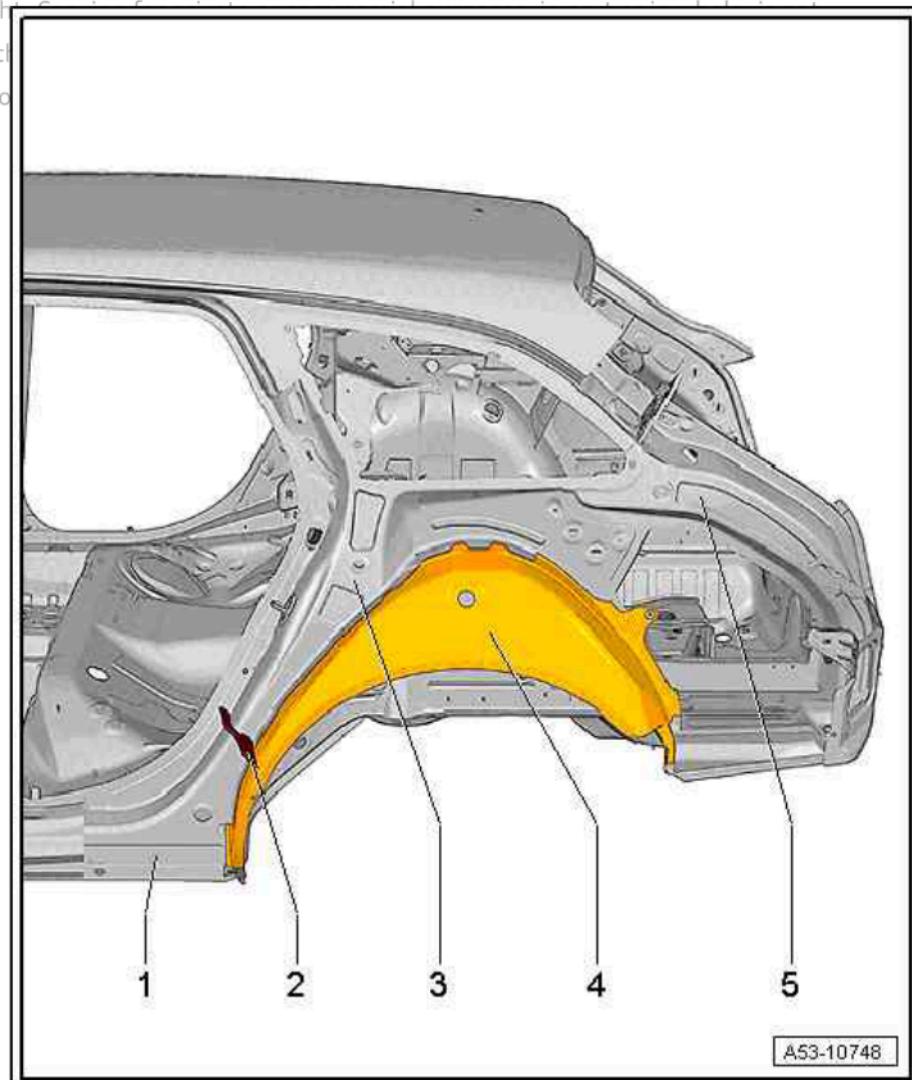

12.1 Notes for vehicles with hybrid drive

[⇒ page 5](#)

12.2 Tools

Special tools and workshop equipment required

- ◆ Resistance spot welder
- ◆ Shielded arc welding equipment
- ◆ Compact angle grinder
- ◆ Body saw
- ◆ Spot weld breaker


Tools approved by AUDI AG must be used to ensure correct results when carrying out repair work [⇒ page 54](#).

12.3 Procedure

- Side panel removed (Avant) [⇒ page 362](#)

Cutting locations

- Make separating cuts as shown using body saw .
- Separate original joint using spot weld breaker .

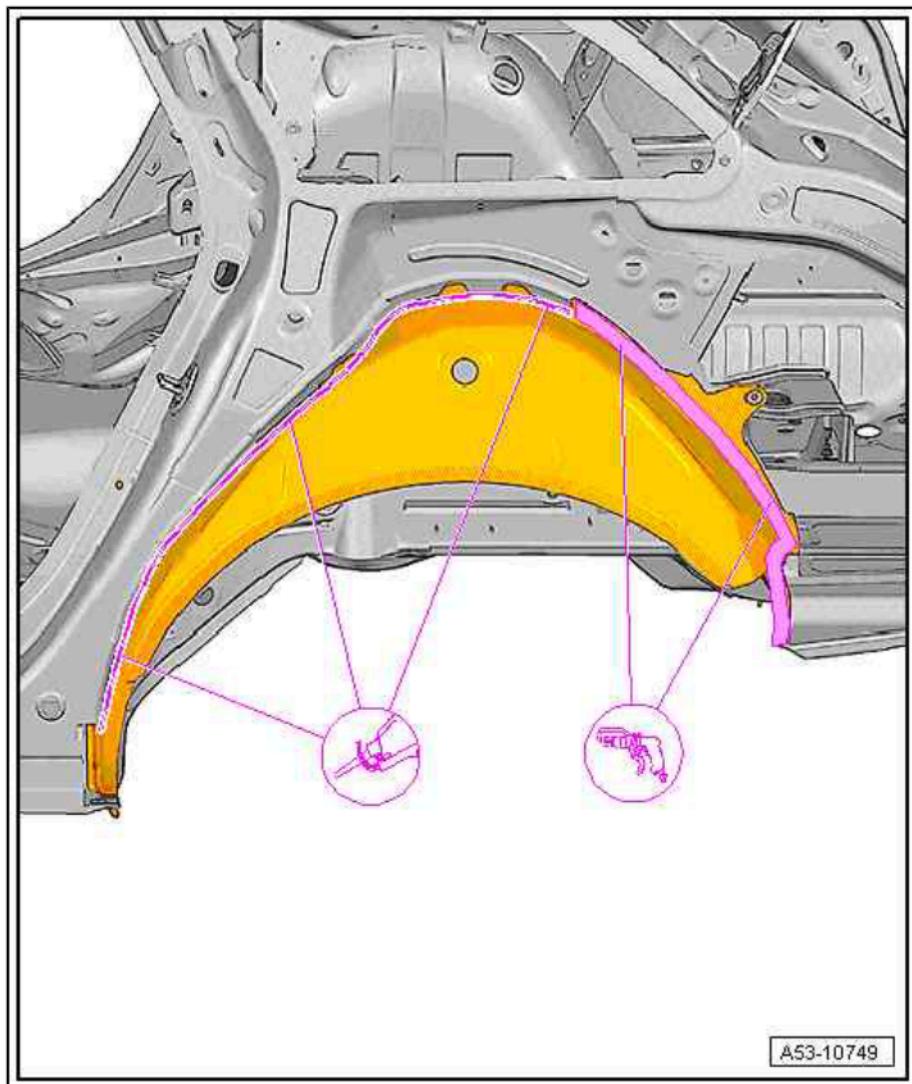


Replacement part

- ◆ Rear wheel housing liner

Preparing new part

- Step separating cut for joggle-join (on body side of joint).
- Transfer separating cut plus 10 mm for overlap to new part and cut off using body saw .

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

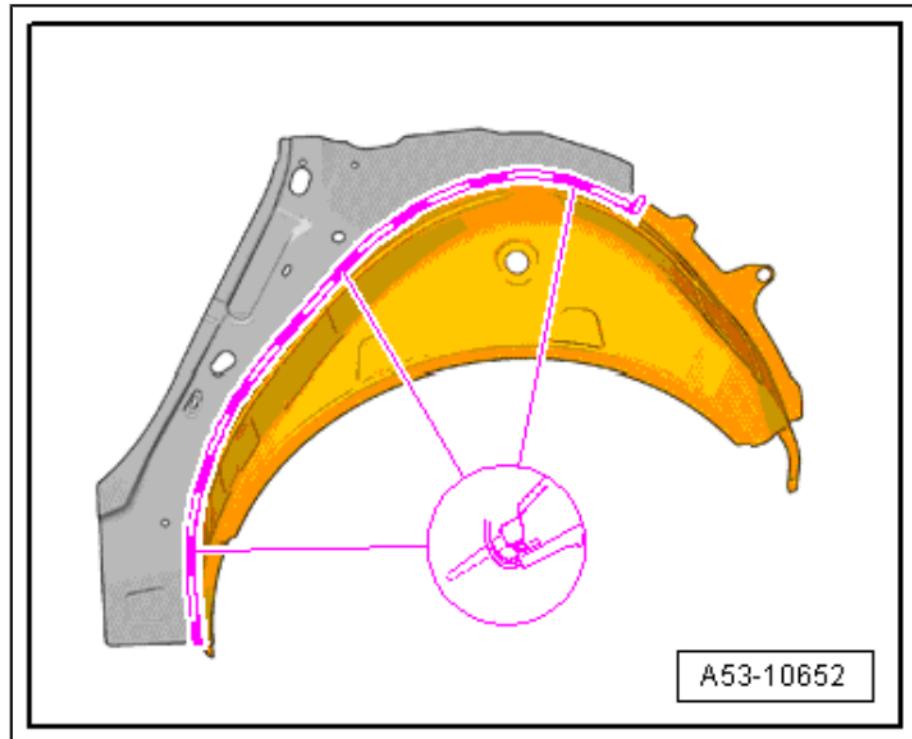

 Note


Due to the different types of steel and panel thicknesses employed, one of the resistance spot welding units listed in this manual and approved by Audi must be used to ensure correct results when spot welding.

 Welding in

- Weld in wheel housing using shielded arc welding equipment :
SG continuous seam (staggered - with gaps).
 - Weld in remaining joint at wheel housing using resistance spot welder : RP spot weld seam.
- Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted without the express permission of AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.




Protected by copyright
permitted unless au
with respect to the c

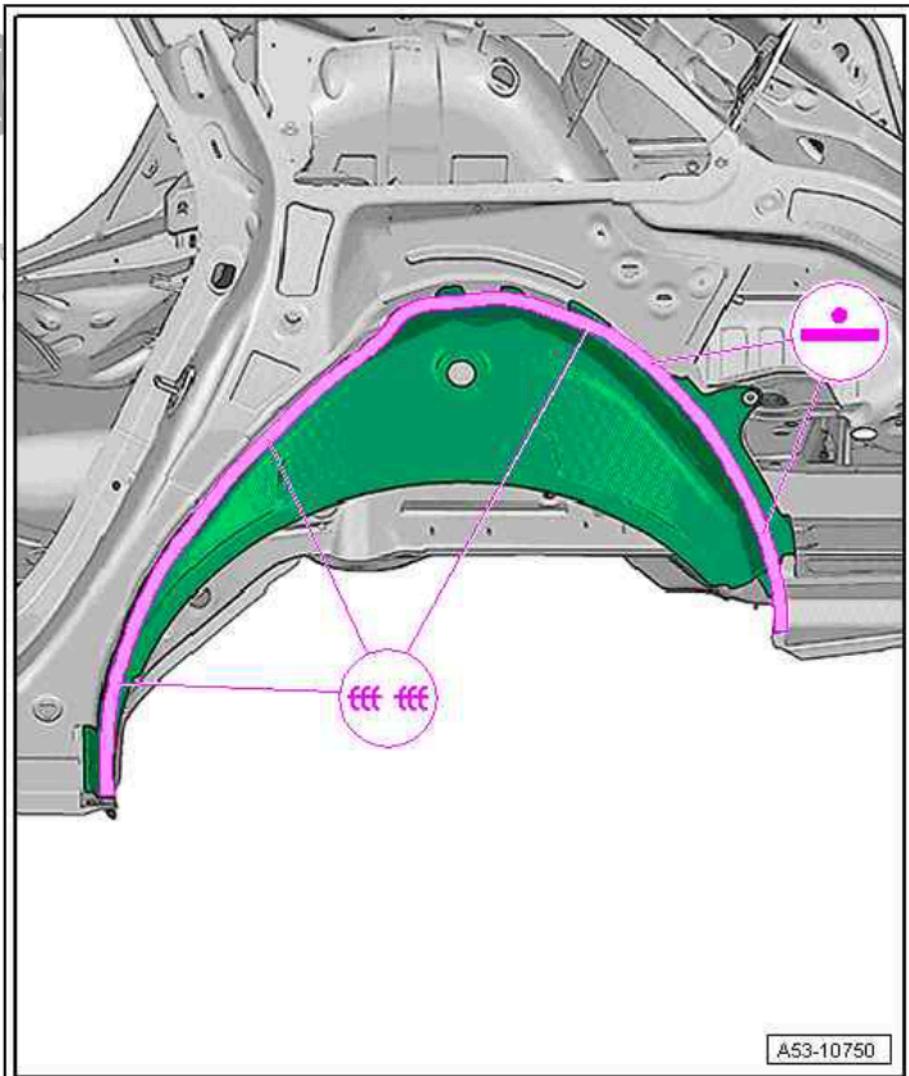

Fit moulded foam inserts -a-.



Protected by copyright. Copying
permitted unless authorise
with respect to the correct

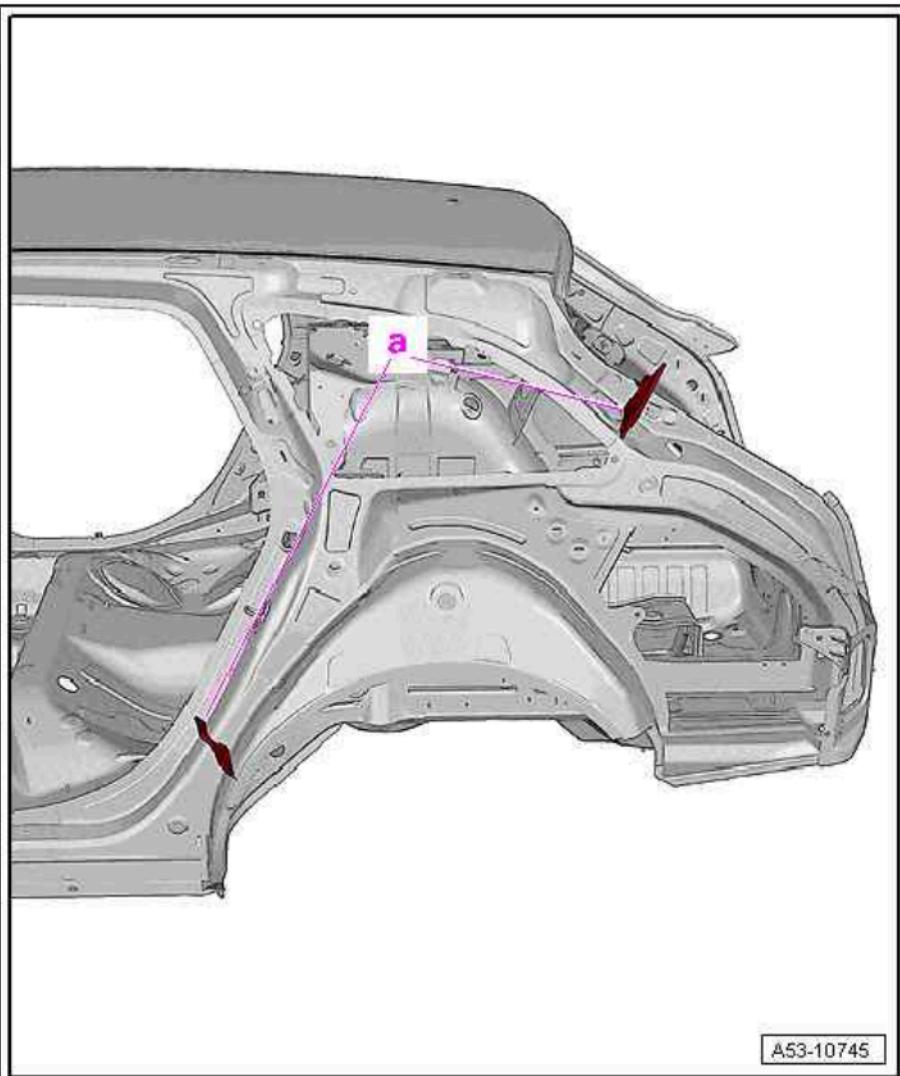


- Welding in side panel (Avant) [⇒ page 370](#)

13 Luggage compartment floor - Renewal

(Saloon and Avant identical)

- 1 - Luggage compartment floor
- 2 - Rear longitudinal member (right-side)
- 3 - Rear longitudinal member (left-side)

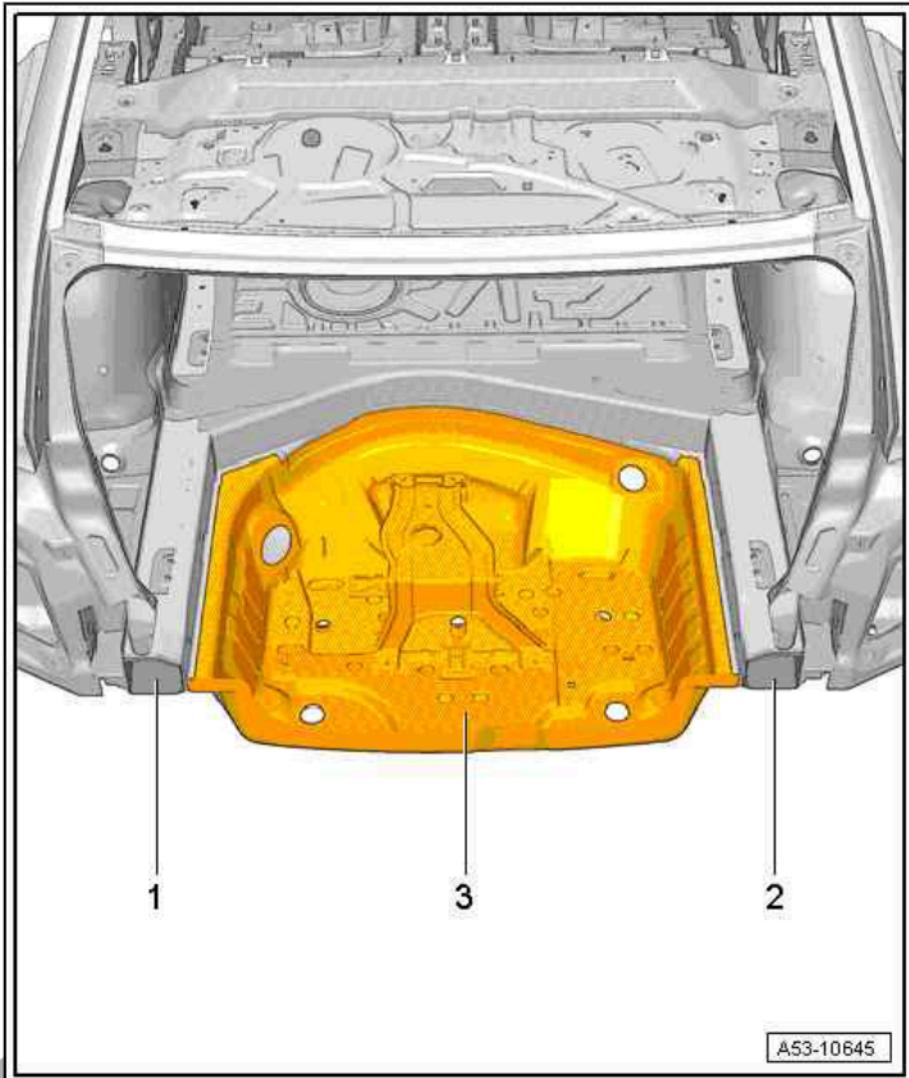

A53-10645

13.1 Notes for vehicles with hybrid drive

[⇒ page 5](#)

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not

13.2 Tools permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability

Special tools and workshop equipment required for information in this document. Copyright by AUDI AG.

- ◆ Resistance spot welder
- ◆ Shielded arc welding equipment
- ◆ Drill
- ◆ Compact angle grinder
- ◆ Body saw
- ◆ Spot weld breaker


Tools approved by AUDI AG must be used to ensure correct results when carrying out repair work [⇒ page 54](#).

13.3 Procedure

- Rear upper cross panel removed (Saloon) [⇒ page 332](#)
- Cross panel removed (Saloon) [⇒ page 336](#)
- Rear upper cross panel removed (Avant) [⇒ page 340](#)
- Cross panel removed (Avant) [⇒ page 344](#)

Cutting locations


- Separate original joint using spot weld breaker.

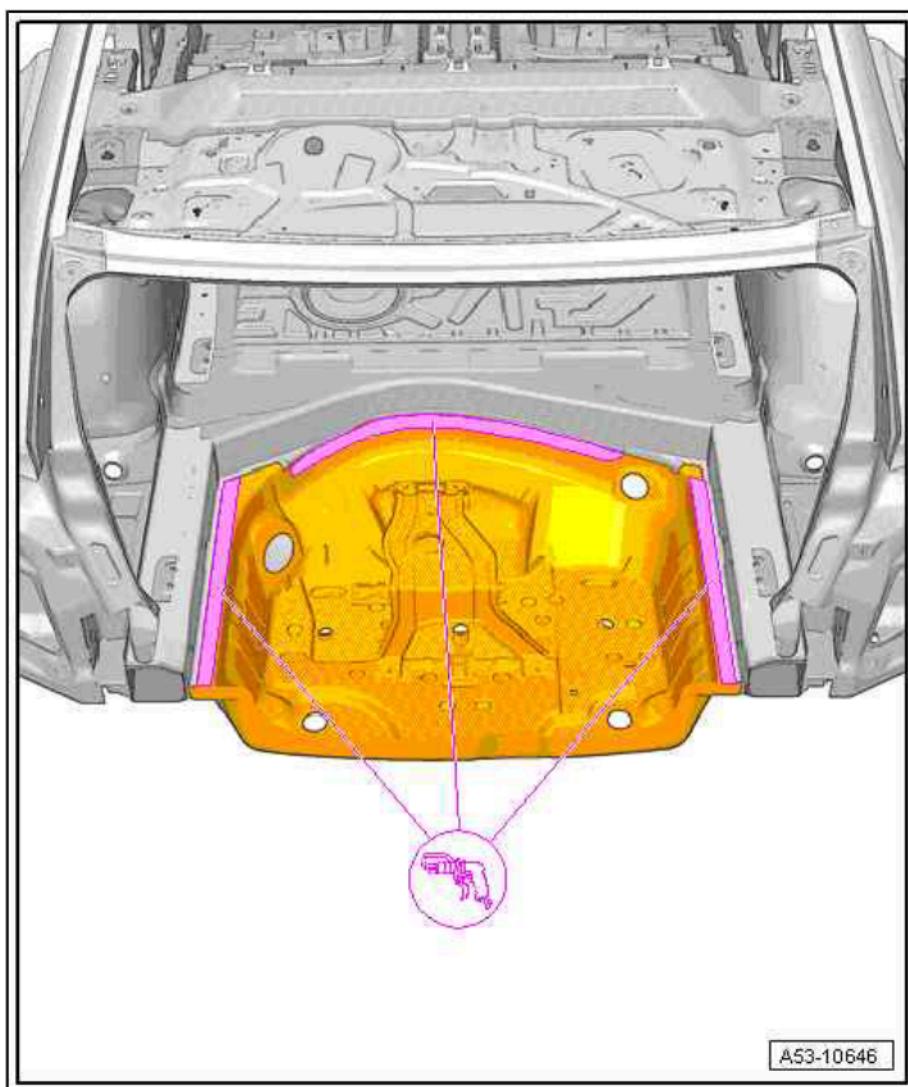


- Remove remaining material using compact angle grinder.



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

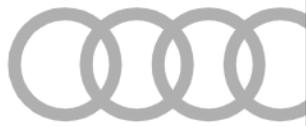

Protected by copyright. Copying, publishing, editing and any other commercial use of this document is prohibited unless authorised by Audi AG. The information contained in this document is intended solely for the addressee and may not be disclosed without the prior written permission of Audi AG.
with respect to the correctness and completeness of the information contained in this document.

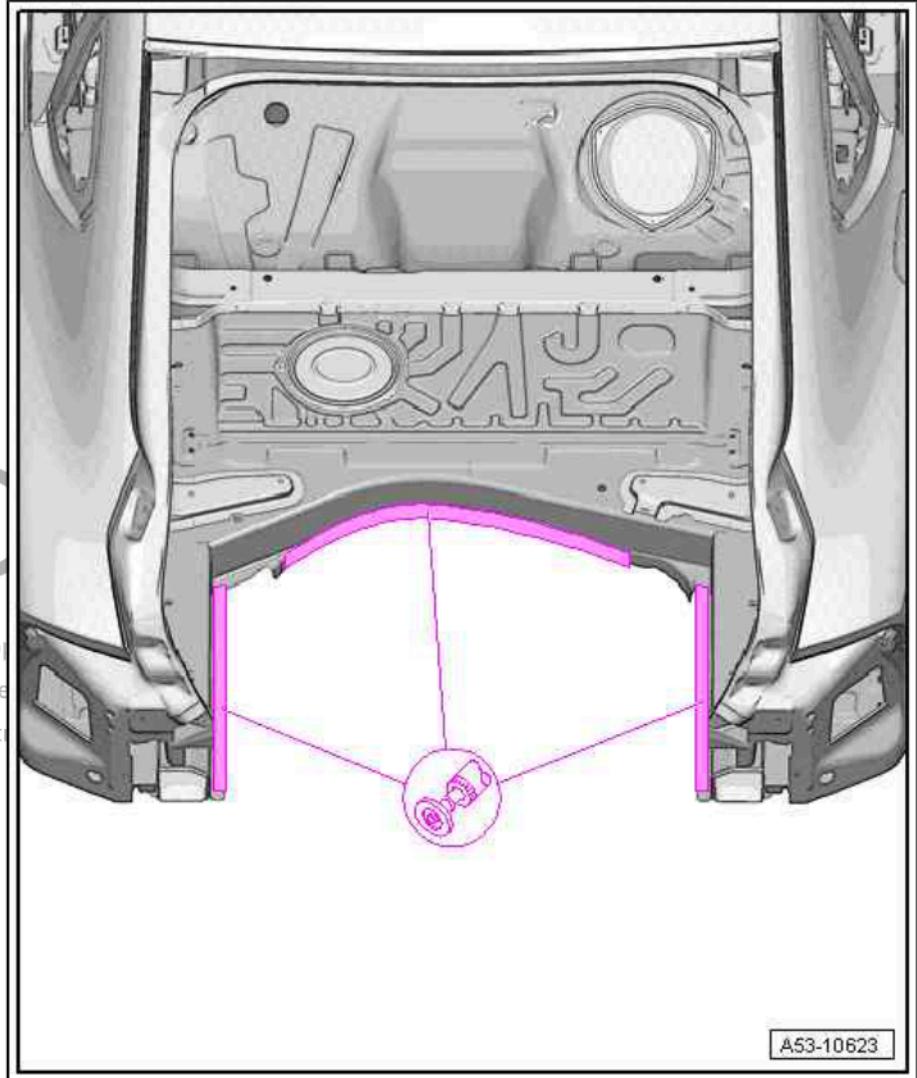

Replacement part


- ◆ Luggage compartment floor

Preparing new part

- Drill holes for SG plug weld seam, 8 mm Ø using drill .



Protected by copyright. Copying, distribution, or transmission in whole or in part, is not permitted unless authorised by the copyright holders.

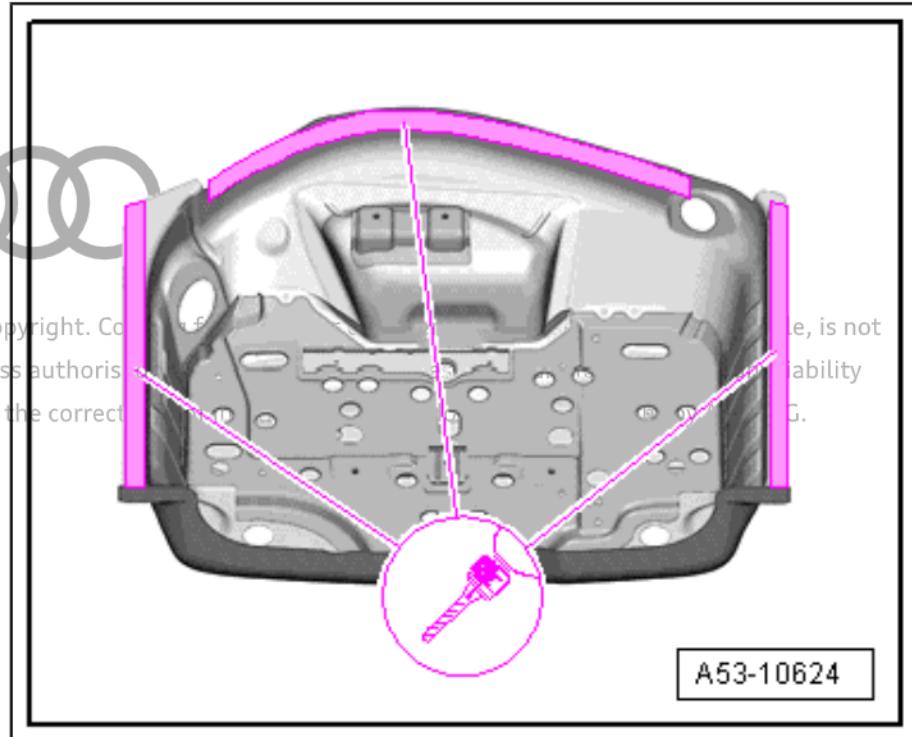


- Check fit relative to adjacent parts.



Due to the different types of steel and panel thicknesses employed, one of the resistance spot welding units listed in this manual and approved by Audi must be used to ensure correct results when spot welding.

Welding in

- Weld in luggage compartment floor using shielded arc welding equipment : SG plug weld seam.

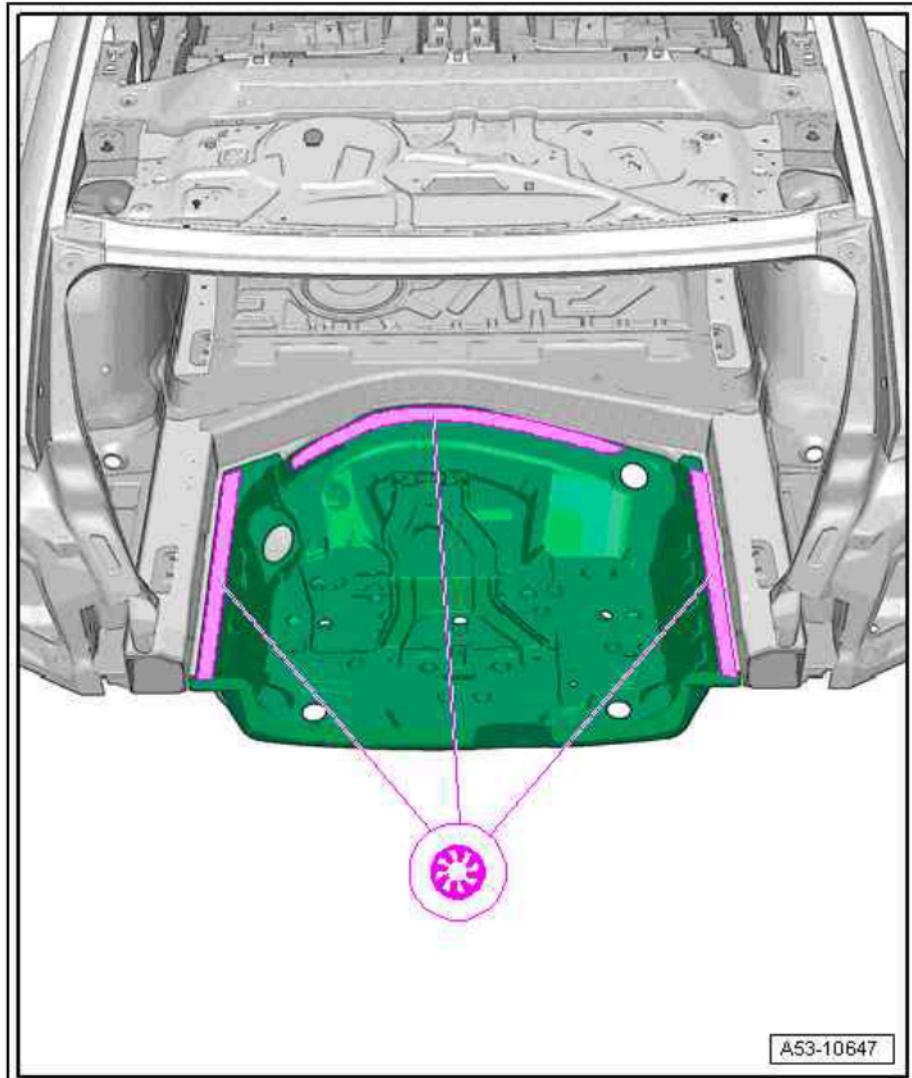

- Welding in rear upper cross panel (Saloon) [⇒ page 332](#)
- Welding in cross panel (Saloon) [⇒ page 336](#)
- Welding in rear upper cross panel (Avant) [⇒ page 340](#)
- Welding in cross panel (Avant) [⇒ page 344](#)

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

RO: 53 80 55 50

14 Luggage compartment floor - Renewal (only for PHEV vehicles, China)


1 - Rear longitudinal member (left-side)

2 - Rear longitudinal member (right-side)

3 - Luggage compartment floor



Protected by copyright. Copying
permitted unless authorised by
with respect to the correctness

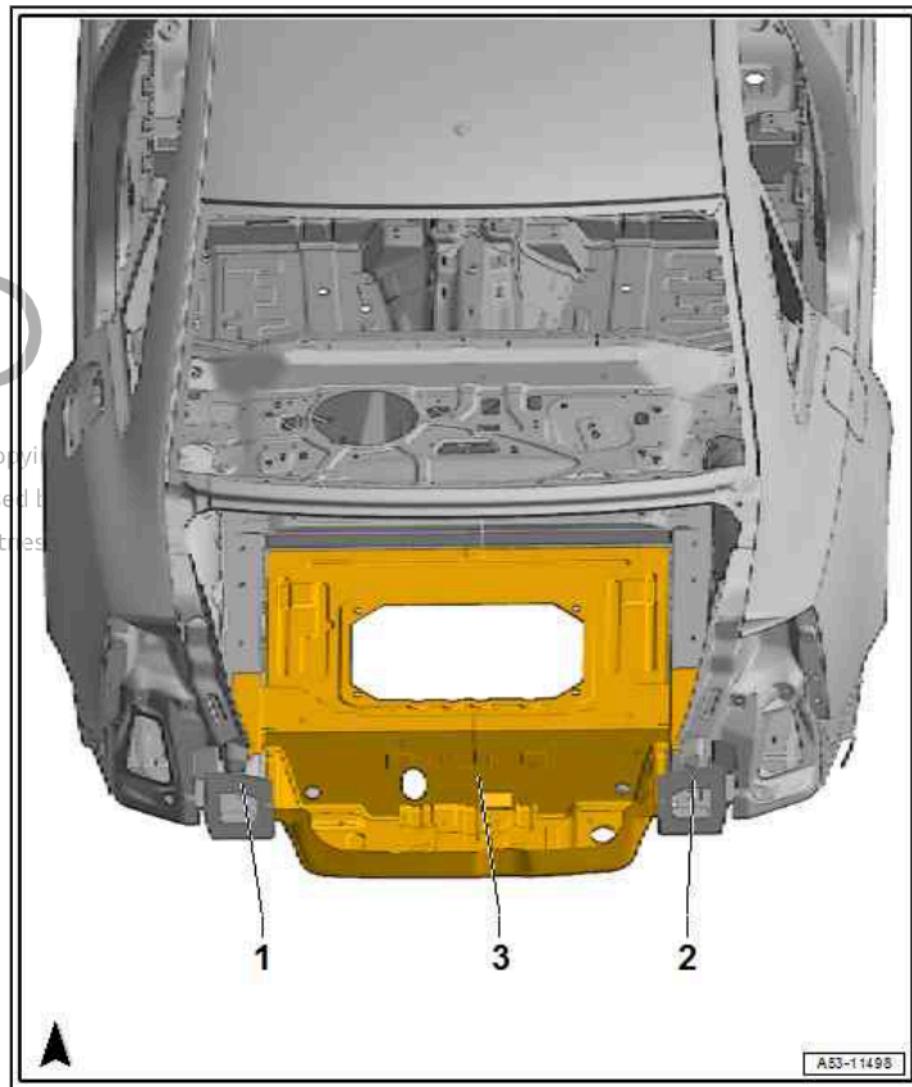

14.1 Tools

Special tools and workshop equipment required


- ◆ Resistance spot welder
- ◆ Shielded arc welding equipment
- ◆ Drill
- ◆ Compact angle grinder
- ◆ Body saw
- ◆ Spot weld breaker

Tools approved by AUDI AG must be used to ensure correct results when carrying out repair work [⇒ page 54](#).




Cutting locations

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not
permitted.
– Separate longitudinal member reinforcement using spot weld
breakers authorised by AUDI AG. AUDI AG does not guarantee or accept any liability
with respect to the correctness of information in this document. Copyright by AUDI AG.

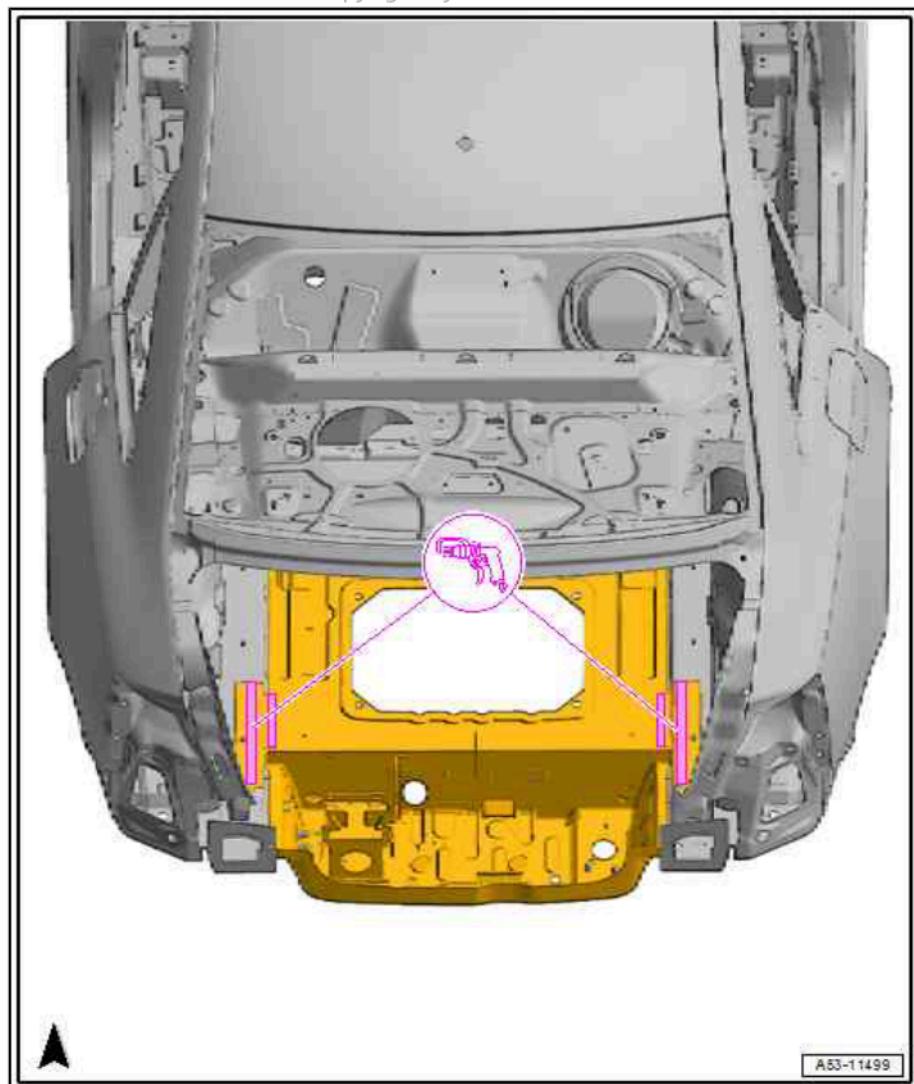


- Separate original joint using spot weld breaker .

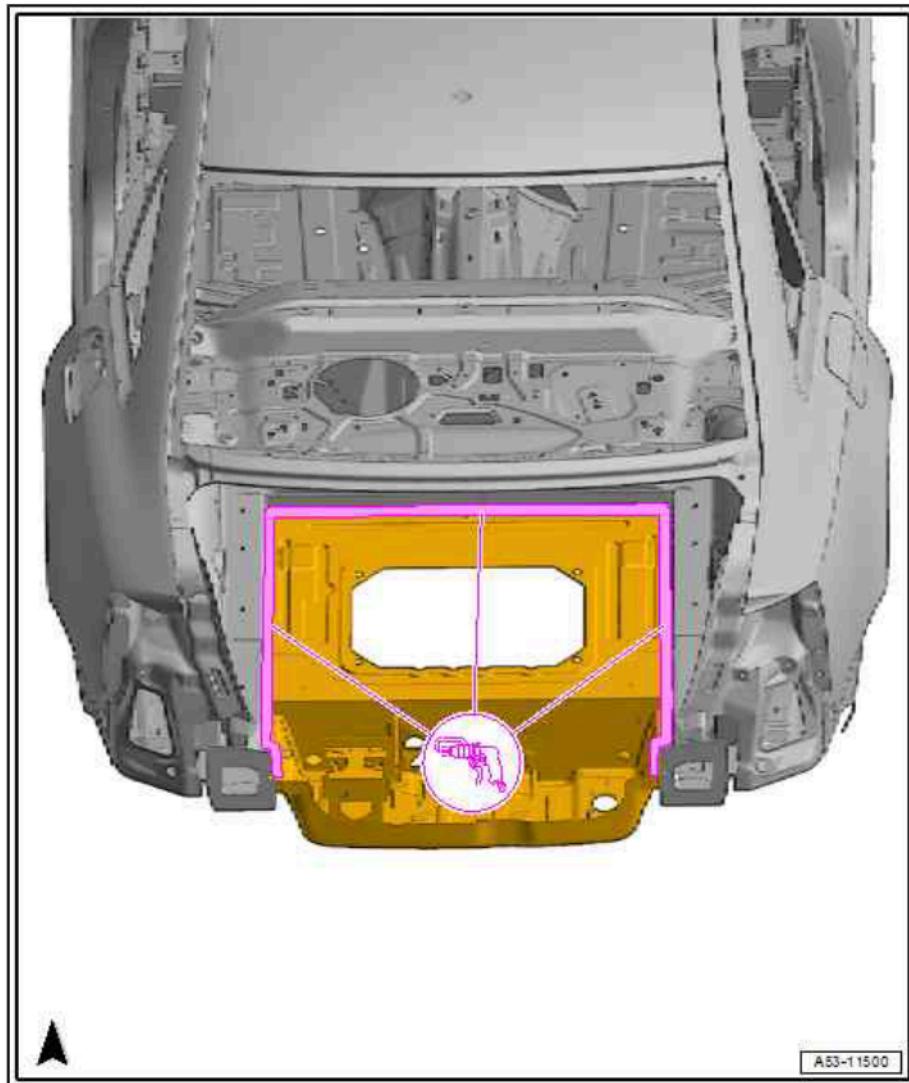

- Remove remaining material using compact angle grinder .



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

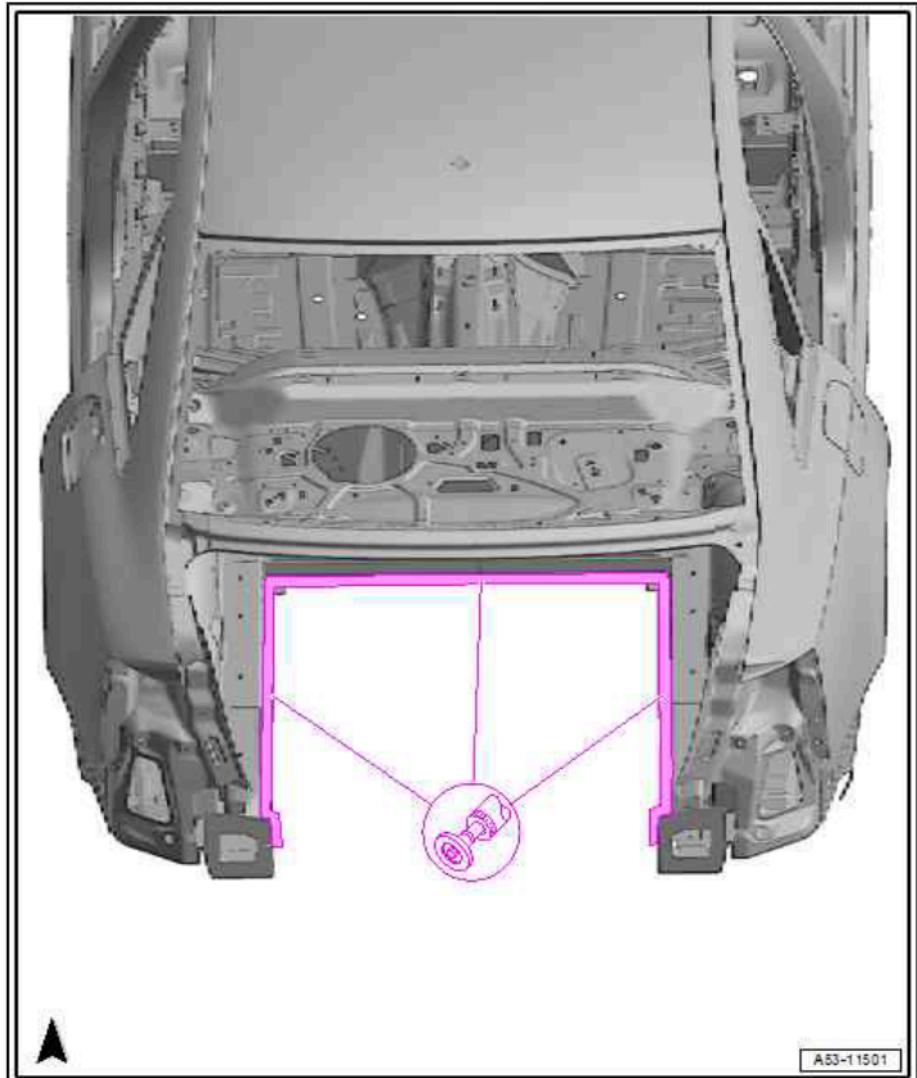


Replacement part

- ◆ Luggage compartment floor

Preparing new part

- Drill holes for SG plug weld seam, 8 mm Ø using drill .

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

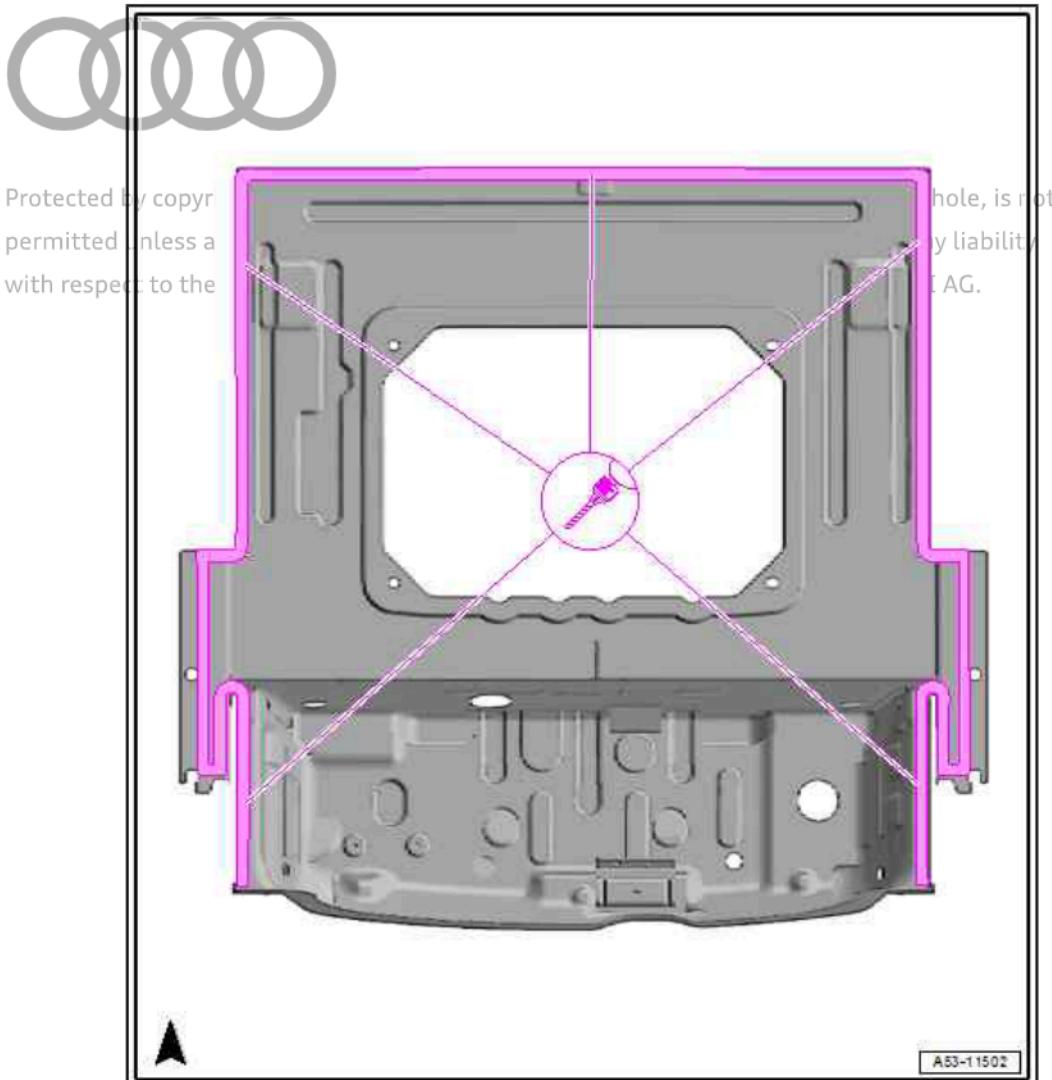

- Check fit relative to adjacent parts.



Note

Due to the different types of steel and panel thicknesses employed, one of the resistance spot welding units listed in this manual and approved by Audi must be used to ensure correct results when spot welding.

Welding in

- Weld in luggage compartment floor using shielded arc welding equipment : SG plug weld seam.



Protected by copyright. Copying, distribution, or storage of this document, in whole or in part, is not permitted unless authorised by AUDI AG. All rights reserved. AUDI AG does not accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

